

 
PRORECK



PRORECK AUDIO, INC
brand@proreck.com
www.audioproreck.com



PRORECK

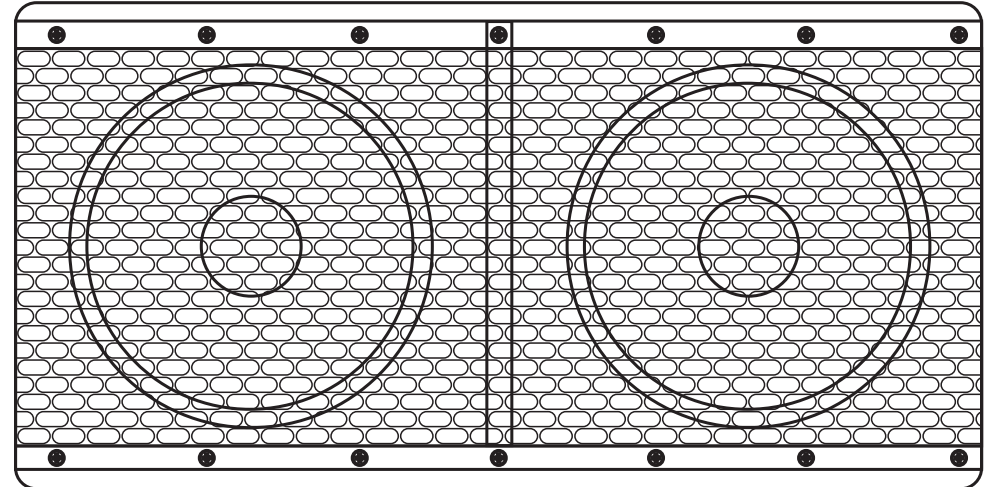

SP-218X

USER MANUAL

Specifications

Type	SP-218X
Peak Power	Sound reinforcement equipment for low frequency, with 5000W peak
Power Output	1000W
Voltage Input	115V~60Hz
Inputs	XLR INPUT
Outputs	XLR OUTPUT
Electronic Crossover	Electronic crossover (35-120 Hz)
XLR High Pass Output	XLR high pass output (120Hz-20KHz)
Impedance	4 Ohms
Voice Coil Diameter	3"
Voice Coil Material	Kapton and Copper
Subwoofer	Dual 18 inch

Proper use of the amplifier

Your device has a built-in audio amplifier. To make the best use of it and to prolong its life, we recommend that you follow these instructions.

- Do not exceed 80% of the volume control knobs.
- Never use the unit for more than 4 hours at a time with high volume.
- Never use a microphone near the device, this may cause your device to make a hissing sound.
- Do not obstruct or block the rear panel ventilation, which has the heat sink that cools the amplifier.

In order to get the best performance from your product, please read this instruction manual carefully before use and keep it for future reference.

Customer Service

Any questions, please feel free to contact us.
Sales-1@proreck.com

Warnings

 
Keep the unit out of the reach of children.
Do not touch the plug with wet hands and remove the cover or modify the unit, as you may receive an electric shock.

Operation

- 1.Before power on, please reduce the volume to the minimum.
- 2.Install the equipment correctly.
- 3.Connect to the power supply.

Precautions

- Do not overload the device to avoid damage to the speakers.
- Do not place heavy objects, including the equipment itself on top of the power cord. A damaged power cord poses serious hazards; especially avoid placing heavy objects on a power cord covered by a carpet.
- Do not place an open fire on or next to the device.
- For indoor use only. If the device is used outdoors, you must ensure that no moisture enters it.
- Unplug the device from the power outlet when not in use.
- Unplug the device from the power source before checking or replacing the fuse.
- Make sure the device is placed on a stable and sturdy surface.
- Use only suitable means of transport if you want to move the box. Always unplug the unit during a lightning storm or when it's not in use.
- If the unit has not been used for a long time, condensation may form inside the case. Please allow the unit to reach room temperature before use.
- Never try to repair the unit yourself, it does not contain any user-serviceable parts.

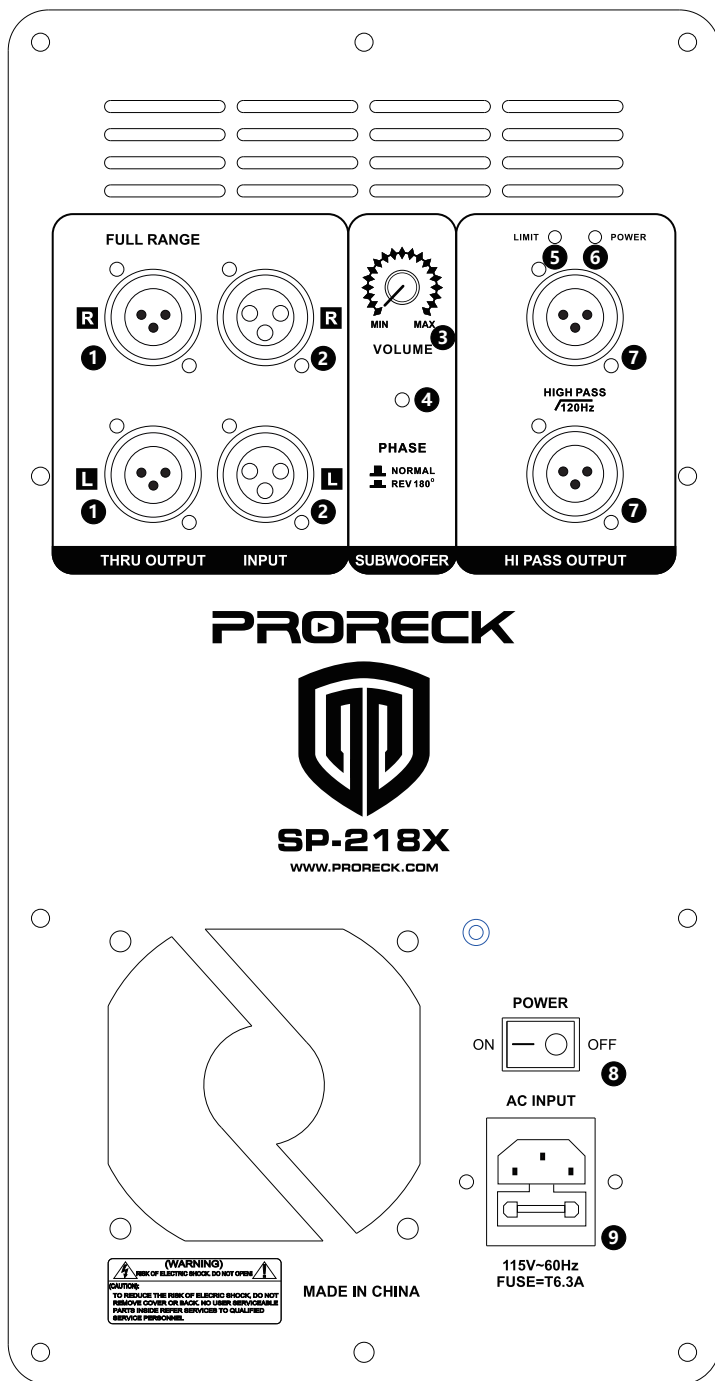


2

AMPLIFIER

- 1 **XLR Output (FULL RANGE)**
Parallel balanced stereo XLR output. It delivers an exact copy of the input signal.
- 2 **XLR Input**
Balanced XLR input for connecting signals from mixers or other amplifiers.
- 3 **Volume**
This knob allows to increase or decrease the volume control level.
- 4 **Phase**
Phase selection button NORMAL- REV180°.
- 5 **Limit**
This LED indicates that the input signal is too high, which may distort the output sound or even damage the unit.
- 6 **Power Indicator**
Led power indicator.
- 7 **XLR Output (HIGH PASS)**
Filtered balanced XLR output (high-pass from 120Hz).
- 8 **ON/OFF Switch**
Turn on and turn off your unit with this interrupter.
- 9 **Input Voltage**
115V~60Hz

 Connect to Mixer with XLR Cable

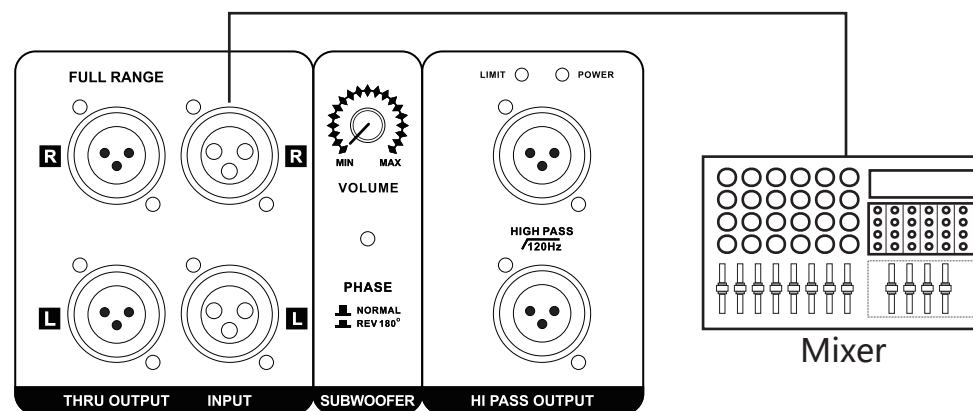

3

