

# PRORECK




PRORECK AUDIO, INC  
brand@proreck.com  
www.audioproreck.com



# PRORECK

## OWNER'S MANUAL

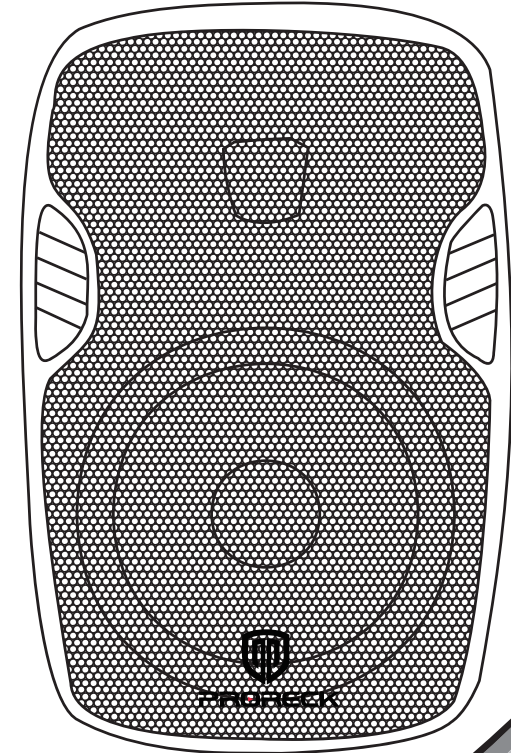

## TITAN 15A/TITAN15 COMBO

## Dimensions and Specifications

Subwoofer Size	15-inch
Input Connections	USB/SD ( for MP3 media ) & Bluetooth RCA&AUX& XLRinput Mic input ( XLR & 1/4" )
Output Connection	Balanced XLR

## Precautions and Warnings

- ① Read the instructions carefully before use and keep the manual for further use.
- ② Follow all instructions. Improper use may cause damage to the unit.
- ③ Do not expose the unit to rain or moisture.
- ④ Do not block any ventilation opening. Install in accordance with the manufacturer's instructions.
- ⑤ Do not install near any heat sources, such as radiators, heat sources, stoves, or other units that produce heat.
- ⑥ Clean only with a dry cloth.
- ⑦ Unplug the unit during thunderstorms or when unused for long periods of time.
- ⑧ Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, operate abnormally.
- ⑨ This unit shall not be exposed to dripping or splashing.
- ⑩ Do not place objects filled with liquids, such as vases or beer glasses, on the unit.
- ⑪ Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.


### WARNING

RISK OF ELECTRIC SHOCK! DO NOT OPEN.  
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,  
DO NOT REMOVE COVER (OR BACK).


## Getting Started

The following steps will help you set up the TITAN 15A/TITAN15 COMBO quickly.


- ① Read instructions carefully and check all components are included in the package.
- ② Turn down all VOLUME knobs ( LINE VOLUME, MP3 VOLUME, MASTER VOLUME, MIC VOLUME ).
- ③ Plug in and turn on the speaker.
- ④ Connect your devices.
- ⑤ Slowly adjust the VOLUME knobs of the corresponding channel to a comfortable listening level.

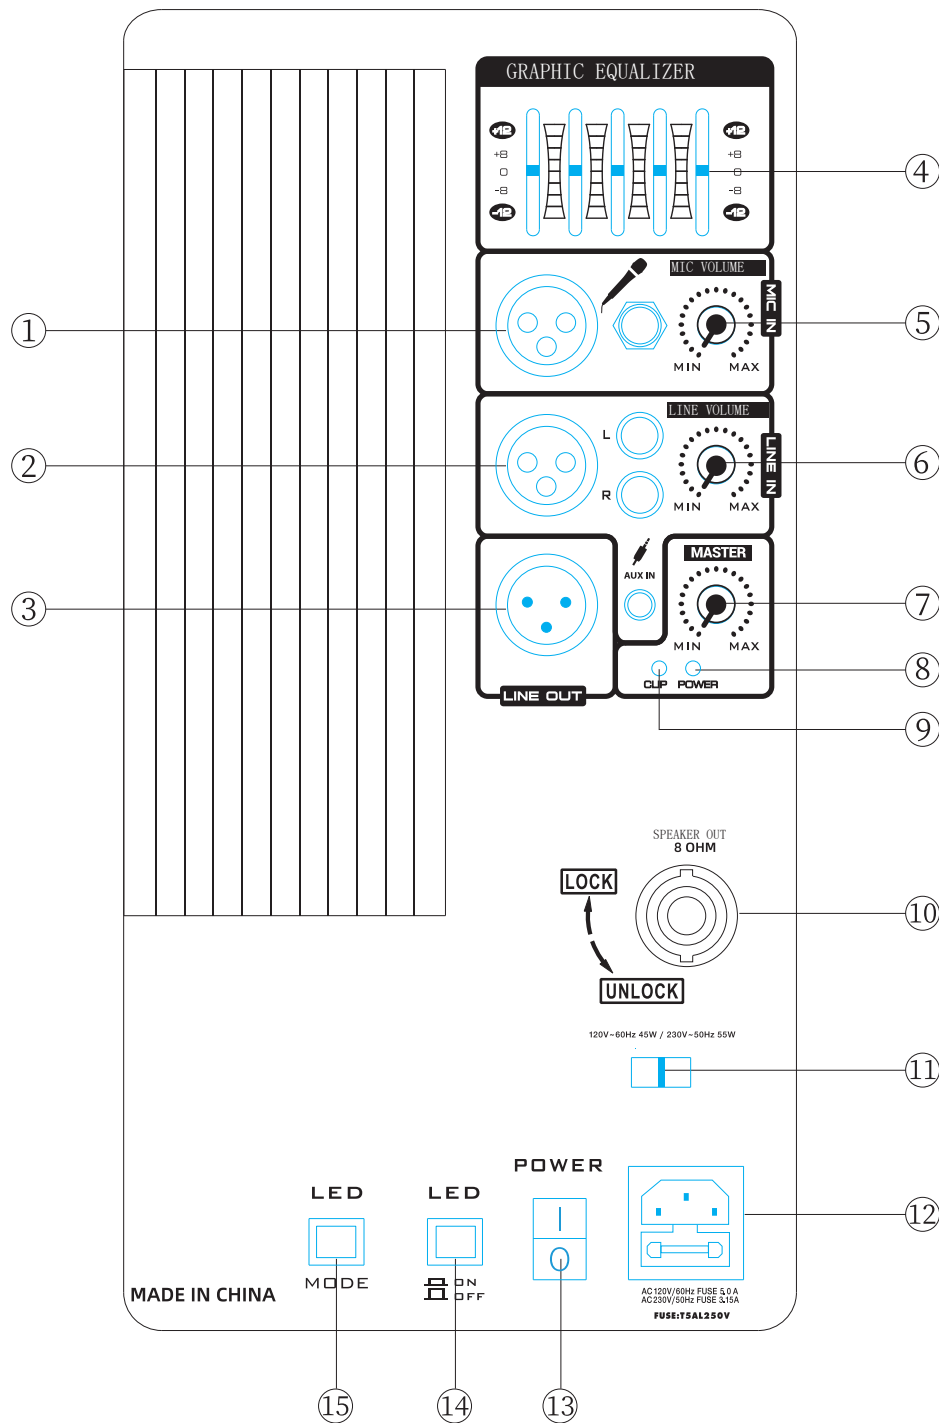

## Remote Control Function (It's only available with media player)

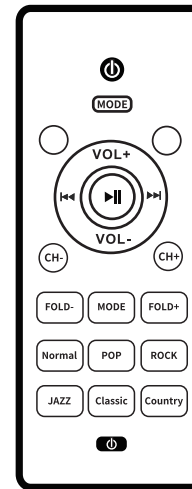


Button	Function
	Turn on/off the LED light.
	Select the 7 LED light modes.
	Skip to the previous or next song.
	Play or pause the song(USB/SD/Bluetooth mode). In USB/SD mode, long press this button for 4 seconds to enter folder mode (or you can press CH-/CH+ button, same effect but faster), then press  or  to choose your favorite music. If you have more than one folder in your USB/SD memory, you can select "UP LEVEL", then select the folder you need.(or you can press FOLD-/FOLD+ button, same effect but faster).
	Increase(+) or decrease(-) the volume.
	Go to the folder mode.
	Select the previous song in the folder when using USB/SD mode.
	Select the next song in the folder when using USB/SD mode.
	Choose the modes of USB/SD /Bluetooth mode.
	Select the 6 music style.
	Turn on/off the MP3 section. NOTE: This button can only turn off the MP3 section, if you need to turn off the entire device, you need to turn off the power button(-) on the back.

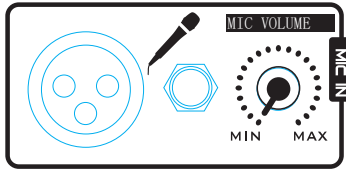

## MIC DIRECTIONS

- 1 Turn on the power.
- 2 Turn the MIC VOLUME and MASTER VOLUME to the minimum level.
- 3 Use XLR or 1/4" input jack mic to insert (Both of the 2 mics could work at the same time, which means 2 people could sing at the same time with the same volume).
- 4 Turn the MIC VOLUME and MASTER VOLUME to a suitable level respectively.

**Note:** DO NOT insert the MIC when the VOLUME knob at a high volume as it will have a noise.

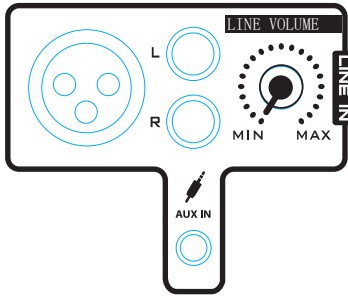


## LINE IN MODE

There are 3 line inputs as the picture shows, XLR/AUX (3.5MM) /RCA input.

- 1 Turn on the power.
- 2 Turn the LINE VOLUME and MASTER VOLUME to the minimum level.
- 3 Connect the music source unit to your own inputs marked LINE IN, and you don't need to connect the BLUETOOTH or USB device.
- 4 When in LINE IN mode, you could also play the BLUETOOTH or USB at the same time.
- 5 Turn the LINE VOLUME and MASTER VOLUME to a suitable level respectively.
- 6 You can use the LINE IN function when you wish to link up an additional stereo signal source without BLUETOOTH.


**Note:** Remember to turn up the volume of the connected device to a suitable level for a good sound effect.

- 1 **MIC input (XLR & 1/4")**  
XLR and 1/4" connector for an unbalanced microphone.
- 2 **LINE input (XLR & RCA & AUX)**  
These inputs could help you connect your own audio device through XLR or RCA or AUX jack.
- 3 **LINE output (XLR)**  
This jack is used to connect to your own audio device through XLR jack.
- 4 **5-BAND Graphic Equalizer**  
Adjust the frequency at SUB (100HZ) /LOW (330HZ) /MEDIA (1KHZ) /TREBLE (3.3KHZ) /BRIGHT (10KHZ), range from -12dB to +12dB.
- 5 **MIC VOLUME**  
Use this control to set the volume level of Mic in signal.
- 6 **LINE VOLUME**  
Use this control to set the volume level of Line in signal.
- 7 **Master Control**  
Use this control to set the total volume of the product.
- 8 **Power indicator**  
This indicator shows the power ON or OFF.
- 9 **CLIP indicator**  
If the red LED "ON" constantly, low down the general volume control.
- 10 **Speaker out**  
Please connect the passive speaker with this SPEAKON jack.
- 11 **115V-230V selector**  
Use this selector to choose the correct voltage.
- 12 **AC Power**  
Use it to connect the AC power cord.
- 13 **ON/OFF Power Switch**  
Turn on/off the power supply.
- 14 **LED Power**  
Use this to turn on/off the LED light.
- 15 **SEVEN LED mode**  
We have seven LED lighting modes for you to choose the one you prefer.

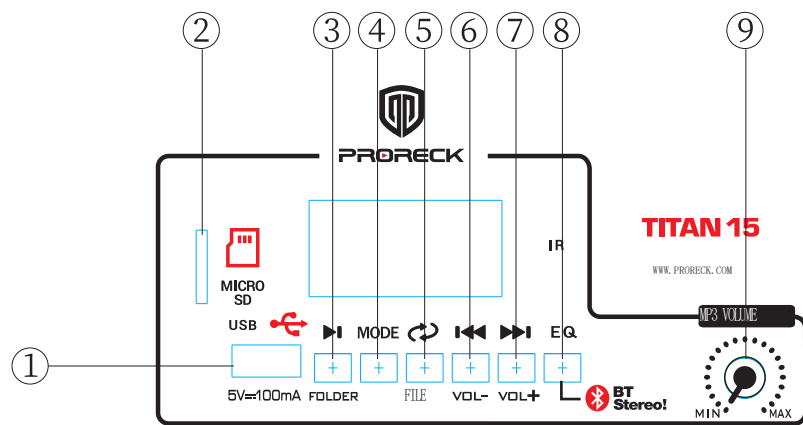

- ① **USB port**  
Use it to insert the USB memory storage device with MP3/WMA files, etc.
- ② **SD port**  
Use it to insert the SD card with MP3/WMA files, etc.
- ③ **Pause Button**  
Press once to play or pause song.  
In USB/SD mode, press and hold on to enter folder mode, then press ◀◀ or ▶▶ to choose your favorite music. If you have more than one folder in your USB/SD memory, you can select "UP LEVEL", then select the folder you need.
- ④ **Input mode**  
Select an input mode, BLUETOOTH/USB/SD.
- ⑤ **Repeat Button**  
There are 3 modes - Repeat All/Repeat One/Random.
- ⑥ **PREVIOUS**  
Press once to jump previous song. Press and hold on to decrease the volume level.
- ⑦ **NEXT**  
Press once to jump next song. Press and hold on to increase the volume level.
- ⑧ **EQ mode**  
You could choose your favorite mode, CLASSIC/POP/NORMAL/ ROCK/COUNTRY/JAZZ.
- ⑨ **MP3 VOLUME**  
Use this control to set the volume level of MP3 in signal.
- ⑩ **BT Stereo**  
If you have 2 TITAN 15, you can press EQ button and hold on to enter TWS mode. When the led screen shows TWS connected, the connection is successful. Then you can control the playback of 2 TITAN15 by connecting to one of the speakers via Bluetooth.  
(We recommend that you adjust the volume knobs on both speakers to the same and appropriate position before using this mode, and then select the volume you want from your mobile device. You can also adjust the volume of one of the speakers individually if you need.)

## BLUETOOTH Instructions

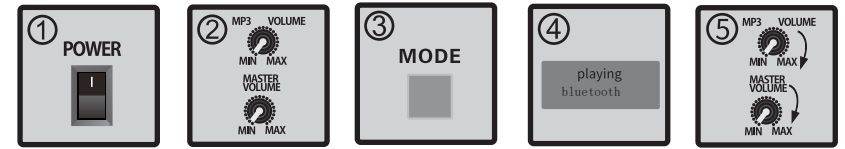

- ① Turn on the power.
- ② Turn the MP3 VOLUME and MASTER VOLUME to the minimum level.
- ③ Normally it's BLUETOOTH mode when you turn on the speaker, you could connect it with your PHONE or PC, etc. which could match the speaker.
- ④ Then you could see the display change from "disconnected" to "connected" if you connect the BLUETOOTH.
- ⑤ Turn the MP3 VOLUME and MASTER VOLUME to a suitable level respectively.

**NOTE:** Remember to turn up the volume of the connect device to a suitable level for good sound effect.

## SD and USB Insert Instructions



- ① Turn on the power.
- ② Turn the MP3 VOLUME and MASTER VOLUME to the minimum level.
- ③ Insert SD card or USB memory storage device, and it will come into USB driver mode automatically (if you were playing with BLUETOOTH, it will also change, you could change the mode by MODE button).
- ④ Turn the MP3 VOLUME and MASTER VOLUME to a suitable level respectively.

**NOTE:** MP3, SMART PHONE, PC or other equipment could not be read by USB port.