

(All-in-one machine) smart toilet)

# Instruction Manual

First of all, for your purchase of our company's products, Express our most sincere thanks!

Please read this manual carefully before use, for proper use of the product.

## Table of contents

Safety Precautions  
Each part name  
Packing List

---

### Panel cognition

- Remote control description
  - Indication of indicator light
  - Description of the operation panel of this machine
- 

### Use of the product

- Function adjustment and usage
  - Display description
  - Key/knob operation instructions
- 

### Cleaning and maintenance methods

- External cleaning of the machine
  - Nozzle cleaning
  - Remote control battery replacement
  - Filter cleaning or replacement
- 

Product Specifications  
Troubleshooting and troubleshooting

---

### Installation of the product

- Installation method
- Confirmation items before use

## Package Detail

order number	name	quantity	remarks
1	complete machine	1	
2	Remote control	1	
3	instructions	1	
4	water filter	1	
5	Rubber flange	1	
6	1/2" supply line	1	
7	1/2" triangular valve	1	
8	Installation diagram	1	
9	Installation precautions	1	
10	Battery # 7	2	
11	Special flange	1	blue
12	Fixing screw	8	
13	Decorative cover	4	
14	7-shaped fixed plastic plate	2	
15	Expanded seed	6	

## Safety Precautions

The content shown here is about user safety, please use this product correctly after reading the manual.



**Warning**

Indicates that serious injury or death may result if operation is performed in disregard of this sign



**Note**

Indicates that personal injury or property damage may be caused if mishandling is done by ignoring the signs here.



- ◆The following persons (children, elderly, sick, People with weak skin, those who are taking sleeping pills, drinkers, extremely fatigued) such as prolonged To use, please set the seat temperature to a low gear.

- ※Avoid low temperature burns caused by prolonged use



- ◆Please do not disassemble, repair or modify this product without permission.

- ※It is easy to cause fire or electric shock, cause bodily harm

- ※It must be repaired by professionals



- ◆Be sure to connect the ground wire securely.


- ※If it is not connected well, it is easy to cause electric shock, Danger of electric leakage

- ※If there is no ground terminal, please outsourced electrical installation company




- ◆Do not touch the power socket with wet hands.

- ※There is a danger of electric shock

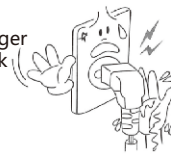

- ◆ Please do not turn on the electricity before running the water, and do not use the power supply other than AC 110V.

- ※It is easy to cause fire

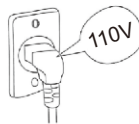

- ◆Do not use loose power sockets; do not scratch, damage, process, forcibly bend, stretch, curl, bundle, bear, or squeeze the power supply.

- ※It is easy to cause electric shock or fire



## Safety Precautions



- ◆Please do not open or close the seat ring and seat cover roughly.
- ※It is easy to crack or lead Leakage and other faults




- ◆Please do not reclining or stepping on the toilet cover.
- ※It is easy to cause damage and lead to failure



- ◆Please do not pull or bend the connecting water pipe.
- ※It is easy to cause water leakage or no water supply



- ◆The upper cover, seat ring and seat cover of the whole machine are plastic products. Do not put objects with ignition sources such as cigarette butts near these parts.
- ※It is prone to fire 



- ◆Do not use dry cloth or toilet paper to wipe the upper cover, seat ring and plastic parts of the seat cover.
- ※It is easy to cause surface scratches



- ◆Please prevent direct sunlight, or place heaters and stoves close to the toilet.
- ※It will cause discoloration of plastic



- ◆In the event of lightning, please unplug the power plug.

- ※It is easy to cause an accident or malfunction



- ◆At night when freezing may occur, please take antifreeze measures to prevent damage caused by freezing.



## Safety Precautions




◆When cleaning and maintaining the plastic parts, do not use unsuitable cleaning agents (bleach, benzene, paint thinner, decontamination powder, cresol, etc.).

※The plastic part is split or corroded



◆Please clean the dust on the power plug regularly. When cleaning, unplug the power plug and wipe with a dry cloth

※If the insulation is poor, it may cause a fire

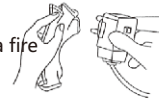


◆The installation height of the socket should be more than 0.8m above the ground, and try to stay away from the place where it is easy to be splashed by water.



◆Do not connect this product with water sources other than tap water (ensure the cleanliness of the water source)

※It may cause skin inflammation, or electric shock or fire due to internal corrosion of the machine.

## each part name

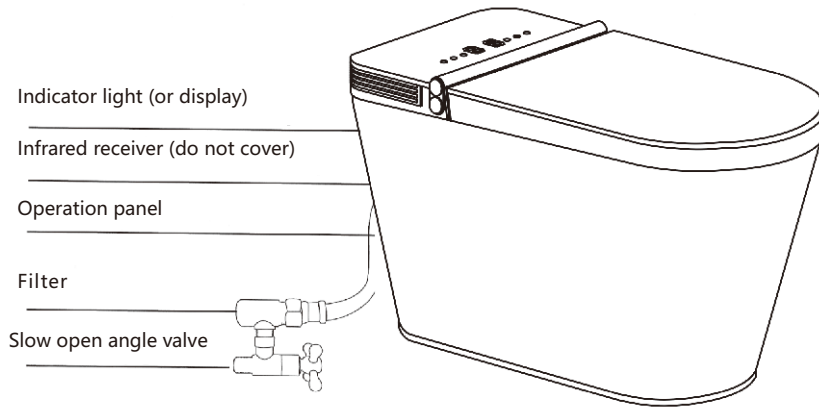

The center pit distance of the sewage outlet is 305/400mm

Note: The actual product shall prevail

## Packing List

Serial number	name		number	remarks
001	complete machine		1	
002	filter	Or angle valve with filter screen	1	With sealing ring
003			1	
004	an instruction manual		1	
005	Remote control		1	
006	Flange ring		1	

## Remote Control Instructions

Press while seated to initiate butt wash  
Press twice for reciprocating cleaning


Long press to turn on/off the product when not seated, and tap to turn on the flushing function. Light weight when seated without function Press to start flushing, light when using the function Press to close the current function.

When seated, press this button to activate the maternity wash function  
Press twice for reciprocating cleaning

No bubble function: Gently press to wash for children, water pressure becomes smaller

The water pressure of the cleaning spray rod is increased by a total of 4 levels.

The water pressure of the cleaning spray rod is reduced by a total of 4 levels

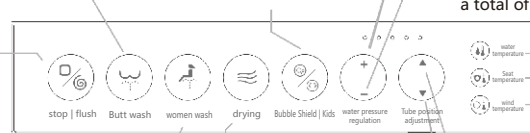

There are 4 levels of water temperature adjustment

There are 4 levels of seat temperature adjustment

There are 4 levels of air temperature adjustment

Press this button to start flushing while seated and dry (180 seconds)

The cleaning spray rod moves forward in a total of 4 levels

After cleaning the spray bar, move to 4 levels



Press once to open the seat cover  
Press twice to open seat

Tap to turn on/off night light  
When seated, press lightly to start the self-cleaning nozzle

(Note: The remote control is different for different product configurations, the actual product shall prevail.)

## Function adjustment and use method

Note: (The product configuration level is different, please correspond to different level functions.)

### Hip wash

#### button

●When the human body is seated, tap the left button "Hip wash" for a butt wash, again Mobile cleaning with a single tap.

### female cleaning

#### button

●When the human body is seated, tap the left button "female cleaning" to perform female cleaning, and then again Mobile cleaning with a single tap.

### drying

#### button

●After the human body is seated, lightly press the second button on the right side "dry" to dry, the drying time is 180 seconds, use toilet paper to absorb water droplets before drying, which can speed up drying.

### stop/flush

#### button

●When seated, press it lightly for the "stop" command, which has the same function as the "stop" button on the remote control.to stop the current job.

### automatic flush

●Press this button when you are not seated to start the toilet flushing and sewage function.

※When the power is off, you can press the knob to flush the toilet / you can press the manual flush button on the left side of the machine Flush the toilet (note: the toilet configuration is different, the function is different, it needs to be configured according to the configuration).

### remote control code

#### button

●Press the side button butt cleaning button within 5 seconds after the toilet is turned on, and don't let go until the toilet comes out With a beeping sound, press the flush button on the remote control.

### foot feel

#### Automatic:

●When the human body is close to open the cover, the foot feel turns around for 15 seconds, and the foot feel starts to flush and close the cover.

#### Manual models:

●Foot sense induction to start flushing.



## Function adjustment and use method

Note: (The product configuration level is different, please correspond to different level functions.)

### Nozzle position adjustment

•The user does not need to move the body, and can adjust the washing position forward or backward according to the body shape. Press the remote The front and rear buttons on the controller adjust the nozzle position. Four Level are adjustable, First-level is move back about 0.4inch.The second to 4-level are move forward about per 0.4 inch.

### Cleaning water pressure adjustment

•Water pressure adjustment can set the water pressure according to the user's needs, press the water on the remote control Press the + or button to adjust a total of 4 levels.

### water temperature regulation

•Press this key to enter the water temperature setting, the water temperature can be adjusted in 4 levels. Each time you press this key 1times, the water temperature switches to another Level. The corresponding water temperature of each Level is normal temperature (tap water temperature), first Level ( $93.2\pm 33.8^{\circ}\text{F}$ ), second Level ( $98.6\pm 33.8^{\circ}\text{F}$ ), and third Level ( $105.8\pm 33.8^{\circ}\text{F}$ ).

### Air temperature adjustment

•Press this key to enter the air temperature setting, the air temperature can be adjusted in 4 levels. Warm to switch to another level. The corresponding wind temperature of each Level is normal temperature, - Level ( $93.2\pm 35.6^{\circ}\text{F}$ ),Second Level ( $98.6\pm 35.6^{\circ}\text{F}$ ), third Level ( $105.8\pm 35.6^{\circ}\text{F}$ ).

### Seat temperature adjustment

•Press this key to enter the seat temperature setting, there are 4 levels of seat temperature adjustable. Each time this button is pressed, the seat Warm to switch to another Level. The corresponding seat temperature of each Level is normal temperature, first Level ( $93.2\pm 35.6^{\circ}\text{F}$ ),Second Level ( $98.6\pm 35.6^{\circ}\text{F}$ ), third Level ( $105.8\pm 35.6^{\circ}\text{F}$ ).

### night light

•The body. There is a night light on it, which is convenient for you to go to the toilet at night. Short press this key, the night light is on, short press this key, the night light is off.

### child

•Press this button to reduce the water pressure of the nozzle, extend to the set position and spray for 90 seconds at the set water temperature.

### Ambient Light

•Automatic flip model: the bathroom light is on and the ambient light is off, and the bathroom light is off. The ambient light depends on the human body. Nearly bright (Note: the product is equipped with a photosensitive switch), the ambient light will automatically light up when the human body is close to 60inch, After the human body leaves, the ambient light will automatically turn off.

•Manual flip model: The ambient light is on according to the light, the ambient light is off, the bathroom light is off, and the ambient light is off. When the light is on, it will also be off according to the display, and the ambient light will be off.

### UV

•Automatic: The seat cover is closed for 5 seconds, and the spray rod is extended for 30 seconds for ultraviolet sterilization.

•Manual model: After the human body leaves the seat for 20 seconds, the spray rod is extended for ultraviolet sterilization for 30 seconds.


## Display Description



water temperature   Sitting temperature   sit down

## Knob Operation Instructions

Shutkey Button

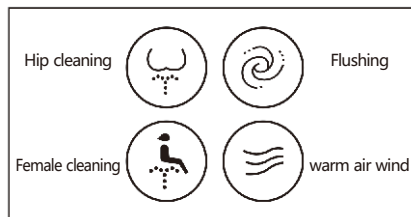

### When not seated

#### Key payment

Press and hold the flush button for 2 seconds to turn on/off the power supply of the whole machine,

Gently press the flushing button to start the ceramic flushing, and gently press the button to start the ceramic flushing when the machine is stopped.

### When seated

#### Key payment

Gently press the hip cleaning button, open the hip cleaning, and then press Start to move to cleaning,

Gently press the women's washing button to turn on the women's washing function, and then press Start to move to washing,

Press the flush button to turn off all cleaning functions,

Lightly press the drying button to start the drying function and wash the ceramic, and then press the button to adjust the air temperature for 4 levels.

## Cleaning and maintenance methods


Note: When cleaning and maintaining, be sure to turn off the power and confirm that the power indicator on the toilet cover panel is off.

### Cleaning of the outside of the machine

- ※When cleaning, the power plug must be unplugged first to avoid contact with the plug or water entering the socket.
- ※When cleaning this product, please wipe it with a soft cloth and water. If it still cannot be wiped off, wet it with a soft cloth and then wipe it with a cleaning agent (neutral).
- ※Do not use unsuitable cleaning agents (banana water, bleach, benzene, thinner, detergent powder, cresol, etc.), and do not use water directly Flush or shower head spray to avoid fire caused by short circuit.
- ※It is recommended to wipe with a warm cloth to prevent static electricity. The product is easy to absorb dust due to static electricity, making the product dirty and black and difficult to clean.

### Nozzle cleaning

- ※The cleaning of the nozzle needs to be completed under the condition of electrification. Press when the person is not sitting, press the "spout" Press the "Clean" button, the nozzle will automatically extend and stay for 30 seconds, then return to its original position and Automatic cleaning for 10 seconds.
- ※Use a soft toothbrush to brush the nozzle, during which you can press "stop" key to end.

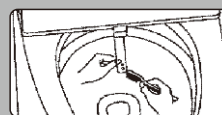


### Replacing the remote control battery

- ※When the battery is about to run out, the LCD of the remote control will fade or go out, and you should replace the battery with a new one.
- ▲ Under normal circumstances, the remote control LCD display icon is bright.
- ▲ The attached battery mainly checks the operation status during installation.
- ※Open the back cover of the remote control battery area and replace with new batteries (two 1.5V AAA alkaline batteries).

**Notice**


- The positive and negative poles of the battery must be the same as those on the remote control.
- New batteries and old batteries cannot be mixed.
- Please use alkaline batteries.

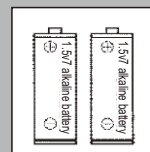

### Filters are cleaned or replaced regularly

If you feel that the spray intensity of the shower head or the flushing intensity of the toilet is weakened after using the smart toilet for a long time, please replace the membrane filter regularly, generally once every six months.

Note: In places with poor water quality, it is recommended to replace it once every three months.

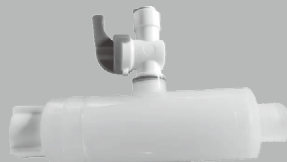

- When removing the filter, be sure to close the water inlet valve.
- When installing the filter, please be sure to tighten the water supply hose, otherwise it will easily cause water leakage and indoor root water.

Note: If no one lives for a long time, it is necessary to close the triangle valve to avoid water leakage from the filter.

## Product Specifications

name		
	Rated voltage	110V / 50Hz
	Rated power	1050W inlet water temperature 15 ° Under the condition of c240kpa
	Water supply pressure	0.15Mpa (dynamic pressure) ~ 0.75mpa (static pressure) (1.47 ~ 7.35bar)
Cleaner	Flushing water volume	The maximum flow rate of hip washing is about 0.185 US gallon
		The maximum flow rate of female washing is about 0.185 US gallon
	Water pressure regulation	Hip wash and female wash each four, computer control
	Temperature regulation	4 Level adjustment (unheated, about 93.2±35.6 ° F, About ,98.6 ± 35.6° F , About 105.8 ± 35.6 ° F)
	Heating power	1600W (instant heating)
	Safety device	Water temperature sensor, overheat blocking, temperature fuse, leakage protector
Seat ring	Heating power	About 45W
	Buffer function	When opening and closing the toilet seat and toilet cover, slowly and gently put it down
	Temperature regulation	4 Level adjustment (unheated, about 93.2±35.6 ° F, About ,98.6 ± 35.6° F , About 105.8 ± 35.6 ° F)
	Safety device	Seat temperature sensor, temperature fuse
Drying	Heating power	Average about 250W (maximum about 350W)
	Temperature regulation	4 Level adjustment (unheated, about 93.2±35.6 ° F, About ,98.6 ± 35.6° F , About 105.8 ± 35.6 ° F)
	Safety device	Fan locked rotor protection, overheat protection, temperature fuse
	Flushing method	Jet siphon
	Ambient temperature	98°F~122°F

Note: when the water pressure is lower than 0.2MPa, it is recommended to install booster pump otherwise it may affect your normal use

## How to fix up the trouble you met?

Please check the following before entrusting maintenance service


product part or function	Phenomenon	Check items	Method of exclusion
Body	Doesn't work at all	Whether the power is not turned on	Please turn on the power
		Is the power plug inserted?	Please reinsert the power plug
		Is there a power outage?	Check again when power is restored
Hip cleaning female cleaning	Nozzle can't get water	Is the water inlet valve open?	Please open the water inlet valve
		Whether to stop water	Please stop the washing function and wait for the water supply to return to check again
		Whether the nozzle is blocked by foreign objects	Please clean the nozzle and remove foreign objects
		Whether the sensor is sensitive	Re-adjust your sitting position to confirm that the sensor is working properly
	Weak water	Whether to set the water pressure in the weak gear	reset water pressure
		Whether the water inlet is smooth	Please clean the water inlet filter
	Stop water in the middle	Set whether the cleaning time has come (The cleaning time of this machine is 90 seconds)	Please restart the cleaning function after waiting for 3 minutes
Whether the sensor is sensitive		Re-adjust your sitting position to confirm that the sensor is working properly	
low water temperature	Whether the water temperature setting is low	Please press the "Water Temperature" button to adjust the water temperature	
Warm air drying	Warm air temperature	Whether the air temperature is set to low temperature	Please press the "Air Temperature" button to adjust the air temperature
	Heater stops midway	Whether drying automatically stops time	Please start the drying function again
		Whether the sensor is sensitive	Re-adjust your sitting position to confirm that the sensor is working properly
Seat heating	Seat temperature is not enough	Whether the seat temperature is set to a low gear	Please press the "seat temperature" button to adjust the seat temperature
		Is energy saving turned on?	Readjust the seat temperature
Abnormal buzzer alarm	The water temperature indicator flashes, Buzzer alarm	Unplug the power plug and re-supply, if the fault still exists, please cut off the power, Contact the manufacturer or local service facility.	
	Seat temperature indicator flashes, Buzzer alarm		
	all lights flashing, Buzzer alarm	Turn off the power, check whether the water is cut off, and then turn on the power after the water supply is restored.	
	Body leaks	Close the water-saving valve to stop the water supply, check the water supply, check whether the water supply pipeline is damaged, Contact the manufacturer or local service facility.	

## installation method

### ① Confirmation of installation environment

1. Before installation, confirm that the wall and floor tiles of the bathroom are completed, and the sewage pipes, waterways and circuits are reserved as shown in the figure. According to the actual pit distance of the toilet, select the corresponding toilet (11.8inch pit distance, 15.7inch pit distance). Water inlet pressure range: 0.15Mpa (dynamic) -0.75Mpa (static); inlet water temperature: 39.2°F-95°F.

2. Install the water inlet valve on the wall 3.9inch from the ground and about 11inch from the left side of the center of the sewage out letface.

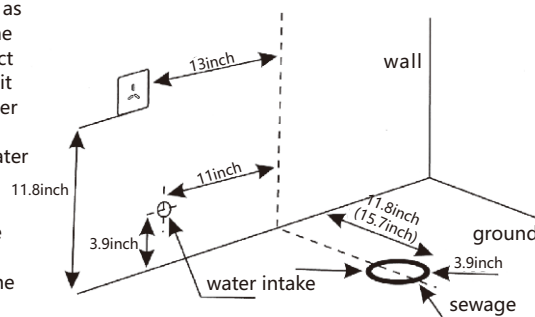

Remarks: Pulse

**Tip:** Please use the special water inlet valve attached to this product to install it to the water outlet pipe. If the user has installed the water inlet valve, it needs to be removed.

### ② Install the toilet

1. Put a layer of glass glue on the upper and lower end faces of the flange ring, set it on the sewage outlet, and then align the pipe opening at the bottom of the toilet with the flange Circle, gently place the toilet horizontally on the ground from top to bottom.


2. Apply a layer of glass glue on the connection between the bottom of the toilet and the ground.

### ③ Water connection

1. Connect the slow-opening angle valve and filter of the accessory first.

2. Connect the angle valve to the wall.

3. After installing the toilet, connect the braided hose to the water inlet filter.

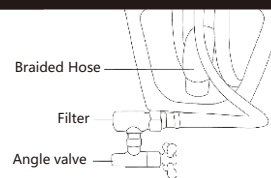


## Confirmation before use


Before using the smart toilet for the first time, be sure to check the following items

### ① Confirm that the power plug is inserted into the socket

◉Insert the power plug into the AC (AC) 110V socket, and the indicator light of the leakage protector will be on.

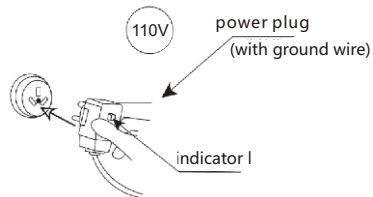

### ② Make sure the water inlet valve is open

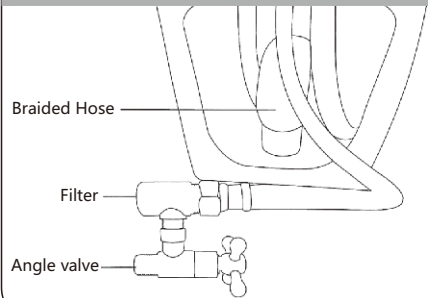

### ③Confirmation of indicator information

◉Confirm whether the toilet power indicator light is on.

### ④Confirm each function

1. Confirm whether the sprinkler head and its water pipes are leaking: Wipe the water dry After tube sections, check with absorbent paper.

2. Check the nozzle cleaning (when the human body is not seated), clean Washing, Women's, Drying, Automatic Deodorization, Human Body Seating Whether the action is normal, the water potential and water temperature, seat temperature, .Whether the air temperature adjustment is normal, the damping buffer mechanism is No normal.

※When checking the washing, women's, drying, and automatic deodorization functions, make sure that the seat sensor is activated. When washing, female, apply hand covering Hold the front of the spout to block the spray water to avoid splashing or unplugging the spray head.



#### Warning

- Do not use a power supply other than AC 110V.
- Please carry out wiring according to relevant regulations.