 


# FESLEY

TO LEAD A NEW COOL

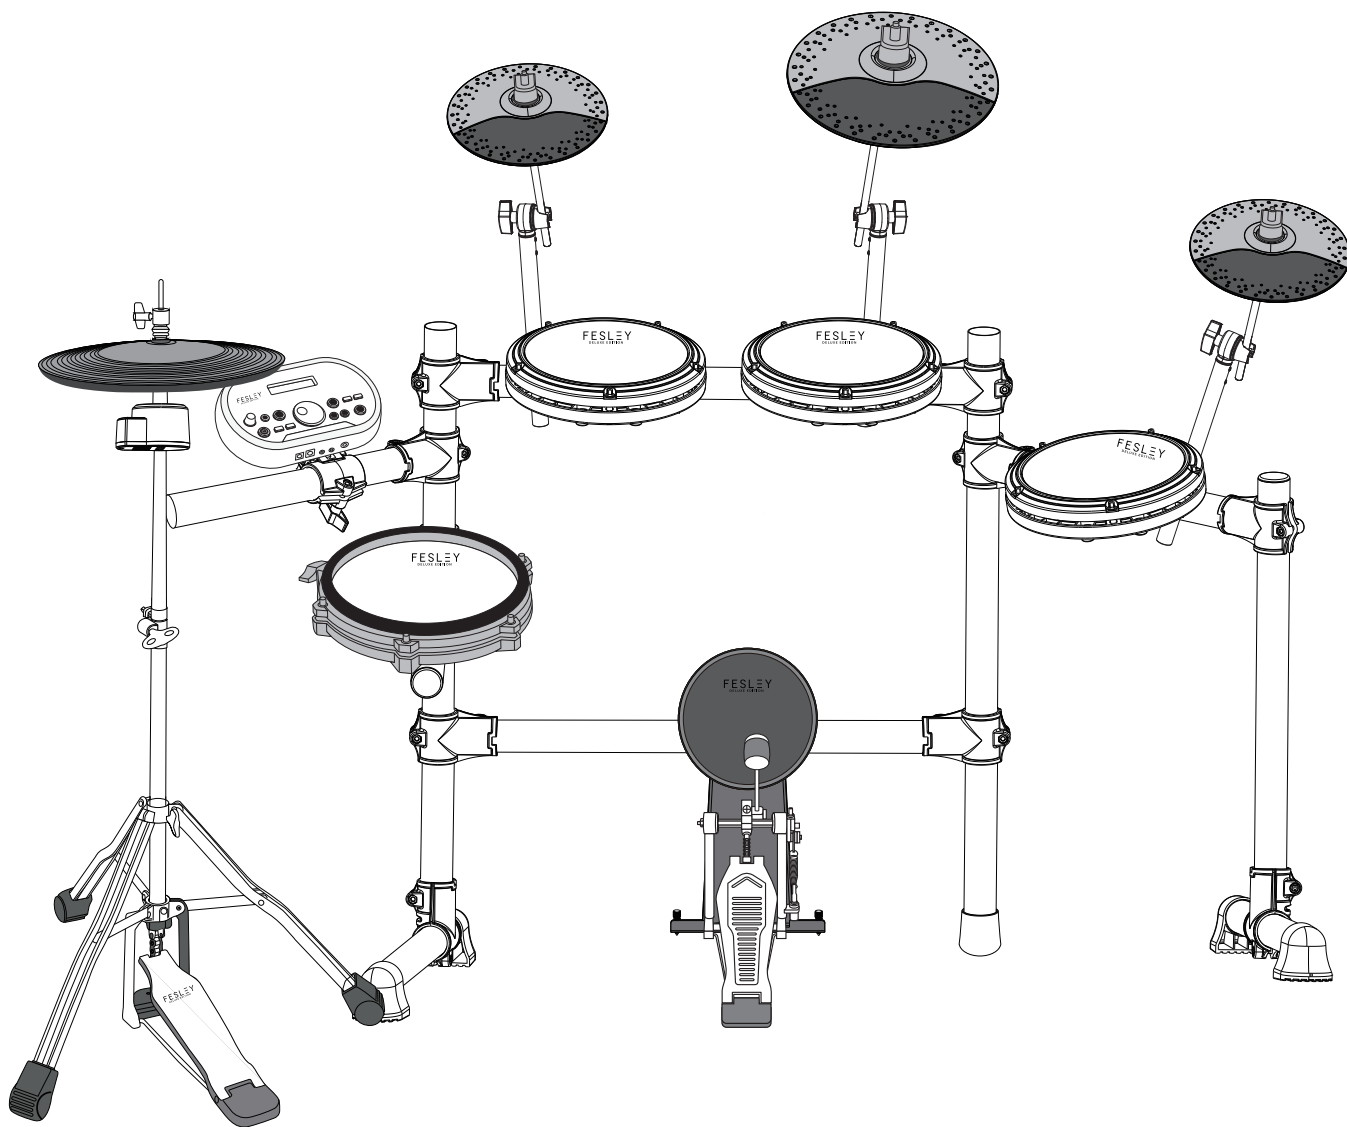

**FED1000**

## INSTRUCTION MANUAL

---

### Electric Drum

To connect directly with our support team,  
please email  [support@fesleymusic.com](mailto:support@fesleymusic.com)



# FUNCTION INTRODUCTION

 
Thank you for choosing the Fesley electronic drum. The elegant and delicate Fesley electronic drum is the perfect combination of modern and new electronic technology. It is strongly recommended that you read this instruction before using it.

- ◆ Please store this instruction in a safe place for future reference.



## MECHANICAL HAMMER KICK DRUM PEDAL

The mechanically simulated kick drum pedal brings you a real feeling of pedaling

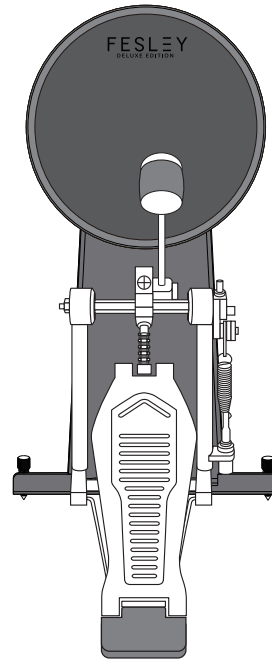

- Six layers of force are adopted to make it closer to the acoustic drum playing.
- Supports double triggers with the edge-hit response.
- 30 drum kits and one custom drum kit.
- Number of timbres 225 and GM standard timbre library. (song use)
- Thirty songs, adjustable GM volume and drum volume .(for learning)
- Effect: reverberation type 0-5, two-band EQ equalization.
- Supporting adjustment of sensitivity parameters of drum discs.
- Speed control: 30-250 beats/minute.
- Metronome: 9 kinds.
- Other functions: customize settings, store and restore factory settings.
- Interpoles: USB MIDI, headphones, audio input, audio output, adding cymbal port.

### REMARK!

---

- This product is an electro-acoustic instrument product. It is normal that there is a little current sound in the speaker or earphone after power-on.  
Keep away from "radio, TV, antenna receiver, router, refrigerator, TV, motor and other RF electrical interference sources" during using.

# CONTENTS

<b>FUNCTION INTRODUCTION</b>	<b>1</b>
<b>CONTENTS</b>	<b>2</b>
<b>INSTALLATION GUIDE</b>	<b>3</b>
Check the attached items	3
Install the kick drum	4
Install the hammer	4
Fix kick drum and kick drum pedal	4
Install the module bracket	4
<b>ASSEMBLY DRAWING</b>	<b>5</b>
Pipe fitting	5
Drum pan intubation	5
Mounting stand	6
Install the support arm	6
Install striking parts and sound module	7
Hi-hat stand	8
Hi-hat parts introduction	8
Detailed introduction of important parts	8
<b>ILLUSTRATION OF MODULE SOCKET</b>	<b>9</b>
Power cord connection	9
USB MIDI port	9
Audio input port	9
Headphone port	9
Audio output port	9
Increase cymbal port	9
<b>OPERATION GUIDE</b>	<b>10</b>
Power on	10
Master volume	10
Drum kit timbre selection	11
Drum percussion	11
Metronome	12
Built in song playback	12
Playback speed	13
Drum sensitivity adjustment	13
Reverb/eq optimization	13
Percussion recording	13
Reset factory settings	13
<b>APPENDIX</b>	<b>14</b>
Drum timbre	14
Preset drum kit	14
Demo song	14
<b>PRODUCT MAINTENANCE</b>	<b>15</b>
<b>SAFETY PRECAUTIONS</b>	<b>16</b>
<b>WARRANTY CARD</b>	<b>19</b>

# INSTALLATION GUIDE

## REMARK!

- Please follow the instructions and read the "safety precautions" in the instruction manual carefully before using.
- This product must be installed by an adult, please do not install by the minor independently, don't let the minor install it independently.

 
# 01

## Check the attached items

- After opening the package, please check whether it contains all the items immediately. If there are any missing, please contact us.



Module




Module bracket



Hi-hat



 Crash\*2




Ride




Tom  
(3pcs)



 Snare




Cymbal arm  
(3pcs)

 

Drum arm



 Drum Stool



Rear support



Connecting  
bracket



Front bracket



Kick

2

 


Fastening screw

2




6

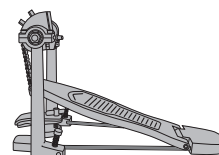


Kick pedal



 Audio Cable



Drum stick

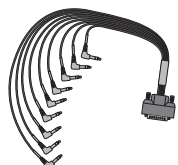 

Signal Connection  
cable



Stick hammer



Power adapter



Screwdriver



Drum key



Headphone




# INSTALLATION GUIDE
 
## 02

### Install the kick drum

- when installing, please tighten the screws and be careful to pinch your fingers.

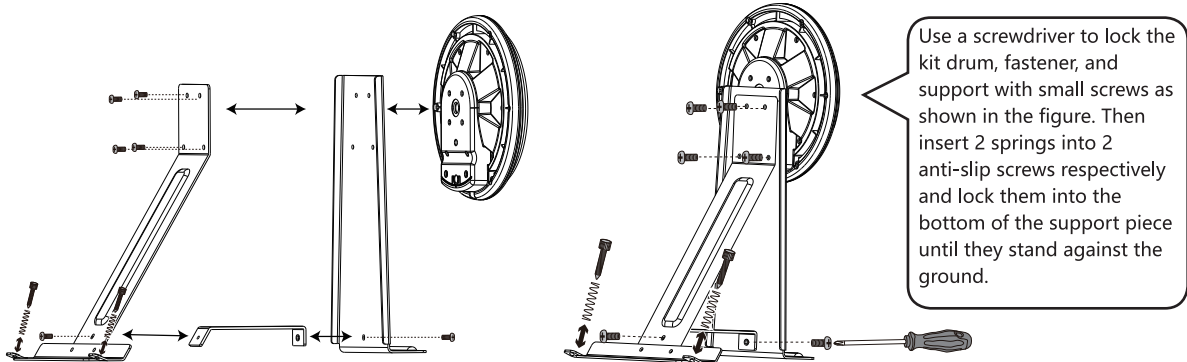


## 03

### Install the hammer bar

- the pole should be inserted in lace and the screws should be tightened to avoid loosening.

 Insert the hammer rod into the round hole as shown in the figure, rotate the wool hammer to align it with the drum surface, and then tighten it with the drum key.




Insert the fixed iron bar into the hole as shown in the figure.

## 04
 
### Fix the kick drum and kick drum pedal

- the bottom drum and the step hammer should be fixed and tightened to avoid falling off.

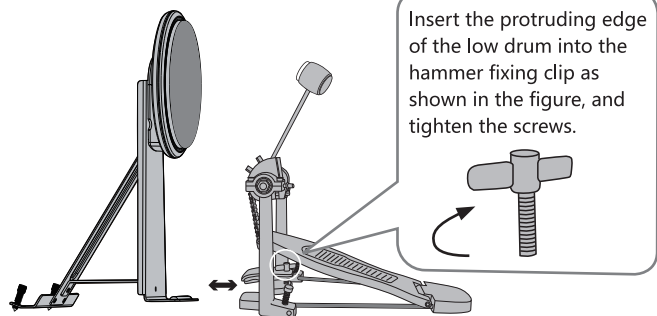


Insert the protruding edge of the low drum into the hammer fixing clip as shown in the figure, and tighten the screws.

## 05
 
### Install the module bracket

- please insert it in place during installation.

Align the mainframe module bracket with the mainframe module track and insert it. After inserting it to the bottom, you will hear the snap pieces pop up.

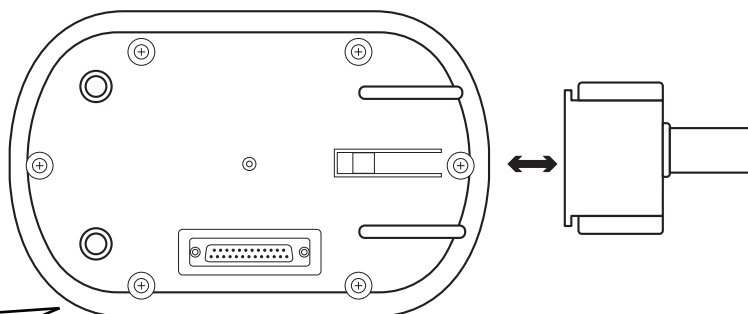


# ASSEMBLY DRAWING

## 06

### Pipe fitting

 
•The pipe fittings are located in a separate small package in the packing box.

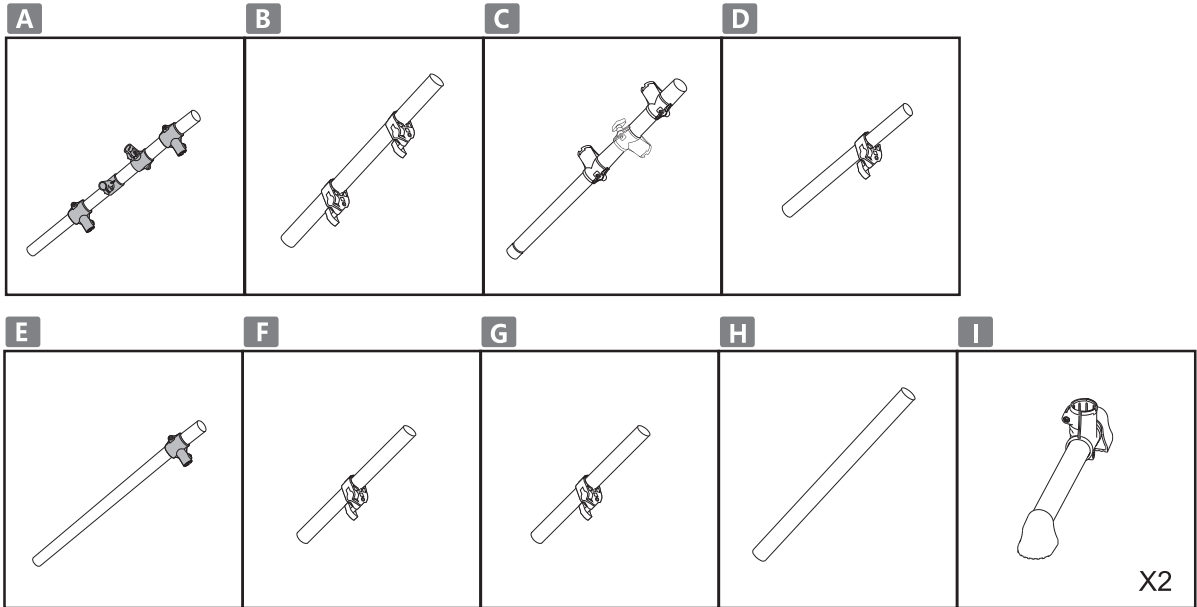

## 07

### Drum pan intubation

 Install the drum on the middle horizontal pipe.

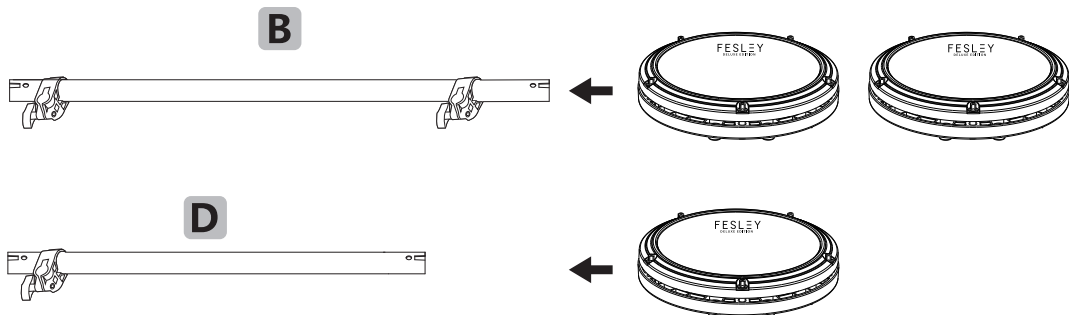


Installation sequence: first install the drum plate, and then install the stand

# INSTALLATION GUIDE
 
## 08

### Mounting Stand


- During installation, tighten the screws and be careful to pinch your fingers.
- Assemble the stand in the specified direction

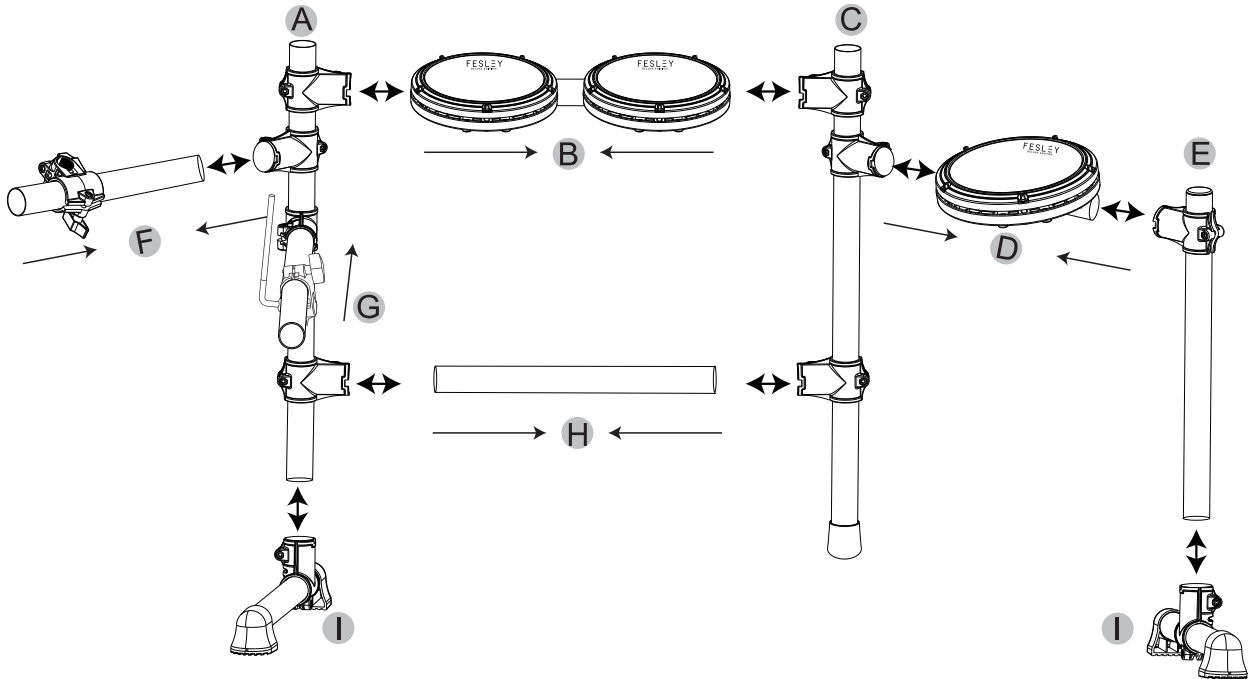

## 09

### Install the support arm

 - The support arm must be inserted in place, and the plastic head screw should be tightened to avoid falling.

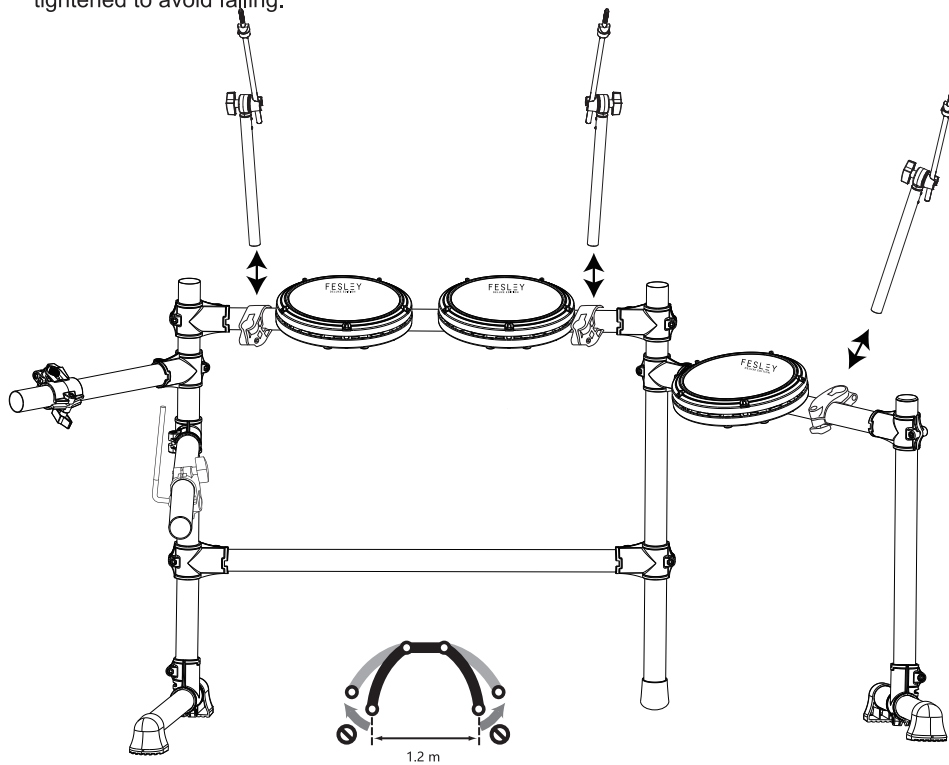

For safety reasons, the expansion width of the support should be less than 1.2 meters.

# INSTALLATION GUIDE

 
## 10

### Install striking parts and sound module

- Tighten the screws after the drum is inserted to avoid loosening.
- Don't screw the cymbale tightly, leave some space for them to shake up and down.

Withdraw the nuts and circle cushions of arm the three cymbals' support arm, put the three cymbals into the corresponding support arm, and screw on the nuts. Put 3 drums and 1 drum into the corresponding support rod respectively, and tighten the screws.


Note: the functions of each cymbal, drum and snare are different, so it is necessary to refer to the accessory identification for correct installation!

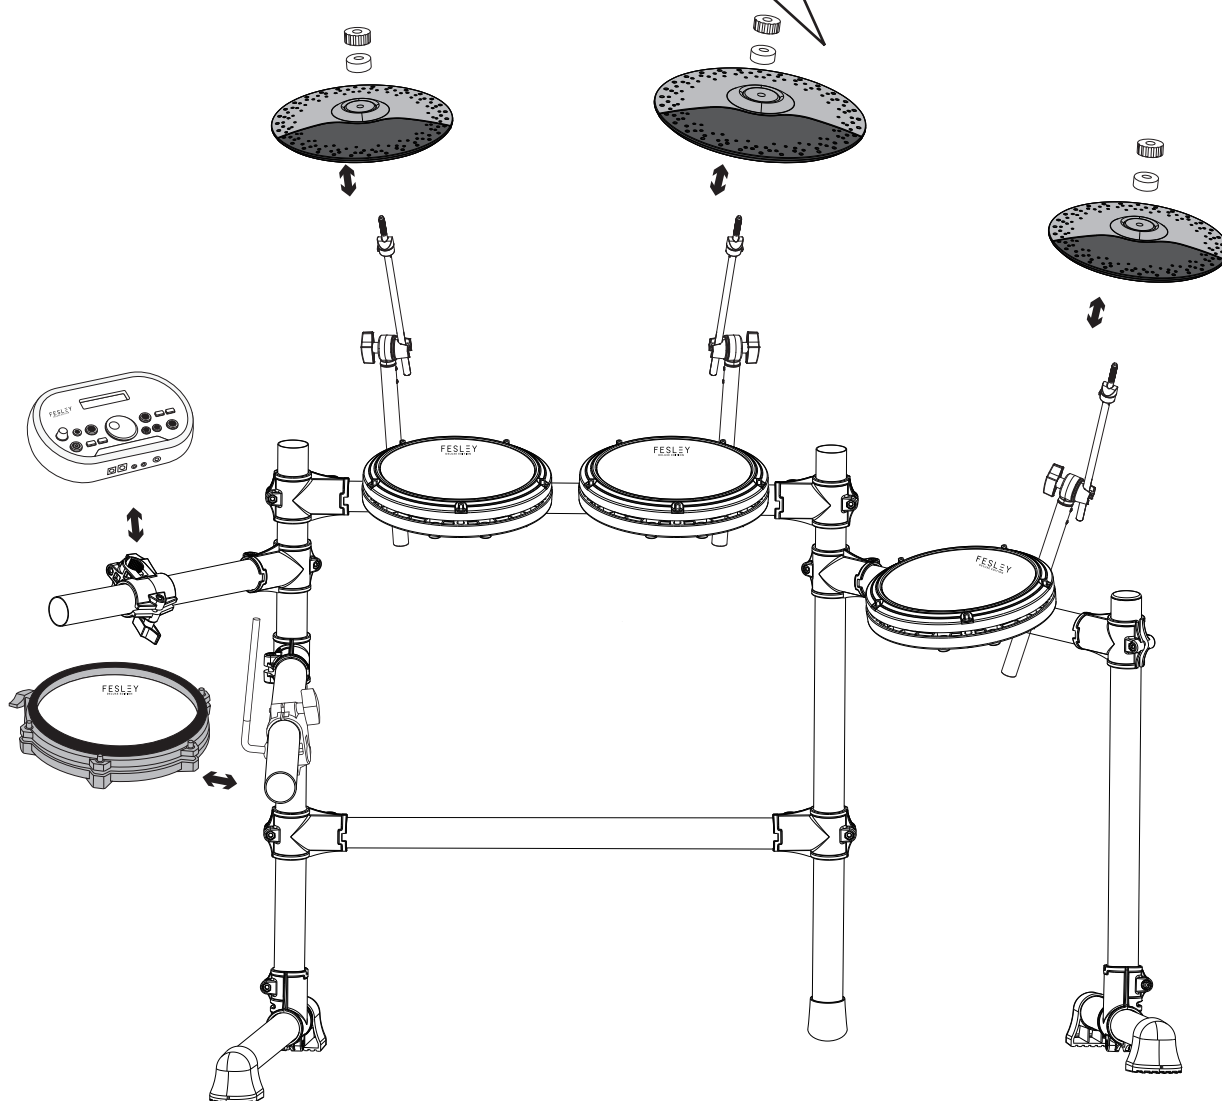

# HI-HAT STAND

## 1 Hi-hat parts introduction

 - |               |                            |
|---------------|----------------------------|
| ① Hi-hat arm  | ⑧ Clutch nut               |
| ② Wing screw  | ⑨ Hi-hat controller        |
| ③ Clutch bolt | ⑩ Cymbal support base felt |
| ④ Lock nut    | ⑪ Cymbal support base      |
| ⑤ Large felt  | ⑫ Locating clip            |
| ⑥ Hi-Hat      | ⑬ Regulating screw         |
| ⑦ Small felt  | ⑭ Pedal                    |
|               | ⑮ U-shaped support arm     |

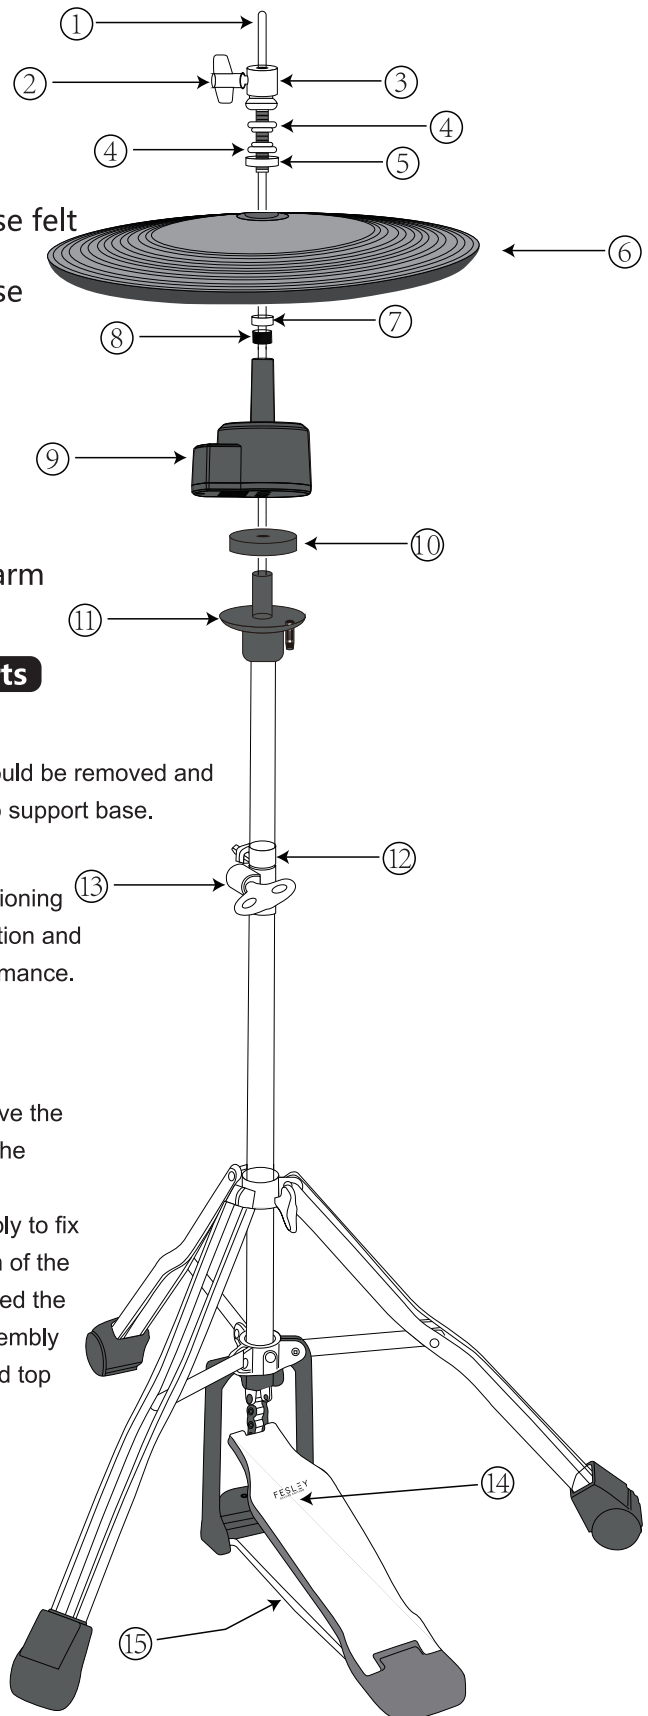

## 2 Detailed introduction of important parts

### Cymbal support base

 
When installing the bottom step, the step clutch assembly should be removed and the step controller should be placed on the felt ring of the step support base.

### Locating clip


Once the height of the bottom cymbal is determined, the positioning clip can be used to mark the setting position for future installation and setting, and prevent unexpected changes during music performance. Tighten the locating clip in place with the drum key.

### Pedal clutch

When installing the top step, loosen the wing screw and remove the entire step clutch assembly from the step lever. then remove the clutch nut and place the cymbal between the two clutch felt. After installation, tighten the clutch nut onto the clutch assembly to fix the cymbal. (Note: the bottom of the clutch nut and the bottom of the clutch bolt are on the same horizontal plane, and cannot exceed the clutch bolt, as shown in the figure below) Place the entire assembly on the step lever, and tighten the wing screw to fix the required top scale position.

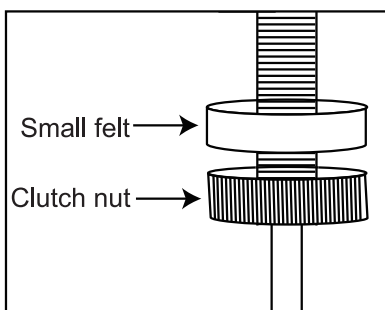

## ILLUSTRATION OF MODULE SOCKET

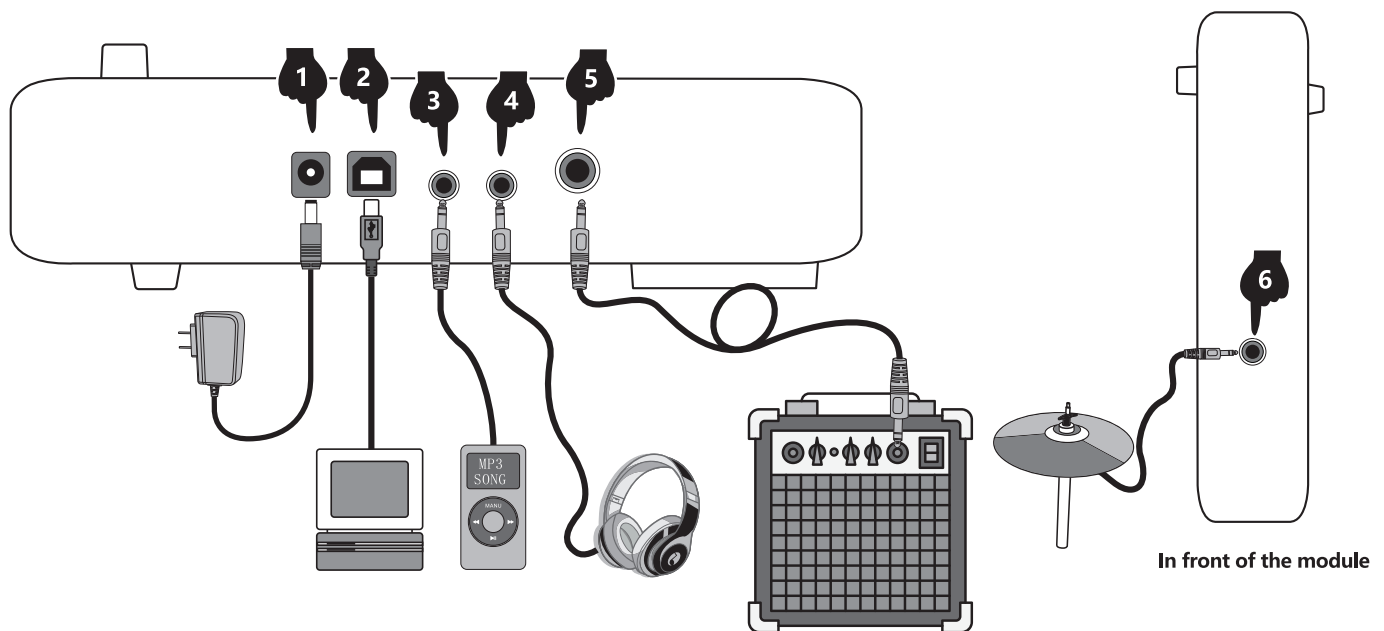 

### 1 Power cord connection

1. Access the power cord as shown in the diagram, plug one end into the power port of the sound module. Plug the other end into a 100-240V household power outlet (Figure 1)
2. When the product is not used for a long time, please unplug the power cord and store it properly.

### 2 USB MIDI port

Using the MIDI USB interface of the electronic drum can be connected to music devices with MIDI for interaction.

1. Learn or operate functions such as playing, composing, and storing through software pre-installed on your computer or tablet. (Figure 2)
2. When connected to a computer or tablet, the audio output on the device needs to be connected to the audio input port of the drum host box in order to synchronize the sound effects on the device. (Figure 5)

Translated with [www.DeepL.com/Translator](http://www.DeepL.com/Translator) (free version)

### 3 Audio input port

The audio input port allows you to connect an external audio source to the drum host box for playback (e.g. MP3, linear audio signal input for cell phones, etc.). (Figure 3)

### 4 Headphone port

Connecting headphones allows you to monitor changes in detail while playing, and does not disturb others when playing without a speaker connected. (Figure 4)

### 5 Audio output port

Audio output port can be connected to external active speakers (need special drum speakers), and large audio equipment. (Figure 5)

### 6 Increase cymbal port

This port allows you to add a cymbal for easy expansion. (Figure 6)

# OPERATION GUIDE



## 1 Power on

1. Press the "power" switch to enter the playing state. (Figure 1)

2. Please turn off the power when not in use for a while.

- This product processor chip is complex, similar to the computer system, sometimes there is no response, please turn off the power switch and then turn it on to normal work.

## 2 Master volume

Use the "volume" wheel to adjust the total volume. Please adjust the volume to a satisfactory position. (Figure 2)

# OPERATION GUIDE

 
 
 
## 3 Drum kit timbre selection

1. Press the "voice" button, the display will display (voice), and enter the drum kit adjustment mode. (Figure 3)
2. Use the "v" key to select the following options as adjustments. (Figure 4)  
The display shows:
  - (kit num 001-030): drum kit selection, a total of 30 preset drum kits.
  - (kit vol 000-127): drum kit volume, 128 levels in total, adjustable.
  - (kick 001-030): the timbre of the kick drum is selected, and a total of 30 timbres are adjustable.
  - (snare 001-030): the timbre of the snare drum is selected, and a total of 30 timbres are adjustable.
  - (snare rim 001-030): the timbre of the snare drum is selected, and a total of 30 timbres are adjustable.
  - (tom1 001-030): drum 1 timbre selection, a total of 30 timbres can be adjusted.
  - (tom2 001-030): drum 2 timbre selection, a total of 30 timbres can be adjusted.
  - (tom3 001-030): drum 3 timbre selection, a total of 30 timbres can be adjusted.
  - (crash 001-030): selection of crash cymbal timbre, a total of 30 timbres can be adjusted.
  - (crash rim 001-030): select the tone of the crash cymbal while hitting, and a total of 30 tones can be adjusted.
  - (crash2 001-030): boom 2 timbre selection, a total of 30 timbres can be adjusted.
  - rim 2-030, and 30 tones can be adjusted.
  - (ride 001-030): select the timbre of the ride cymbal, with 30 timbres in total, which can be adjusted.
  - (ride rim 001-030): select the timbre of the ride cymbal and a total of 30 timbres can be adjusted.
  - (open at 001-030): open cymbal timbre selection, a total of 30 timbres can be adjusted.
  - (close hat 001-030): closed cymbal timbre selection, a total of 30 timbres can be adjusted.
  - (pedal 001-030): select the tone of the cymbal and a total of 30 tones can be adjusted.
3. Turn the "quick selection wheel" to adjust the parameters of the above options. (Figure 5)
4. Short press the "save and reset" button to save the adjusted drum set, so that it can be called later(Figure 6)
5. Press and hold the "voice" button for more than 3 seconds to call the previously customized adjusted and saved drum kit. (Figure 3)

## 4 Drum Percussion


This product has double trigger induction, which makes the striking sound effect closer to the original sound drum effect.

1. "snaredrum" can strike the drum surface and edge.
2. "crash cymbals" and "ride cymbals" can knock the cymbal surface and cymbal edge, and hold the cymbal edge with your fingers to make sound.
3. Different combinations of "cymbal stepping cymbal piece" and "cymbal stepping pedal" will change the tone of cymbal stepping.
  - open cymbal timbre "openhat": single tap the cymbal surface.
  - closed cymbal tone "closehat": step on the cymbal pedal and keep it closed, while knocking on the cymbal surface.
  - step on the cymbal tone "peak": step on the cymbal pedal without knocking on the cymbal surface.

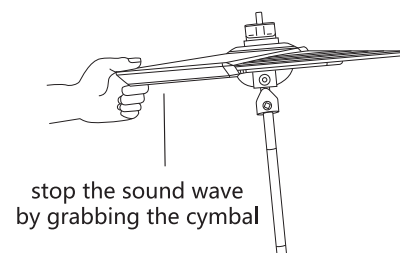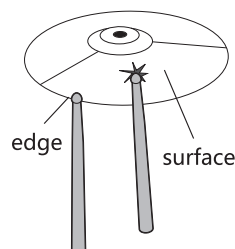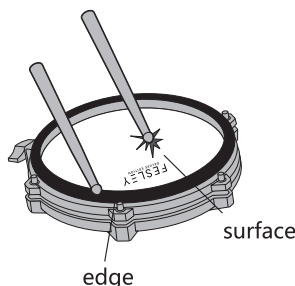



# OPERATION GUIDE

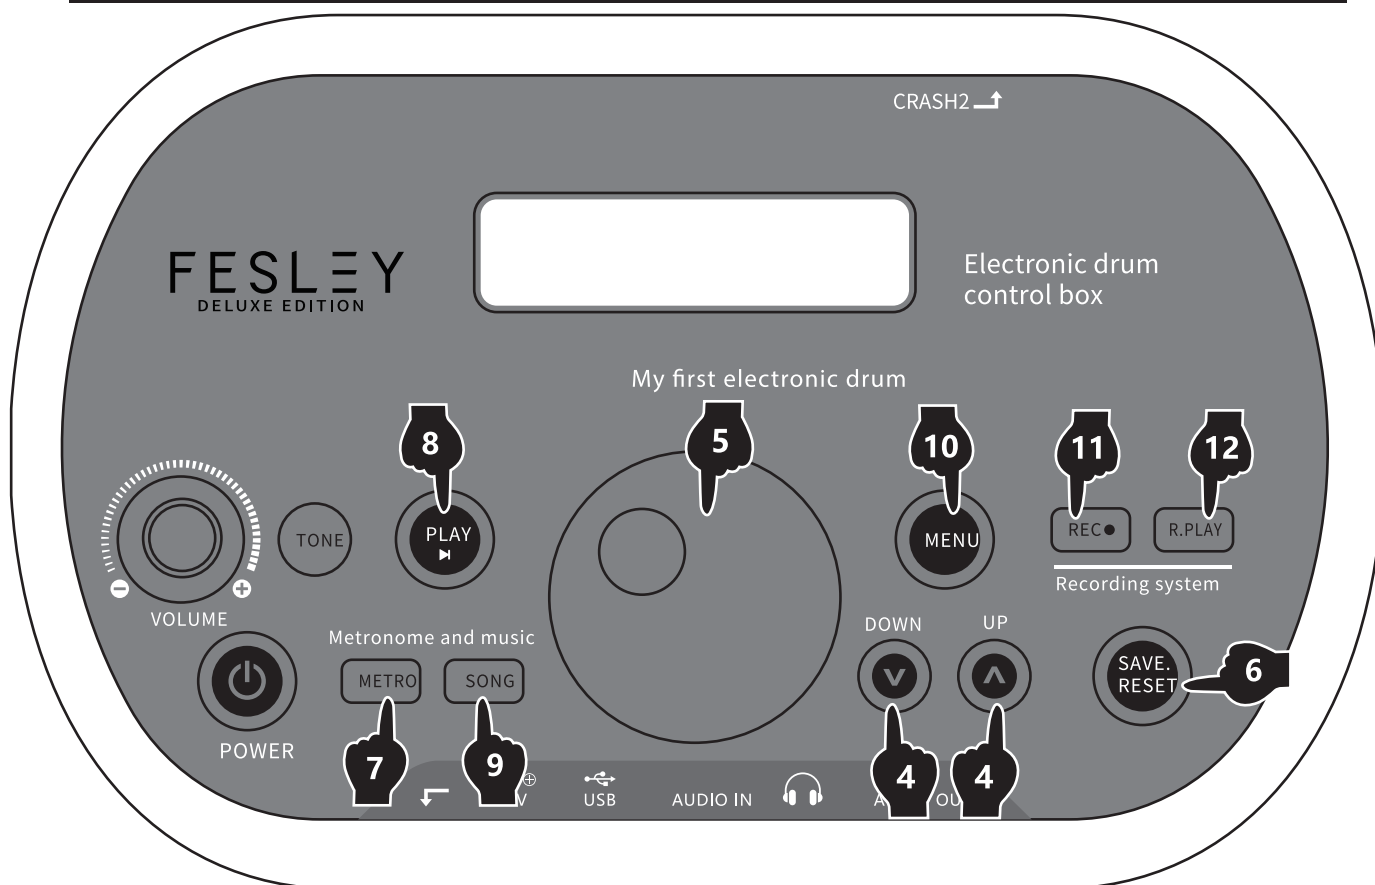 

## 5 Metronome

1. Press the "metronome" button, the display will display (Metro), and enter the metronome mode. (Figure 7)

2. Use the "v" key to select the following options as adjustments. (Figure 4)

### THE DISPLAY SHOWS:

- (time 002-016): metronome speed, 4 levels in total, standard speed adjustable.
- (beat 001-009): there are 9 types of metronome, which can be adjusted.
- (metro vol 000-127): metronome volume, 128 levels in total, adjustable.

3. Turn the "quick selection wheel" to adjust the parameters of the above options. (Figure 5)

4. Press the "play" button to start playing the metronome, and press it again to stop. (Figure 8)

## 6 Built in song playback

1. Press the "demonstration song" button, and the display screen will display (song), and enter the demonstration song mode. (Figure 9)

2. Use the "v" key to select the following options as adjustments. (Figure 4)

### THE DISPLAY SHOWS:

- (num 001-030): selection of 30 built-in demonstration songs.
- (gm vol 000-127): chord accompaniment volume, 128 levels in total, adjustable.
- (drm vol 000-127): drum group volume, 128 levels in total, adjustable.

3. Turn the "quick selection wheel" to adjust the parameters of the above options. (Figure 5)

4. Press the "play" button to start playing the demonstration song, and press it again to stop. (Figure 8)

# OPERATION GUIDE

## 7 Playback speed

In the demonstration song or metronome playing mode, adjusting the speed can control the speed of demonstration song and metronome playing.

1. Press the "menu" button repeatedly until the display shows (tempo), and enter the sub option p playback speed mode. (Figure 10)

### THE DISPLAY SHOWS:

- (speed 030-250): playback speed selection, 221 levels in total, speed adjustable.
2. Turn the "quick selection wheel" to adjust the parameters of the above options. (Figure 5)

## 8 Drum sensitivity adjustment

1. Press the "menu" button repeatedly until the display shows (sensitivity), enter the sub option, and enter the sub option percussion instrument component sensitivity adjustment mode. (Figure 10)

2. Tap the drum disc you want to adjust with a drum stick.

3. Use the "v" key to select the following options as adjustment. (Figure 4)

### THE DISPLAY SHOWS:

- (padsen 001-006): surface impact sensitivity, 6 levels in total, adjustable.
- (rimsen 001-006): side strike sensitivity, 6 levels in total, adjustable.
- (threhold 001-032): trigger threshold, 32 levels in total, adjustable.
- (xtalk 001-032): crosstalk threshold, 32 levels in total, adjustable.
- (retiger 001-032): repeated triggering, 32 levels in total, adjustable.
- (velocity 001-003): force curve, 3 levels in total, adjustable.
- (volume 000-127): drum volume, 128 levels in total, adjustable.

4. Turn the "quick selection wheel" to adjust the parameters of the above options. (Figure 5)

5. Short press the "save. Reset" button to save the adjusted parameters for future use. (Figure 6)

## 9 Reverberation / equalization optimization

1. Press the "menu" button repeatedly until the display shows (utility), and enter the sub option reverberation / equalization optimization mode. (Figure 10)

2. Use the "v" key to select the following options as adjustment. (Figure 4)

### THE DISPLAY SHOWS:

- (revtype 000-005): reverberation category, 6 kinds in total, adjustable.
- (revlevel 000-127): reverberation intensity level, 128 levels in total, adjustable. When the value is "000", reverberation is turned off.
- (eq\_h 000-127): high frequency equalization, 128 levels in total, adjustable.  
Adjustable low frequency equalization (eu-000, l): 128 ●#.

3. Turn the "quick selection wheel" to adjust the parameters of the above options. (Figure 5)

4. Short press the "save. Reset" button to save the adjusted parameters for future use. (Figure 6)

## 10 Percussion recording

1. Press the "recording" button to enter the percussion recording mode, and tap the drum to start recording. Press again to stop recording. (Figure 11)

2. Press the "playback" button to play the percussion song just recorded. Press again to stop playback. (Figure 12)

## 11 Reset factory settings

Press and hold the "save. Reset" button for more than 3 seconds to reset all parameters and restore factory settings. (Figure 6)

# APPENDIX

## Drum timbre

### KICK

- 01 Acoustic Kick
- 02 Military Kick
- 03 Original Kick
- 04 Funk Kick
- 05 Standard Kick
- 06 Dance Kick
- 07 Rock Kick
- 08 Jazz Kick
- 09 808 Kick
- 10 Songo Kick
- 11 909 Kick
- 12 Fairfax Kick
- 13 Dancehall Kick 3
- 14 70's Kick
- 15 Clean Kick

### SNARE

- 01 Acoustic Snare
- 02 Military Snare
- 03 Original Snare
- 04 Funk Snare
- 05 Standard Snare
- 06 Dance Snare
- 07 Rock Snare
- 08 Jazz Snare
- 09 808 Snare
- 10 Songo Snare
- 11 909 Snare
- 12 Fairfax Snare
- 13 Dancehall Snare
- 14 70's Snare
- 15 Clean Snare

### SNARE RIM

- 01 Acoustic Snare Rim
- 02 Military Snare Rim
- 03 Original Snare Rim
- 04 Funk Snare Rim
- 05 Standard Snare Rim
- 06 Dance Snare Rim
- 07 Rock Snare Rim
- 08 Jazz Snare
- 09 808 Snare Rim
- 10 Songo Snare Rim
- 11 909 Snare Rim
- 12 Fairfax Snare Rim
- 13 Dancehall Snare Rim
- 14 70's Snare Rim
- 15 Clean Snare Rim

### TOM 1

- 01 Acoustic Tom1
- 02 Military Tom1
- 03 Original Tom1
- 04 Funk Tom1
- 05 Standard Tom1
- 06 Dance Tom1
- 07 Rock Tom1
- 08 Jazz Tom1
- 09 808 Tom1
- 10 Songo Tom1
- 11 909 Tom1
- 12 Fairfax Tom1
- 13 Dancehall Tom1
- 14 70's Tom1
- 15 Clean Tom1

### TOM 2

- 01 Acoustic Tom2
- 02 Military Tom2
- 03 Original Tom2
- 04 Funk Tom2
- 05 Standard Tom2
- 06 Dance Tom2
- 07 Rock Tom2
- 08 Jazz Tom2
- 09 808 Tom2
- 10 Songo Tom2
- 11 909 Tom2
- 12 Fairfax Tom2
- 13 Dancehall Tom2
- 14 70's Tom2
- 15 Clean Tom2

### TOM 3

- 01 Acoustic Tom3
- 02 Military Tom3
- 03 Original Tom3
- 04 Funk Tom3
- 05 Standard Tom3
- 06 Dance Tom3
- 07 Rock Tom3
- 08 Jazz Tom3
- 09 808 Tom3
- 10 Songo Tom3
- 11 909 Tom3
- 12 Fairfax Tom3
- 13 Dancehall Tom3
- 14 70's Tom3
- 15 Clean Tom3

### CRASH 1

- 01 Acoustic Crash1
- 02 Military Crash1
- 03 Original Crash1
- 04 Standard Crash1
- 05 Funk Crash1
- 06 Dance Crash1
- 07 Rock Crash1
- 08 Jazz Crash1
- 09 808 Crash1
- 10 Songo Crash1
- 11 909 Crash1
- 12 Fairfax Crash1
- 13 Dancehall Crash1
- 14 70's Crash1
- 15 Clean Crash1

### CRASH 1 RIM

- 01 Acoustic Crash1 Rim
- 02 Military Crash1 Rim
- 03 Original Crash1 Rim
- 04 Standard Crash1 Rim
- 05 Funk Crash1 Rim
- 06 Dance Crash1 Rim
- 07 Rock Crash1 Rim
- 08 Jazz Crash1 Rim
- 09 808 Crash1 Rim
- 10 Songo Crash1 Rim
- 11 909 Crash1 Rim
- 12 Fairfax Crash1 Rim
- 13 Dancehall Crash1 Rim
- 14 70's Crash1 Rim
- 15 Clean Crash1 Rim

### CRASH 2

- 01 Acoustic Crash2
- 02 Military Crash2
- 03 Original Crash2
- 04 Standard Crash2
- 05 Funk Crash2
- 06 Dance Crash2
- 07 Rock Crash2
- 08 Jazz Crash2
- 09 808 Crash2
- 10 Songo Crash2
- 11 909 Crash2
- 12 Fairfax Crash2
- 13 Dancehall Crash2
- 14 70's Crash2
- 15 Clean Crash2

### CRASH 2 RIM

- 01 Acoustic Crash2Rim
- 02 Military Crash2 Rim
- 03 Original Crash2 Rim
- 04 Standard Crash2 Rim
- 05 Funk Crash2 Rim
- 06 Dance Crash2 Rim
- 07 Rock Crash2 Rim
- 08 Jazz Crash2 Rim
- 09 808 Crash2 Rim
- 10 Songo Crash2 Rim
- 11 909 Crash2 Rim
- 12 Fairfax Crash2 Rim
- 13 Dancehall Crash2 Rim
- 14 70's Crash2 Rim
- 15 Clean Crash2 Rim

### RIDE

- 01 Acoustic Ride
- 02 Military Ride
- 03 Original Ride
- 04 Standard Ride
- 05 Funk Ride
- 06 Dance Ride
- 07 Rock Ride
- 08 Jazz Ride
- 09 808 Ride
- 10 Songo Ride
- 11 909 Ride
- 12 Fairfax Ride
- 13 Dancehall Ride
- 14 70's Ride
- 15 Clean Ride

### RIDE RIM

- 01 Acoustic Ride Rim
- 02 Military Ride Rim
- 03 Original Ride Rim
- 04 Standard Ride Rim
- 05 Funk Ride Rim
- 06 Dance Ride Rim
- 07 Rock Ride Rim
- 08 Jazz Ride Rim
- 09 808 Ride Rim
- 10 Songo Ride Rim
- 11 909 Ride Rim
- 12 Fairfax Ride Rim
- 13 Dancehall Rim
- 14 70's Ride Rim
- 15 Clean Ride Rim

### HI-HAT OPEN

- 01 Acoustic Hi-hat Open
- 02 Military Hi-hat Open
- 03 Original Hi-hat Open
- 04 Standard Hi-hat Open
- 05 Funk Hi-hat Open
- 06 Dance Hi-hat Open
- 07 Rock Hi-hat Open
- 08 Jazz Hi-hat Open
- 09 808 Hi-hat Open
- 10 Songo Hi-hat Open
- 11 909 Hi-hat Open
- 12 Fairfax Hi-hat Open
- 13 Dancehall Hi-hat Open
- 14 70's Hi-hat Open
- 15 Clean Hi-hat Open

### HI-HAT CLOSE

- 01 Acoustic Hi-hat Close
- 02 Military Hi-hat Close
- 03 Original Hi-hat Close
- 04 Standard Hi-hat Close
- 05 Funk Hi-hat Close
- 06 Dance Hi-hat Close
- 07 Rock Hi-hat Close
- 08 Jazz Hi-hat Close
- 09 808 Hi-hat Close
- 10 Songo Hi-hat Close
- 11 909 Hi-hat Close
- 12 Fairfax Hi-hat Close
- 13 Dancehall Hi-hat Close
- 14 70's Hi-hat Close
- 15 Clean Hi-hat Close

### HI-HAT PEDAL

- 01 Acoustic Hi-hat Pedal
- 02 Military Hi-hat Pedal
- 03 Original Hi-hat Pedal
- 04 Standard Hi-hat Pedal
- 05 Funk Hi-hat Pedal
- 06 Dance Hi-hat Pedal
- 07 Rock Hi-hat Pedal
- 08 Jazz Hi-hat Pedal
- 09 808 Hi-hat Pedal
- 10 Songo Hi-hat Pedal
- 11 909 Hi-hat Pedal
- 12 Fairfax Hi-hat Pedal
- 13 Dancehall Hi-hat Pedal
- 14 70's Hi-hat Pedal
- 15 Clean Hi-hat Pedal

## Preset drum kit

- |            |            |        |            |              |
|------------|------------|--------|------------|--------------|
| 1 Acoustic | 4 Funk     | 7 Rock | 10 Songo   | 13 Dancehall |
| 2 Military | 5 Standard | 8 Jazz | 11 909     | 14 70's      |
| 3 Original | 6 Dance    | 9 808  | 12 Fairfax | 15 Clean     |

## User defined drum kit

16 Kit Num

## Demonstration song

- |                       |            |               |                  |                 |             |
|-----------------------|------------|---------------|------------------|-----------------|-------------|
| 1 Drum & Bass         | 6 Country1 | 11 March      | 16 Pop Rock      | 21 Swing1       | 26 Swing3   |
| 2 Blues               | 7 R & B    | 12 Pop Bossa  | 17 Country Blues | 22 Swing2       | 27 Jazz2    |
| 3 Jazz1               | 8 Pop1     | 13 Fusion     | 18 Pop4          | 23 Country2     | 28 Country3 |
| 4 Rock1               | 9 Pop2     | 14 Dance      | 19 Scotland      | 24 Modern Pop   | 29 Rock2    |
| 5 Electroponic & Funk | 10 Pop3    | 15 Jazz Swing | 20 Latin Jazz    | 25 Electroponic | 30 Pop5     |

## PRODUCT MAINTENANCE

Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing the failure.

### **1 AVOID HEATING, DAMPNESS OR DIRECT SUNLIGHT**

Do not over expose the product to direct sunlight, or place it near air conditioning or extremely hot place.

### **2 DO NOT USE NEAR THE TV OR RADIO**

This product may cause video or audio interference to the reception of TV and radio. If this happens, the product should be removed from the TV or radio.

### **3 NO DILUENTS OR SIMILAR CHEMICALS SHOULD BE USED FOR CLEANING**

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

 
### **4 DO NOT SHAKE, AVOID COLLISION**

When moving, the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.

# SAFETY PRECAUTIONS

## POWER SUPPLY

This product can be powered by standard indoor wall sockets. Please only use the power cord specified in this product. When not in use, please turn off the power supply. When not in use for a long time, pull out the power cord and keep it properly.

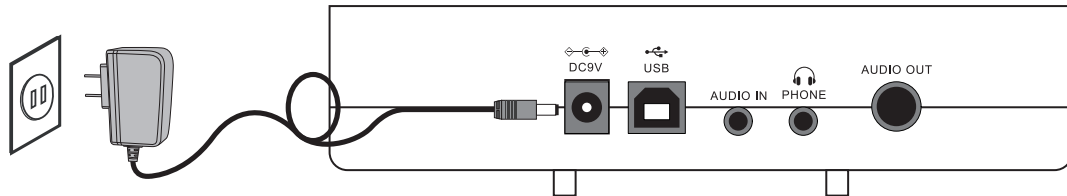

## SIGN

To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meanings are as follows:

### **WARNING**

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.

### **BE CAREFUL**

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

## EXAMPLE OF LOGO



This triangle sign ( $\triangle$ ) indicates what users should pay attention to. (The left example is careful shocks)



A circular sign ( $\odot$ ) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (The example on the left is no disassembly)



The round black bottom sign ( $\odot$ ) indicates what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed. (The example on the left is that the power plug must be pulled out of the socket)

# SAFETY PRECAUTIONS

## WARNING

### Smoke, odor, overheating

When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually. In case of the above situation, the following operations should be performed immediately:

1. Turn off the power supply.
2. Pull the plug out of the power outlet.
3. Contact your dealer.

### Power cord

1. The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- The special power cord designated for this product must be used.
- The AC power supply with output voltage within the rated voltage range for household use must be used.
- Do not overload power sockets and extension lines.



2. The improper treatment of power line will lead to its damage or breakage, which will cause fire and electric shock hazards. The following precautions must be observed:

- Do not place or heat heavy objects on power lines.
- Do not attempt to alter or bend the power cord too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, please replace the same type of power cord.



3. Do not touch the power cord and plug with wet hands, otherwise there is a danger of electric shock.



4. Please use the power cord where the water will not splash. Water is in danger of causing fire and electric shock.



5. Never place vases or any other container containing water on this product. Water is dangerous of causing fire and electric shock.



6. Do not allow minors to unplug and touch power lines or connection boards. Minors have no common sense of electricity safety, which may cause electric shock.



## BE CAREFUL

The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- Never put the power cord near the oven or other heat source.
- Do not pull the cable when pulling out of the power socket. The main body of the plug must be grasped.
- The power cord plug must be inserted in the socket to the end.
- Make sure the power supply is off before connecting or disconnecting it.
- When thunderstorms occur or before traveling or other long-term departure, disconnect the power cord from the wall outlet.
- At least once a year, remove the power cord from the wall outlet and clean the dust accumulated around the plug.



### Do not burn this product

Do not put this product in the fire, otherwise it will lead to product combustion and explosion of internal electronic components, which will cause fire and personnel injury.



### Water and foreign bodies

Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.



### Disassembly and transformation

Do not disassemble or transform the product in any way, otherwise there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your distributor.





# SAFETY PRECAUTIONS

## Falling or colliding

If the product falls or is damaged by strong impact, it will be in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, you need to unplug it from the wall outlet.
3. Contact your distributor.



## Plastic bag

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young children should pay special attention to it.



## Keep a distance from the product and the bracket

Climbing the bracket is dangerous of overturning or damage. Families with young children should pay special attention to it.



## Put

Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall down, which will lead to the risk of injury.



## Product Mobility

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires. Otherwise, it will lead to damage of power or connection wires, resulting in fire and electric shock.



## clean

Before cleaning this product, you must unplug the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.



## Jack

The socket of this product can only be connected to the designated equipment and devices. Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.

## Location selection

It should be avoided to place the product in the following places, otherwise there is a risk of fire and electric shock.

- High temperature or dusty places.
- Kitchen or other places with lampblack.
- Where the product is exposed to direct sunlight, or any other place where the product will produce high temperature.



## Volume

Don't play music long and loud. Pay special attention when using headphones. Excessive volume can damage your hearing.



## Heavy

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing the product to overturn or drop objects on it, which will lead to the risk of injury.



## Correct assembly of scaffolds

The incorrect assembly of the bracket may overturn, causing the product to fall off and posing a risk of injury to personnel. Therefore, it must be assembled according to the instructions in the attached installation guide to ensure that the product is properly mounted on its bracket.



---


# WARRANTY

---

## PRODUCT WARRANTY INFORMATION

- All items can be returned for any reason within 30 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.
- Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Fesley and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledged by Fesley as undamaged.

### To connect directly with our Support team

 1-877-748-4799 ( PST 8:00 am-5:00 pm, Mon-Fri )

 [support@fesleymusic.com](mailto:support@fesleymusic.com)

 [www.fesleymusic.com](http://www.fesleymusic.com)

## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage, or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.