

## FED200

# INSTRUCTION MANUAL

---

## Electric Drum

To connect directly with our Support team

📞 1-877-748-4799 ( PST 8:00 am-5:00 pm, Mon-Fri )

 
✉ support@fesleymusic.com

🌐 www.fesleymusic.com






# FUNCTION INTRODUCTION

- Thank you for choosing the Fesley electronic drum. The elegant and delicate Fesley electronic drum is the perfect combination of modern and new electronic technology. It is strongly recommended that you read this instruction before using it.
- Please store this instruction in a safe place for future reference.

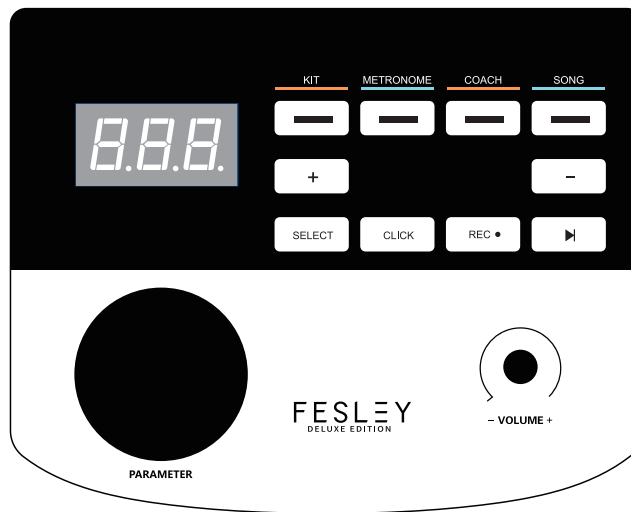

- The maximum number of pronunciations is 32, with 6 layers
- 15 drum sets, 165 timbres
- 30 songs
- Support the adjustment of the sensitivity parameters of each drum
- Three teaching modes
- Speed control: 30~250 beats/min
- Metronome: 1 to 4 types
- Other functions: parameter storage, reset, recording
- Three-digit LED display
- Interface: power supply DC, USBMIDI, earphone, audio input, audio output

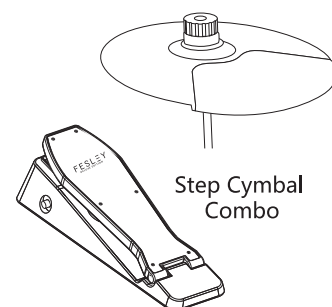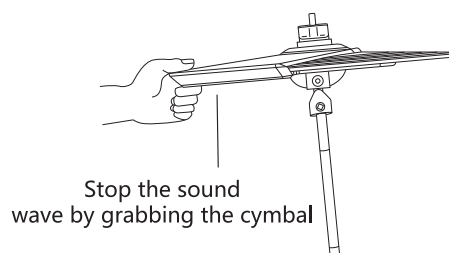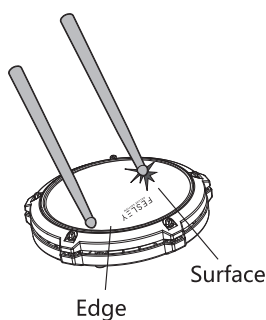   

## Note!

- This product is an electro-acoustic instrument product. Normally, there is a little current sound in the speaker or earphone after power-on.
- Keep away from "radio, TV, antenna receiver, router, refrigerator, TV, motor and other RF electrical interference sources" during use.

# CONTENTS

<b>FUNCTION INTRODUCTION</b>	1
<b>CONTENTS</b>	2
<b>INSTALLATION GUIDE</b>	3
Check the attached items	3
Iron pipe holder	4
Drum pan installation	4
Install a bracket and drum tray	5
Install cymbals, module place pedals	6
Plug in the striking part connection	7
<b>HOST BOX SOCKET DIAG RAM</b>	8
Power cord connection	8
USB MIDI socket	8
Audio output socket	8
Audio input socket	8
Earphone socket	8
<b>Operation guide</b>	9
Power on	9
Drum group selection	9
Metronome	9
Coach mode	9
Song mode	10
Drum parameters	10
Recording function	10
Save/Reset	10
USB MIDI	10
<b>APPENDIX</b>	11
Drum timbre	11
Preset drum group	11
User defined drum group	11
Demonstration music	11
<b>PRODUCT MAINTENANCE</b>	12
<b>SAFETY PRECAUTIONS</b>	13
<b>WARRANTY CARD</b>	15

# INSTALLATION GUIDE

 
## Note!

- Please follow the instructions and read the "safety precautions" in the instruction manual carefully before using.
- This product must be installed by an adult, please do not install by the minor independently, don't let the minor install it independently.


# 01

## Check the attached items


- After opening the package, please check whether it contains all the items immediately. If there are any missing, please contact us.

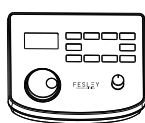


Module

 


Module Bracket

 

Hi-hat

 

Ride

 

Crash



Cymbal Arm  
(2pcs)



 
Cymbal Arm  
(Short)



Tor-Tom  
(3pcs)




Snare

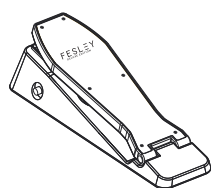


Hi-hat Pedal



 
Kick Drum Pedal

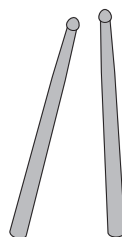


Drum Stick

 


Headphone

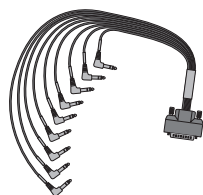 

Signal Connection Line

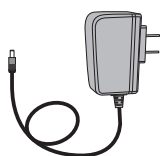 

Power Adapter

 

Drum Key




Drum Stool

# INSTALLATION GUIDE
 
## 02

### Iron pipe holder


- The stand is located in a small individual package inside the box.

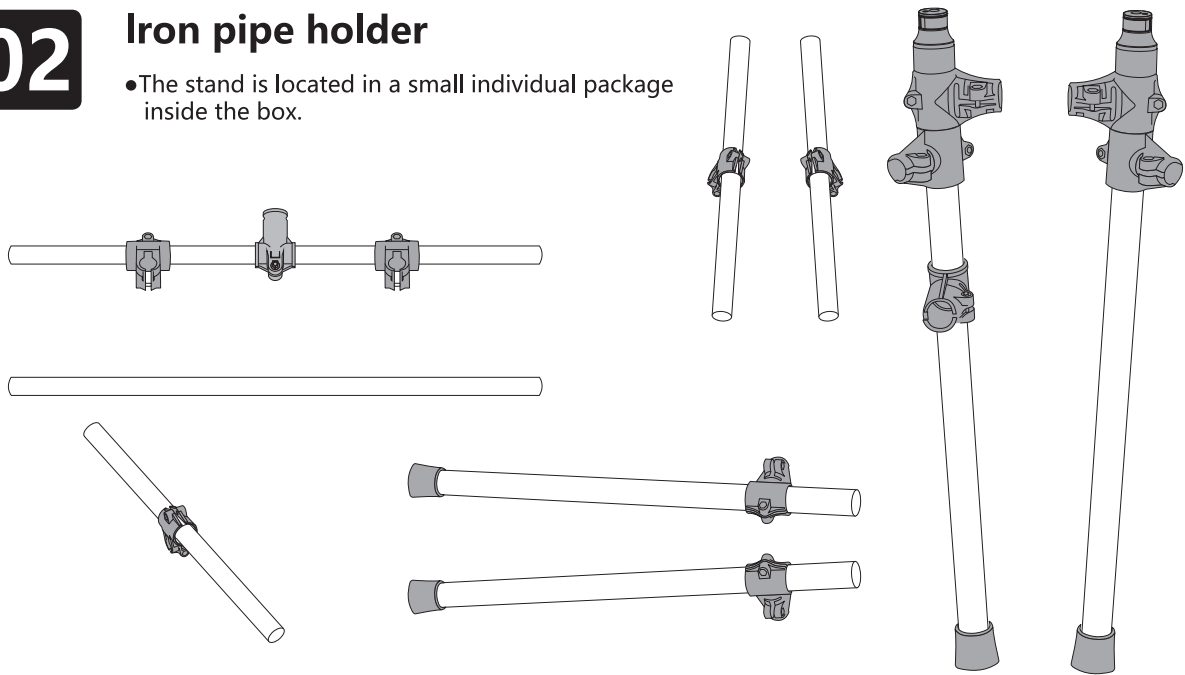

## 03

### Drum pan installation

 - Please be careful to pinch your fingers when insalling.

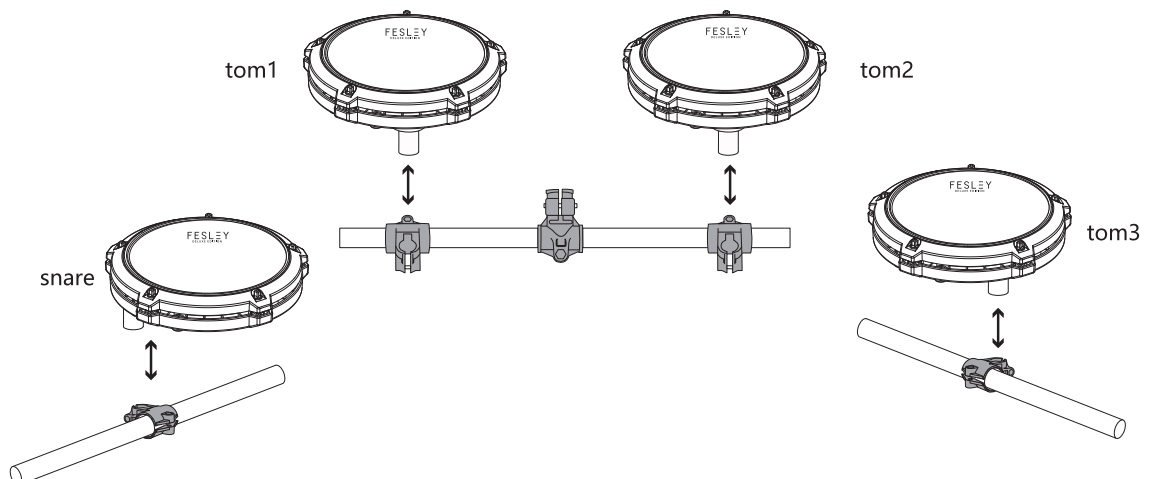

# INSTALLATION GUIDE

 
 
## 04

### Install a bracket and drum tray

- The bracket must be inserted into place and the screws should be tightened to avoid dropping.

Insert the bracket and drum tray into the corresponding positions, and then tighten the screws.

Note: (tom, Snare) The functions are different, you must refer to the accessories logo for correct installation!

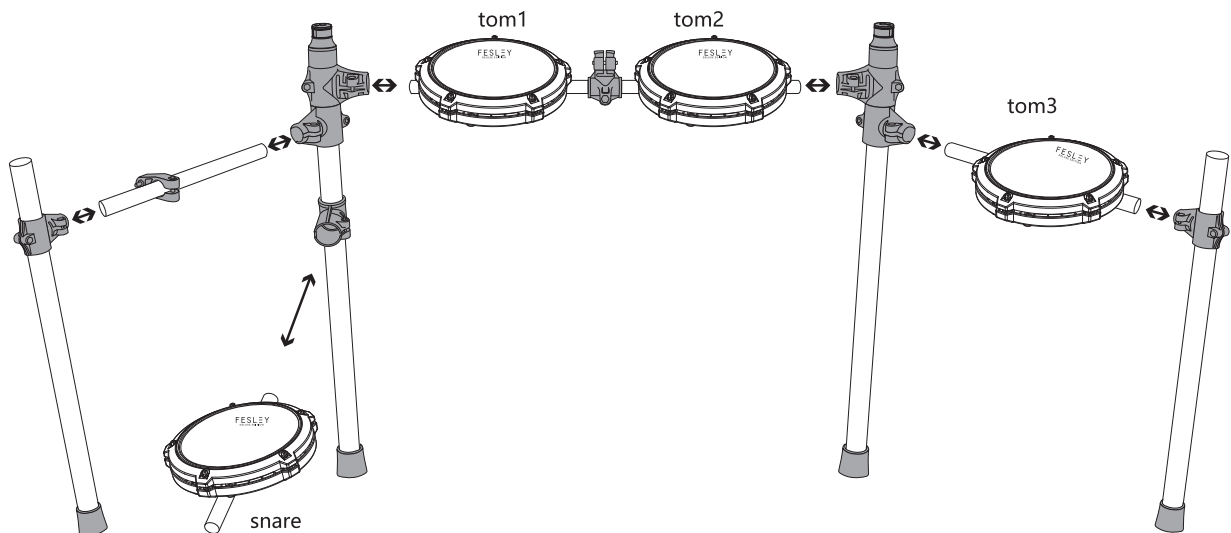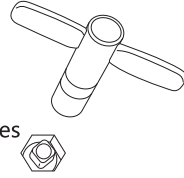



# INSTALLATION GUIDE

## 05


### Install cymbals, module, place pedals

- Don't tighten the cymbals, leave some room for them to bob up and down.

  
Install the cymbal and the main case on the bracket as shown in the picture  
Note: The function of each cymbal is different, you need to refer to the accessory logo for correct installation!

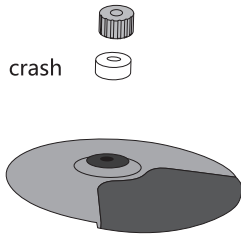

crash

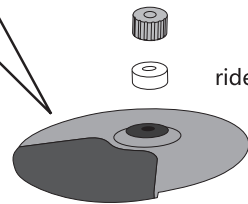 

ride

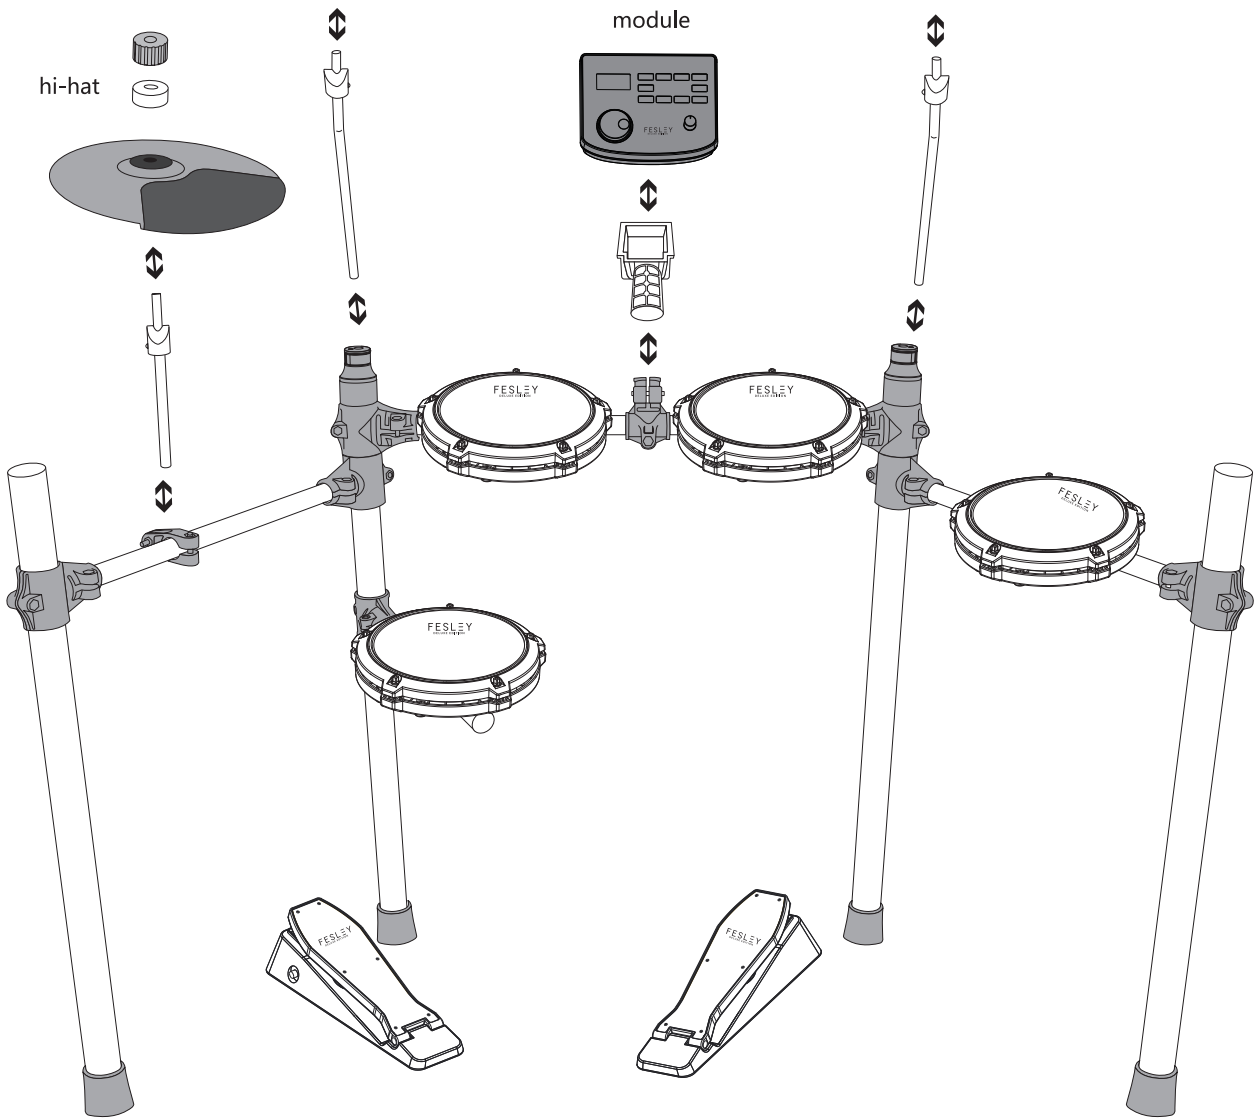 

hi-hat

module



hi-hat pedal

Kick drum pedal

## 06

  
### Plug in the striking part connection cable

- Please insert the connection cable in place to avoid poor contact and insert it correctly as shown in the diagram.

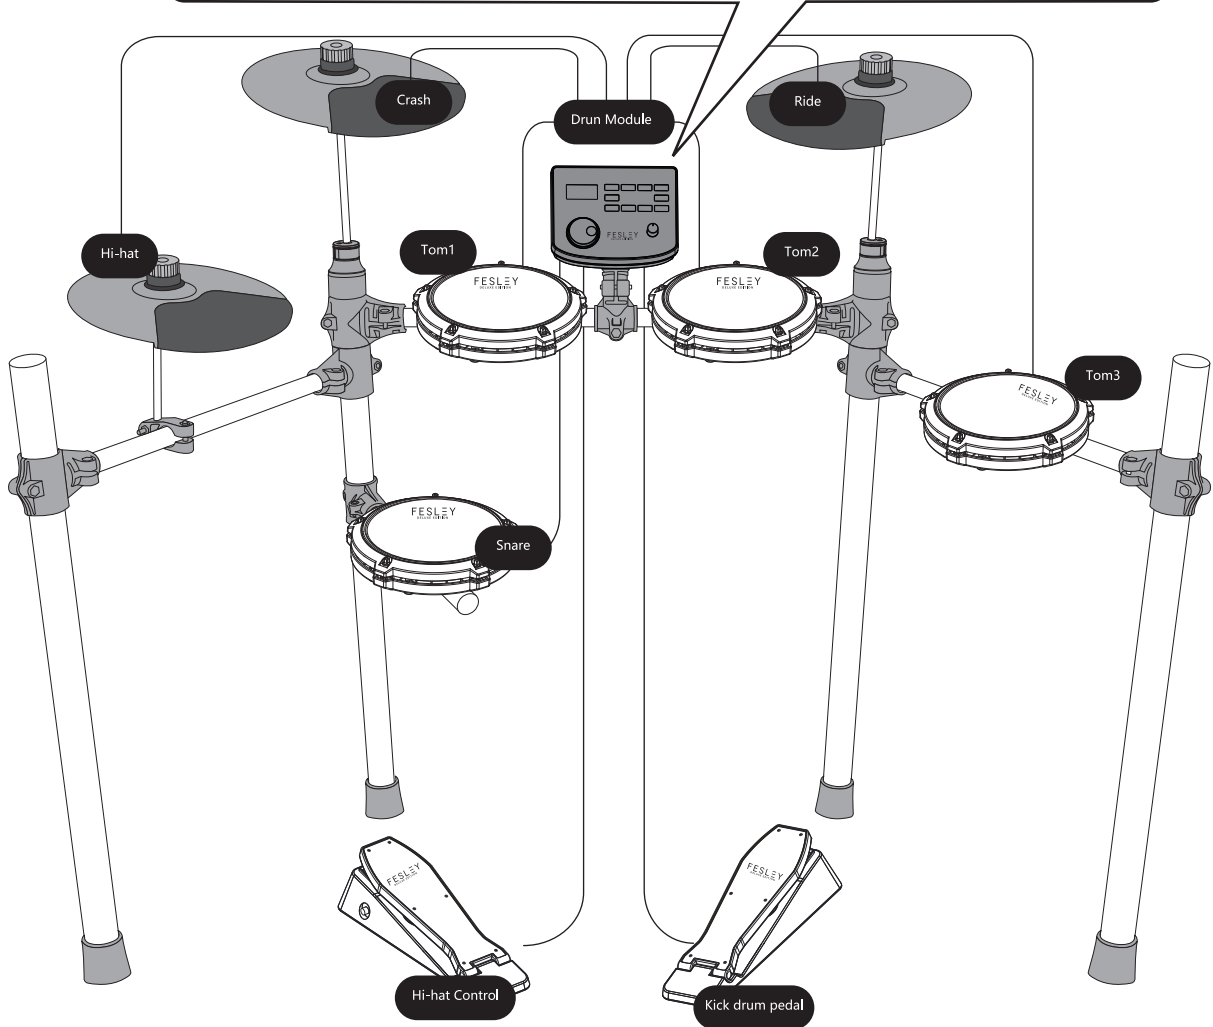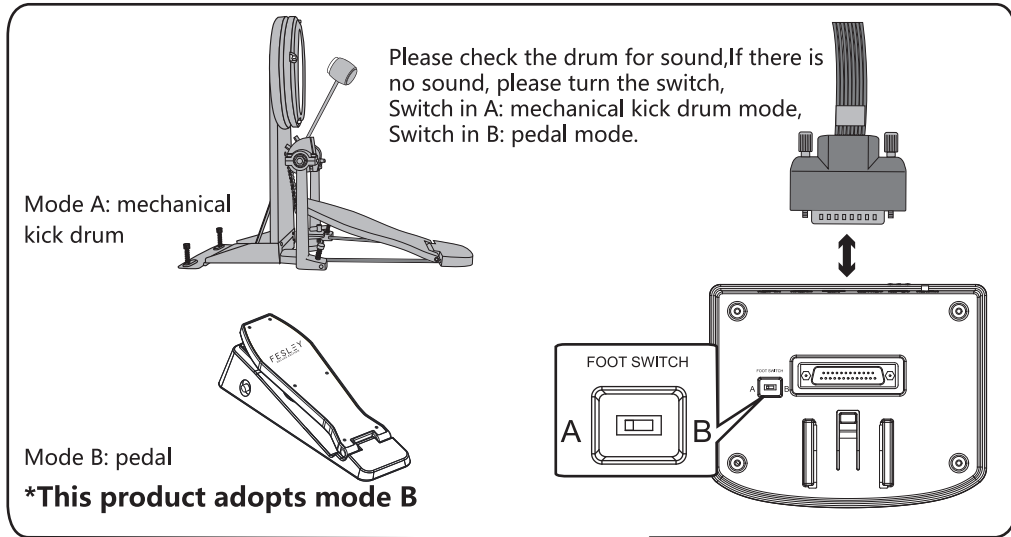



# MODULE SOCKET DIAGRAM

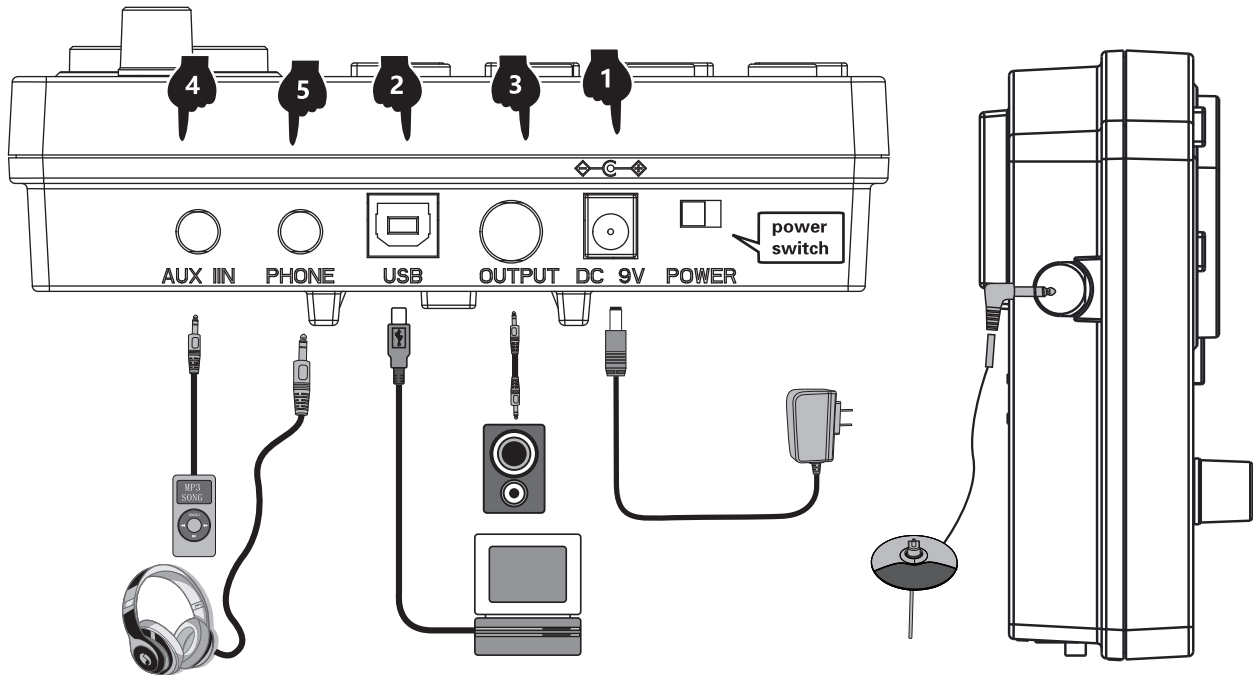 

## 1 POWER TERMINAL CONNECTION

1. When in use, connect the power terminal according to the diagram, and insert the power outlet of the module box at one end and the 100-240V household power outlet at the other end. (Fig. 1)
2. If you do not use this product for a long time, please pull out the power plug and keep it properly. The use of an electronic drum MIDI USB interface can interact with music devices with MIDI.

## 2 USB MIDI SOCKET

The use of electronic drum MIDI USB interface can interact with music devices with MIDI.

1. Through the pre-installed Music software on computers and mobile phones, we can learn to play, compose music, store and other functions. (Fig. 2)
2. When connected to a computer or mobile phone, the audio output of the device needs to be connected to the audio input socket of the module box in order to synchronize the sound effects on the device. (Fig. 5)

## 3 AUDIO OUTPUT SOCKET

Audio output port can be connected with active speaker (special electronic drum speaker) and large audio equipment. (Fig. 3)

## 4 AUDIO INPUT SOCKET

The audio input port can connect the sound source playback device to the module box for playback (such as MP3, mobile phone and other audio signal input). (Fig. 4)

## 5 EARPHONE SOCKET

Connecting headphones monitor the details of percussion and do not disturb others when playing without connecting speakers. (Fig. 5)

 
## 6 ADD CYMBAL SOCKET

The audio output port can be connected with an active speaker (special electronic drum speaker) and large audio equipment. (Fig. 3)

## Note!

- To prevent damage to the equipment, make sure to turn down the volume and shut down all the equipment before making any connection.
- Additional cymbals, speakers, headphones, and peripherals are not standard accessories, if necessary you must purchase separately.

# OPERATION GUIDE

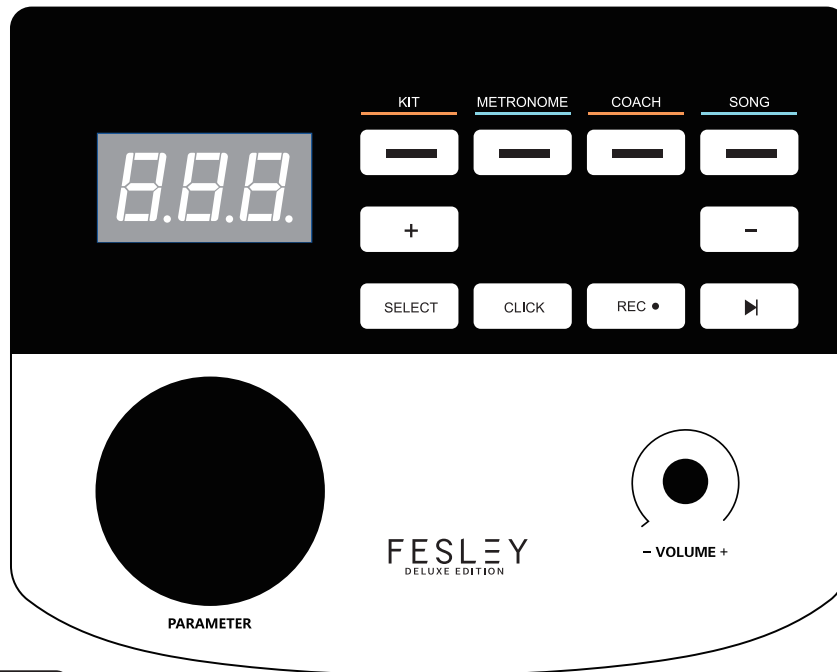

## 1 POWER OFF

1. Turn the switch on, the display will light up and the host will be turned on.
2. Turn the switch off, the display goes out and the host is turned off.

## 2 DRUM GROUP SELECTION

1. Start up and enter the default drum group selection 01 (drum group No. 01). Use the data wheel to select the addition and subtraction of the drum group.
2. Or press the < kit > key directly, the screen will jump to 01 (drum group number), and then use the data wheel or < + > < - > button to select the drum group.

## 3 METRONOME

1. Press the < click > key to play the metronome, and press the < click > key again to stop playing.
2. Press the < metronome > button, and the Indicator light jumps to the "metronome" button on the second left to enter the metronome mode, and the screen displays 120 (speed value). Turn the data wheel or < + > < - > button to change the metronome speed.
3. Press the < Select > key in metronome mode, and the screen will jump to the metronome parameter adjustment interface. You can press the < + > < - > button to select the parameters you want to adjust: r.4 (beat type), B04 (beat number), L25 (metronome volume), and then turn the data wheel to adjust the parameters.
4. After parameter adjustment, press the < Select > key to confirm and exit the parameter interface (the metronome speed value is associated with "coach" mode and "song" mode).

## 4 COACH MODE

The "coach" training mode of this product can help establish speed, accuracy and endurance and cultivate the practice function of a better sense of rhythm, Make progress under the supervision of "coach" mode!

Press the "coach" button to enter the coach mode. In this mode, there are three practice modes.

Press the data wheel or . < + > < - > Button to select the practice mode.

1. Exercise mode 1: C-1 beat detection exercise: beat the drum at a fixed speed to train the accuracy of the blow.
2. Press the "coach" button to enter the coach-mode. In this mode, there are three practice modes. Press the data wheel. < + > < - > Button to select the practice mode.
3. Practice mode 3: C-3 speed strike practice, the metronome will automatically change the speed from the slowest to the fastest, and then from the fastest Express speed is reduced to the slowest speed to practice combat endurance.
4. Press the < coach > button, the indicator light will jump to the left three "coach" buttons, and the screen will display C-1 (practice mode 1) when hitting Value practice, turn the coding wheel to switch the other two practice modes C-2 and C-3.

## OPERATION GUIDE

2. At this time, press the < click > key, the metronome sounds, and starts to hit the drum for practice.
3. After four preliminary beats, the display will show.

(It's too slow)  (very good)  (It's too fast) 

4. After the exercise, the score of the whole hitting exercise will be displayed, with 0- 100 points to evaluate the accuracy of the current exercise. 2
5. Press the < Select > key in the C-1 mode to enter the parameter setting interface. You can adjust the number of practice sections in the practice mode as required The number of sections to practice determines the length of this exercise.
6. Press the < Select > key in the C-2 mode to enter the parameter setting interface. You can adjust the number of practice sections in the practice mode as required The number of sections to practice determines the length of this exercise.
7. Press the < Select > key in C-3 mode to enter the parameter setting interface. You can adjust the variables of the current bpm. The variables are changed each time Speed value.
8. During the practice, you can press the < click > key again to stop the practice.

### 5 SONG MODE

1. Press the <▶I> key to start playing songs, and press the <▶I> key again to temporarily stop playing.
2. Press the < Song > button to enter the song mode. When the indicator light jumps to the left with four "song" buttons, the screen displays 01 (song number).
3. Turn the data wheel or press the < + > < - > button to select the song to play.
4. Press the < Select > key in the song mode, and the screen will jump to enter the song parameter setting interface. The drum sound of the Etude can be turned off by default On: select on / off by turning the data wheel or pressing the < + > < - > button.
5. After parameter adjustment, press the < Select > key to confirm and exit the parameter interface.

### 6 DRUM PARAMETERS

1. Press < kit >, the indicator light jumps to the left "kit" button. When the screen jumps to 01 (drum group number), press < Select > to enter Drum parameter adjustment mode.
2. Tap the drum disc you want to adjust, and then press the < + > < - > button to select the sensitivity option you want to adjust: S03 (surface sensitivity) T05 (trigger threshold), C05 (crosstalk threshold), R05 (repeated trigger), V01 (drum force curve), L25 (drum volume)
3. Change the parameters by rotating the data wheel, long press the < - > key, the screen displays sav, and these parameters are saved successfully.
  - All drum settings of this product are factory settings, which have been corresponding to the audio of the module. it is unnecessary to change the drum parameters in case there is a drum or cymbal insensitive, triggered for many times, or cascaded. If other drums are insensitive, triggered many times, crosstalk, etc. after adjustment, you can press and hold press < + > to restore the factory settings.

### 7 RECORDING FUNCTION

1. Press the < rec > button when the indicator light is in "kit" and "click" status, and the screen displays the word "REC" in respiratory flashing status, Enter the recording preparation state.
2. Tap any drum and the metronome sounds. At this time, the screen displays "--" in breathing flashing state and starts recording.
3. Press the < rec > key or < play > key again, the recording stops and 'A-1" is displayed on the screen.
4. Press <▶I> to start playing the current recording, and press again to stop playback.
5. If you enter the recording preparation state again without any hitting, the "A-1" recorded last time is played back.

### 8 SAVE / RESET

1. Press and hold < - > key, sav will be displayed on the screen and saved successfully.
2. Press and hold the < + > key, the screen displays res, the reset is successful, and the factory setting is restored.

### 9 USBMIDI

1. Use the USB-b data cable to plug in the USB interface and connect it to the PC.
2. Select the MIDI device.

# APPENDIX

## Timbre

### Kick

- 1 Funk Kick
- 2 Original Kick
- 3 Poprock Kick
- 4 Rock Kick
- 5 Seesion Kick
- 6 SpeedMetal Kick
- 7 ClassicDry Kick
- 8 Modern Kick
- 9 Jazz Kick
- 10 Blues Kick
- 11 Popular Kick
- 12 Fuse Kick
- 13 Dancehall Kick
- 14 Synthgaze Kick
- 15 Standard Kick

### Snare

- 16 Funk Snare
- 17 Original Snare
- 18 Poprock Snare
- 19 Rock Snare
- 20 Seesion Snare
- 21 SpeedMetal Snare
- 22 ClassicDry Snare
- 23 Modern Snare
- 24 Jazz Snare
- 25 Blues Snare
- 26 Popular Snare
- 27 Fuse Snare
- 28 Dancehall Snare
- 29 Synthgaze Snare
- 30 Standard Snare
- 31 Funk Snare Rim
- 32 Original Snare Rim
- 33 Poprock Snare Rim
- 34 Rock Snare Rim
- 35 Seesion Snare Rim
- 36 SpeedMetal Snare Rim
- 37 ClassicDry Snare Rim
- 38 Modern Snare Rim
- 39 Jazz Snare Rim
- 40 Blues Snare Rim
- 41 Popular Snare Rim
- 42 Fuse Snare Rim

- 43 Dancehall Snare Rim
- 44 Synthgaze Snare Rim
- 45 Standard Snare Rim

### Tom

- 46 Funk Tom1
- 47 Original Tom1
- 48 Poprock Tom1
- 49 Rock Tom1
- 50 Seesion Tom1
- 51 SpeedMetal Tom1
- 52 ClassicDry Tom1
- 53 Modern Tom1
- 54 Jazz Tom1
- 55 Blues Tom1
- 56 Popular Tom1
- 57 Fuse Tom1
- 58 Dancehall Tom1
- 59 Synthgaze Tom1
- 60 Standard Tom1
- 61 Funk Tom2
- 62 Original Tom2
- 63 Poprock Tom2
- 64 Rock Tom2
- 65 Seesion Tom2
- 66 SpeedMetal Tom2
- 67 ClassicDry Tom2
- 68 Modern Tom2
- 69 Jazz Tom2
- 70 Blues Tom2
- 71 Popular Tom2
- 72 Fuse Tom2
- 73 Dancehall Tom2
- 74 Synthgaze Tom2
- 75 Standard Tom2
- 76 Funk Tom3
- 77 Original Tom3
- 78 Poprock Tom3
- 79 Rock Tom3
- 80 Seesion Tom3
- 81 SpeedMetal Tom3
- 82 ClassicDry Tom3
- 83 Modern Tom3
- 84 Jazz Tom3

- 85 Blues Tom3
  - 86 Popular Tom3
  - 87 Fuse Tom3
  - 88 Dancehall Tom3
  - 89 Synthgaze Tom3
  - 90 Standard Tom3
- ### Crash
- 91 Funk Crash
  - 92 Original Crash
  - 93 Poprock Crash
  - 94 Rock Crash
  - 95 Seesion Crash
  - 96 SpeedMetal Crash
  - 97 ClassicDry Crash
  - 98 Modern Crash
  - 99 Jazz Crash
  - 100 Blues Crash
  - 101 Popular Crash
  - 102 Fuse Crash
  - 103 Dancehall Crash
  - 104 Synthgaze Crash
  - 105 Standard Crash

### Ride

- 106 Funk Ride
- 107 Original Ride
- 108 Poprock Ride
- 109 Rock Ride
- 110 Seesion Ride
- 111 SpeedMetal Ride
- 112 ClassicDry Ride
- 113 Modern Ride
- 114 Jazz Ride
- 115 Blues Ride
- 116 Popular Ride
- 117 Fuse Ride
- 118 Dancehall Ride
- 119 Synthgaze Ride
- 120 Standard Ride

### Hi-Hat

- 121 Funk Hi-Hat Open
- 122 Original Hi-Hat Open
- 123 Poprock Hi-Hat Open

- 124 Rock Hi-Hat Open
- 125 Seesion Hi-Hat Open
- 126 SpeedMetal Hi-Hat Open
- 127 ClassicDry Hi-Hat Open
- 128 Modern Hi-Hat Open
- 129 Jazz Hi-Hat Open
- 130 Blues Hi-Hat Open
- 131 Popular Hi-Hat Open
- 132 Fuse Hi-Hat Open
- 133 Dancehall Hi-Hat Open
- 134 Synthgaze Hi-Hat Open
- 135 Standard Hi-Hat Open
- 136 Funk Hi-Hat Close
- 137 Original Hi-Hat Close
- 138 Poprock Hi-Hat Close
- 139 Rock Hi-Hat Close
- 140 Seesion Hi-Hat Close
- 141 SpeedMetal Hi-Hat Close
- 142 ClassicDry Hi-Hat Close
- 143 Modern Hi-Hat Close
- 144 Jazz Hi-Hat Close
- 145 Blues Hi-Hat Close
- 146 Popular Hi-Hat Close
- 147 Fuse Hi-Hat Close
- 148 Dancehall Hi-Hat Close
- 149 Synthgaze Hi-Hat Close
- 150 Standard Hi-Hat Close
- 151 Funk Hi-Hat Pedal
- 152 Original Hi-Hat Pedal
- 153 Poprock Hi-Hat Pedal
- 154 Rock Hi-Hat Pedal
- 155 Seesion Hi-Hat Pedal
- 156 SpeedMetal Hi-Hat Pedal
- 157 ClassicDry Hi-Hat Pedal
- 158 Modern Hi-Hat Pedal
- 159 Jazz Hi-Hat Pedal
- 160 Blues Hi-Hat Pedal
- 161 Popular Hi-Hat Pedal
- 162 Fuse Hi-Hat Pedal
- 163 Dancehall Hi-Hat Pedal
- 164 Synthgaze Hi-Hat Pedal
- 165 Standard Hi-Hat Pedal

## Drum combination timbre

- 01 Funk
- 02 Original
- 03 Poprock

- 04 Rock
- 05 Seesion
- 06 SpeedMetal

- 07 ClassicDry
- 08 Modern
- 09 Jazz

- 10 Blues
- 11 Popular
- 12 Fuse

- 13 Dancehall
- 14 Synthgaze
- 15 Standard

## User drum group

### Demonstration music

- |          |          |          |          |          |          |          |          |          |
|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| Song 001 | Song 011 | Song 021 | Song 002 | Song 012 | Song 022 | Song 003 | Song 013 | Song 023 |
| Song 004 | Song 014 | Song 024 | Song 005 | Song 015 | Song 025 | Song 006 | Song 016 | Song 026 |
| Song 007 | Song 017 | Song 027 | Song 008 | Song 018 | Song 028 | Song 009 | Song 019 | Song 029 |
| Song 010 | Song 020 | Song 030 |          |          |          |          |          |          |

## PRODUCT MAINTENANCE

Careful maintenance and protection of the product, to extend the service life of the product, reduce the fault has a very important role.

### 1 AVOID HEATING, DAMPNES OR DIRECT SUNLIGHT

Do not over expose the product to direct sunlight, or place it near air conditioning or extremely hot place.

### 2 DO NOT USE NEAR THE TV OR RADIO

This product may cause video or audio interference to the reception of TV and radio. If this happens, the product should be removed from the TV or radio.

### 3 NO DILUENTS OR SIMILAR CHEMICALS SHOULD BE USED FOR CLEANING

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

 
### 4 DO NOT SHAKE, AVOID COLLISION

When moving, the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.

## SAFETY PRECAUTIONS

### POWER SUPPLY

This product can be powered by standard indoor wall sockets. Please only use the power cord specified in this product. When not in use, please turn off the power supply. When not in use for a long time, pull out the power cord and keep it properly.

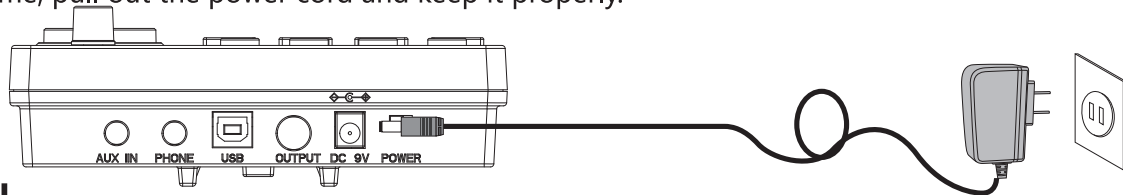

### SIGN

To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meanings are as follows:

#### ⚠ WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.

#### ⚠ BE CAREFUL

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

### EXAMPLE OF LOGO



This triangle sign ( $\Delta$ ) indicates what users should pay attention to. (The left example is careful shocks)



A circular sign ( $\bullet$ ) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (The example on the left is no disassembly)



The round black bottom sign ( $\bullet$ ) indicates what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed. (The example on the left is that the power plug must be pulled out of the socket)

# SAFETY PRECAUTIONS

## ⚠ WARNING

### Smoke, odor, overheating

When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually. In case of the above situation, the following operations should be performed immediately:

1. Turn off the power supply.
2. Pull the plug out of the power outlet.
3. Contact your dealer.

### Power cord

1. The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- The special power cord designated for this product must be used.
- The AC power supply with output voltage within the rated voltage range for household use must be used.
- Do not overload power sockets and extension lines.



2. The improper treatment of power line will lead to its damage or breakage, which will cause fire and electric shock hazards. The following precautions must be observed:

- Do not place or heat heavy objects on power lines.
- Do not attempt to alter or bend the power cord too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, please replace the same type of power cord.



3. Do not touch the power cord and plug with wet hands, otherwise there is a danger of electric shock.



4. Please use the power cord where the water will not splash. Water is in danger of causing fire and electric shock.



5. Never place vases or any other container containing water on this product. Water is dangerous of causing fire and electric shock.



6. Do not allow minors to unplug and touch power lines or connection boards. Minors have no common sense of electricity safety, which may cause electric shock.



## ⚠ BE CAREFUL

The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- Never put the power cord near the oven or other heat source.
- Do not pull the cable when pulling out of the power socket. The main body of the plug must be grasped.
- The power cord plug must be inserted in the socket to the end.
- Make sure the power supply is off before connecting or disconnecting it.
- When thunderstorms occur or before traveling or other long-term departure, disconnect the power cord from the wall outlet.
- At least once a year, remove the power cord from the wall outlet and clean the dust accumulated around the plug.



### Do not burn this product

Do not put this product in the fire, otherwise it will lead to product combustion and explosion of internal electronic components, which will cause fire and personnel injury.



### Water and foreign bodies

Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.



### Disassembly and transformation

Do not disassemble or transform the product in any way, otherwise there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your distributor.



# SAFETY PRECAUTIONS

## Falling or colliding

If the product falls or is damaged by strong impact, it will be in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, you need to unplug it from the wall outlet.
3. Contact your distributor.



## Location selection

It should be avoided to place the product in the following places, otherwise there is a risk of fire and electric shock.

- High temperature or dusty places.
- Kitchen or other places with lampblack.
- Where the product is exposed to direct sunlight, or any other place where the product will produce high temperature.



## Plastic bag

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young children should pay special attention to it.



## Volume

Don't play music long and loud. Pay special attention when using headphones. Excessive volume can damage your hearing.



## Keep a distance from the product and the bracket

Climbing the bracket is dangerous of overturning or damage. Families with young children should pay special attention to it.



## Heavy

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing the product to overturn or drop objects on it, which will lead to the risk of injury.



## Put

Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall down, which will lead to the risk of injury.



## Correct assembly of scaffolds

The incorrect assembly of the bracket may overturn, causing the product to fall off and posing a risk of injury to personnel. Therefore, it must be assembled according to the instructions in the attached installation guide to ensure that the product is properly mounted on its bracket.



## Product Mobility

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires. Otherwise, it will lead to damage of power or connection wires, resulting in fire and electric shock.



## clean

Before cleaning this product, you must unplug the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.



## Jack

The socket of this product can only be connected to the designated equipment and devices. Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.



# WARRANTY

## PRODUCT WARRANTY INFORMATION

- All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.
- Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Fesley and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledged by Fesley as undamaged.

To connect directly with our support team,

✉ [support@fesleymusic.com](mailto:support@fesleymusic.com)

## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage, or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

---

To connect directly with our Support team

📞 1-877-748-4799 ( PST 8:00 am-5:00 pm, Mon-Fri )

✉ [support@fesleymusic.com](mailto:support@fesleymusic.com)

🔍 [www.fesleymusic.com](http://www.fesleymusic.com)