

**FESLEY**  
TO LEAD A NEW COOL

## INSTRUCTION MANUAL

Fesley FPK100 Digital Piano

### WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage, or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

To connect directly with our Support team

📞 1-877-748-4799 ( PST 8:00 am-5:00 pm, Mon-Fri )

✉ support@fesleymusic.com

🌐 www.fesleymusic.com

To connect directly with our Support team


📞 1-877-748-4799 ( PST 8:00 am-5:00 pm, Mon-Fri )

✉ support@fesleymusic.com

🌐 www.fesleymusic.com

————— Welcome To Use Fesley Digital Piano —————

- Thank you for your purchase of this digital keyboard. This digital keyboard is elegant and refined, combined perfectly with the handle and timbre of traditional keyboards and the latest electronic technology of the present age.
- Before using this musical instrument, you should read this manual book in detail. Please keep all user files properly as to look up when needed in days to come.

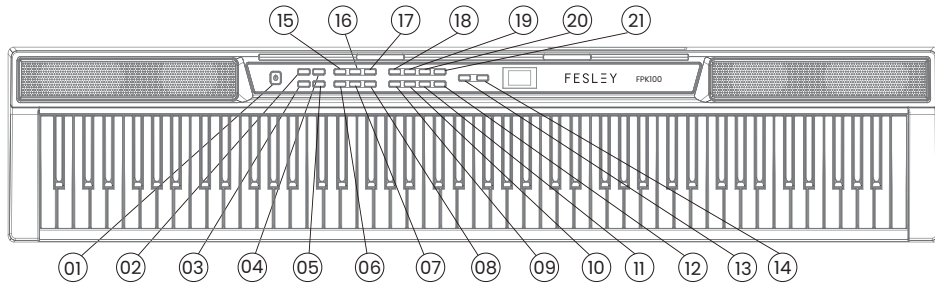


01 POWER	06 SYNC	11 RHYTHM	16 METRONOME	21 DEMO
02 VOLUME+	07 FILL-IN	12 STARY/STOP	17 DRUM	
03 VOLUME-	08 CHORD	13 SELECT-	18 DUAL TONE	
04 RECORD	09 TRANS-	14 SELECT+	19 SPLIT	
05 R-PLAY	10 TRANS+	15 SUSTAIN	20 TONE	

**THE PRODUCT DESCRIPTION**

**1: Matters needing attention**

1. The product is equipped with a 5V original charger (mobile phone 5V chargers can be used), it is strictly prohibited to use more than a 5V charger, otherwise the product can easily burn out, or even cause a fire.
2. Please unplug the charger if it has not been used for a long time.

**2: Schematic diagram of socket**

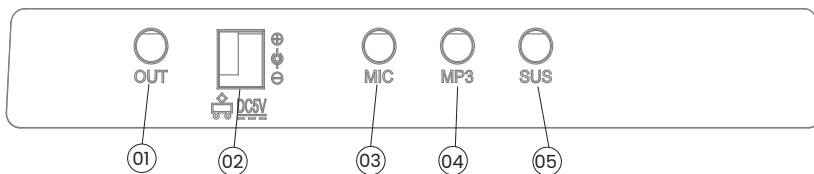

1. **Audio Output:** Audio output interface can be connected to external audio equipment.
2. **Power Socket:** This product is suitable for 5v charger. It is strictly forbidden to use power exceeding 5v, otherwise it will burn out the electric piano and cause fire risk.
3. **Microphone Jack:** You can sing songs by inserting the microphone.
4. **Audio Input:** Insert audio cable, can connect mobile phone or MP3 to play songs.
5. **Sustain Pedal:** Insert the sound delay pedal, and play with the pedal to play the sound delay effect.

**FUNCTION INTRODUCTION**

1. Keyboard: 88 standard keys (including black keys) Voice range: A2~C5.
2. Timbre: 128 timbre.
3. Rhythm: 128 rhythms.
4. Demo: 50 demos.
5. Rhythm function, demonstration song function, recording and playback function, double keyboard function, chord function, metronome function.
6. Hardware: 32 chord, with 2 channels of 16 bit DAC output, built-in power amplifier circuit.
7. Output function: three - digit display.
8. Can be equipped with sound delay pedal.

**OPERATION INSTRUCTION**

**START-UP-PLAY (TONE) MODE**

1. Press the power switch, it enters into play (tone) mode automatically, tone light and force light are on. (figure 01)
2. Press (select - +) to select the tone needed. (figure 13, figure 14)

**RHYTHM MODE**

1. Press (start/stop) button / rhythm) button, the system enters into rhythm mode and plays the rhythm, the rhythm light are on. (figure 11, figure 12)
2. Press (select- +) to select the rhythms, the rhythms are from 0-127. (figure 13, figure 14)
3. Press SYNC button to start the rhythm playing by pressing piano keys. (figure 06)

4. Press TONE button under this mode, then press SELECT- + to shift tones, the tone
5. light is on at the same time To shift the rhythm again,press RHYTHM key. (figure 20, 13, 14, 11)

### DUAL KEYBOARD MODE

1. Press SPLIT button to open/close dua keyboard mode,the dua keyboard light will be on/off.(figure 19)
2. The voice range will be divided into two sections under this mode:A-B2 and C1-C5.

### DEMO MODE:

1. Press DEMO button,system plays all the demos and the demo light is on.Press.
2. START/STOP button to stop demo.playing, the demo light is off at the same time. (figure 21)
3. Press SELECT- + to select demos,the demos are from 0-79. (figure 13 ,figure 14)
4. Press TONE button under this mode,press SELECT- + to shift tones,the tone light is on at the same time.
5. To re-star the rhythm,press RHYTHM key. (figure 20, 13, 14, 11)

## RECORDING FUNCTION:

1. Press RECORD button to enter into the record mode,the record light is on and the screen display REC. (figure 04) The record function adopt muti-channe rea -time way to record notes.

When entering into record mode,user can press any key and the system will record at the notes that the user played.

When the record block is full,the screen displays FUL to show that the record block is fully used.It can record 500 notes at the most.

2. Press R-PLAY button to play the notes recorded,the R-PLAY light is on at the same time.But only when notes are recorded successfully,the R-PLAY funtion takes effect.

It returns to primary start when the playback is finished. (figure 05)

You can select to replay the tone when playing back.

After re-recording or system reset,the recorded notes will be refreshed.

### KEYBOARD DRUM

1. Start the DRUM function for first press,cance the DRUM function for second press. When DRUM
2. function is started,the corresponding drum sounds will be played when pressing the keys. (figure 17)

### TRANSPOSITION

1. Press TRANS-,TRANS+ to start the transposition function, there are 13 sections for transposition control(-6~+6),the default is section 7. (figure 09, 10)

### FILLIN

1. Press RHYTHM button after starting up,the system plays rhythm, then press FILL-IN button to insert the percussion instrument sounds. (figure 11, 07)

### DUAI TONE

1. Press DUAL TONE button after starting-up, and when playing keys, it utters dual tones.

### SOUND VOLUME ADJUSTMENT

1. Press VOLUME+, VOLUME- button, the sound volume light is on, you can adjust the sound volume.
2. The sound volume is divided from level 0 to leve 16,the default is leve 12. figure 02.03

### METRONOME

1. The metronome is the auxiliary function of the beats.Press METRONOME button to select the beatmode, the METRONOME light is on. There are for types of beat modes optional:sequentially 1/4 beat-2/4 beat-3/4 beat-4/4 beat.(figure 16)

### CHORD MODE

1. Press CHORD button while the system is playing rhythm to enter into chord mode, the CHORD lightis on.(figure 08)
2. Chord function:press keys within A1-F#4 sections to play chord that matches the rhythm.
3. The tone of the chord varies with changes of the keys pitch.
- 4.Press the CHORD button under chord mode to close the chord function and the chord light is off.

**SUSTAIN**

1. Press the SUSTAIN button, when you play the keys, there will be a sustain effect. (figure 15)

**ABNORMAL SITUATION**

If the electronic organ emits smoke or overheats, fire and electric shock may be caused by using it. In this case, perform the following operations immediately.

**1. Turn off the power.**

2. If an AC transformer is being used for power supply, unplug it from a wall outlet.

**3. Contact your distributor.**

Long time use of AC transformer will make it hot, this is a normal phenomenon, does not mean failure.

The built-in function is huge, sometimes can not respond, please turn off the power switch and then open the normal work.

**50 DEMONSTRATION SONGS**

d00	Red river Valley	d14	Redetzky march	d28	jingle bells	d42	american patrol march
d01	Alla Turca	d15	spanish bullfigter march	d29	happy birthday to you	d43	trumerei
d02	OH,susanna	d16	modlitwa dziewicy	d30	carmen toreador song	d44	dram wedding
d03	the blue danube	d17	moon river	d31	minuet	d45	mozart-nachtmusik
d04	dayung sampan	d18	jasmine flower	d32	symphony no.5 in c minor	d46	childhood
d05	lyphard melodie	d19	romance de amor	d33	six ecosaisais	d47	dance girl
d06	ballade pour adeline	d20	dance of the little swans	d34	bandari	d48	lullaby
d07	auldlang syne	d21	ode an die freude	d35	twinkle,twinkle,little star	d49	rhythm of the rain
d08	carmen overture	d22	swan lake	d36	the song of seashore		
d09	If you're happy and you know it	d23	heykens serenade	d37	jasmine flower (piano ver)		
d10	for elise	d24	acomme amour	d38	blooming flowers under full moon		
d11	greensleeves	d25	sells dumplings	d39	wedding march		
d12	childhood memoris	d26	military march	d40	butterfly lovers		
d13	moments musicaux	d27	old mac donald had a farm	d41	romeo and juliet		

128 TONES

T000	Grand Piano 1	T026	Jazz electric guitar	T052	Chorus "ah"	T078	Whistle	T104	Sitar
T001	Grand piano 2	T027	Acoustic electric guitar	T053	"Du" sound of human voice	T079	Yangba	T105	Banjo
T002	Grand piano 3	T028	Weak tone electric guitar	T054	Synth Voice	T080	Compound tonic 1 (square wave)	T106	Sanweixian
T003	Bar piano	T029	Driving sound guitar	T055	Band percussion	T081	Composite tonic 2 (saw tooth wave)	T107	Zheng
T004	Practice piano	T030	Distortion sound guitar	T056	Trumpet	T082	Composite tonic 3 (siren organ)	T108	Kalimba
T005	Chorus and Piano	T031	Guitar Harmonics	T057	Trombone	T083	Composite tonic 4 (blowpipe)	T109	Bagpipe
T006	Clavichord	T032	Acoustic Bass	T058	Large	T084	Composite tonic 5 (guitar)	T110	Viola
T007	Clavichord	T033	Dial electric bass	T059	Muted trumpet	T085	Synthetic tonic 6 (human voice)	T111	A suona horn
T008	Celesta	T034	Dial electric bass	T060	Horn	T086	Composite tonic 7 (fifth)	T112	Small bell
T009	Carillon	T035	Fretless Bass	T061	Copper tube group	T087	Composite tonic 8 (bass plus tonic)	T113	Latin bell
T010	Music box	T036	Beatles 1	T062	Synthetic copper tube 1	T088	Synthetic soft 1 (New Era)	T114	Steel drum
T011	Vibraphone	T037	Beatles 2	T063	Synthetic copper tube 2	T089	Synthetic soft (warm)	T115	Wood
T012	Malimba	T038	Synthetic bass 1	T064	Soprano saxophone	T090	Compound soft 3	T116	Osu
T013	Xylophone	T039	Synthetic Bass 2	T065	Alto Saxophone	T091	Synthetic soft 4 (Chorus)	T117	Tonggu
T014	Tubular bells	T040	Violin	T066	Baritone Saxophone	T092	Composite soft 5 (bowstring)	T118	Synthetic drum
T015	Santur	T041	Viola	T067	Baritone saxophone	T093	Synthetic soft 6 (metal)	T119	Cymbal waveform
T016	Percussion organ	T042	Cello	T068	Oboe	T094	Synthetic soft 7 (aura)	T120	The sound of grinding strings
T017	Percussion organ	T043	Double bass	T069	British management	T095	Composite soft 8 (swept string)	T121	Breathing sound
T018	Rock organ	T044	Tremolo strings	T070	Da Guan	T096	Composite effect 1 (rain)	T122	The sound of waves
T019	Pipe organ	T045	Pizzicato strings	T071	Clarinet	T097	Composite effects 2 (track)	T123	Birdsong
T020	Reed organ	T046	Harp	T072	Piccolo	T098	Composite effects 3 (crystal)	T124	Telephone ring
T021	Accordion	T047	Timpani	T073	Flute	T099	Composite effect 4 (atmosphere)	T125	The sound of a helicopter
T022	Harmonica	T048	String ensemble 1	T074	Clarinet	T100	Composite effect 5 (bright tone)	T126	Applause
T023	Bando accordion	T049	String ensemble 2	T075	Panpipe	T101	Composite effect 6 (demon)	T127	Shot
T024	Nylon Guitar	T050	Composite string 1	T076	Blow bottle mouth	T102	Composite effect 7 (echo)		
T025	Steel guitar	T051	Synthetic chord 2	T077	Chiba	T103	Composite effects 8 (Science Fiction)		

128 RHYTHMS

R000	Bei Guiying	R026	Charles	R052	C ballad	R078	Tikno 2	R104	Fate
R001	Bei Guiying 2	R027	Samba 1	R053	J ballad	R079	Fashion rhythm 1	R105	Comedy Music
R002	Bei Guiying 3	R028	Samba 2	R054	Slow ballads in the 1960s	R080	Fashion rhythm 2	R106	Driving music
R003	Popular Golden	R029	Micro music	R055	Piano ballad	R081	Dixie 1	R107	Fluency style
R004	Pop music	R030	18 meter	R056	Ballads of the 1950s	R082	Dixie 2	R108	Indonesian folk music
R005	Malay fashion	R031	28 beats	R057	Twist	R083	Foxtrot 1	R109	Absolute music
R006	Posadova	R032	16 beats	R058	Happy Blues	R084	Foxtrot 2	R110	Jamaica
R007	Disco 1	R033	116 beat 2	R059	Nostalgic Blues	R085	Rock 1	R111	Synthetic music
R008	Disco 2	R034	Ballads in 16 beats	R060	Bluegrass Music	R086	Rock 2	R112	Inspiration
R009	Bluegrass disco	R035	Country 16	R061	Bezin 1	R087	Fast tempo	R113	Allegro
R010	Waltz 1	R036	Tango 1	R062	Bezin 2	R088	Rapid beat	R114	Beach night
R011	Waltz 2	R037	Tango 2	R063	Bezin 3	R089	A gentle beat	R115	Ireland
R012	Folk Waltz	R038	Polka 1	R064	Shuffle 1	R090	Square meter	R116	Tarantella
R013	POSA Waltz	R039	Polka 2	R065	Shuffle 2	R091	European beat	R117	Big band
R014	Simple Waltz	R040	Popular swing	R066	Dream shuffle	R092	Alpha	R118	Dandu, Indonesia
R015	Shuffle Waltz	R041	Simple swing	R067	Country shuffle	R093	Beta	R119	Fusion music
R016	Reggae Waltz	R042	Light swing	R068	Quick shuffle	R094	Dream Dance	R120	House 2
R017	Rumba Waltz	R043	Rock 1	R069	Reggae shuffle	R095	Dance music 1	R121	Canon
R018	March 1	R044	Rock 2	R070	Rhythm and blues	R096	Dance music 2	R122	Latin style
R019	March 2	R045	Rock 3	R071	Reggae beat	R097	Dance 3	R123	Mambo music
R020	Rumba 1	R046	Ethereal rock	R072	Reggae 2	R098	Rap music	R124	New century
R021	Rumba 2	R047	Heart rock	R073	Reggae 3	R099	Country music	R125	Slow tempo
R022	Slow beat 1	R048	Rolling stone	R074	Salsa 1	R100	Country slide	R126	A spiritual
R023	Slow beat	R049	Funk Rock	R075	Salsa 2	R101	Electronic music	R127	Twist style
R024	Disco cha cha	R050	Ballad 1	R076	Salsa 3	R102	soul music		
R025	Guaraccha	R051	Jazz folk	R077	Tikno 1	R103	Easy steps		