



**FESLEY**  
TO LEAD A NEW COOL

## **INSTRUCTION MANUAL**

Fesley FEPI000 Digital Piano

### **WARNING**

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage, or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

To connect directly with our Support team, please email  
✉ [support@fesleymusic.com](mailto:support@fesleymusic.com)

To connect directly with our Support team, please email  
✉ [support@fesleymusic.com](mailto:support@fesleymusic.com)

## Welcome To Use Fesley Digital Piano

- Thank you for your purchase of this digital keyboard. This digital keyboard is elegant and refined. combined perfectly with the handle and timbre of traditional keyboards and the latest electronic technology of the present age.
- Before using this musical instrument, you should read this manual book in detail. please keep all user files properly as to look up when needed in days to come.

# Function List

- 88 keys keyboard
- 380 tones
- 128 rhythms
- 88 demos in the library
- LED display
- master volume / acc volume control
- tempo control / transpose control
- chord function
- accompaniment synchronization
- keyboard split function
- touch control / transfer metronome
- USB/MIDI capability
- headphone jack / stereo audio input

## Function Introduction

### Appealing tone

It adopts dream source, with digitization sampling, which provides a vivid acoustical experience for your performance.

### 380 Tones that are plentiful and top grade

Which includes 128 standard GM tones.

### 128 Preset rhythms

There are 128 rhythms, including all sorts of accompaniments, ranging from rock and roll to pop music and jazz, which enable you to experience various feelings.

### 88 Demo songs

88 demos of various styles are selected with great care to be played.

### USB/ MIDI terminal

Use USB or MIDI terminal, and you can connect it to the computer or other MIDI devices for interaction and creation quickly and conveniently.

### Bluetooth connection

Step 1, open the phone's Bluetooth

Step 2, check the Bluetooth device

Bluetooth name: PIANO AUDIO

First-time login Bluetooth password: 8888

Step 3, Complete the Bluetooth connection

# Safety Caution

## WARNING

### Smoke,peculiar smell,overheat

● When this musical instrument smokes, gives off a peculiar smell, or is overheated, continuing in service may result in fire and electric shock. When the above cases occur, you shall carry out the following operations immediately.

1. turn the power off
2. please unplug the plug of the AC transformer from the outlet.
- 3.contact your dealer.

### AC transformer

● The misapplication of the AC transformer may result in fire and electric shock. You shall abide by the following caution notes.

1. You shall use special AC transformer appointed for this product.
2. You shall use an AC power supply whose output voltage is within the range of the voltage rating marked on the AC transformer.
3. You shall not make the outlet and power extension line overload

You shall never touch the AC transformer with a wet hand, otherwise, it may result in electric shock.

- please use an AC transformer that may not touch water. Water may result in fire and electric shock.
- You shall never place a vase or any other containers with water on the AC transformer. Water may result in fire and electric shock

## Notice

### AC transformer

 
 
● The misapplication of the AC transformer may result in fire and electric shock. You shall abide by the following caution notes.

1. You shall never place a power line near a kiln or other heaters.
2. When unplugged from the outlet, the power line shall never be pulled and dragged.  
You shall grasp the body of the AC transformer plug.
3. You shall insert the AC transformer into the outlet to the end.

### Volume


You shall never play music at high volume for a long time. When using earphones, you shall take particular care. Too high a volume may harm your hearing.

## Installation Graphic Representation

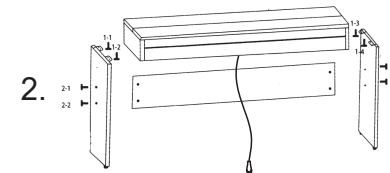

① 1-1 to 1-4 plastic fix part screw M6X20(4PCS)

 ② 2-1 to 2-4 screws PWA5X60 (4 PCS)

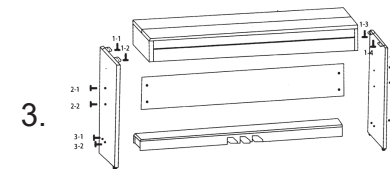


① 1-1 to 1-4 plastic fix part screw M6X20(4PCS)

② 2-1 to 2-4 screws PWA5X60 (4 PCS)

③ 3-1 to 3-4 screws M6X60 (4 PCS)

## FUNCTIONAL INDICATOR

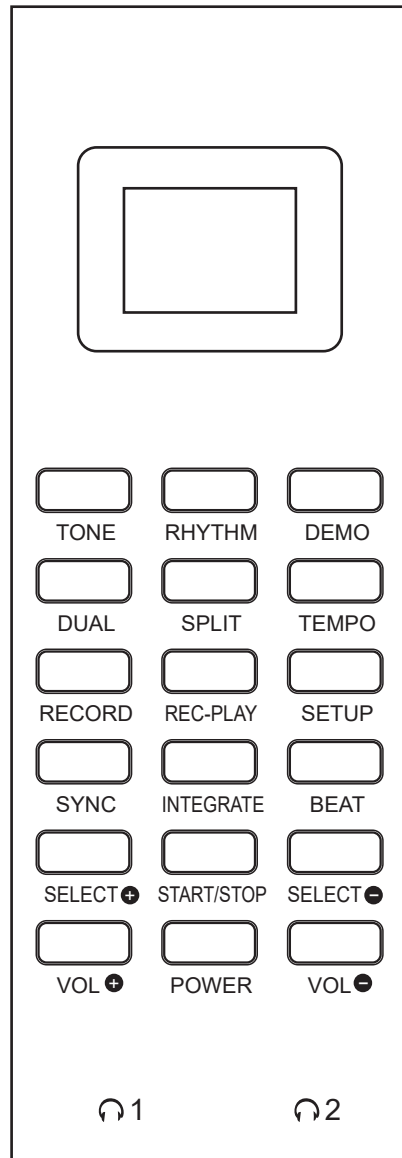 

## Connection

### Audio Input Interface

Before the external audio signal is connected to this product, please turn down the volume of the tone source first. Adjust the volume to a satisfactory level after connection. Connecting wire, which is sold into the open where both ends are standard plugs ( for instance: for MP3 ).

 
or one end is standard plug while the other end is two needle shaped plug ( for instance: for DCD ), is used to connect tone source output unit and digital keyboard, and when you switch on power switches of tone source instrument and digital keyboard, you can play music on the tone source instrument of the digital keyboard, or you can also play music while play the musical instrument

### USB / MIDI Interfaces


MIDI is initial letters of Musical Instrument Digital Interface in English. MIDI is the standard connecting system of communication between digital keyboard and music instrument with MIDI USB or MIDI interfaces of this digital keyboard can be used to connected with music instrument accompanied with MIDI and computer.

### Earphone Output Terminal


This product has two earphone output faucets, and turn down volume of the digital keyboard at first before connecting earphone. Adjust the volume to the satisfactory level after connection.

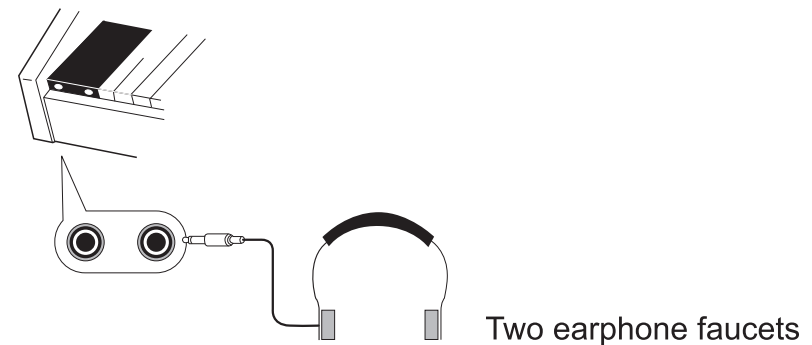


## JACK SOCKET

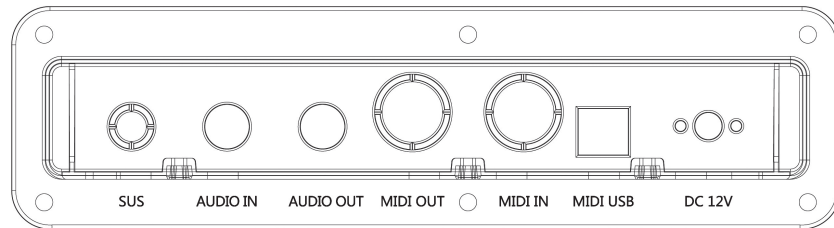 

01-After the board

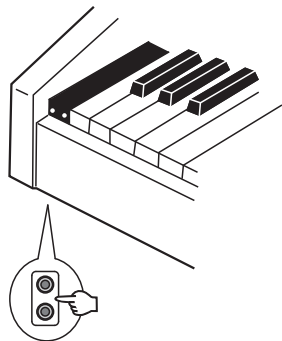 

02-Dual headphones

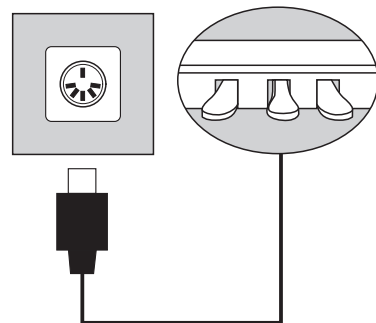 

03-Pedals

## Basic Operation

### Piano performance

1. Press the power switch, Digital display "001" and then you can enter the playing state.
2. Play music on the piano keys.

### Volume adjustment

Use the volume knob to increase or decrease the volume until you are satisfied.

### Timbre selection

1. Press "TONE" button, enter timbre mode.
2. Press "select +" or "select -" to select any timbre, and the corresponding timbre number will be displayed digitally.
3. When the power switch is turned on, it is preset to the piano tone

### Rhythm selection

1. Press the "Rhythm" button, enters the rhythm mode.
2. Press "Select+" or "Select-" to select any rhythm, digital display of the corresponding rhythm number.
3. Press the "Start/Stop" key to start playing the selected rhythm. to stop the rhythm play press "Start/Stop".

### Speed adjustment

1. Press the "TEMPO" button and press "Select+" or "Select-" to adjust the speed and speed.
2. Speed control range (20-280), power-up preset in paragraph 001.

## Chord accompaniment

1. Select the desired rhythm to play.
2. Press the "INTERATE" buttons at the same time to enter the chord state.
3. Playing chords can be played differently on the accompaniment keyboard (1-34 keys from left) according to different fingering.
4. Press the "INTERATE" buttons again to turn off the chord function.

## Synchronous start

Select the rhythm to use before beginning, set the speed value and select the chord accompaniment.

1. In the rhythmic state, press the "synch" button to enter the synchronous start state.
2. Play chords (1-34 keys from the left of the keyboard), and the accompaniment will start playing automatically.
3. To cancel the synchronization function, press the "start/stop" button.

## Set the feature.

1. Press the "SETUP" key for the first time, then "Select+" or "Select-" to choose the force to turn on or off.
2. Press the "SETUP" key for the second time, then "Select+" or "Select-" to select a different rhythmic volume (0-32).
3. Press the "SETUP" key for the third time, then press "Select+" or "Select-" to select different shifts (-12-12).

## Metronome features

Press the metronome button, the light lights up, the metronome function starts, and then press the key metronome function off.

## Built-in demo song

1. Press the "demo" button to display the current demo number and start playing the demo. Press this key again to stop.
2. After entering the demo mode, you can also select different demo songs by "select +" or "select -".

## Recording

1. Key disc note recording  
Press the "REC" buttons simultaneously to digitally display "REC" into recording mode, recording 5000 notes.
2. Press the "play" button digitally display "PLY" to play the recorded notes.

## Split

1. Enter the timbre mode first and choose an instrument as the main timbre.
2. Press the "SPLIT" button Press the "SPLIT" button, then press "select +" or "select -" to select another tone. At this time to play the keyboard on both sides of the corresponding sound of the instrument.
3. Press the "SPLIT" button again to cancel the segmentation of the key disk and return to the normal keyboard state.

## The dual tone

1. Enter the timbre mode first and choose an instrument as the main timbre.
2. Press the "DUAL" button Press the "DUAL" button, then press the "select +" or "select -" button to select the second tone. At this point playing the keyboard can simultaneously emit two resonant timbre.
3. Press the "DUAL" button again to return to the normal tone state.

## TONE LIST:

Number	Instrument	Number	Instrument
PIANO		029	GUITAR MUTED 1
001	GRAND PIANO 1	030	GUITAR OVRDRV
002	BRIGHT PIANO 1	031	GUITAR DISTRT 1
003	PIANO ELEC	032	GUITAR HRMNX
004	HONKY-TONK	BASS	
005	E PIANO1	033	ACOUSTIC BASS 1
006	E PIANO2	034	FINGER BASS 1
007	GRAND HARPSICHORD	035	ELECT BASS 1
008	CLAVI CHORD 1	036	FRETLB BASS
		037	SLAP BASS 1
		038	SLAP BASS 2
		039	SYN BASS 1
		040	SYN BASS 2
GLOCK		STRING	
009	CELESTA	041	VIOLIN 1
010	GLOCKENSPIEL 1	042	VIOLA 1
011	MUSIC BOX 1	043	CELLO 1
012	VIBRAPHONE 1	044	CONTRABASS 1
013	MARIMBA 1	045	STR TREM 1
014	XYLOPHONE 1	046	STR PIZZ
015	TUBULR BELLS 1	047	HARP 1
016	DULCIMER 1	048	TIMPANI 1
		CONCERT	
		049	STRINGS 1
		050	STRINGS 2
		051	STR SYN 1
ORGAN		052	STR SYN 2
017	HAND ORGAN 1	053	CHOIR AAHS 1
018	PERCHY ORGAN 1	054	VOICE OOHS 1
019	ROCK ORGAN	055	VOICE SYN
020	CHURCH ORGAN 1	056	ORCH HIT 1
021	REED ORGAN 1	BRASS	
022	ACCORDN 1	057	TRUMPT 1
023	HARMONICA 1	058	TROMBONE 1
024	TANGO ACCORDN 1	059	TUBA 1
GUITAR		060	MUTE TPT 1
025	GUITAR NYLON 1	061	FR HORN 1
026	GUITAR STEEL 1	062	BRASS SECT 1
027	GUITAR JAZZ 1	063	BRASS SYN 1
028	GUITAR CLEAN 1	064	BRASS SYN 2
		PIPE	

065	SAX SOPRANO	101	BRIGHT FX
066	SAX ALTO 1	102	GOBLIN FX
067	SAX TENOR 1	103	ECHO FX
068	SAX BTONE 1	104	SCI-FI FX
069	OBOE 1	FOLK SOUND	
070	ENG HORN 1	105	SITAR 1
071	BASSON 1	106	BANJO 1
072	CLARINET 1	107	SHAMISEN 1
WOODPIPE		108	KOTO 1
073	PICCOLO 1	109	KALIMBA
074	FLUTE 1	110	BAGPIPE
075	RECORDER 1	111	FIDDLE
076	PAN FLUTE	112	SHANAI
077	BOTTLE BLOWN	PERCUSSION	
078	SHAKHACHI	113	TINKLE BELL
079	WHISTLE 1	114	AGOGO
080	OCARINA	115	STEEL DRM
SYNTH PIPE		116	WOODBK
081	SQR WAVE	117	TAIKO DRM
082	SAW TOOTH	118	MLDY TOM
083	CALLIOPE	119	SYNTH DRM
084	CHIFF	120	REVR5 CYM
085	CHARANG	EFFECT	
086	VOICE	121	GTR NOISE
087	FIFTHS	122	BREATH 1
088	BASS LEAD	123	SEASHORE
SYNTH VOICE		124	BIRD TWEET 1
089	NEW AGE	125	TELEPHONE
090	WARM PAD	126	HELICOPTER
091	POLY SYNTH	127	APPLAUSE
092	CHOIR PAD 1	128	GUNSHOT 1
093	BOW GLASS 1	OTHER TIMBRES	
094	METAL PAD 1	129	GRAND PIANO2
095	HALO PAD 1	130	GRAND PIANO3
096	SWEEP	131	GRAND PIANO4
SYNTH EFFECT		132	GRAND PIANO /W 1
097	RAIN FX	133	GRAND PIANO /W 2
098	SNDRK FX	134	GRAND PIANO /W 3
099	CRYSTAL FX	135	BRIGHTNESS PIANO 1
100	ATMOSPH FX	136	BRIGHTNESS PIANO 2
		137	BRIGHTNESS PIANO 3

138	GRAND PIANO DARK 1
139	GRAND PIANO DARK 2
140	VELOCITY CROSS PIANO 1
141	VELOCITY CROSS PIANO 2
142	SOFT GRAND PIANO 1
143	SOFT GRAND PIANO 2
144	SOFT GRAND PIANO 3
145	STEREO BRIGHT PIANO
146	BRIGHT PIANO 2
147	BRIGHT PIANO 3
148	BRIGHT PIANO 4
149	BRIGHT PIANO 5
150	BRIGHT PIANO /W 1
151	BRIGHT PIANO /W 2
152	SOFT BRIGHT PIANO 1
153	SOFT BRIGHT PIANO 2
154	DEEP BRIGHT PIANO
155	VELOCITY CROSS BRIGHT PIANO
156	DETUNED E.PIANO 1
157	DETUNED E.PIANO 2
158	DETUNED E.PIANO 3
159	BRIGHT E.PIANO 1
160	BRIGHT E.PIANO 2
161	BRIGHT E.PIANO 3
162	BRIGHT E.PIANO 4
163	E.PIANO /W 1
164	E.PIANO /W 2
165	E.PIANO /W 3
166	E.PIANO /W 4
167	DARK E.PIANO 1
168	DARK E.PIANO 2
169	DARK E.PIANO 3
170	DARK E.PIANO 4
171	SOFT HONKY-TONK 1
172	SOFT HONKY-TONK 2
173	VELOCITY CROSS HONKY-TONK
174	DARK HONKY-TONK 1
175	DARK HONKY-TONK 2
176	HONKY-TONK /W 1
177	HONKY-TONK /W 2

178	HONKY-TONK /W 3
179	HONKY-TONK /W 4
180	SHORT HONKY-TONK 1
181	SHORT HONKY-TONK 2
182	E PIANO 1/W
183	E PIANO 2/W
184	E PIANO 3/W
185	E PIANO 4/W
186	E PIANO 5/W
187	E PIANO 6/W
188	SOFT E.PIANO 1
189	SOFT E.PIANO 2
190	SOFT E.PIANO 3
191	SOFT E.PIANO 4
192	HARD E.PIANO 1
193	HARD E.PIANO 2
194	SHORT E.PIANO 1
195	SHORT E.PIANO 2
196	BRIGHTNESS E.P 1
197	BRIGHTNESS E.P 2
198	HARPSICHORD 1
199	HARPSICHORD 2
200	SOFT HARPSICHORD 1
201	SOFT HARPSICHORD 2
202	BRIGHT HARPSICHORD 1
203	BRIGHT HARPSICHORD 2
204	DARK HARPSICHORD 1
205	DARK HARPSICHORD 2
206	HARD HARPSICHORD 1
207	HARD HARPSICHORD 2
208	CLAVI CHORD 2
209	CLAVI CHORD 3
210	CLAVI /W
211	BRIGHT CLAVI
212	DARK CLAVI
213	PERCHY CLAVI
214	BRIGHT CELESTA
215	SHORT CELESTA
216	PERCHY CELESTA
217	DUET CELESTA

218	CELESTA HARMONIC
219	GLOCKENSPIEL 2
220	GLOCKENSPIEL 3
221	GLOCKENSPIEL 4
222	BRIGHT GLOCKENSPIEL
223	DARK GLOCKENSPIEL
224	GLOCKENSPIEL /W 1
225	GLOCKENSPIEL /W 2
226	MUSIC BOX 2
227	MUSIC BOX 3
228	MUSIC BOX 4
229	TOY MUSIC BOX
230	BRIGHT MUSIC BOX
231	DARK MUSIC BOX
232	VIBRAPHONE 2
233	VIBRAPHONE 3
234	SYN VIBRAPHONE
235	HARD VIBRAPHONE
236	VIBRAPHONE /W 1
237	VIBRAPHONE /W 2
238	VIBRAPHONE SOFT
239	MARIMBA 2
240	MARIMBA /W
241	DARK MARIMBA
242	BRIGHT MARIMBA
243	DUTED MARIMBA
244	DARK MARIMBA
245	XYLOPHONE 2
246	XYLOPHONE 3
247	VELOCITY CROSS XYLOPHONE
248	DISTR XYLOPHONE
249	BRIGHT XYLOPHONE
250	FAST XYLOPHONE
251	SLOW XYLOPHONE
252	TUBULR BELLS 2
253	TUBULR BELLS 3
254	TUBULR BELLS 4
255	SYN TUBULR BELLS
256	TUBULR BELLS DARK
257	DULCIMER 2
258	DULCIMER 3

259	SANTUR
260	HAND ORGAN 2
261	HAND ORGAN 3
262	SOFT HAND ORGAN
263	BRIGHT SOFT HAMND ORGAN
264	HAMND ORGAN DETUNED
265	PERCHY ORGAN 2
266	PERCHY ORGAN 3
267	BRIGHT PERCHY ORGAN
268	DISTR PERCHY ORGAN
269	ROTART ORGAN
270	SLOW ROTART ORGAN
271	1960 ROCK ORGAN
272	1980 ROCK ORGAN
273	BRIGHT ROCK ORGAN
274	DARK ROCK ORGAN
275	SOFT ROCK ORGAN
276	CHURCH ORGAN 2
277	CHURCH ORGAN 3
278	CHURCH ORGAN 4
279	CHURCH ORGAN 5
280	CHURCH ORGAN 6
281	CHURCH ORGAN /W 1
282	CHURCH ORGAN /W 2
283	BIRGHT CHURCH ORGAN 1
284	BIRGHT CHURCH ORGAN 2
285	DARK CHURCH ORGAN 1
286	DARK CHURCH ORGAN 2
287	SOUL CHURCH ORGAN
288	CHURCH ORGAN HARMONIC
289	CHURCH ORGAN SLOW
290	CHURCH ORGAN FAST
291	SOFT CHURCH ORGAN
292	REED ORGAN 2
293	REED ORGAN 3
294	REED ORGAN 4
295	REED ORGAN 5
296	BRIGHT REED ORGAN
297	DARK REED ORGAN
298	REED ORGAN /W
299	FAST REED ORGAN



300	SLOW REED ORGAN	341	FAST TANGO ACCORDN
301	SOFT REED ORGAN	342	GUITAR NYLON 2
302	HARD REED ORGAN	343	GUITAR NYLON 3
303	JAZZ REED ORGAN	344	GUITAR NYLON 4
304	ACCORDN 2	345	GUITAR NYLON 5
305	ACCORDN 3	346	GUITAR NYLON 6
306	ACCORDN 4	347	GUITAR NYLON 7
307	ACCORDN 5	348	GUITAR NYLON RELEASE
308	DISTR T ACCORDN	349	VELOCITY CROSS RUITAR
309	BRIGHT ACCORDN	350	DETUNED GUITAR NYLON
310	ACCORDN HARMONIC	351	BIRGHT GUITAR NYLON
311	ROCK ACCORDN	352	DARK GUITAR NYLON
312	SWEET ACCORDN	353	GUITAR NYLON HARMONIC 1
313	DARK ACCORDN	354	GUITAR NYLON HARMONIC 2
314	FAST ACCORDN	355	GUITAR NYLON /W 1
315	SLOW ACCORDN	356	GUITAR NYLON /W 2
316	HARMONICA 2	357	GUITAR NYLON FAST
317	HARMONICA 3	358	GUITAR NYLON SLOW
318	HARMONICA 4	359	HARD GUITAR NYLON
319	HARMONICA 5	360	SOFT GUITAR NYLON
320	SWEET HARMONICA	361	GUITAR STEEL 2
321	DISTR T HARMONICA	362	GUITAR STEEL 3
322	SLOW HARMONICA	363	GUITAR STEEL 4
323	FAST HARMONICA	364	VELOCITY CROSS GUITAR STEEL
324	BRIGHT HARMONICA	365	DARK GUITAR STEEL
325	DARK HARMONICA	366	BRIGHT GUITAR STEEL
326	SOFT HARMONICA	367	GUITAR STEEL HARMONIC 1
327	HARMONICA /W 1	368	GUITAR STEEL HARMONIC 2
328	HARMONICA /W 2	369	HARD GUITAR STEEL
329	HARMONICA MUTED	370	SOFT GUITAR STEEL
330	TANGO ACCORDN 2	371	FAST GUITAR STEEL
331	TANGO ACCORDN 3	372	SLOW GUITAR STEEL
332	1960 TANGO ACCORDN	373	VELOCITY GUITAR STEEL
333	1980 TANGO ACCORDN	374	GUITAR STEEL REALSE
334	BRIGHT TANGO ACCORDN	375	GUITAR STEEL /W 1
335	DARK TANGO ACCORDN	376	GUITAR STEEL /W 2
336	SOFT TANGO ACCORDN	377	GUITAR JAZZ 2
337	HARD TANGO ACCORDN	378	GUITAR JAZZ 3
338	TANGO ACCORDN /W 1	379	GUITAR JAZZ 4
339	TANGO ACCORDN /W 2	380	GUITAR JAZZ 5
340	SLOW TANGO ACCORDN		

## RHYTHM LIST:

	Number	Instrument			
8 BEAT	001	8 Beat 1A	RHYTHM&BLUES	045	Hard RockA
	002	8 Beat 2A		046	Rock & Roll 1A
	003	8 Beat 3A		047	Rock & Roll 2A
	004	8 Beat 4A		048	Chicago BluesA
	005	8 Beat HeatA		049	Fast GospelA
	006	8 Beat Pop 1A		050	Groove SoulA
	007	8 Beat Pop 2A		051	RapA
	008	Ballad 1A		052	GospelS1A
BALLAD	009	Ballad 2A	Disco	053	BluesA
	010	Guitar BalladA		054	Slow BluesA
	011	Organ BalladA		055	FoxtrotA
	012	Bluse BalladA		056	Disco TropicA
	013	Epic BalladA		057	Disco HandsA
	014	Rock BalladA		058	Two StepA
	015	Slow BalladA		059	Polk PopA
	016	Pop Ballad		060	Waltz 1A
	017	Electro Pop BalladA		061	Waltz Pop 1A
	018	Polk BalladA		062	Waltz Pop 2A
16 BEAT	019	16 Beat 1A	WORLD MUSIC	063	RaiA
	020	16 Beat 2A		064	Twist 1A
	021	16 Beat 3A		065	Twist 2A
	022	16 Beat 4A		066	Miami PopA
	023	16 Beat FunkA		067	MotownA
	024	16 Beat Pop A		068	ReggaeA
	025	16 Beat BalladA		069	Swing ReggaeA
	026	Bossa Nova 1A		070	MamboA
LATIN	027	Guitar BossaA	DANCE	071	BeguineA
	028	Pop BossaA		072	MusetteA
	029	TangoA		073	HouseA
	030	Cha ChaA		074	Slow FoxA
	031	RhumbaA		075	Vienna WaltzA
	032	TEX TEXA		076	SalsaA
	033	CountryA		077	DiscoA
	034	Country RockA		078	Hip Hop PopA
COUNTRY	035	Country ShuffleA	JAZZ&SWING	079	Analog PopA
	036	Country SwingA		080	Club DanceA
	037	Country BalladA		081	BoogieA
	038	Country WaltzA		082	Funky PopA
	039	50' s RockA		083	Jazz RockA
ROCK R&B	040	Heavy MetalA	TRADITIONAL	084	Swing 1A
	041	Rock 1A		085	DixielandA
	042	Rock 2A		086	Jazz SambaA
	043	Soft RockA		087	MarchA
	044	Slow RockA		088	US. MarchA
				089	Samba A
		090	PolkaA		
		091	Polka OberA		

## DEMO LIST:

	092	TarantellaA
	093	Slow WaltzA
	094	Ober WaltzA
PINIST	095	Piano BalladA
	096	Waltz 2A
	097	Guitar WaltzA
	098	2/4 Piano 1A
	099	3/4 Piano 1A
	100	4/4 Piano 1A
8 BEAT	101	8 Beat 1B
	102	8 Beat 2B
	103	8 Beat 3B
	104	8 Beat 4B
	105	8 Beat HeatB
	106	8 Beat Pop 1B
	107	8 Beat Pop 2B
BALLAD	108	Ballad 1B
	109	Ballad 2B
	110	Guitar BalladB
	111	Organ BalladB
	112	Bluse BalladB
	113	Epic BalladB
	114	Rock BalladB
	115	Slow BalladB
	116	Pop BalladB
	117	Electro Pop BalladB
	118	Polk BalladB
16 BEAT	119	16 Beat 1B
	120	16 Beat 2B
	121	16 Beat 3B
	122	16 Beat 4B
	123	16 Beat FunkB
	124	16 Beat Pop B
	125	16 Beat BalladB
LATIN	126	Bossa Nova 1B
	127	Guitar BossaB
	128	Pop BossaB

 
NO	SongName		
001	MinutWlz	045	Polka
002	DJ Dance	046	SoilPull
003	Fountain	047	Trout
004	SpanGirl	048	Send-off
005	SonataPn	049	March
006	SuperSng	050	ForElise
007	LittlBee	051	SwaniRiv
008	HorseRac	052	France
009	Nocturne	053	Danube
010	TheSpain	054	Hungary
011	BusyTran	055	Spaceman
012	Mexico	056	Patriot
013	MozartPn	057	Cuckoo
014	Minuet	058	SingKite
015	Nifuma	059	TongChil
016	Disco	060	DoReMi
017	FolkSong	061	We Happy
018	Girl Sea	062	LittlBee
019	LittStar	063	Russia
020	KindeGtn	064	Plaster
021	Wahaha	065	Foison
022	Duck&Cik	066	JingleBe
023	Humorous	067	PaperBoy
024	Joy Song	068	Swallow
025	GoingHom	069	New Year
026	Dove	070	Edelweis
027	Auldlang	071	MoonRivr
028	Moonligh	072	Beyer 10
029	HapyBirh	073	Beyer 20
030	PraiseSng	074	Beyer 30
031	Dolly	075	Beyer 40
032	Market	076	Beyer 50
033	Family	077	Beyer 60
034	A cradle	078	Beyer 70
035	At Home	079	Beyer 71
036	Seasons	080	Beyer 72
037	YearsAgo	081	Beyer 75
038	Pigeons	082	Beyer 76
039	InnerVic	083	Beyer 77
040	Violin	084	Beyer 78
041	Swan	085	Beyer 79
042	Musettes	086	Beyer 80
043	GypsyRnd	087	Beyer 90
044	Serenade	088	Beyer 98

## Single Finger Chord List

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

## Multi-finger Chord List

C	Cm	C7	Cm7	Cdim7	CM7	Cm7 <sup>-5</sup>	Cdim
C#/(D <sup>b</sup> )	C#/(D <sup>b</sup> )m	C#/(D <sup>b</sup> )7	C#/(D <sup>b</sup> )m7	C#/(D <sup>b</sup> )dim7	C#/(D <sup>b</sup> )M7	C#/(D <sup>b</sup> )m7 <sup>-5</sup>	C#/(D <sup>b</sup> )dim
D	Dm	D7	Dm7	Ddim7	DM7	Dm7 <sup>-5</sup>	Ddim
(D <sup>#</sup> )/E <sup>+</sup>	(D <sup>#</sup> )/E <sup>b</sup> m	(D <sup>#</sup> )/E <sup>b</sup> 7	(D <sup>#</sup> )/E <sup>b</sup> m7		(D <sup>#</sup> )/E <sup>b</sup> M7	(D <sup>#</sup> )/E <sup>b</sup> m7 <sup>-5</sup>	(D <sup>#</sup> )/E <sup>b</sup> dim
E	Em	E7	Em7		EM7	Em7 <sup>-5</sup>	Edim
F	Fm	F7	Fm7		FM7	Fm7 <sup>-5</sup>	Fdim
F <sup>#</sup> /(G <sup>b</sup> )	F <sup>#</sup> /(G <sup>b</sup> )m	F <sup>#</sup> /(G <sup>b</sup> )7	F <sup>#</sup> /(G <sup>b</sup> )m7		F <sup>#</sup> /(G <sup>b</sup> )M7	F <sup>#</sup> /(G <sup>b</sup> )m7 <sup>-5</sup>	F <sup>#</sup> /(G <sup>b</sup> )dim
G	Gm	G7	Gm7		GM7	Gm7 <sup>-5</sup>	Gdim
(G <sup>#</sup> )/A <sup>b</sup>	(G <sup>#</sup> )/A <sup>b</sup> m	(G <sup>#</sup> )/A <sup>b</sup> 7	(G <sup>#</sup> )/A <sup>b</sup> m7		(G <sup>#</sup> )/A <sup>b</sup> M7	(G <sup>#</sup> )/A <sup>b</sup> m7 <sup>-5</sup>	(G <sup>#</sup> )/A <sup>b</sup> dim
A	Am	A7	Am7		AM7	Am7 <sup>-5</sup>	Adim
(A <sup>#</sup> )/B <sup>b</sup>	(A <sup>#</sup> )/B <sup>b</sup> m	(A <sup>#</sup> )/B <sup>b</sup> 7	(A <sup>#</sup> )/B <sup>b</sup> m7		(A <sup>#</sup> )/B <sup>b</sup> M7	(A <sup>#</sup> )/B <sup>b</sup> m7 <sup>-5</sup>	(A <sup>#</sup> )/B <sup>b</sup> dim
B	Bm	B7	Bm7		BM7	Bm7 <sup>-5</sup>	Bdim

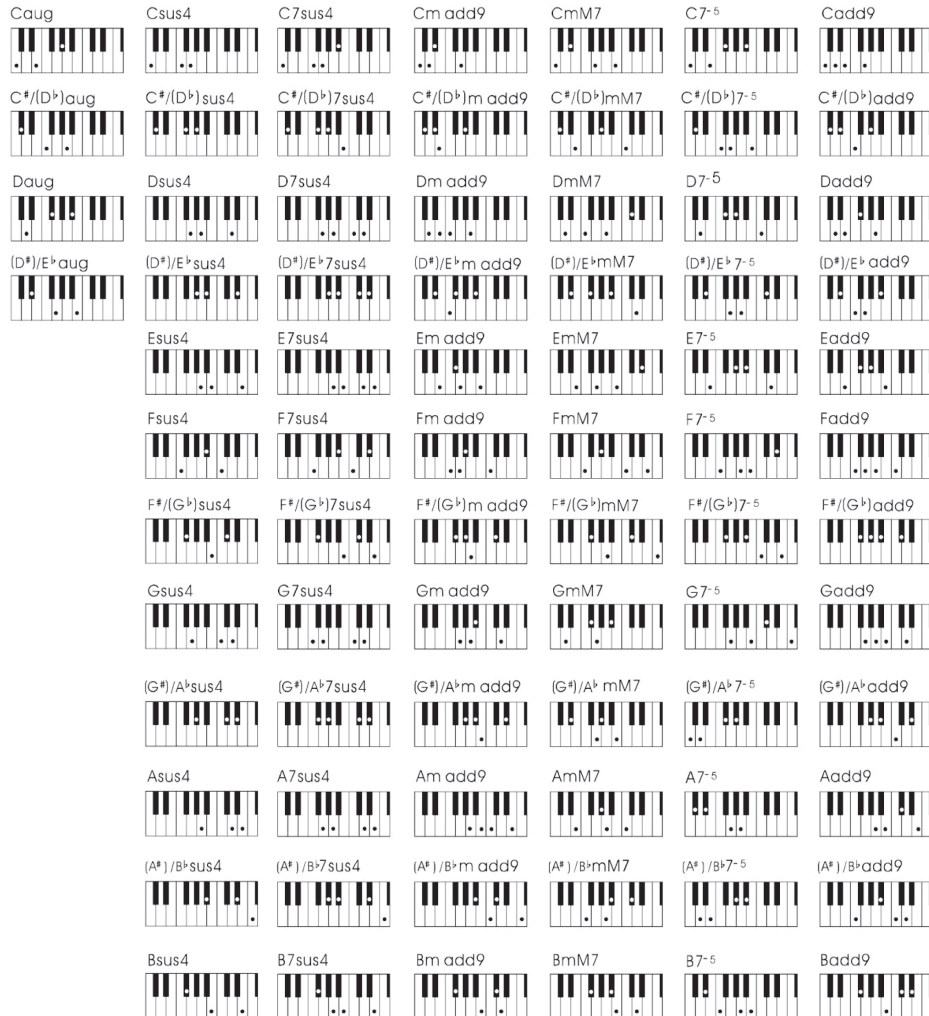

## Product Maintenance

Careful and good maintenance and production of this product play a very important role in lengthening the service life of the product and decreasing faults.

### Avoid heating, dampening, or direct sunlight

You shall not have the musical instrument exposed to sunlight in excess, or placed where is near air conditioner or baking hot

### you should not use it near TV set or radios

This musical instrument may lead to video or audio disturbance on TV set and Radio. In that case, you shall move the musical instrument away from TV set or radio

### You should not use paint, thinner or similar chemicals to clean

This musical instrument may lead to video or audio disturbance on TV sets and radio. In that case, you shall move the musical instrument away from the TV set or radio

### You should avoid quake and collision

The product shall be handled with care when removing with strict prohibition of strenuous quake and collision in order not to make outer shell or innerelectronic components damaged.

### Avoid using where is easy to be affected by abnormal high and low temperatures

Too high or low temperature may make pictures on LCD screen turn to be gray and hard to be identified. When you have the product under normal temperature, the case will be corrected automatically.

## Safety Warning:

This product is electronic and electrical.

The long-term use of the circuit components may cause failures. It is recommended that the safe use period is 2 years.

After the safe use period, please regularly inspect the product. If you find any problems, please do not continue to use it. Cause a safety accident!