

FESLEY
TO LEAD A NEW COOL

INSTRUCTION MANUAL

Fesley FEP300 Digital Piano

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage, or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

To connect directly with our Support team

📞 1-877-748-4799 (PST 8:00 am-5:00 pm, Mon-Fri)

✉️ support@fesleymusic.com

www.fesleymusic.com

📺 **YouTube:**@Fesley Music

📘 **Facebook:**@Fesley Music

🎵 **TikTok:**@fesleymusic_official

📷 **Instagram:**@fesleymusic_official

🐦 **Twitter:**@Fesleymusic_Official

📌 **Pinterest:**@Fesleymusic

To connect directly with our Support team

 
 
 
✉️ support@fesleymusic.com

📞 1-877-748-4799 (PST 8:00 am-5:00 pm, Mon-Fri)

🔍 www.fesleymusic.com



DEMOS LIST

001 MinutWlz	038 Pigeons	075 Beyer 40
002 DJ Dance	039 InnerVic	076 Beyer 50
003 Fountian	040 Violin	077 Beyer 60
004 SpanGirl	041 Swan	078 Beyer 70
005 SonataPn	042 Musettes	079 Beyer 71
006 SuperSng	043 GypsyRnd	080 Beyer 72
007 LittlBee	044 Serenade	081 Beyer 75
008 HorseRac	045 Polka	082 Beyer 76
009 Nocturne	046 SoilPull	083 Beyer 77
010 TheSpain	047 Trout	084 Beyer 78
011 BusyTran	048 Send-off	085 Beyer 79
012 Mexico	049 March	086 Beyer 80
013 MozartPn	050 ForElise	087 Beyer 90
014 Minuet	051 SwaniRiv	088 Beyer 98
015 Nifuma	052 France	089 Beyer 99
016 Disco	053 Danube	090 Beyer 26
017 FolkSong	054 Hungary	091 Beyer 27
018 Girl Sea	055 Spaceman	092 Beyer 28
019 LittStar	056 Patriot	093 Beyer 29
020 KindeGtn	057 Cuckoo	094 Beyer 31
021 Wahaha	058 SingKite	095 Beyer 106
022 Duck&Cik	059 TongChil	096 Beyer 48
023 Humorous	060 DoReMi	097 Beyer 52
024 Joy Song	061 We Happy	098 Beyer 107
025 GoingHom	062 LittlBee	099 Beyer 18
026 Dove	063 Russia	100 Beyer 21
027 Auldlang	064 Plaster	101 Beyer 23
028 Moonligh	065 Foison	102 Beyer 25
029 HapyBirh	066 JingleBe	103 Beyer 36
030 PraiseSng	067 PaperBoy	104 Beyer 84
031 Dolly	068 Swallow	105 Beyer 88
032 Market	069 New Year	106 Beyer 32
033 Family	070 Edelweis	107 Beyer 35
034 A cradle	071 MoonRivr	108 Beyer 11
035 At Home	072 Beyer 10	109 Beyer 16
036 Seasons	073 Beyer 20	110 Beyer 18
037 YearsAgo	074 Beyer 30	

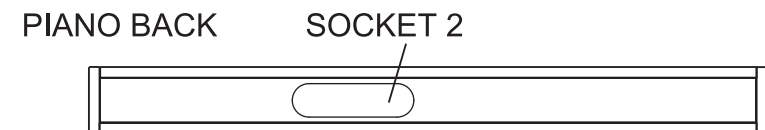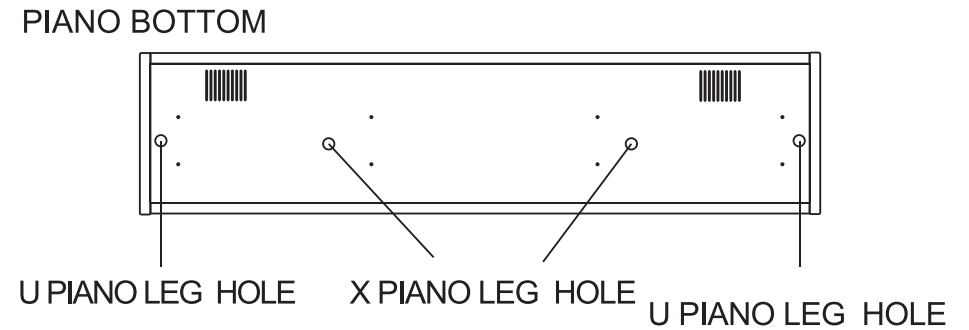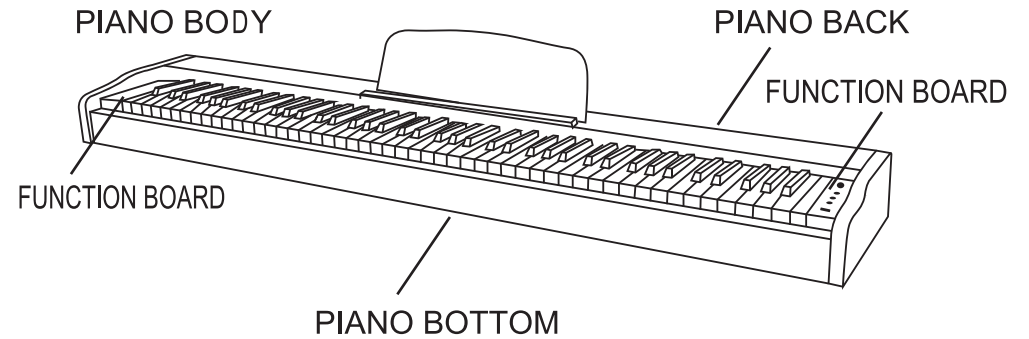

Model A: FEP300 (Only Piano)
 Model B: FEP300X (With X-Keyboard Stand)

  X-Keyboard Stand Assembly Instruction

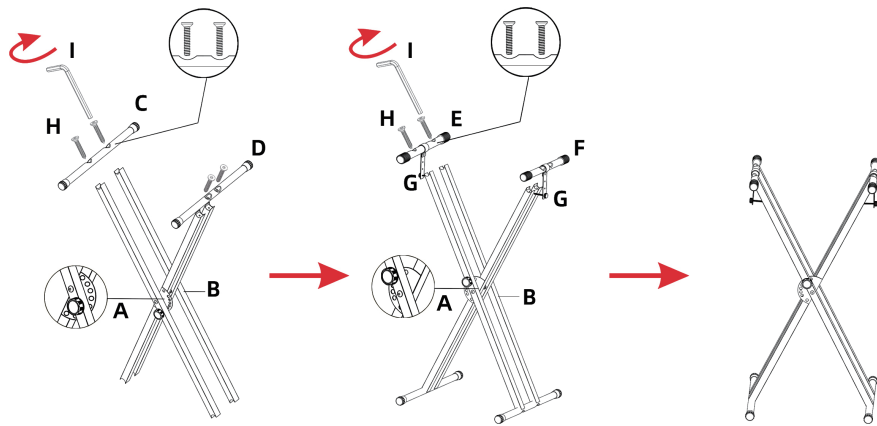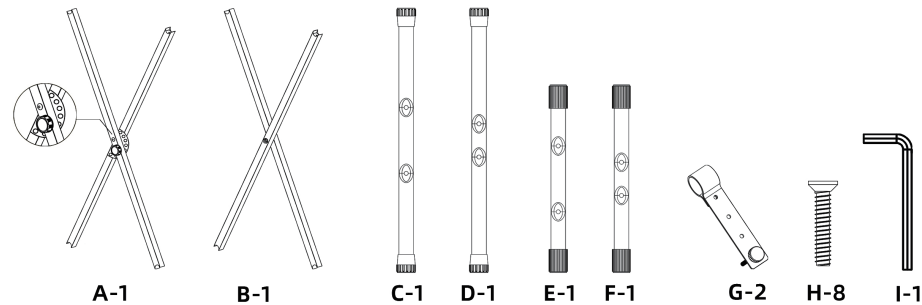



RHYTHMS LIST

501 8 BEAT 1BF	551 RAP BF	601 8 BEAT 1C	651 COUNTRY 1C
502 8 BEAT 2BF	552 SLOW GOSPEL MUSIC BF	602 8 BEAT 2C	652 COUNTRY 2C
503 8 BEAT 3BF	553 BLUES BF	603 8 BEAT 3C	653 COUNTRY ROCK C
504 8 BEAT ROCK BF	554 SLOW BLUES BF	604 8 BEAT 4C	654 COUNTRY SLIDING STEP C
505 FERVOU 8 BEAT BF	555 FOX TROT BF	605 8 BEAT 5C	655 COUNTRY SWAY C
506 8 BEAT POP 1BF	556 HOT DISCO BF	606 8 BEAT 6C	656 COUNTRY BALLAD C
507 8 BEAT POP 2BF	557 DOUBLE DISCO BF	607 8 BEAT 6C	657 COUNTRY WALTZ C
508 BALLADE 1BF	558 PASODOBLE BF	608 FERVOU 8 BEAT C	658 COUNTRY POP 1C
509 BALLADE 2 BF	559 POLKA POP BF	609 SOFT 8 BEAT C	659 COUNTRY POP 2C
510 GUITAR BALLADE BF	560 WALTZ 1BF	610 SOFT 8 BEAT 1C	660 INDOOR DANCE 1C
511 ORGAN BALLAD BF	561 POP WALTZ 1BF	611 SOFT 8 BEAT 2C	661 INDOOR DANCE 2C
512 BRUCE BALLAD BF	562 POP WALTZ 2BF	612 SOFT 8 BEAT 3C	662 COOL DANCE 1C
513 OLD BALLAD BF	563 LAE BF	613 SOFT 8 BEAT 4C	663 COOL DANCE 2C
514 ROCK BALLAD BF	564 TWIST 1BF	614 16 BEAT 1C	664 LENTO FOXTROT C
515 LENTO BALLAD BF	565 TWIST 2BF	615 16 BEAT 2C	665 REYNELLA WALTZ 1C
516 POP BALLAD BF	566 MIAMI POP BF	616 16 BEAT 3C	666 REYNELLA WALTZ 2C
517 ELECTROACOUSTIC BALLAD BF	567 DETROIT BF	617 16 BEAT 4C	667 SALSA 1C
518 POLKA BALLAD BF	568 REGGAE BF	618 16 BEAT 5C	668 SALSA 2C
519 16 BEAT 1BF	569 SWING ZIGGY BF	619 16 BEAT 6C	669 DISCO C
520 16 BEAT 2 BF	570 MANBO BF	620 16 BEAT 7C	670 70'S DISCO C
521 16 BEAT 3BF	571 COUNTRY DANCE BF	621 16 BEAT 8C	671 80'S DISCO C
522 16 BEAT 4BF	572 MUSE (FRENCH FOLK) BF	622 16 BEAT POP 1C	672 SOUL DISCO C
523 16 BEAT FUNK BF	573 INDOOR DANCE BF	623 16 BEAT POP 2C	673 HOT DISCO C
524 16 BEAT POP BF	574 LENTO FOXTROT BF	624 16 BEAT BALLAD 1C	674 ELECTRO POP C
525 16 BEAT BALLAD BF	575 REYNELLA WALTZ BF	625 16 BEAT BALLAD 2C	675 POP HIP-HOP C
526 BOSSANOVO BF	576 SALSA BF	626 16 BEAT FUNK 2C	676 ANOG POP C
527 GUITAR BOSSANOVO BF	577 DISCO BF	627 POP FUNK C	677 CLUB DANCE 1C
528 POP BOSSANOVO BF	578 POP HIP-HOP BF	628 HIP HOP 1C	678 CLUB DANCE 2C
529 TANGO BF	579 ANOG POP BF	629 HIP HOP 2C	679 HOT DISCO C
530 CHA CHA BF	580 CLUB DANCE BF	630 BALLADE 1C	680 DOUBLE DISCO C
531 RUMBA BF	581 BOOGIE BF	631 BALLADE 2C	681 PASODOBLE C
532 DERK BF	582 HIP POP BF	632 BALLADE 3C	682 TIP 1C
533 COUNTRY BF	583 JAZZ ROCK BF	633 BALLADE 4C	683 TIP 2C
534 COUNTRY ROCK BF	584 SWAY 1BF	634 GUITAR BALLADE C	684 HIP HOP FUNK 2C
535 COUNTRY SLIDING STEP BF	585 DIXIE BF	635 ORGAN BALLAD C	685 HIP HOP FUNK 2C
536 COUNTRY SWAY BF	586 JAZZ SAMBA BF	636 BRUCE BALLAD C	686 HIP HOP FUNK 1C
537 COUNTRY BALLAD BF	587 MARCH BF	637 OLD BALLAD C	687 TECHNO 1C
538 COUNTRY WALTZ BF	588 US MARCH BF	638 ROCK BALLAD C	688 TECHNO 2C
539 50'S ROCK MUSIC BF	589 SAMBA BF	639 LENTO BALLAD C	689 HIP HOP FUNK 1C
540 HEAVY METAL BF	590 POLKA BF	640 POP BALLAD 1C	690 POLKA POP C
541 ROCK 1 BF	591 ARMY POLKA BF	641 POP BALLAD 2C	691 WALTZ 1C
542 ROCK 2 BF	592 TANANTELLAS BF	642 POP BALLAD 3C	692 POP WALTZ 1C
543 SOFT ROCK BF	593 LENTO WALTZ BF	643 POP BALLAD 4C	693 POP WALTZ 2C
544 SLOW ROCK BF	594 ARMY WALTZ BF	644 POP BALLAD 5C	694 BOOGIE C
545 HARD ROCK BF	595 PIANO SONGS BF	645 ELECTROACOUSTIC BALLAD C	695 HIP POP C
546 HEAVY METAL ROCK 1BF	596 WALTZ 2 (PIANO)BF	646 POLKA BALLAD C	696 80'S FUSE C
547 HEAVY METAL ROCK 2BF	597 GUITA WALTZ BF	647 MEW POP C	697 JAZZ ROCK C
548 CHICAGO BLUES BF	598 2/4 BEAT PIANO ACCOMPANIMENT BF	648 SPRY BALLAD C	698 SWAY 1C
549 FAST GOSPEL MUSIC BF	599 3/4 BEAT PIANO ACCOMPANIMENT BF	649 BLUEGRASS 1C	699 DIXIE
550 TRADITIONAL SOUL GOSPEL BF	600 4/4 BEAT PIANO ACCOMPANIMENT BF	650 BLUEGRASS 2C	700 JAZZ SAMBA C

RHYTHMS LIST

301 8 BEAT 1E	351 RAP E	401 8 BEAT 1AF	451 RAP AF
302 8 BEAT 2E	352 SLOW GOSPEL MUSIC E	402 8 BEAT 2AF	452 SLOW GOSPEL MUSIC AF
303 8 BEAT 3E	353 BLUES E	403 8 BEAT 3AF	453 BLUES AF
304 8 BEAT ROCK E	354 SLOW BLUES E	404 8 BEAT ROCK AF	454 SLOW BLUES AF
305 FERVOUT 8 BEAT E	355 FOX TROT E	405 FERVOUT 8 BEAT AF	455 FOX TROT AF
306 8 BEAT POP 1E	356 HOT DISCO E	406 8 BEAT POP 1AF	456 HOT DISCO AF
307 8 BEAT POP 2E	357 DOUBLE DISCO E	407 8 BEAT POP 2AF	457 DOUBLE DISCO AF
308 BALLADE 1E	358 PASODOBLE E	408 BALLADE 1AF	458 PASODOBLE AF
309 BALLADE 2 E	359 POLKA POP E	409 BALLADE 2 AF	459 POLKA POP AF
310 GUITAR BALLADE E	360 WALTZ 1E	410 GUITAR BALLADE AF	460 WALTZ 1AF
311 ORGAN BALLAD E	361 POP WALTZ 1E	411 ORGAN BALLAD AF	461 POP WALTZ 1AF
312 BRUCE BALLAD E	362 POP WALTZ 2E	412 BRUCE BALLAD AF	462 POP WALTZ 2AF
313 OLD BALLAD E	363 LAE E	413 OLD BALLAD AF	463 LAE AF
314 ROCK BALLAD E	364 TWIST 1E	414 ROCK BALLAD AF	464 TWIST 1AF
315 LENTO BALLAD E	365 TWIST 2E	415 LENTO BALLAD AF	465 TWIST 2AF
316 POP BALLAD E	366 MIAMI POP E	416 POP BALLAD AF	466 MIAMI POP AF
317 ELECTROACOUSTIC BALLAD E	367 DETROIT E	417 ELECTROACOUSTIC BALLAD AF	467 DETROIT AF
318 POLKA BALLAD E	368 REGGAE E	418 POLKA BALLAD AF	468 REGGAE AF
319 16 BEAT 1E	369 SWING ZIGGY E	419 16 BEAT 1AF	469 SWING ZIGGY AF
320 16 BEAT 2 E	370 MANBO E	420 16 BEAT 2 AF	470 MANBO AF
321 16 BEAT 3E	371 COUNTRY DANCE E	421 16 BEAT 3AF	471 COUNTRY DANCE AF
322 16 BEAT 4E	372 MUSE (FRENCH FOLK) E	422 16 BEAT 4AF	472 MUSE (FRENCH FOLK) AF
323 16 BEAT FUNK E	373 INDOOR DANCE E	423 16 BEAT FUNK AF	473 INDOOR DANCE AF
324 16 BEAT POP E	374 LENTO FOXTROT E	424 16 BEAT POP AF	474 LENTO FOXTROT AF
325 16 BEAT BALLAD E	375 REYNELLA WALTZ E	425 16 BEAT BALLAD AF	475 REYNELLA WALTZ AF
326 BOSSANOVO E	376 SALSA E	426 BOSSANOVO AF	476 SALSA AF
327 GUITAR BOSSANOVO E	377 DISCO E	427 GUITAR BOSSANOVO AF	477 DISCO AF
328 POP BOSSANOVO E	378 POP HIP-HOPE	428 POP BOSSANOVO AF	478 POP HIP-HOP AF
329 TANGO E	379 ANOG POP E	429 TANGO AF	479 ANOG POP AF
330 CHA CHA E	380 CLUB DANCE E	430 CHA CHA AF	480 CLUB DANCE AF
331 RUMBA E	381 BOOGIE E	431 RUMBA AF	481 BOOGIE AF
332 DERK E	382 HIP POP E	432 DERK AF	482 HIP POP AF
333 COUNTRY E	383 JAZZ ROCK E	433 COUNTRY AF	483 JAZZ ROCK AF
334 COUNTRY ROCK E	384 SWAY 1E	434 COUNTRY ROCK AF	484 SWAY 1AF
335 COUNTRY SLIDING STEP E	385 DIXIE E	435 COUNTRY SLIDING STEP AF	485 DIXIE AF
336 COUNTRY SWAY E	386 JAZZ SAMBA E	436 COUNTRY SWAY AF	486 JAZZ SAMBA AF
337 COUNTRY BALLAD E	387 MARCH E	437 COUNTRY BALLAD AF	487 MARCH AF
338 COUNTRY WALTZ E	388 US MARCH E	438 COUNTRY WALTZ AF	488 US MARCH AF
339 50'S ROCK MUSIC E	389 SAMBA E	439 50'S ROCK MUSIC AF	489 SAMBA AF
340 HEAVY METAL E	390 POLKA E	440 HEAVY METAL AF	490 POLKA AF
341 ROCK 1 E	391 ARMY POLKA E	441 ROCK 1 AF	491 ARMY POLKA AF
342 ROCK 2 E	392 TANANTELLAS E	442 ROCK 2 AF	492 TANANTELLAS AF
343 SOFT ROCK E	393 LENTO WALTZ E	443 SOFT ROCK AF	493 LENTO WALTZ AF
344 SLOW ROCK E	394 ARMY WALTZ E	444 SLOW ROCK AF	494 ARMY WALTZ AF
345 HARD ROCK E	395 PIANO SONGS E	445 HARD ROCK AF	495 PIANO SONGS AF
346 HEAVY METAL ROCK 1E	396 WALTZ 2(PIANO)E	446 HEAVY METAL ROCK 1AF	496 WALTZ 2(PIANO)AF
347 HEAVY METAL ROCK 2E	397 GUITA WALTZ E	447 HEAVY METAL ROCK 2AF	497 GUITA WALTZ AF
348 CHICAGO BLUES E	398 2/4 BEAT PIANO ACCOMPANIMENT E	448 CHICAGO BLUES AF	498 2/4 BEAT PIANO ACCOMPANIMENT AF
349 FAST GOSPEL MUSIC E	399 3/4 BEAT PIANO ACCOMPANIMENT E	449 FAST GOSPEL MUSIC AF	499 3/4 BEAT PIANO ACCOMPANIMENT AF
350 TRADITIONAL SOUL GOSPEL E	400 4/4 BEAT PIANO ACCOMPANIMENT E	450 TRADITIONAL SOUL GOSPEL AF	500 4/4 BEAT PIANO ACCOMPANIMENT AF

  Function Introduction

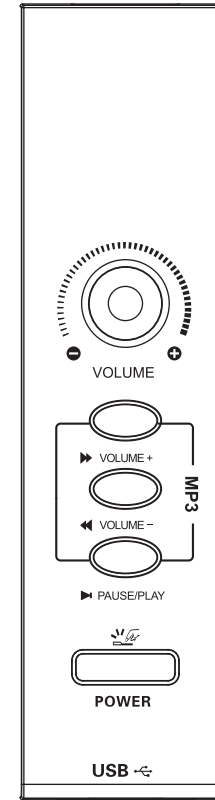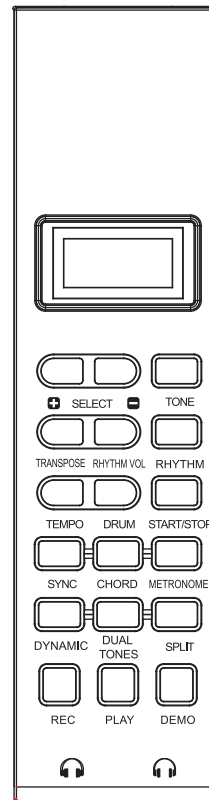

- Built-in multi-core highly professional top-class chip
- DREAM SAM5504 Audio chip have built-in 424-bits DSP.
- Keyboard:support 88 key hammer,spring and other types of keyboard,equipped with a variety of strength curve optional.
- 900 Tones,700 Rhythms,110 Demo Songs
- 3 Digital display.
- Digital display choose.
- Note record/play function.
- Piano tones use YAMAHA tones with the latest Italian 3-layer dynamic sampling technology.
- The elaborate multi-track rhythm include variety of music styles from around the world.
- TEMPO speed control
- Synthesize chord function
- Key drum&Dual keyboard
- Metronome,Transpose
- MP3 play
- Sustain pedal
- Sustain:open it have 81 synthesise,close it have 128 synthesise.

E–piano operation manual

1.TONE:

Press [Tone] then press [+] or [-] button for choosing different tones.900 tones for selecting.

Note:Tones full list can be found in the “TONES LIST”

2.RHYTHM:

Press [Rhythm],then press [+] or [-] button for choosing different Rhythms.700 Rhythms for selecting.

Note:Rhythms full list can be found in the “RHYTHMS LIST”

3.START/STOP:

Press [Start/Stop],all rhythms start,re-press is stop.

4.TRANSPOSE :

Transpose function is for turning all key sound into a up or down tonality to perform other tonal songs conveniently with a acquainted skill.Press Tonality Movebutton,the function is starting,then press [+] or [-] button for turning the tonality up or down a half .The maximum is 8.

5.RHYTHM VOLUME:

Press [Rhythm Volume],then press[+]or[-] for changing the rhythm volume.

6.SPEED:

Press [Speed],then press [+] or [-] for changing the speed of rhythm and metronome.

7.DRUM:

Press [Drum] for playing drum function.

RHYTHMS LIST

101 8 BEAT 1B	151 RAP B	201 8 BEAT 1 I	251 RAP I
102 8 BEAT 2B	152 SLOW GOSPEL MUSIC B	202 8 BEAT 2 I	252 SLOW GOSPEL MUSIC I
103 8 BEAT 3B	153 BLUES B	203 8 BEAT 3 I	253 BLUES I
104 8 BEAT ROCK B	154 SLOW BLUES B	204 8 BEAT ROCK I	254 SLOW BLUES I
105 FERVOU 8 BEAT B	155 FOX TROT B	205 FERVOU 8 BEAT I	255 FOX TROT I
106 8 BEAT POP 1B	156 HOT DISCO B	206 8 BEAT POP 1 I	256 HOT DISCO I
107 8 BEAT POP 2B	157 DOUBLE DISCO B	207 8 BEAT POP 2 I	257 DOUBLE DISCO I
108 BALLADE 1B	158 PASODOBLE B	208 BALLADE 1 I	258 PASODOBLE I
109 BALLADE 2B	159 POLKA POP B	209 BALLADE 2 I	259 POLKA POP I
110 GUITAR BALLADE B	160 WALTZ 1B	210 GUITAR BALLADE I	260 WALTZ 1 I
111 ORGAN BALLAD B	161 POP WALTZ 1B	211 ORGAN BALLAD I	261 POP WALTZ 1 I
112 BRUCE BALLAD B	162 POP WALTZ 2B	212 BRUCE BALLAD I	262 POP WALTZ 2 I
113 OLD BALLAD B	163 LAE B	213 OLD BALLAD I	263 LAE I
114 ROCK BALLAD B	164 TWIST 1B	214 ROCK BALLAD I	264 TWIST 1 I
115 LENTO BALLAD B	165 TWIST 2B	215 LENTO BALLAD I	265 TWIST 2 I
116 POP BALLAD B	166 MIAMI POP B	216 POP BALLAD I	266 MIAMI POP I
117 ELECTROACOUSTIC BALLAD B	167 DETROIT B	217 ELECTROACOUSTIC BALLAD I	267 DETROIT I
118 POLKA BALLAD B	168 REGGAE B	218 POLKA BALLAD I	268 REGGAE I
119 16 BEAT 1B	169 SWING ZIGGY B	219 16 BEAT 1 I	269 SWING ZIGGY I
120 16 BEAT 2B	170 MANBO B	220 16 BEAT 2 I	270 MANBO I
121 16 BEAT 3B	171 COUNTRY DANCE B	221 16 BEAT 3 I	271 COUNTRY DANCE I
122 16 BEAT 4B	172 MUSE (FRENCH FOLK)B	222 16 BEAT 4 I	272 MUSE (FRENCH FOLK) I
123 16 BEAT FUNK B	173 INDOOR DANCE B	223 16 BEAT FUNK I	273 INDOOR DANCE I
124 16 BEAT POP B	174 LENTO FOXTROT B	224 16 BEAT POP I	274 LENTO FOXTROT I
125 16 BEAT BALLAD B	175 REYNELLA WALTZ B	225 16 BEAT BALLAD I	275 REYNELLA WALTZ I
126 BOSSANOVO 1B	176 SALSA B	226 BOSSANOVO I	276 SALSA I
127 GUITAR BOSSANOVO B	177 DISCO B	227 GUITAR BOSSANOVO I	277 DISCO I
128 POP BOSSANOVO B	178 POP HIP-HOP B	228 POP BOSSANOVO I	278 POP HIP-HOP I
129 TANGO B	179 ANOG POP B	229 TANGO I	279 ANOG POP I
130 CHA CHA B	180 CLUB DANCE B	230 CHA CHA I	280 CLUB DANCE I
131 RUMBA B	181 BOOGIE B	231 RUMBA I	281 BOOGIE I
132 DERK B	182 HIP POP B	232 DERK I	282 HIP POP I
133 COUNTRY B	183 JAZZ ROCK B	233 COUNTRY I	283 JAZZ ROCK I
134 COUNTRY ROCK B	184 SWAY 1B	234 COUNTRY ROCK I	284 SWAY 1 I
135 COUNTRY SLIDING STEP B	185 DIXIE B	235 COUNTRY SLIDING STEP I	285 DIXIE I
136 COUNTRY SWAY B	186 JAZZ SAMBA B	236 COUNTRY SWAY I	286 JAZZ SAMBA I
137 COUNTRY BALLAD B	187 MARCH B	237 COUNTRY BALLAD I	287 MARCH I
138 COUNTRY WALTZ B	188 US MARCH B	238 COUNTRY WALTZ I	288 US MARCH I
139 50'S ROCK MUSIC B	189 SAMBA B	239 50'S ROCK MUSIC I	289 SAMBA I
140 HEAVY METAL B	190 POLKA B	240 HEAVY METAL I	290 POLKA I
141 ROCK 1 B	191 ARMY POLKA B	241 ROCK 1 I	291 ARMY POLKA I
142 ROCK 2 B	192 TANANTELLAS B	242 ROCK 2 I	292 TANANTELLAS I
143 SOFT ROCK B	193 LENTO WALTZ B	243 SOFT ROCK I	293 LENTO WALTZ I
144 SLOW ROCK B	194 ARMY WALTZ B	244 SLOW ROCK I	294 ARMY WALTZ I
145 HARD ROCK B	195 PIANO SONGS B	245 HARD ROCK I	295 PIANO SONGS I
146 HEAVY METAL ROCK 1B	196 WALTZ 2 (PIANO)B	246 HEAVY METAL ROCK 1 I	296 WALTZ 2 (PIANO) I
147 HEAVY METAL ROCK 2B	197 GUITA WALTZ B	247 HEAVY METAL ROCK 2 I	297 GUITA WALTZ I
148 CHICAGO BLUES B	198 2/4 BEAT PIANO ACCOMPANIMENT B	248 CHICAGO BLUES I	298 2/4 BEAT PIANO ACCOMPANIMENT I
149 FAST GOSPEL MUSIC B	199 3/4 BEAT PIANO ACCOMPANIMENT B	249 FAST GOSPEL MUSIC I	299 3/4 BEAT PIANO ACCOMPANIMENT I
150 TRADITIONAL SOUL GOSPEL B	200 4/4 BEAT PIANO ACCOMPANIMENT B	250 TRADITIONAL SOUL GOSPEL I	300 4/4 BEAT PIANO ACCOMPANIMENT I

TONES LIST

801	MUTE BASSON	851	SINE LEAD
802	SOFT BASSON	852	SINE SLOW
803	CLARINET 2	853	SINE FAST
804	CLARINET 3	854	SAW SLOW
805	CLARINET 4	855	SAW FAST
806	CLARINET 5	856	SAW HARMONIC
807	CLARINET HARMONIC	857	VOICE LEAD
808	DARK CLARINET	858	VOICE SLOW
809	BRIGHT CLARINET	859	VOICE FAST
810	CLARINET WELL	860	SOFT 5TH LEAD
811	CLARINET MUTE	861	5TH LEAD
812	CLARINET SOFT	862	MASSINESS
813	PICCOLO 2	863	BASS & LEAD
814	PICCOLO 3	864	NEW AGE SLOW
815	PICCOLO 4	865	NEW AGE FAST
816	PICCOLO DARK	866	NEW AGE HARMONIC
817	PICCOLO HARMONIC	867	WARM PAD FAST
818	BRIGHT PICCOLO	868	WARM PAD SLOW
819	SOFT PICCOLO	869	WARM PAD HARMONIC
820	FLUTE 2	870	PWM PAD
821	FLUTE 3	871	POLY SYNTH SLOW
822	FLUTE 4	872	POLY SYNTH FAST
823	FLUTE HARMONIC	873	CLICK PAD
824	DARK FLUTE	874	ANALOG PAD
825	BRIGHT FLUTE	875	POLY PAD
826	FLUTE MUTE	876	CHOIR PAD 2
827	SOFT FLUTE	877	CHOIR PAD HARMONIC
828	RECORDER 2	878	BOW GLASS 2
829	RECORDER 3	879	BOW GLASS HARMONIC
830	RECORDER 4	880	METAL PAD 2
831	PAN FLUTE SLOW	881	PAN PAD 1
832	PAN FLUTE FAST	882	PAN PAD 2
833	PAN FLUTE HARMONIC	883	HALO PAD 2
834	PAN FLUTE DUTE	884	HALO PAD 3
835	PAN FLUTE/W	885	DISPERSE
836	BRIGHT PAN FLUTE	886	RISING
837	BOTTLE BLOWN DARK	887	CONGREGATE
838	BOTTLE BLOWN BRIGHTNESS	888	PROGENITOR
839	BOTTLE BLOWN WARM	889	PRELUDE
840	SOFT BOTTLE BLOWN	890	WARM AIR
841	SHAKHACHI HARMONIC	891	SMOG
842	SHAKHACHI BRIGHT	892	PAN ECHO
843	SHAKHACHI DARK	893	LARGE PAN
844	SLOW SHAKHACHI	894	ECHO SLOW
845	FAST SHAKHACHI	895	FANTASYLAND
846	WHISTLE 2	896	SITAR 2
847	WHISTLE 3	897	SITAR 3
848	WHISTLE 4	898	SITAR 4
849	WHISTLE 5	899	DISTRIT SITAR
850	SQUARE	900	BRIGHT SITAR

RHYTHMS LIST

001	8 BEAT 1A	051	RAP A
002	8 BEAT 2A	052	SLOW GOSPEL MUSIC A
003	8 BEAT 3A	053	BLUES A
004	8 BEAT ROCK A	054	SLOW BLUES A
005	FERVOUT 8 BEAT A	055	FOX TROT A
006	8 BEAT POP 1A	056	HOT DISCO A
007	8 BEAT POP 2A	057	DOUBLE DISCO A
008	BALLADE 1A	058	PASODOBLE A
009	BALLADE 2	059	POLKA POP A
010	GUITAR BALLADE A	060	WALTZ 1A
011	ORGAN BALLAD A	061	POP WALTZ 1A
012	BRUCE BALLAD A	062	POP WALTZ 2A
013	OLD BALLAD A	063	LAE A
014	ROCK BALLAD A	064	TWIST 1A
015	LENTO BALLAD A	065	TWIST 2A
016	POP BALLAD A	066	MIAMI POP
017	ELECTROACOUSTIC BALLAD A	067	DETROIT A
018	POLKA BALLAD A	068	REGGAE A
019	16 BEAT 1A	069	SWING ZIGGY A
020	16 BEAT 2A	070	MANBO A
021	16 BEAT 3A	071	COUNTRY DANCE A
022	16 BEAT 4A	072	MUSE (FRENCH FOLK) A
023	16 BEAT FUNK A	073	INDOOR DANCE A
024	16 BEAT POP A	074	LENTO FOXTROT A
025	16 BEAT BALLAD A	075	REYNELLA WALTZ A
026	BOSSANOVO 1A	076	SALSA A
027	GUITAR BOSSANOVO A	077	DISCO A
028	POP BOSSANOVO A	078	POP HIP-HOP A
029	TANGO A	079	ANOG POP A
030	CHA CHA A	080	CLUB DANCE A
031	RUMBA A	081	BOOGIE A
032	DERK A	082	HIP POP A
033	COUNTRY A	083	JAZZ ROCK A
034	COUNTRY ROCK A	084	SWAY 1A
035	COUNTRY SLIDING STEP A	085	DIXIE A
036	COUNTRY SWAY A	086	JAZZ SAMBA A
037	COUNTRY BALLAD A	087	MARCH A
038	COUNTRY WALTZ A	088	US MARCH A
039	50'S ROCK MUSIC A	089	SAMBA A
040	HEAVY METAL A	090	POLKA A
041	ROCK 1 A	091	ARMY POLKA A
042	ROCK 2 A	092	TANANTELLAS A
043	SOFT ROCK A	093	LENTO WALTZ A
044	SLOW ROCK A	094	ARMY WALTZ A
045	HARD ROCK A	095	PIANO SONGS A
046	HEAVY METAL ROCK 1A	096	WALTZ 2 (PIANO) A
047	HEAVY METAL ROCK 2A	097	GUITA WALTZ A
048	CHICAGO BLUES A	098	2/4 BEAT PIANO ACCOMPANIMENT A
049	FAST GOSPEL MUSIC A	099	3/4 BEAT PIANO ACCOMPANIMENT A
050	TRADITIONAL SOUL GOSPEL A	100	4/4 BEAT PIANO ACCOMPANIMENT A

8.DYNAMIC

Press [DYNAMIC] to switch on / off DYNAMIC function.

9.DOUBLE TONES

Press [DOUBLE TONES] enter double tones situation. Following tones selection method to select second tone. Through two tones combination to extend the tone of piano. Press [DOUBLE TONES] again to close.

10.DUAL SPLIT

Press [SPLIT] enter double keyboards, keyboard separated by middle C. Keyboard on the left will go up an octave, on the right will go down an octave automatically.
































Press [SPLIT] again to switch off.

11.CHORD

Press [CHORD] enter chord playing mode. Several keys on the left keyboard, change into automatic chord keyboard.(Accompaniment separation point as boundary)

According to chord relationship, player playing chord on keyboard by left hand, piano will accompany for it automatically. "C Major chord fingering form" for reference, other tune is same analogize.

Chord control table is as follows:

0 C 	1 C ₆ 	2 C _{M7} 	3 C _{M7} (#11) 	4 C _M (9) 	5 C _{M7} (9) 	6 C ₆ (9) 	7 C _{aug} 
8 C _m 	9 C _{m6} 	10 C _{m7} 	11 C _{m7} (b5) 	12 C _m (9) 	13 C _{m7} (9) 	14 C _{m7} (11) 	15 C _{mM7} 
16 C _{mM7} (9) 	17 C _{dim} 	18 C _{dim7} 	19 C ₇ 	20 C _{7sus4} 	21 C ₇ (b5) 	22 C ₇ (9) 	23 C ₇ (#11) 
24 C ₇ (b13) 	25 C ₇ (#11 9) 	26 C ₇ (13) 	27 C ₇ (#9) 	28 C _{M7aug} 	29 C _{7aug} 	30 C _{7sus4} 	

12.METRONOME

Press [METRONOME] beat sound starts, following the beat sound to play.Press [METRONOME] again to turn off.
Beat types automatically match according to rhythm type.

13.REC/PLAY

Press [REC],LED screen shows “REC”, METRONOME auto-start.All notes will be recorded at this time.
Press [REC] again,recording stop.The storage capacity is around 5000 notes, storage operation include pedal operation, change tones,etc.Playing metronome,beat be recorded before use metronome record. When playing record,couldn't change the type and tempo of metronome.
After record, press [PLAY],play the note just recorded.

14.DEMO


Press [DEMO], demo songs start, using SELECT + / - to select other songs.110 demo songs can be selected.

TONES LIST

601 SOFT HARMONIC	651 WARM VOICE OOHS 2	701 TUBA /W	751 SAX ALTO BRIGHT
602 TIMPANI 2	652 VOICE OOHS /W	702 BRIGHT TUBA	752 SAX ALTO MUTE
603 TIMPANI 3	653 BRIGHT VOICE OOHS	703 DARK TUBA	753 SAX ALTO /W
604 TIMPANI 4	654 DARK VOICE OOHS	704 MUTE TUBA	754 SOFT SAX ALTO
605 TIMPANI /W 1	655 FAST VOICE OOHS	705 MUTE TPT 2	755 SLOW SAX ALTO
606 TIMPANI /W 2	656 SLOW VOICE OOHS	706 DARK MUTE TPT	756 SWEET SAX ALTO
607 BRIGHT TIMPANI	657 VOICE SYN HARMONIC	707 BRIGHT MUTE TPT	757 SAX TENOR 2
608 DARK TIMPANI	658 SLOW VOICE SYN	708 MUTE TPT /W	758 SAX TENOR 3
609 STRINGS 3	659 FAST VOICE SYN	709 SWEET MUTE TPT	759 SAX TENOR 4
610 STRINGS 4	660 BRIGHT VOICE SYN	710 FR HORN 2	760 SAX TENOR 5
611 STRINGS 5	661 ELE.VOICE SYN	711 FR HORN 3	761 SAX TENOR 6
612 STRINGS 6	662 ORCH HIT 2	712 FR HORN 4	762 SWEET SAX TENOR
613 SLOW STRINGS 1	663 ORCH HIT /W	713 FR HORN 5	763 DARK SAX TENOR
614 SLOW STRINGS 2	664 BRIGHT ORCH HIT	714 FR HORN 6	764 SUPER SAX TENOR
615 FAST STRINGS 1	665 ORCH HIT HARMONIC	715 SWEET FR HORN	765 SAX TENOR /W 1
616 FAST STRINGS 2	666 SLOW ORCH HIT	716 SLOW FR HORN	766 SAX TENOR /W 2
617 DARK STINGS 1	667 FAST ORCH HIT	717 FAST FR HORN	767 SAX TENOR HARMONIC
618 DARK STINGS 2	668 DARK ORCH HIT	718 BRIGHT FR HORN	768 SAX TENOR BRIGHT
619 BRIGHT STINGS 1	669 SOFT ORCH HIT	719 DARK FR HORN	769 SAX BTONE 2
620 BRIGHT STINGS 2	670 TRUMPT 2	720 BRASS SECT 2	770 SAX BTONE 3
621 RESONANT STRINGS	671 TRUMPT 3	721 BRASS SECT 3	771 SAX BTONE 4
622 SFORZATO STRINGS	672 TRUMPT 4	722 BRASS SECT 4	772 SAX BTONE 5
623 STR SYN 3	673 TRUMPT 5	723 BRASS SECT 5	773 SAX BTONE WELL
624 STR SYN 4	674 TRUMPT 6	724 BRASS SECT 6	774 MUTE SAX BTONE
625 STR SYN 5	675 TRUMPT 7	725 DARK BRASS SECT	775 SWEET SAX BTONE
626 STR SYN 6	676 DARK TRUMPT	726 BRASS SECT WELL	776 DARK SAX BTONE
627 1960 STRINGS	677 BRIGHT TRUMPT	727 BRIGHT BRASS SECT	777 OBOE 2
628 1970 STRINGS	678 SWEET TRUMPT	728 FAST BRASS SECT	778 OBOE 3
629 SLOW STRINGS 1	679 MUTE TRUMPT	729 SLOW BRASS SECT	779 OBOE 4
630 SLOW STRINGS 2	680 TRUMPT /W 1	730 BRASS SECT /W	780 OBOE 5
631 FAST STRINGS 1	681 TRUMPT /W2	731 BRASS SYN 3	781 SWEET OBOE
632 FAST STRINGS 2	682 TROMBONE 2	732 BRASS SYN 4	782 OBOE WELL
633 LEGATO STRINGS 1	683 TROMBONE 3	733 BRASS SYN 5	783 BRIGHT OBOE
634 LEGATO STRINGS 2	684 TROMBONE 4	734 BRASS SYN 6	784 DARK OBOE
635 BRIGHT LEGATO STRINGS	685 TROMBONE 5	735 BRASS SYN 7	785 MUTE OBOE
636 DARK LEGATO STRINGS	686 TROMBONE 6	736 SOFT BRASS SYN	786 ENG HORN 2
637 CHOIR AAHS 2	687 TROMBONE 7	737 SFORZATO BRASS SYN	787 ENG HORN 3
638 CHOIR AAHS 3	688 DARK TROMBONE	738 DARK BRASS SYN	788 ENG HORN 4
639 CHOIR AAHS 4	689 BRIGHT TROMBONE	739 BRIGHT BRASS SYN	789 ENG HORN 5
640 CHOIR AAHS 5	690 SLOW BRIGHT TROMBONE	740 WELL BRASS SYN	790 ENG HORN 6
641 WARM CHOIR AAHS	691 MUTE TROMBONE	741 MUTE BRASS SYN	791 ANALOG ENG HORN
642 CHOIR AAHS /W 1	692 TROMBONE /W	742 SWEET BRASS SYN	792 WOODWINDS
643 CHOIR AAHS /W 2	693 TUBA 2	743 HOMONIC BRASS SYN	793 BASSON 2
644 CHOIR AAHS HARMONIC	694 TUBA 3	744 SLOW BRASS SYN	794 BASSON 3
645 BRIGHT CHOIR AAHS	695 TUBA 4	745 FAST BRASS SYN	795 BASSON 4
646 DARK CHOIR AAHS	696 TUBA 5	746 SAX ALTO 2	796 BASSON 5
647 FAST CHOIR AAHS	697 TUBA 6	747 SAX ALTO 3	797 BRIGHT BASSON
648 SLOW CHOIR AAHS	698 SOFT TUBA	748 SAX ALTO 4	798 DARK BASSON
649 VOICE OOHS 2	699 SLOW TUBA	749 SAX ALTO 5	799 BASSON WELL
650 WARM VOICE OOHS 1	700 TUBA SOLO	750 SAX ALTO 6	800 BRIGHT BASSON

TONES LIST

401 SOFT CLEAN GUITAR	451 GUITAR HRMNX /W 1	501 FAST SLAP BASS 1	551 FAST VIOLA
402 FAST CLEAN GUITAR	452 GUITAR HRMNX /W 2	502 FAST SLAP BASS 2	552 SOFT VIOLA
403 SLOW CLEAN GUITAR	453 ACOUSTIC BASS 2	503 SLOW SLAP BASS 1	553 CELLO 2
404 CLEAN GUITAR RELEASE	454 ACOUSTIC BASS 3	504 SLOW SLAP BASS 2	554 CELLO 3
405 GUITAR MUTED 2	455 ACOUSTIC BASS 4	505 SLAP BASS HARMONIC 1	555 CELLO 4
406 GUITAR MUTED 3	456 ACOUSTIC BASS 5	506 SLAP BASS HARMONIC 2	556 DARK CELLO
407 GUITAR MUTED 4	457 DETUNED BASS	507 SLAP BASS RELEASE 1	557 HARD CELLO
408 GUITAR MUTED 5	458 BASS AND FILTER	508 SLAP BASS RELEASE 2	558 CELLO ENSEMBLE 1
409 BRIGHT GUITAR MUTED	459 SOFT BASS	509 SYN BASS 3	559 CELLO ENSEMBLE 2
410 DARK GUITAR MUTED	460 BASS & RELEASE	510 SYN BASS 4	560 SLOW CELLO
411 GUITAR MUTED HARMONIC	461 FAST BASS	511 SYN BASS 5	561 FAST CELLO
412 GUITAR MUTED RELEASE	462 SLOW BASS	512 SYN BASS 6	562 CELLO /W
413 GUITAR MUTED CHORUS	463 BRIGHT BASS	513 SYN BASS HARMONIC 1	563 BRIGHT CELLO
414 GUITAR MUTED HARD	464 DARK BASS	514 SYN BASS HARMONIC 2	564 SOFT CELLO
415 GUITAR MUTED SOFT	465 BASS /W 1	515 FAST SYN BASS 1	565 CONTRABASS 2
416 GUITAR MUTED /W 1	466 BASS /W 2	516 FAST SYN BASS 2	566 CONTRABASS 3
417 GUITAR MUTED /W 2	467 FINGER BASS 2	517 SOFT SYN BASS 1	567 CONTRABASS 4
418 GUITAR OVRDRV 2	468 FINGER BASS HARMONIC	518 SOFT SYN BASS 2	568 CONTRA BASS ENSEMBLE 1
419 GUITAR OVRDRV 3	469 SOFT FINGER BASS	519 SLOW SYN BASS 1	569 CONTRA BASS ENSEMBLE 2
420 GUITAR OVRDRV 4	470 FINGER BASS RELEASE	520 SLOW SYN BASS 2	570 CONTRA BASS ENSEMBLE 3
421 FUNK GUITAR	471 ELECT BASS 2	521 FAST SYN BASS 1	571 CONTRA BASS ENSEMBLE 4
422 GUITAR OVRDRV HARMONIC	472 ELECT BASS 3	522 FAST SYN BASS 2	572 DARK CONTRA BASS
423 BRIGHT GUITAR OVRDRV	473 ELECT BASS 4	523 BRIGHT SYN BASS 1	573 CONTRA BASS VIBRATO
424 DARK GUITAR OVRDRV	474 ELECT BASS 5	524 BRIGHT SYN BASS 2	574 STR TREM 2
425 GUITAR OVRDRV RELEASE	475 ELECT BASS 6	525 DARK SYN BASS 1	575 STR TREM 3
426 HARD GUITAR OVRDRV	476 ELECT BASS RELEASE	526 DARK SYN BASS 2	576 STR TREM 4
427 SOFT GUITAR OVRDRV	477 ELECT BASS HARMONIC	527 SYN BASS RELEASE 1	577 STR TREM SLOW
428 GUITAR OVRDRV /W 1	478 SOFT ELECT BASS	528 SYN BASS RELEASE 2	578 STR TREM FAST
429 GUITAR OVRDRV /W 2	479 FAST ELECT BASS	529 VIOLIN 2	579 STR TREM /W
430 GUITAR DISTRT 2	480 PICK BASS	530 VIOLIN 3	580 BRIGHT STR TREM
431 GUITAR DISTRT 3	481 BRIGHT ELECT BASS 1	531 VIOLIN 4	581 DARK STR TREM
432 GUITAR DISTRT 4	482 BRIGHT ELECT BASS 2	532 VIOLIN 5	582 SOFT STR TREM
433 GUITAR DISTRT 5	483 DARK ELECT BASS 1	533 VIOLIN ENSEMBLE 1	583 BRIGHT STR PIZZ
434 GUITAR DISTRT 6	484 DARK ELECT BASS 2	534 VIOLIN ENSEMBLE 2	584 DARK STR PIZZ
435 GUITAR DISTRT HARMONIC	485 FAST FRETLS BASS	535 SLOW VIOLIN	585 STR PIZZ HARMONIC
436 GUITAR DISTRT RELEASE	486 FAST FRETLS BASS	536 FAST VOLIN	586 STR PIZZ /W
437 BRIGHT GUITAR DISTRT	487 FRETLS BASS RELEASE	537 VOLIN /W	587 FAST STR PIZZ
438 DARK GUITAR DISTRT	488 FRETLS BASS HARMONIC	538 BRIGHT VOLIN	588 SLOW STR PIZZ
439 SOFT GUITAR DISTRT	489 FRETLESS BASS	539 DARK VOLIN	589 SOFT STR PIZZ
440 HARMONIC GUITAR DISTRT	490 FAST FRETLESS BASS	540 SOFT VOLIN	590 METAL STR PIZZ
441 HARD GUITAR DISTRT	491 SLAP BASS 3	541 VIOLA 2	591 HARP 2
442 GUITAR DISTRT /W 1	492 SLAP BASS 4	542 VIOLA 3	592 HARP 3
443 GUITAR DISTRT /W 2	493 SLAP BASS 5	543 VIOLA 4	593 HARP 4
444 SOFT GUITAR HRMNX	494 SLAP BASS 6	544 DARK VIOLA	594 HARP /W 1
445 HARD GUITAR HRMNX	495 BRIGHT SLAP BASS 1	545 HARD VIOLA	595 HARP /W 2
446 BRIGHT GUITAR HRMNX	496 BRIGHT SLAP BASS 2	546 VIOLA ENSEMBLE	596 BRIGHT HARP 1
447 DARK GUITAR HRMNX	497 DARK SLAP BASS 1	547 SLOW VIOLA	597 BRIGHT HARP 2
448 FAST GUITAR HRMNX	498 DARK SLAP BASS 2	548 VIOLA VIBRATO	598 DARK HARP 1
449 SLOW GUITAR HRMNX	499 SOFT SLAP BASS 1	549 VIOLA /W	599 DARK HARP 2
450 GUITAR HRMNX RELEASE	500 SOFT SLAP BASS 2	550 BRIGHT VIOLA	600 HARP HARMONIC

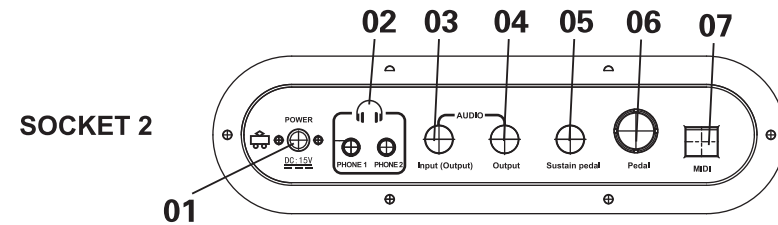 

◆ **WORKING VOLTAGE:** Input voltage range DC 15V. (PIC 01)

 
◆ **HEADPHONE INPUT:** Connect headphone plug into phone jack in the rear of piano. Now the internal speakers are automatically switched off, use of headphone in performance doesn't interfere with anybody else, suiting personal monitor and exercising at night. (PIC 02)

◆ **AUDIO INPUT:** Please use audio cable to insert the "audio input" to connect the mobile phone directly to play music, can use volume button to adjust the volume and make the piano and sound to pronounce at the same time, also can use the volume button to control the volume (PIC 03)

◆ **AUDIO OUTPUT:** Professional equipment output jack, the stereo can be output by sound equipment. (PIC 04)

◆ **SUSTAIN PEDAL:** socket only have sustain function (PIC 05)

◆ **FEET PEDAL:** LEFT-SOFT PEDAL: To decrease the keyboard volume by long-time stepping; middle-choose sustain pedal (sostenuto pedal); right-sustain pedal. (PIC 6)

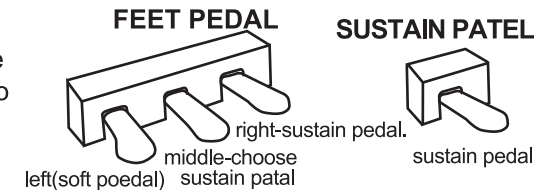

◆ **MIDI socket:** Using USB cable to connect computer, phone or iPad, then open the right App to transfer and receive MIDI signal. (PIC 7)

◆ **INSERT TWO SPEAKER WITH HIGH QUALITY:** Using the effect of sound of the local speaker also can let the user indulge in the wonderful sound and music

SYSTEM RATED POWER : 30W(2*15W)4Ω

TONES LIST

001 GRAND PIANO 1	051 STR SYN 1	101 BRIGHT FX
002 BRIGHT PIANO 1	052 STR SYN 2	102 GOBLIN FX
003 PIANO ELEC	053 CHOIR AAHS 1	103 ECHO FX
004 HONKY-TONK	054 VOICE OOHs 1	104 SCI-FI FX
005 E PIANO1	055 VOICE SYN	105 SITAR 1
006 E PIANO2	056 ORCH HIT 1	106 BANJO 1
007 GRAND HARPSICHORD	057 TRUMPT 1	107 SHAMISEN 1
008 CLAVI CHORD 1	058 TROMBONE 1	108 KOTO 1
009 CELESTA	059 TUBA 1	109 KALIMBA
010 GLOCKENSPIEL 1	060 MUTE TPT 1	110 BAGPIPE
011 MUSIC BOX 1	061 FR HORN 1	111 FIDDLE
012 VIBRAPHONE 1	062 BRASS SECT 1	112 SHANAI
013 MARIMBA 1	063 BRASS SYN 1	113 TINKLE BELL
014 XYLOPHONE 1	064 BRASS SYN 2	114 AGOGO
015 TUBULR BELLS 1	065 SAX SOPRANO	115 STEEL DRM
016 DULCIMER 1	066 SAX ALTO 1	116 WOODBLK
017 HAND ORGAN 1	067 SAX TENOR 1	117 TAIKO DRM
018 PERCHY ORGAN 1	068 SAX BTONE 1	118 MLDY TOM
019 ROCK ORGAN	069 OBOE 1	119 SYNTH DRM
020 CHURCH ORGAN 1	070 ENG HORN 1	120 REVRS CYM
021 REED ORGAN 1	071 BASSON 1	121 GTR NOISE
022 ACCORDN 1	072 CLARINET 1	122 BREATH 1
023 HARMONICA 1	073 PICCOLO 1	123 SEASHORE
024 TANGO ACCORDN 1	074 FLUTE 1	124 BIRD TWEET 1
025 GUITAR NYLON 1	075 RECORDER 1	125 TELEPHONE
026 GUITAR STEEL 1	076 PAN FLUTE	126 HELICOPTER
027 GUITAR JAZZ 1	077 BOTTLE BLOWN	127 APPLAUSE
028 GUITAR CLEAN 1	078 SHAKHACHI	128 GUNSHOT 1
029 GUITAR MUTED 1	079 WHISTLE 1	129 GRAND PIANO2
030 GUITAR OVRDRV	080 OCARINA	130 GRAND PIANO3
031 GUITAR DISTRT 1	081 SQR WAVE	131 GRAND PIANO4
032 GUITAR HRMNX	082 SAW TOOTH	132 GRAND PIANO /W 1
033 ACOUSTIC BASS 1	083 CALLIOPE	133 GRAND PIANO /W 2
034 FINGER BASS 1	084 CHIFF	134 GRAND PIANO /W 3
035 ELECT BASS 1	085 CHARANG	135 BRIGHTNESS PIANO 1
036 FRETLS BASS	086 VOICE	136 BRIGHTNESS PIANO 2
037 SLAP BASS 1	087 FIFTHS	137 BRIGHTNESS PIANO 3
038 SLAP BASS 2	088 BASS LEAD	138 GRAND PIANO DARK 1
039 SYN BASS 1	089 NEW AGE	139 GRAND PIANO DARK 2
040 SYN BASS 2	090 WARM PAD	140 VELOCITY CROSS PIANO 1
041 VIOLIN 1	091 POLY SYNTH	141 VELOCITY CROSS PIANO 2
042 VIOLA 1	092 CHOIR PAD 1	142 SOFT GRAND PIANO 1
043 CELLO 1	093 BOW GLASS 1	143 SOFT GRAND PIANO 2
044 CONTRABASS 1	094 METAL PAD 1	144 SOFT GRAND PIANO 3
045 STR TREM 1	095 HALO PAD 1	145 STEREO BRIGHT PIANO
046 STR PIZZ	096 SWEEP	146 BRIGHT PIANO 2
047 HARP 1	097 RAIN FX	147 BRIGHT PIANO 3
048 TIMPANI 1	098 SNDTRK FX	148 BRIGHT PIANO 4
049 STRINGS 1	099 CRYSTAL FX	149 BRIGHT PIANO 5
050 STRINGS 2	100 ATMOSPH FX	150 BRIGHT PIANO /W 1

TONES LIST

201 SOFT HARPSICHORD 2	251 SLOW XYLOPHONE	301 SOFT REED ORGAN	351 BIRGHT GUITAR NYLON
202 BRIGHT HARPSICHORD 1	252 TUBULR BELLS 2	302 HARD REED ORGAN	352 DARK GUITAR NYLON
203 BRIGHT HARPSICHORD 2	253 TUBULR BELLS 3	303 JAZZ REED ORGAN	353 GUITAR NYLON HARMONIC 1
204 DARK HARPSICHORD 1	254 TUBULR BELLS 4	304 ACCORDN 2	354 GUITAR NYLON HARMONIC 2
205 DARK HARPSICHORD 2	255 SYN TUBULR BELLS	305 ACCORDN 3	355 GUITAR NYLON /W 1
206 HARD HARPSICHORD 1	256 TUBULR BELLS DARK	306 ACCORDN 4	356 GUITAR NYLON /W 2
207 HARD HARPSICHORD 2	257 DULCIMER 2	307 ACCORDN 5	357 GUITAR NYLON FAST
208 CLAVI CHORD 2	258 DULCIMER 3	308 DISTRT ACCORDN	358 GUITAR NYLON SLOW
209 CLAVI CHORD 3	259 SANTUR	309 BRIGHT ACCORDN	359 HARD GUITAR NYLON
210 CLAVI /W	260 HAND ORGAN 2	310 ACCORDN HARMONIC	360 SOFT GUITAR NYLON
211 BRIGHT CLAVI	261 HAND ORGAN 3	311 ROCK ACCORDN	361 GUITAR STEEL 2
212 DARK CLAVI	262 SOFT HAND ORGAN	312 SWEET ACCORDN	362 GUITAR STEEL 3
213 PERCHY CLAVI	263 BRIGHT SOFT HAMND ORGAN	313 DARK ACCORDN	363 GUITAR STEEL 4
214 BRIGHT CELESTA	264 HAMND ORGAN DETUNED	314 FAST ACCORDN	364 VELOCITY CROSS GUITAR STEEL
215 SHORT CELESTA	265 PERCHY ORGAN 2	315 SLOW ACCORDN	365 DARK GUITAR STEEL
216 PERCHY CELESTA	266 PERCHY ORGAN 3	316 HARMONICA 2	366 BRIGHT GUITAR STEEL
217 DUET CELESTA	267 BRIGHT PERCHY ORGAN	317 HARMONICA 3	367 GUITAR STEEL HARMONIC 1
218 CELESTA HARMONIC	268 DISTRT PERCHY ORGAN	318 HARMONICA 4	368 GUITAR STEEL HARMONIC 2
219 GLOCKENSPIEL 2	269 ROTART ORGAN	319 HARMONICA 5	369 HARD GUITAR STEEL
220 GLOCKENSPIEL 3	270 SLOW ROTART ORGAN	320 SWEET HARMONICA	370 SOFT GUITAR STEEL
221 GLOCKENSPIEL 4	271 1960 ROCK ORGAN	321 DISTRT HARMONICA	371 FAST GUITAR STEEL
222 BRIGHT GLOCKENSPIEL	272 1980 ROCK ORGAN	322 SLOW HARMONICA	372 SLOW GUITAR STEEL
223 DARK GLOCKENSPIEL	273 BRIGHT ROCK ORGAN	323 FAST HARMONICA	373 VELOCITY GUITAR STEEL
224 GLOCKENSPIEL /W 1	274 DARK ROCK ORGAN	324 BRIGHT HARMONICA	374 GUITAR STEEL REALSE
225 GLOCKENSPIEL /W 2	275 SOFT ROCK ORGAN	325 DARK HARMONICA	375 GUITAR STEEL /W 1
226 MUSIC BOX 2	276 CHURCH ORGAN 2	326 SOFT HARMONICA	376 GUITAR STEEL /W 2
227 MUSIC BOX 3	277 CHURCH ORGAN 3	327 HARMONICA /W 1	377 GUITAR JAZZ 2
228 MUSIC BOX 4	278 CHURCH ORGAN 4	328 HARMONICA /W 2	378 GUITAR JAZZ 3
229 TOY MUSIC BOX	279 CHURCH ORGAN 5	329 HARMONICA MUTED	379 GUITAR JAZZ 4
230 BRIGHT MUSIC BOX	280 CHURCH ORGAN 6	330 TANGO ACCORDN 2	380 GUITAR JAZZ 5
231 DARK MUSIC BOX	281 CHURCH ORGAN /W 1	331 TANGO ACCORDN 3	381 DARK GUITAR JAZZ
232 VIBRAPHONE 2	282 CHURCH ORGAN /W 2	332 1960 TANGO ACCORDN	382 BRIGHT GUITAR JAZZ
233 VIBRAPHONE 3	283 BIRGHT CHURCH ORGAN 1	333 1980 TANGO ACCORDN	383 SOFT GUITAR JAZZ
234 SYN VIBRAPHONE	284 BIRGHT CHURCH ORGAN 2	334 BRIGHT TANGO ACCORDN	384 HARD GUITAR JAZZ
235 HARD VIBRAPHONE	285 DARK CHURCH ORGAN 1	335 DARK TANGO ACCORDN	385 GUITAR JAZZ VELOCITY
236 VIBRAPHONE /W 1	286 DARK CHURCH ORGAN 2	336 SOFT TANGO ACCORDN	386 GUITAR JAZZ RELEASE
237 VIBRAPHONE /W 2	287 SOUL CHURCH ORGAN	337 HARD TANGO ACCORDN	387 GUITAR JAZZ HARMONIC
238 VIBRAPHONE SOFT	288 CHURCH ORGAN HARMONIC	338 TANGO ACCORDN /W 1	388 SOFT GUITAR JAZZ
239 MARIMBA 2	289 CHURCH ORGAN SLOW	339 TANGO ACCORDN /W 2	389 GUITAR JAZZ /W 1
240 MARIMBA /W	290 CHURCH ORGAN FAST	340 SLOW TANGO ACCORDN	390 GUITAR JAZZ /W 2
241 DARK MARIMBA	291 SOFT CHURCH ORGAN	341 FAST TANGO ACCORDN	391 GUITAR CLEAN 2
242 BRIGHT MARIMBA	292 REED ORGAN 2	342 GUITAR NYLON 2	392 GUITAR CLEAN 3
243 DUTED MARIMBA	293 REED ORGAN 3	343 GUITAR NYLON 3	393 GUITAR CLEAN 4
244 DARK MARIMBA	294 REED ORGAN 4	344 GUITAR NYLON 4	394 GUITAR CLEAN 5
245 XYLOPHONE 2	295 REED ORGAN 5	345 GUITAR NYLON 5	395 VELOCITY CLEAN GUITAR
246 XYLOPHONE 3	296 BRIGHT REED ORGAN	346 GUITAR NYLON 6	396 DUTED CLEAN GUITAR
247 VELOCITY CROSS XYLOPHONE	297 DARK REED ORGAN	347 GUITAR NYLON 7	397 BRIGHT CLEAN GUITAR
248 DISTRT XYLOPHONE	298 REED ORGAN /W	348 GUITAR NYLON RELEASE	398 CLEAN GUITAR HARMONIC
249 BRIGHT XYLOPHONE	299 FAST REED ORGAN	349 VELOCITY CROSS RUITAR	399 CLEAN GUITAR /W 1
250 FAST XYLOPHONE	300 SLOW REED ORGAN	350 DETUNED GUITAR NYLON	400 CLEAN GUITAR /W 2

FAULT	PROBABLE REASON AND SOLUTION:
1.The power is turned on or off with noise ;	1.This is normal because the current enters the piano .
2.When using telephone,there have some noise.	2.Please turn off the phone or keep it away when using thepiano to avoid making radiation .
3.Haven't any sound when you play the keyboard or songs .	3.Please check PHONES/OUTPUT jack if connection other equipment or not ,for example, earphone .
4.The tone is not correct or volume is too low (down).	4.Please check these settings : Main Volume ,Dual Tone Balance.
5.The sound of the tone or rhythm is abnormal.	5.Alternating Current is a bit low .
6. Some tones are of distortion .	6.The volume should be on less than 3/4 .
7.The accompaniment is incorrect	7.Confirm the accompaniment volume is at a suitable level .
8. It seems all tones work, or tones are cut off.	8.Total 81 notes of the piano work alternately, no effects, 128 polyphony if using the dual tone mode, at the same time, the accompaniment or music is playing, then some of the tones or sound will be lacked.

1 AC ADAPTOR ⚠️ **WARNING**

Misuse of the AC adapter has the danger of fire and electric shock.

- Use dedicated AC adapter.
- AC power's output voltage must be within the rated voltage.
- NO twist or pull on the power cord.
- Danger for wet hands on AC adapter
- Use only by adults, dangerous for children

2 ABNORMALITIES ⚠️ **WARNING**

Smoke, odor, or over-heated indicate danger of fire or electric shock. Hurry up.

- 1 Turn off the power.
- 2 Remove AC adapter
- 3 Contact your dealer

- The alternating current transformer will get hot when using for a long time. It is a normal phenomenon but not a failure.
- The built-in functions are tremendous and they often fail to response. Please turn off the power and turn on again and it will work properly.

IPHONE CONNECTION:

POP PIANO CONNECTION:

1. Download POP PIANO.
2. Use cable to insert midi jack with mobile phone,then open POP piano choose any music and enter to choose play piano.

GARAGEBAND CONNECTION:

1. Open garageband app,pls download it if your don't have garageband app.
2. Use cable to insert midi jack.
3. Open garageband app to click setting icon in upper right

TAN8 ,PERFECT PIANO CONNECTION:

1. Download TAN8 or PERFECT PIANO.
2. Use cable to insert midi jack.
3. First ,connect garageband ,then open TAN 8 or PERFECT PIANO app can used it.

ANDROID PHONE CONNECTION:

POP PIANO CONNECTION:

1. Download POP PIANO.
2. OPEN POP PIANO choose any music and enter to choose play piano.

BLUETOOTH CONNECTION:

1. Bluetooth MIDI connection: Turn on the Bluetooth function of the mobile phone, turn on the app and select settings, select Bluetooth connection, then you can use it directly, or connect the MIDI interface with a data cable.
2. Turn on the Bluetooth of the mobile phone, and choose paired electric piano Bluetooth, after matching successfully, you can play mobile phone music.