 




# FESLEY FEP760 DIGITAL PIANO

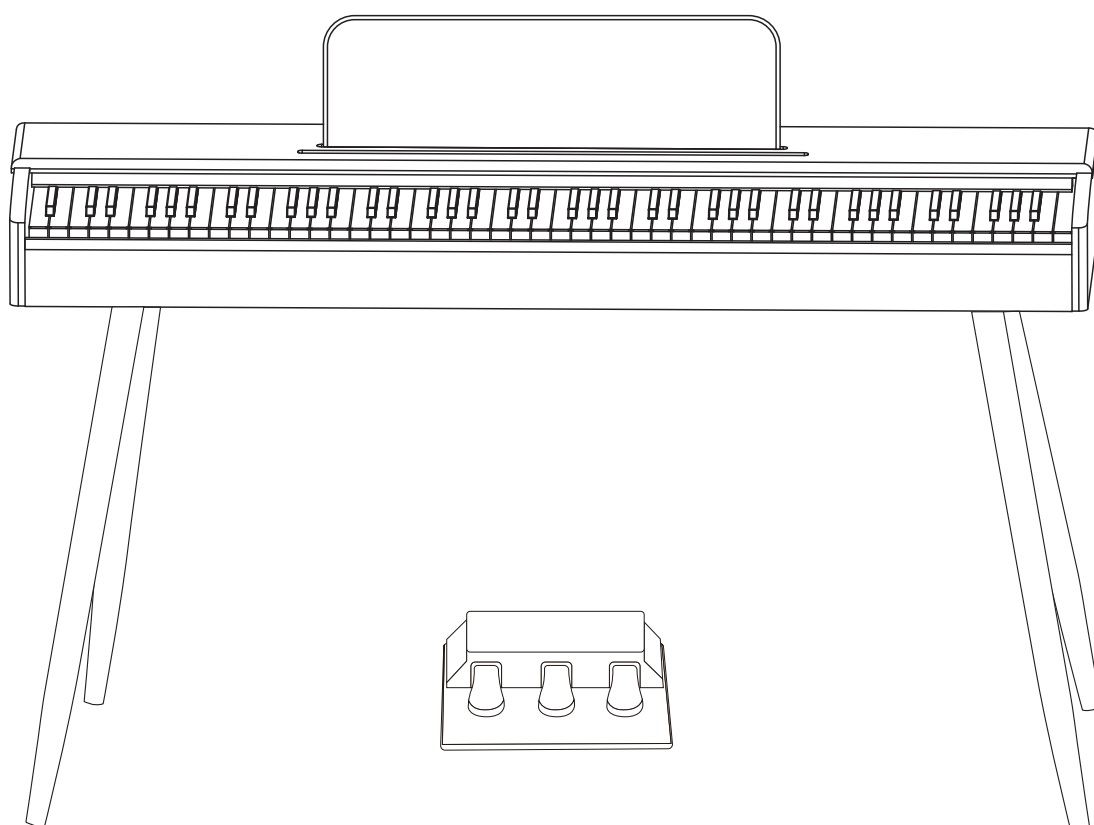



## Welcome To Use Fesley Digital Piano

- Thank you for your purchase of Fesley digital keyboard. This digital keyboard is elegant and refined. combined perfectly with the handle and timbre of traditional keyboards and the latest electronic technology of the present age.
- Before using this musical instrument, you should read this manual book in detail. please keep all user files properly as to look up when needed in days to come



### Bluetooth MIDI and Bluetooth Audio

You can connect to the Fesley electric piano using the "Audio MIDI" setting and the "Bluetooth MIDI device"



### Headphone Jack

External dual headphone jacks make it easy to play without affecting others.



### Instrument Parameters

Keys: 88 keys	Pitch: $\leq 3$ cents
Register : A2 ~ C5	Output power : $\geq 4\Omega/6 W \times 2$
Style: desktop piano	Power supply parameters : AC 220V 50Hz

- Sound effect control、 Synchronized start
- Dual headphone audio output
- Demo Song: 30 songs
- Rhythm: 128 rhythms
- Tone: 128 tones
- Connection: USB、 MIDI、 Headphones、 Audio Output

### Attention !

- This product is an electronic electro-acoustic musical instrument product, after powering on the speaker or headphones have a little current sound is a normal phenomenon. Please stayaway from "radio, television, antenna receiver, router, refrigerator, television, electrical appliances with motor and other sources of RF electrical interference" during use.



# Installation Guide

 
## REMARKS !

- This product must be installed by an adult. It is not intended for independent installation by minors. Please carefully review the "safety precautions" section in the user manual prior to use.
- The installation diagram provided is solely applicable to the wooden underframe version. Please refer to the respective installation diagrams for other types of underframes.

# 01

## INSTALLATION OF WOODEN TRIPOD:

- Firstly, lock the bottom frame screws according to the direction of the arrow.
- Next, place the digital piano on the bottom frame and lock the fixing screw.
- Finally, insert the music score frame into the card slot.

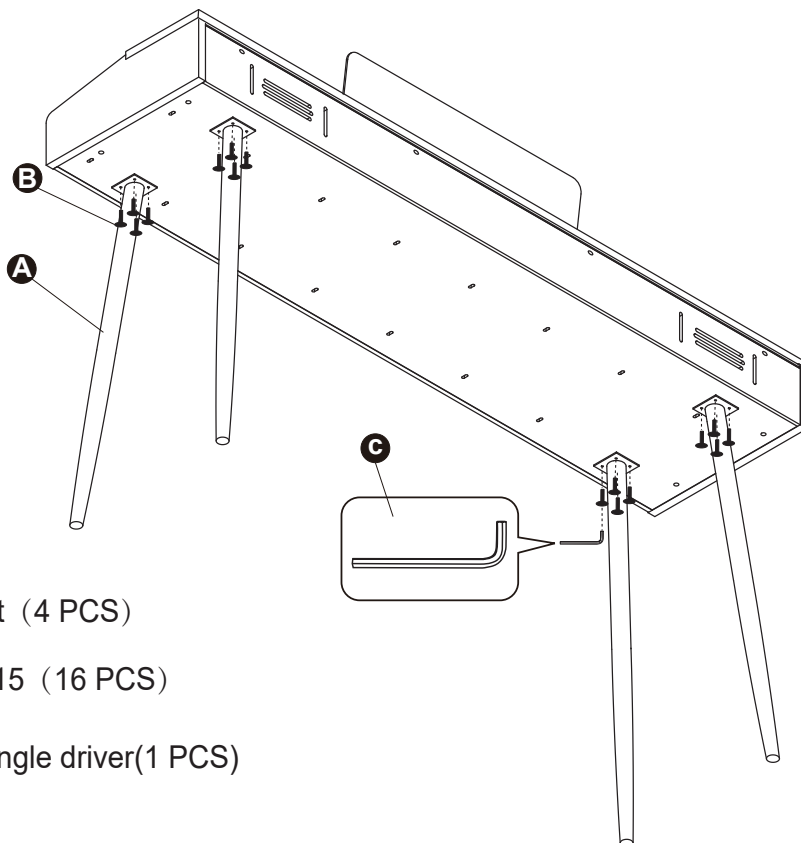


- A** Iron bracket (4 PCS)
- B** Screw M6\*15 (16 PCS)
- C** Inner Six-angle driver(1 PCS)

# 02
 
## Placing the pedal and inserting the connection cable


- Please insert the connection cable in place to avoid poor contact and insert it correctly as shown in the diagram.

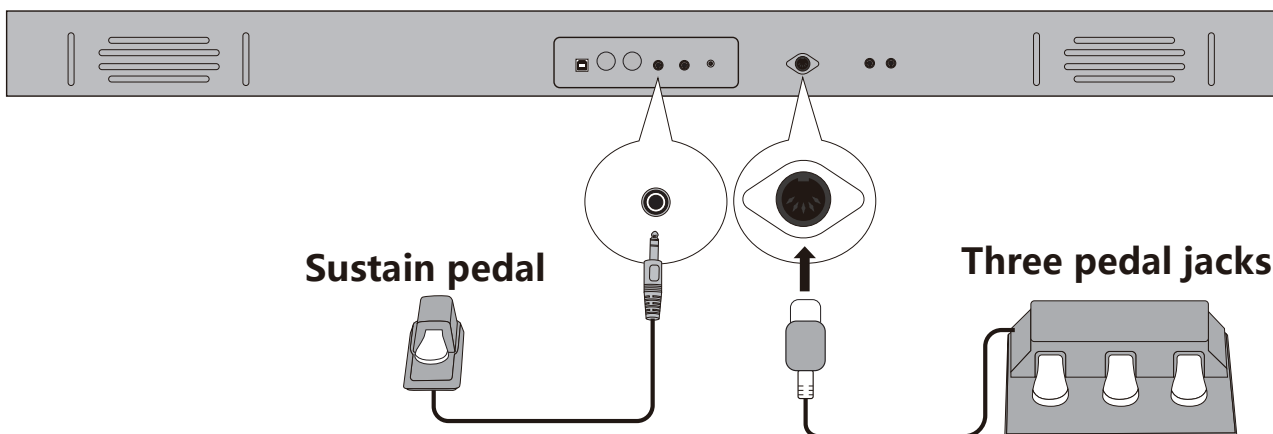



## Rear side panel of the body
 
### Socket Panel

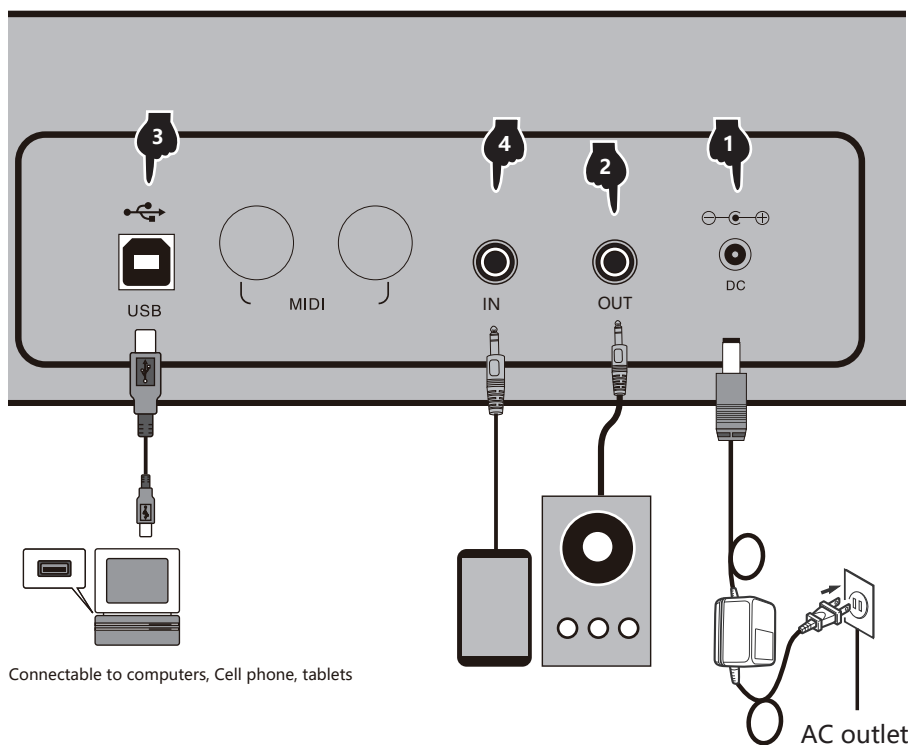

#### 1 Power cord connection

1. Plug in the power cord as shown in the diagram, one end into the power port of the drum box, and the other end into a 100-240V household power outlet (Figure 1)
2. When the product is not used for a long time, please unplug the power cord and store it properly.

#### 2 OUT

Can be connected to audio, speakers, amplifiers, etc. (Figure 2)

#### 3 USB transmission interface

Use the USB transfer interface of this digital piano to connect to your computer. Through the music software pre-installed on the computer, you can learn or play the keyboard to perform, compose, store and other functional operations. The edited music and the built-in accompaniment of the music software can be connected to the digital piano through the software for playing or performing according to the accompaniment music. (Figure 3)

#### 4 IN

 
The audio input socket connects the external sound source to the electric piano for playback. (Figure 2)

#### 5 Bluetooth MIDI

Ability to play games, MP3 songs, etc. via Bluetooth MIDI connection to APP (optional)



# Operation Guide

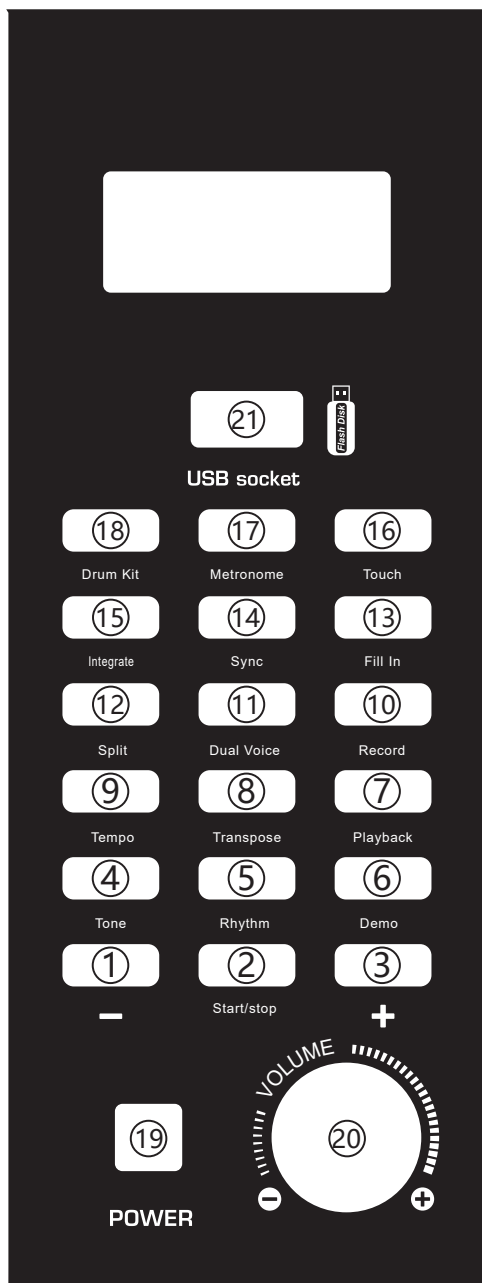

## 1 On/Off

Press the <Power> button to turn on the volume power, and press it again to turn it off. (Figure 19)

## 2 Volume

Turn the <Volume> knob to adjust the volume level. (Figure 20)

## 3 Tone selection

1. Find the timbre you need in the timbre table and remember its timbre number
2. Press the Tone button to enter Tone mode. (Figure 4)
3. Select the desired tone by selecting the "+" "-" keys, the tone numbers are (000-127). (Figure 1~Figure 3)

## 4 Rhythm selection

1. Press the rhythm key to enter the rhythm mode. (Figure 5)
2. Select the desired rhythm by choosing the "+" "-" keys, the rhythm number is (000-127). (Figure 1~Figure 3)
3. Press the "Start/Stop" key to start playing the rhythm. (Figure 2)
4. Press "Start/Stop" again to stop playback. (Figure 2)

## 5 Demonstration song selection

1. Press the Demo button to enter the Demo Song mode. (Figure 6)
2. Select the desired demonstration tune by choosing the "+" "-" keys with the rhythm numbers (000-029) (Figure 1~Figure 3).
3. Press "Start/Stop" to start playing the demo song. (Figure 2)
4. Press "Start/Stop" again to stop playback. (Figure 2)

## 6 Drum Kit

1. Press the "Drum Kit" key to enter the keyboard drum mode, the keyboard changes to percussion.
2. Press the "Drum Kit" key again to exit this mode. (Figure 18)

## 7 Metronome

1. Press the "Metronome" button to start playing the metronome.
2. Long press the "Metronome" key, and then press the "+" and "-" keys to switch the metronome type. (Figure 1~Figure 3)
3. Press "Metronome" again to turn off the metronome.

## 8 Touch

1. Press the "Touch" button several times to select different strength modes. (Figure 16)
2. When the screen shows "off", the intensity is turned off and the keys have no intensity.

## 9 Integrate

1. Press the "Integrate" key to open the left chord keyboard. (Figure 15)
2. Press the "Integrate" button again to close the composite chord.



# Operatio Guide

## 10 Sync

1. With the chord on, press the "Sync" button to turn on the synchronization function. (Figure 14)
2. Play the left hand chord area chord at this point and the accompaniment changes back to start playing automatically.

## 11 Fill In

Press "Fill In" in the rhythm playback status to start playing the inserted rhythm. (Figure 13)

## 12 Split

1. Use the dual keyboard to assign two different tones to the two ends of the keyboard, so you can play one tone with your left hand and another tone with your right hand.
2. Select a tone as the primary tone and press the "Split" key to enter the dual keyboard mode.
3. Then switch the tones and select one as the second tone.
4. Press the "Split" key again to exit the dual keyboard mode. (Figure 12)

## 13 Dual Voice

1. First enter the tone mode, select an instrument as the main tone.
2. Then press the "Dual Voice" button to enter the second tone selection mode. (Figure 11)
3. Use the "+" and "-" keys to select another instrument as the second tone. (Figure 1~Figure 3)
4. The effect of playing this time is that the two tones blend together.

## 14 Record/Playback

1. Press the "Record" button to enter the recording mode. (Figure 10)
2. At this time, play the keyboard to start recording.
3. After playing, press "Playback" key to start playing back the recording. (Figure 7)

## 15 Tempo

1. Press the "tempo" button to enter the speed adjustment interface. (Figure 9)
2. Then press the "+" "-" key to adjust the speed. (Figure 1~Figure 3)
3. Speed range is: 30-300

## 16 Transpose

1. Press the "Transpose" key to enter the shift interface. (Figure 8)
2. Then press "+" "-" key to change the key. (Figure 1~Figure 3)
3. Shift range is:  $\pm 12$

## 17 MP3 Players

1. insert the downloaded songs U disk, a few seconds after the piano play U disk songs, U disk inserted state, press the "start / stop" key can pause and continue to play MP3. (Figure 21 ~ Figure 2)
2. short press the "+" key to play the next song, long press the "+" key to add volume. (Figure 1 ~ Figure 3)
3. short press "-" key to play the previous song, long press "-" key for the volume keys. (Figure 1~Figure 3)



## Demo Song

---

No.	Name
0	Jasmine flowers
1	Why are the flowers so red
2	Liang Zhu
3	Into the New Era
4	The Girl of Alishan
5	Qinghai-Tibet Plateau
6	Where the peach blossoms are in full bloom
7	The Meeting of Ovoo
8	Liu Yang River
9	The Curved Moon
10	Childhood
11	Good Day
12	Come home often
13	Grassland Night
14	Joyful
15	Sweetness
16	Oh! Suzanne
17	ABC Alphabet Song
18	Moon River
19	Mary had a little sheep
20	Hotel in the Pacific
21	1900's Madness
22	Family Restaurant
23	Surf's Up Johnny
24	Sinbad Hands
25	New Paradise Land
26	Happy Birthday
27	Carmen Interlude
28	Short Song
29	Christmas Bells





## Rhythm Sheet

No. Rhythm Name	No. Rhythm name	No. Rhythm name
0 Club Pop	43 Show tune	86 Aural ballad
1 16-measure pop	44 Polka	87 Piano ballad
2 8-beat pop	45 Waltz	88 Rhythm and blues ballad
3 8-beat soul	46 Cha-cha-cha	89 Rock ballad
4 8-beat rock	47 Rumba	90 Slow and light
5 Rap pop	48 Rock tongue twister	91 Similar ballad song
6 Pop-rock	49 Bullfighting	92 Mighty Pop
7 60's soul	50 Samba 1	93 Sporty Song 1
8 70's soul	51 Samba 2	94 Sporty 2
9 Funk	52 Rock style 1	95 Funk disco
10 16-tempo slide	53 Rock tune 2	96 Saturday night song
11 Twist	54 Foxtrot	97 Club Latin
12 Brit-pop	55 Round dance	98 Disco Chocolate
13 Hard Rock	56 Argentine Tango	99 Disco Foxtrot
14 Fusion Jazz	57 Italian style tango	100 Disco Funk
15 Funk Slide	58 Bossa Nova	101 Disco Domination
16 Fusion Slide	59 Mambo 1	102 Disco Ball
17 Light and fast rock 1	60 Mambo 2	103 Disco Samba
18 Light and fast rock 2	61 Bolero	104 Britpop
19 Hot Rock	62 Cumbia	105 Club Dance
20 Jazz Rock	63 Latin Rock	106 Modern Rhythm and Blues
21 Fast Gospel Music	64 Disco Latin	107 Melancholy Foxtrot
22 Polka Rock	65 Tijuana	108 Charleston
23 Rockabilly	66 Reggae	109 Disco pop
24 Rockin' Boogie	67 Salsa	110 Disco soul
25 Rock Cha Cha	68 Indian Improvisation	111 Disco Style
26 Rock Classical	69 Godlop Island Dance	112 Eurobeat
27 Rock Slide	70 Reggae in 12 beats	113 Rap
28 Rockabilly Pop	71 Reggae 16 beat	114 Wild Dance
29 Early polka	72 Slow Rock 1	115 Big Band Slide 1
30 Polka pop	73 Slow rock 2	116 Big Band Slide 2
31 Slow blues 1	74 Slow Rock 3	117 Big Band Slide 3
32 Slow Blues 2	75 Soul	118 Fast Speed Big Band 1
33 Slow blues 3	76 Adria 8-measure	119 Fast Speed Big Band 2
34 Pop waltz	77 Classical piano ballad	120 Wild Style Pop
35 Americana march	78 Unplugged Band	121 American Southern Jazz
36 March style	79 Rock ballad	122 Popular jazz
37 Tarantino	80 Pop New Age	123 Jazz Big Band
38 Jailhouse Rock	81 Modern 8-beat	124 Jazz club
39 Swinging Waltz	82 Country ballad	125 Reggae
40 Piano Bar	83 Love Songs	126 Country 1
41 Jazz Waltz 1	84 Modern urban pop	127 Country 2
42 Jazz Waltz 2	85 Electronic pop	



## Tone Chart

---

### Piano

- 0 Acoustic Grand Piano
- 1 Bright Acoustic Piano
- 2 Electric Grand Piano
- 3 Honky-tonk Piano
- 4 Rhodes Piano
- 5 Chorused Piano
- 6 Harpsichord
- 7 Clavichord

### Color percussion instruments

- 8 Celesta
- 9 Glockenspiel
- 10 Music box
- 11 Vibraphone
- 12 Marimba
- 13 Xylophone
- 14 Tubular Bells
- 15 Dulcimer

### Wind organ

- 16 Hammond Organ
- 17 Percussive Organ
- 18 Rock Organ
- 19 Church Organ
- 20 Reed Organ
- 21 Accordion
- 22 Harmonica
- 23 Tango Accordion

### Guitars

- 24 Acoustic Guitar (nylon)
- 25 Acoustic Guitar (steel)
- 26 Electric Guitar (jazz)
- 27 Electric Guitar (clean)
- 28 Electric Guitar (muted)
- 29 Overdriven Guitar
- 30 Distortion Guitar
- 31 Guitar Harmonics

### Bass

- 32 Acoustic Bass
- 33 Electric Bass(finger)
- 34 Electric Bass (pick)
- 35 Fretless Bass
- 36 Slap Bass 1
- 37 Slap Bass 2
- 38 Synth Bass 1
- 39 Synth Bass 2

### Strings

- 40 Violin
- 41 Viola
- 42 Cello
- 43 Contrabass
- 44 Tremolo Strings
- 45 Pizzicato Strings
- 46 Orchestral Harp
- 47 Timpani

### Ensemble / Chorus

- 48 String Ensemble 1
- 49 String Ensemble 2
- 50 Synth Strings 1
- 51 Synth Strings 2
- 52 Choir Aahs
- 53 Voice Oohs
- 54 Synth Voice
- 55 Orchestra Hit

### Brass

- 56 Trumpet
- 57 Trombone
- 58 Tuba
- 59 Muted Trumpet
- 60 French Horn
- 61 Brass Section
- 62 Synth Brass 1
- 63 Synth Brass 2

### Reed pipe

- 64 Soprano Sax
- 65 Alto Sax
- 66 Tenor Sax
- 67 Baritone Sax
- 68 Oboe
- 69 English Horn
- 70 Bassoon
- 71 Clarinet

### Flute

- 72 Piccolo
- 73 Flute
- 74 Recorder
- 75 Pan Flute
- 76 Bottle Blow
- 77 Shakuhachi
- 78 Whistle
- 79 Ocarina



## Synthetic lead

- 80 Lead 1 (square)
- 81 Lead 2 (sawtooth)
- 82 Lead 3 (caliope lead)
- 83 Lead 4 (chiff lead)
- 84 Lead 5 (charang)
- 85 Lead 6 (voice)
- 86 Lead 7 (fifths)
- 87 Lead 8 (bass+lead)

## Synthetic Tones

- 88 Pad 1 (new age)
- 89 Pad 2 (warm)
- 90 Pad 3 (polysynth)
- 91 Pad 4 (choir)
- 92 Pad 5 (bowed)
- 93 Pad 6 (metallic)
- 94 Pad 7 (halo)
- 95 Pad 8 (sweep)

## Synthesis effect

- 96 FX 1 (rain)
- 97 FX 2 (soundtrack)
- 98 FX 3 (crystal)
- 99 FX 4 (atmosphere)
- 100 FX 5 (brightness)
- 101 FX 6 (goblins)
- 102 FX 7 (echoes)
- 103 FX 8 (sci-fi)

## Folk Instruments

- 104 Sitar
- 105 Banjo
- 106 Shamisen
- 107 Koto
- 108 Kalimba
- 109 Bagpipe
- 110 Fiddle
- 111 Shanai

## Percussion instruments

- 112 Tinkle Bell
- 113 Agogo
- 114 Steel Drums
- 115 Woodblock
- 116 Taiko Drum
- 117 Melodic Tom
- 118 Synth Drum
- 119 Reverse Cymbal

## Sound effects

- 120 Guitar Fret Noise
- 121 Breath Noise
- 122 Seashore
- 123 Bird Tweet
- 124 Telephone Ring
- 125 Helicopter
- 126 Applause
- 127 Gunshot



## PRODUCT MAINTENANCE

Careful maintenance and protection of this product play an important role in prolonging the the service life of the product and reducing the failure.

### **1 AVOID HEATING, DAMPNES, OR DIRECT SUNLIGHT**

Do not over-expose the product to direct sunlight, or place it near air conditioning or extremely hot place.

### **2 DO NOT USE NEAR THE TV OR RADIO**

This product may cause video or audio interference to the reception of TV and radio. If this happens, the product should be removed from the TV or radio.

### **3 NO DILUENTS OR SIMILAR CHEMICALS SHOULD BE USED FOR CLEANING**

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

### **4 DO NOT SHAKE, AVOID COLLISION**

 
When moving, the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited to avoid damage to the shell or internal electronic components.



## SAFETY PRECAUTIONS

### POWER SUPPLY

This product can be powered by a standard indoor wall socket. Please only use the power cord equipped with this product. Be sure to turn off the power when not in use temporarily. When not in use for a long time, please unplug the power cord and keep it properly.

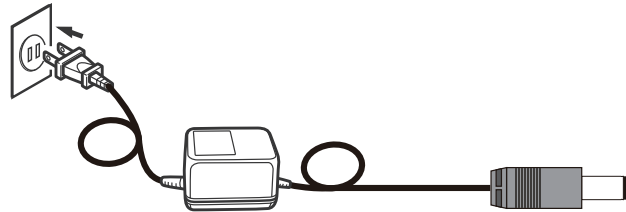

### SIGN

To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meanings are as follows:

#### **WARNING**

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.

#### **BE CAREFUL**

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

### EXAMPLE OF LOGO



This triangle sign ( $\Delta$ ) indicates what users should pay attention to. (The left example is careful shocks)



A circular sign ( $\ominus$ ) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (The example on the left is no disassembly)



The round black bottom sign ( $\odot$ ) indicates what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed. (The example on the left is that the power plug must be pulled out of the socket)



# SAFETY PRECAUTIONS

## WARNING




### Smoke, odor, overheating

When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually. In case of the above situation, the following operations should be performed immediately:



1. Turn off the power supply.
2. Pull the plug out of the power outlet.
3. Contact your dealer.


### Power cord


1. The improper use of power cord may cause fire and electric shock. The following precautions must be observed:


- The special power cord designated for this product must be used. 
- The AC power supply with output voltage within the rated voltage range for household use must be used. 
- Do not overload power sockets and extension lines. 


2. The improper treatment of power line will lead to its damage or breakage, which will cause fire and electric shock hazards. The following precautions must be observed:

- Do not place or heat heavy objects on power lines. 
- Do not attempt to alter or bend the power cord too much. 
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, please replace the same type of power cord.

3. Do not touch the power cord and plug with wet hands, otherwise there is a danger of electric shock. 



4. Please use the power cord where the water will not splash. Water is in danger of causing fire and electric shock. 

5. Never place vases or any other container containing water on this product. Water is dangerous of causing fire and electric shock. 


6. Do not allow minors to unplug and touch power lines or connection boards. Minors have no common sense of electricity safety, which may cause electric shock. 

## BE CAREFUL


The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- Never put the power cord near the oven or other heat source. 
- Do not pull the cable when pulling out of the power socket. The main body of the plug must be grasped.
- The power cord plug must be inserted in the socket to the end.
- Make sure the power supply is off before connecting or disconnecting it.
- When thunderstorms occur or before traveling or other long-term departure, disconnect the power cord from the wall outlet. 
- At least once a year, remove the power cord from the wall outlet and clean the dust accumulated around the plug.

### Do not burn this product


Do not put this product in the fire, otherwise it will lead to product combustion and explosion of internal electronic components, which will cause fire and personnel injury. 

### Water and foreign bodies

Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately: 

1. Turn off the power supply.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.

### Disassembly and transformation

Do not disassemble or transform the product in any way, otherwise there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your distributor. 



## SAFETY PRECAUTIONS

### Falling or colliding

If the product falls or is damaged by strong impact, it will be in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, you need to unplug it from the wall outlet.
3. Contact your distributor.



### Plastic bag

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young children should pay special attention to it.



### Keep a distance from the product and the bracket

Climbing the bracket is dangerous of overturning or damage. Families with young children should pay special attention to it.



### Put

Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall down, which will lead to the risk of injury.



### Product Mobility

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires. Otherwise, it will lead to damage of power or connection wires, resulting in fire and electric shock.



### clean

Before cleaning this product, you must unplug the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.



### Jack

The socket of this product can only be connected to the designated equipment and devices. Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.



### Location selection

It should be avoided to place the product in the following places, otherwise there is a risk of fire and electric shock.



- High temperature or dusty places.
- Kitchen or other places with lampblack.
- Where the product is exposed to direct sunlight, or any other place where the product will produce high temperature.

### Volume

Don't play music long and loud. Pay special attention when using headphones. Excessive volume can damage your hearing.



### Heavy

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing the product to overturn or drop objects on it, which will lead to the risk of injury.



### Correct assembly of scaffolds

The incorrect assembly of the bracket may overturn, causing the product to fall off and posing a risk of injury to personnel. Therefore, it must be assembled according to the instructions in the attached installation guide to ensure that the product is properly mounted on its bracket.



