



FESLEY
TO LEAD A NEW COOL

INSTRUCTION MANUAL

Fesley FEP880 Digital Piano

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage, or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

To connect directly with our Support team, please email
✉ support@fesleymusic.com

To connect directly with our Support team, please email
✉ support@fesleymusic.com

———— Welcome to Play Fesley Digital Piano ————

- ◆ Thank you for your purchase of this digital keyboard. This digital keyboard is elegant and refined combined perfectly with the handle and timbre of traditional keyboards and the latest electronic technology of the present age.
- ◆ Before using this musical instrument, you should read this manual book in detail. Please keep all user files properly so as to look up when needed in days to come.



Adopt French dream sound source

Its core uses the latest top sound source in France, and digital sampling brings you a realistic listening experience.



The 88-key progressive lever-weight keyboard

The 88-key progressive lever-weight keyboard gives you the real touch of playing on a grand piano.



Headphone jack

The external headphone jack is convenient for playing without affecting others.



 
Bluetooth MIDI connection

Turn on the Bluetooth function of the mobile phone, turn on the app and select Settings, select “ Fesley Piano ” bluetooth connection, then you can use it directly, or connect MIDI interface with data.




Triple pedal


Left-soft pedal to decrease the keyboard volume by long-time stepping;
Middle-choose sustain patal; Right-sustain pedal.

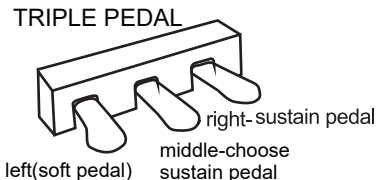


Function Introduction

 

- | | |
|--------------------|-------------------------|
| 1. POWER | 11. SELECT + |
| 2. VOLUME CONTROL | 12. SELECT - |
| 3. PLAY / STOP | 13. TONE |
| 4. CHORD | 14. TRANSPOSITION |
| 5. SYNCHRONIZATION | 15. METRONOME |
| 6. INSERT | 16. DUAL KEYBOARD |
| 7. VELOCITY | 17. KEYBOARD DRUM |
| 8. RHYTHM VOLUME | 18. DEMONS TRATION SONG |
| 9. RHYTHM | 19. SOUND RECORDING |
| 10. LCD DISPLAY | 20. PLAYBACK |

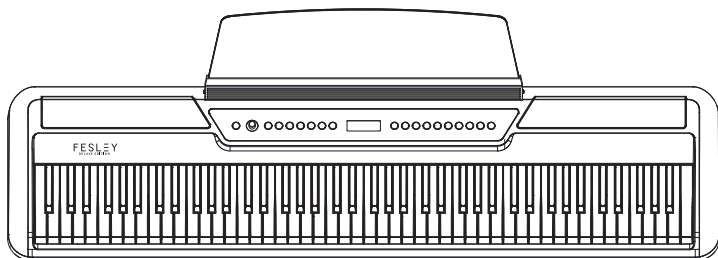 

 
(Our electric pianos do not include the X-stand)

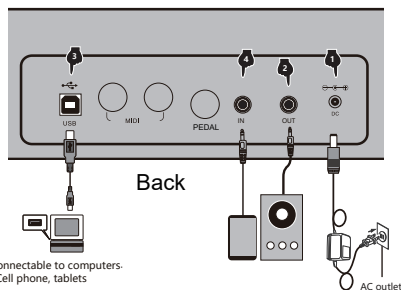

Back

Connectable to computers.
Cell phone, tablets

 AC outlet

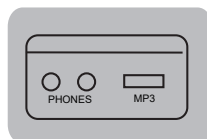

Front

OPERATION GUIDE

1 PIANO PERFORMANC

1. Press the "power" switch to the ON position, and the liquid product screen will light up to enter the performance state.
 2. Play music on the piano keyboard.
 3. Please turn off the power when not in use temporarily.
- The processor chip of this product is complex and similar to the computer system. Sometimes it can't respond. Please turn off the power switch and then turn it on to work normally.

2 MODULATION

Use the "Volume" adjusting knob to increase or decrease the piano volume. Please adjust the volume to a satisfactory position.

3 TIMBRE

1. Press the voice button to enter the voice mode
2. Press "Select+" "Select -" to adjust the voice and select the voice you want

4 RHYTHM

1. Press the rhythm key to enter the rhythm mode.
2. Press the "Start/Stop" key to start the rhythm.
3. Press "Select+" "Select -" to adjust the rhythm and select the rhythm you need

5 SYNCHRONIZATION

1. Start rhythm mode before synchronization
2. Press the synchronization key in the rhythm mode to enter the synchronous standby mode
3. Play the Thai chord (keys 1-22 on the left of the keyboard) to enter the partner Tai Yan Tai

6 SYNTHETIC CHORD

1. Start the synchronous playing mode before the chord starts.
2. Press the chord key to enter the keyboard chord mode
3. Play single-fingered chord and multi-fingered chord fingering

7 ACCOMPANIMENT VOLUME

1. Start the synchronous accompaniment performance mode before inserting the rhythm.
2. Press the insert key to start the inserted rhythm melody

8 TRANSPOSITION

1. Press the shift key to enter the shift adjustment mode
2. Press "Select+" "Select -" to adjust and select the tone you need

9 SPEED

1. Start the performance mode before adjusting the speed.
2. Press the "Speed" key to enter the speed adjustment mode.
3. Press "Select+" "Select -" to adjust and select the speed you need

10 METRONOME

1. Press the metronome key to enter the metronome mode
2. Press and hold the metronome key for 3 seconds to enter the metronome selection mode
3. Press "Select+" "Select -" to adjust and select the metronome beat you need

OPERATION GUIDE

11 DEMONSTRATION SONG

1. Press the demo key to enter the Qin performance mode
2. Press "Select+" "Select -" to adjust and select the demonstration track you need

12 KEYBOARD DRUM

1. Press the keyboard drum key to enter the keyboard drum mode
- 2 press the keyboard drum key to exit the keyboard drum mode

13 DUAL KEYBOARD

1. Press the dual keyboard key to enter the dual keyboard mode
- 2 press the dual keyboard key to exit the dual keyboard mode

14 SOUND RECORDING

1. Press the Record key to enter the recording mode. Play the Qin Qin Qin key to record notes. In the note recording mode, you can change the voice color to record.
2. Press the Record key again to stop recording

15 PLAY

1. After recording, press the recording key to stop recording, and then press the playback key to play the recorded note

16 ACCOMPANIMENT VOLUME

1. Start the Jietai performance function before adjusting the volume of Chantai
2. Press the Companion volume key to enter the Companion volume adjustment mode
3. Then press "Select+" "Select -" to adjust and select the Jietai volume you need

 
17 HIGH AND LOW TONE ADJUSTMENT

1. Press and hold the Jietai volume, and then press Select+- to adjust the bass
2. Press and hold the rhythm key, and then press Select+- to adjust the treble
3. The adjusted parameters will be saved all the time, not limited by the switch

Precautions

POWER SUPPLY

This product can be powered by a standard indoor wall socket. Please use only the power cord specified for this product. Be sure to turn off the power when not in use for a long time, and unplug the power cord and keep it properly when not in use for a long time.

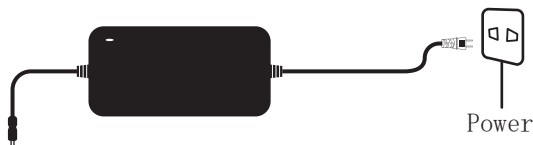

SIGN

In order to ensure that you use this product safely and correctly, and prevent harm to users and others as well as damage to property, this manual and the product are marked with a series of safety signs. Various signs and their meanings are as follows:

WARN

This sign indicates that if you ignore this sign and misoperate this product, there is a potential risk of death or serious injury.

SIGN EXAMPLE



This triangle sign (Δ) indicates the precautions that users should pay attention to. (The left example is to be careful of electric shock)



A circular sign with a slash (\ominus) indicates prohibited items. The figure in or next to the sign indicates the prohibited content. (The left example shows that disassembly is prohibited)



The black dot (\bullet) indicates the items that must be observed. The figure in this sign indicates the specific items that must be observed. (The left example shows that the power plug must be pulled out of the socket)

Appendix

SONG LIST

No.	SongName
001	MinutWlz
002	DJ Dance
003	Fountain
004	SpanGirl
005	SonataPn
006	SuperSng
007	LittlBee
008	HorseRac
009	Nocturne
010	TheSpain
011	BusyTran
012	Mexico
013	MozartPn
014	Minuet
015	Nifuma
016	Disco
017	FolkSong
018	Girl Sea
019	LittlStar
020	KindeGtn
021	Wahaha
022	Duck&Cik
023	Humorous
024	Joy Song
025	GoingHom
026	Dove
027	Auldlang
028	Moonligh
029	HapyBirh
030	PraiseSng
031	Dolly
032	Market
033	Family
034	A cradle
035	At Home
036	Seasons
037	YearsAgo
038	Pigeons
039	InnerVic
040	Violin
041	Swan
042	Musettes
043	GypsyRnd
044	Serenade
045	Polka
046	SoilPull
047	Trout
048	Send-off
049	March
050	ForElise
051	SwaniRiv
052	France
053	Danube
054	Hungary
055	Spaceman
056	Patriot

No.	SongName
057	Cuckoo
058	SingKite
059	TongChil
060	DaReMi
061	We Happy
062	LittlBee
063	Russia
064	Plaster
065	Folson
066	JingleBe
067	PaperBoy
068	Swallow
069	New Year
070	Edelweis
071	MoonRivr
072	Beyer 10
073	Beyer 20
074	Beyer 30
075	Beyer 40
076	Beyer 50
077	Beyer 60
078	Beyer 70
079	Beyer 71
080	Beyer 72
081	Beyer 75
082	Beyer 76
083	Beyer 77
084	Beyer 78
085	Beyer 79
086	Beyer 80
087	Beyer 90
088	Beyer 98
089	Beyer 99
090	Beyer 26
091	Beyer 27
092	Beyer 28
093	Beyer 29
094	Beyer 31
095	Beyer 106
096	Beyer 48
097	Beyer 52
098	Beyer 107
099	Beyer 18
100	Beyer 21
101	Beyer 23
102	Beyer 25
103	Beyer 36
104	Beyer 84
105	Beyer 88
106	Beyer 32
107	Beyer 35
108	Beyer 11
109	Beyer 16
110	Beyer 18

RHYTHM LIST

No.	Rhythm
001	8 Beat 1
002	8 Beat 2
003	8 Beat 3
004	8 Beat 4
005	8 Beat Heat
006	8 Beat Pop 1
007	8 Beat Pop 2
008	Ballad 1
009	Ballad 2
010	Guitar Ballad
011	Organ Ballad
012	Bluse Ballad
013	Epic Ballad
014	Rock Ballad
015	Slow Ballad
016	Pop Ballad
017	Electro Pop Ballad
018	Polk Ballad
019	16 Beat 1
020	16 Beat 2
021	16 Beat 3
022	16 Beat 4
023	16 Beat Funk
023	16 Beat Pop
025	16 Beat Ballad
026	Bossa Nova 1
027	Guitar Bossa
028	Pop Bossa
029	Tango
030	Cha Cha
031	Rhumba
032	TEX TEX
033	Gountry
034	Gountry Rock
035	Gountry Shuffle
036	Gountry Swing
037	Gountry Ballad
038	Gountry Waltz
039	50' s Rock
040	Heavy Metal
041	Rock 1
042	Rock 2
043	Soft Rock
044	Slow Rock
045	Hard Rock
046	Rock & Roll 1
047	Rock & Roll 2

048	Chicago Blues
049	Fast Gospel
050	Groove Soul
051	Rap
052	Gospel1S1
053	Blues
054	Slow Blues
055	Foxtrot
056	Disco Tropic
057	DiscoHands
058	Two Step
059	Polk Pop
060	Waltz 1
061	Waltz Pop 1
062	Waltz Pop
063	Rai
064	Twist 1
065	Twist 2
066	Miami Pop
067	Motom
068	Reggae
069	Swing Reggae
070	Mambo
071	Beguire
072	Musette
073	House
074	Slow Fox
075	Vienna Waltz
076	Salsa
077	Disco
078	Hip Hop Pop
079	Analog Pop
080	Blub Dance
081	Boogie
082	Funky Pop
083	Jazz Rock
084	Swing 1
085	Dixieland
086	Jazz Samba
087	March
088	US, March
089	Samba
090	Polka
091	Polka Ober
092	Tarantella
093	Slow Waltz
094	Ober Waltz
095	Piano Ballad
096	Waltz 2
097	Guitar Waltz
098	2/4 Piano 1
099	3/4 Piano 1
100	4/4 Piano 1

Timbre LIST

No.	Instrument
1	PIANO GRD
2	PIANO BRITE
3	PIANO ELEC
4	HONKY-TONK
5	E PIANO1
6	E PIANO2
7	HARPSCRD
8	CLAVI
9	CELESTA
10	GLOCKNSPL
11	MUSIC BOX
12	VIBRAPHONE
13	MARIMBA
14	XYLOPHONE
15	TUBULR BELLS
16	DULCIMER
17	HAMND ORG
18	PERC ORG
19	ROCK ORG
20	CHURCH ORG
21	REED ORG
22	ACCORDN 1
23	HARMONICA
24	ACCORDN 2
25	GTR NYLON
26	GTR STEEL
27	GTR JAZZ
28	GTR CLEAN
29	GTR MUTED
30	GTR OVRDRV
31	GTR DISTR
32	GTR HRMNX
33	ACOU BASS
34	FINGR BASS
35	PICK BASS
36	FRETLB BASS
37	SLAP BAS 1
38	SLAP BAS 2
39	SYN BASS 1
40	SYN BASS 2
41	VIOLIN
42	VIOLA
43	CELLO
44	CONTRABASS
45	STR TREM
46	STR PIZZ
47	HARP
48	TIMPANI
49	STRINGS 1
50	STRINGS 2
51	STR SYN 1
52	STR SYN 2
53	CHOIR AAHS
54	VOICE OOHs
55	VOICE SYN
56	ORCH HIT
57	TRUMPT
58	TROMBONE
59	TUBA
60	MUTE TPT
61	FR HORN
62	BRASS SECT
63	BRASS SYN 1

No.	Instrument
64	BRASS SYN 2
65	SAX SOPRANO
66	SAX ALTO
67	SAX TENOR
68	SAX BTONE
69	OBOE
70	ENG HORN
71	BASSON
72	CLARINET
73	PICCOLO
74	FLUTE
75	RECORDER
76	PAN FLUTE
77	BOTTLE BLOWN
78	SHAK-HACHI
79	WHISTLE
80	OCARINA
81	SQR WAVE
82	SAW TOOTH
83	CALLIOPE
84	CHIFF
85	CHARANG
86	VOICE LEAD
87	5TH LEAD
88	BASS LEAD
89	NEW AGE
90	WARM PAD
91	POLY SYNTH
92	CHOIR PAD
93	BOW GLASS
94	METAL PAD
95	HALO PAD
96	SWEEP
97	RAIN FX
98	SNDTRK FX
99	CRYSTAL FX
100	ATMOSPH FX
101	BRIGHT FX
102	GOBLIN FX
103	ECHO FX
104	SCI-FI FX
105	SITAR
106	BANJO
107	SHAMISEN
108	KOTO
109	KALIMBA
110	BAGPIPE
111	FIDDLE
112	SHANAI
113	TINKLE BELL
114	AGOGO
115	STEEL DRM
116	WOODBK
117	TAIKO DRM
118	MLDY TOM
119	SYNTH DRM
120	REVRS CYM
121	GTR NOISE
122	BREATH
123	SEASHORE
124	BIRD TWEET
125	TELEPHONE
126	HELICOPTER
127	APPLAUSE
128	GUNSHOT