

Green and Gold Refrigerator

(WCF29)

 


98.1WCF29.150

Assembly Instruction

Please follow this instruction to avoid assembly errors.

For customer service, please contact **E-mail: shop@robud.com**

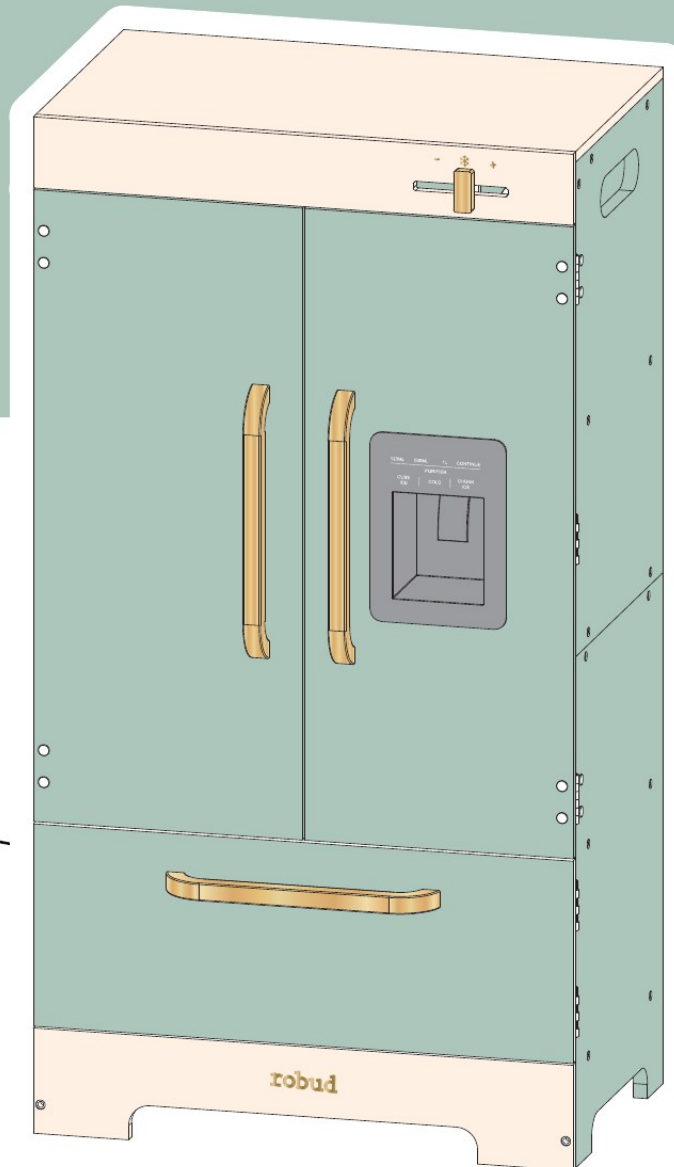

WARNING:

- CHOKING HAZARD-Small parts. Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package, please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
-  tool is not a toy! Please keep the tool for future use and store it where children cannot access it.
- The instruction must be retained since it contains important information.

MAINTENANCE:

- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please keep the product away from water, and don't put liquid in the pot sets.
- Please clean the product with dry soft cloth, don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.



Assembly Tips

 
 


Assembly time: 2-2.5 hours





Recommended Tools:

(Please prepare them by yourself.)

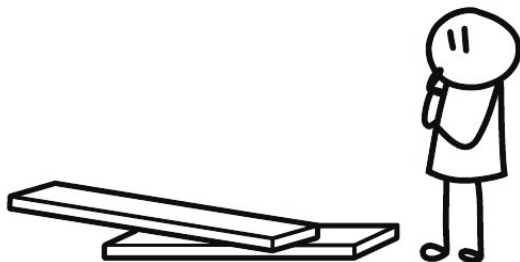

  - Avoid overtightening screws during assembly.
- Screws should be fully tightened once.
- Arrange all accessories on a hard, flat surface for assembly.
- Follow the instructions step by step.

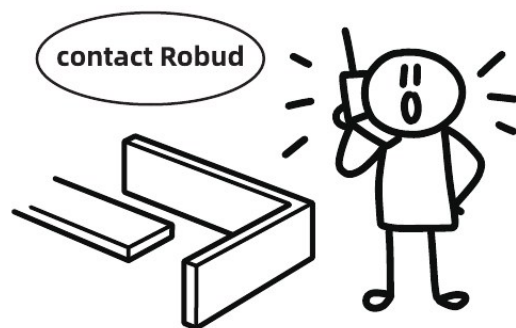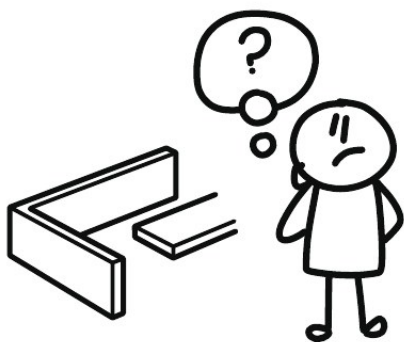

If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us **shop@robud.com**. We are glad to do our best to solve your problem and provide a solution to your satisfaction.

Helpful Hints and Tips

Icon Illustration:

 
! Special attention in assembly

1 Step 1

 Remove the plastic film on surface


2 Step 2

 Perspective conversion

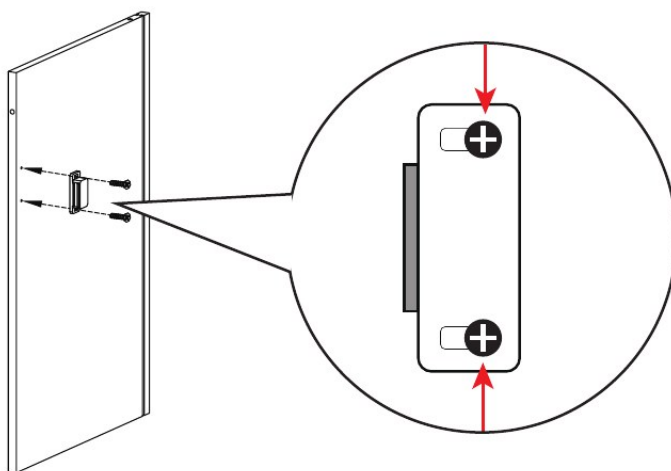

! Notice:
















 
When assembling the door stop, hold the screw with the screwdriver first and then adjust the screw to the position shown on the left.

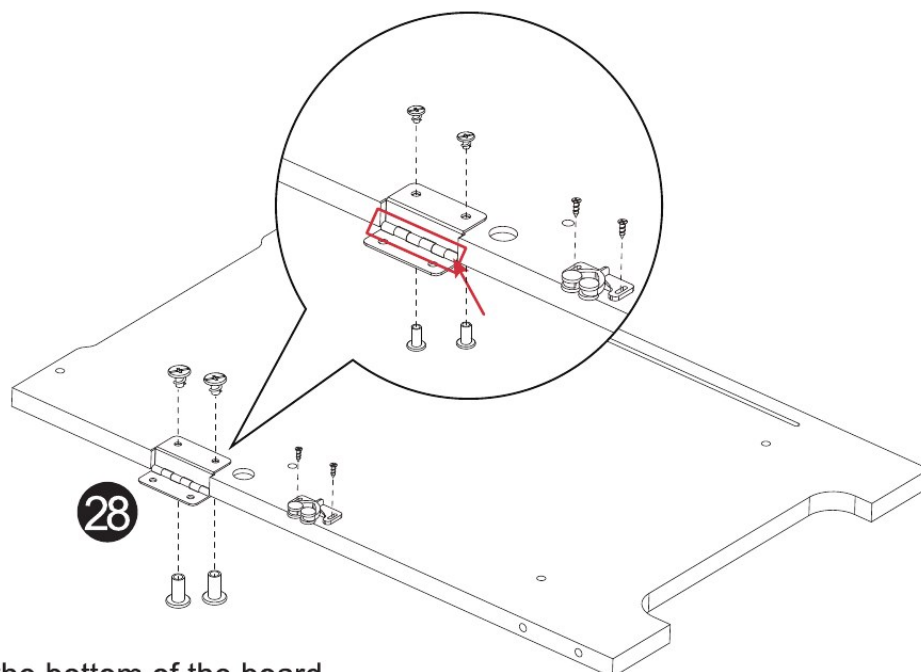


















! Notice:

Align the axle of **28** with the bottom of the board.

               
 
Product Parts

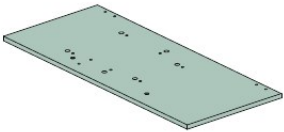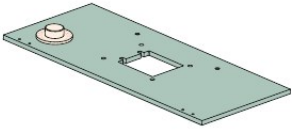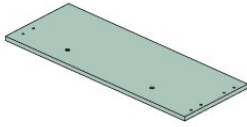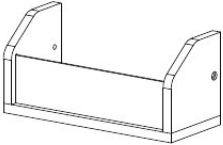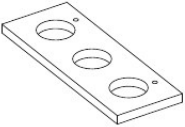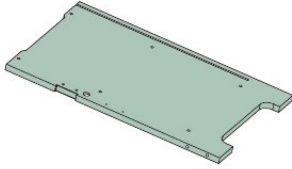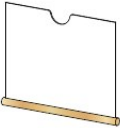1	2	3	4
			
x1	x1	x1	x3
5	6	7	8
			
x1	x1	x1	x1
9	10	11	12
			
x1	x1	x1	x1
13	14	15	16
			
x1	x1	x1	x1
17	18	19	20
			
x1	x1	x1	x2

                 Hardware and Accessories

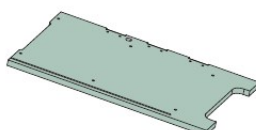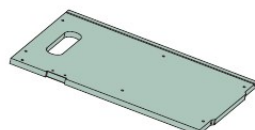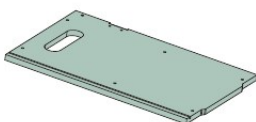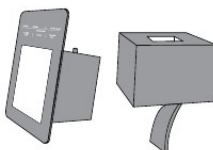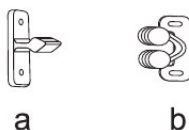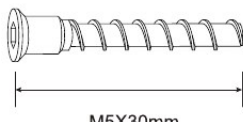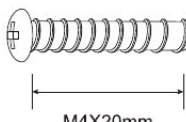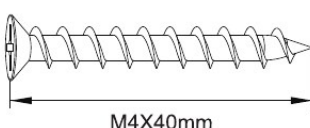21		22		23		24	
x3		x1		x1		x1	
25		26		27		28	
x1		x1		x1		x6	
29						30	
 a b		 M3X8mm					
x1		x4				x12	
31	 M5X30mm	32		33	 M3X10mm	34	 M4X20mm
x22		x2		x4		x26	
35	 M4X6mm	36	 M3X12mm	37		38	 M4X8mm
x8		x6		x1		x13	
39	 M4X6mm	40	 M4X8mm	41		42	 M4X40mm
x8		x8		x16		x1	

  Hardware and Accessories

43		44		45	 	46	
x1		x1		x2		x1	
47							
x1		x1		x1			

Assembly Instruction

1

 
34



2PCS

M4X20mm

34 X2

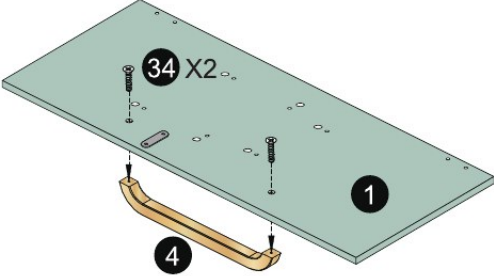

2

30



6PCS

38

 


6PCS

M4X8mm



38 X6

30 X6


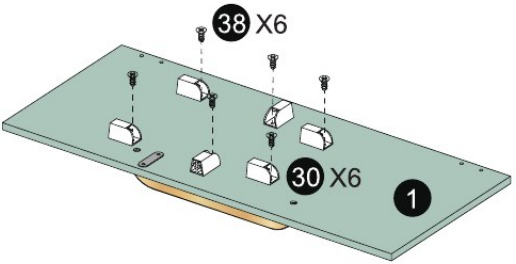


Assembly Instruction

 
 
3

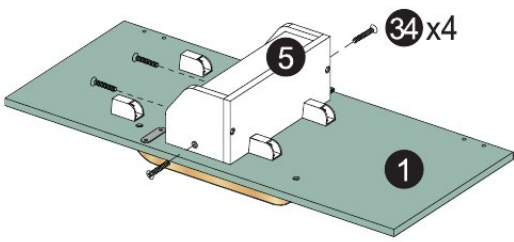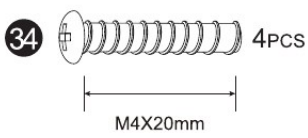



4

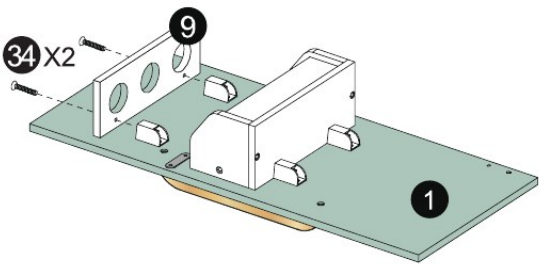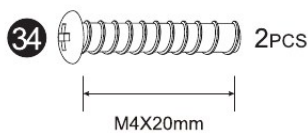  

5

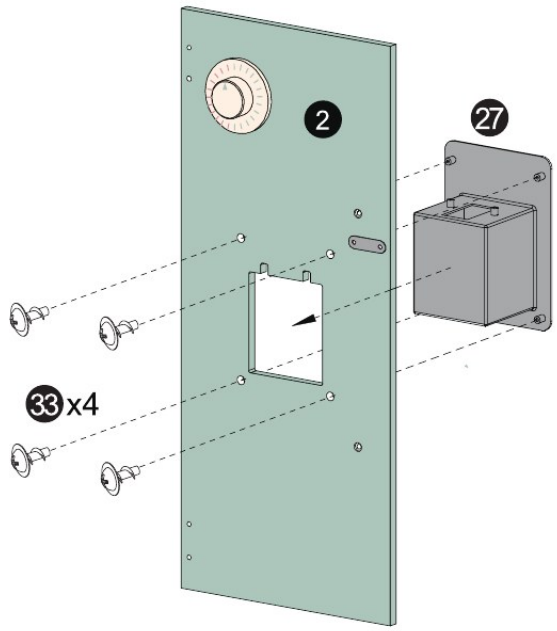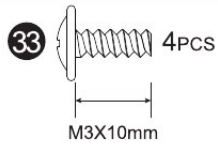  


6

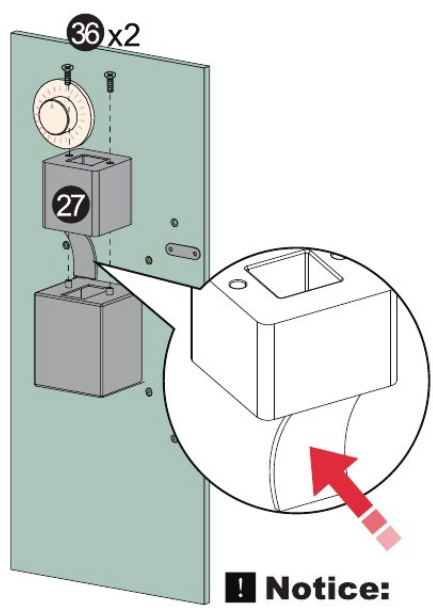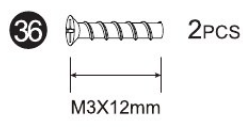  


Notice:
Pay attention to radian

Assembly Instruction

 7

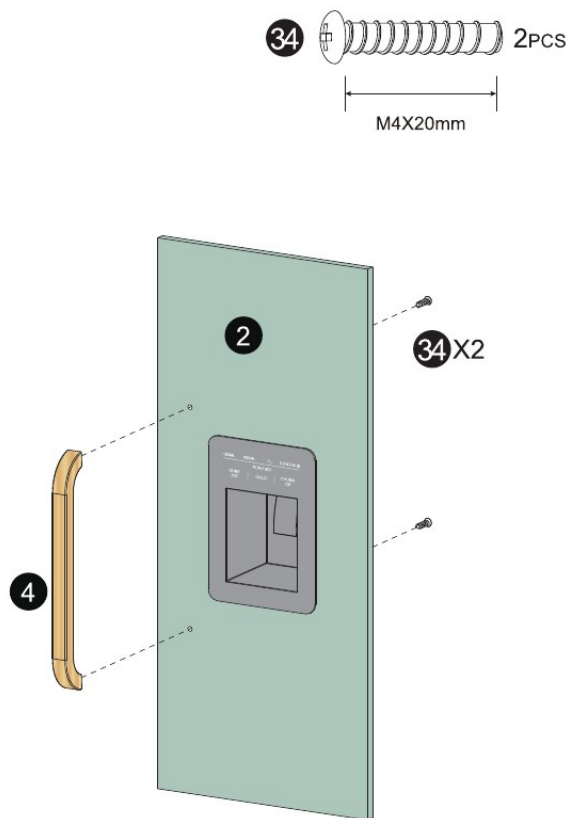


8

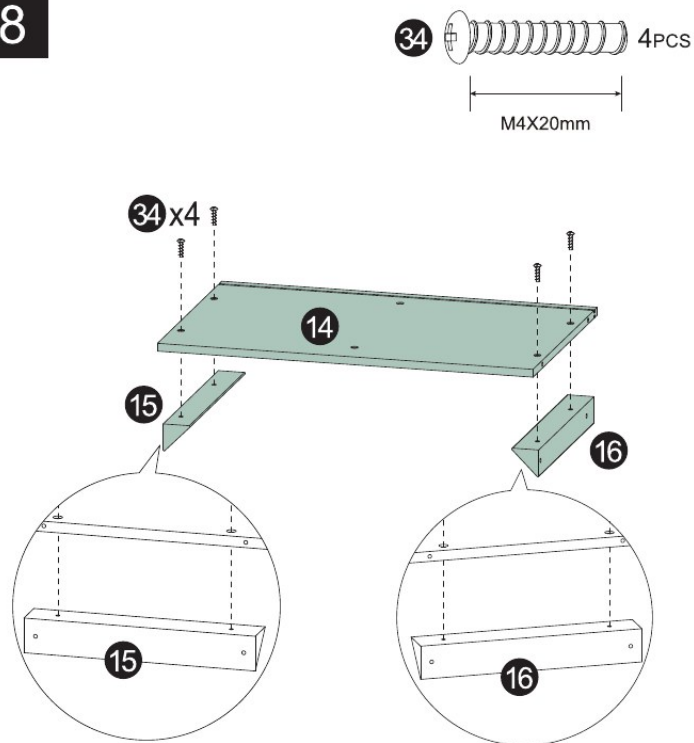 

! Notice:
Distinguish Part 15 from 16.




 9

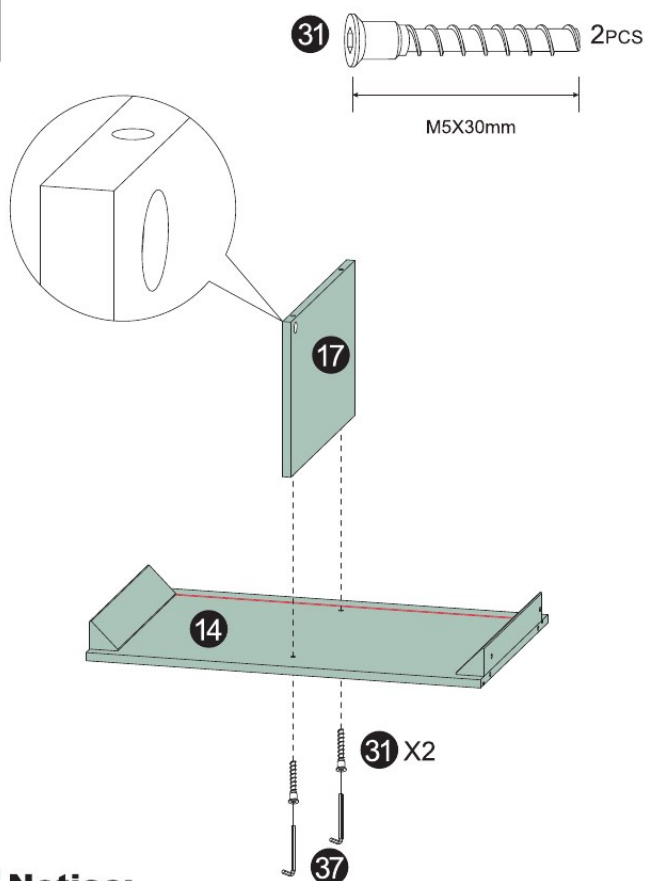



! Notice:
Pay attention to the direction of the holes.

 10

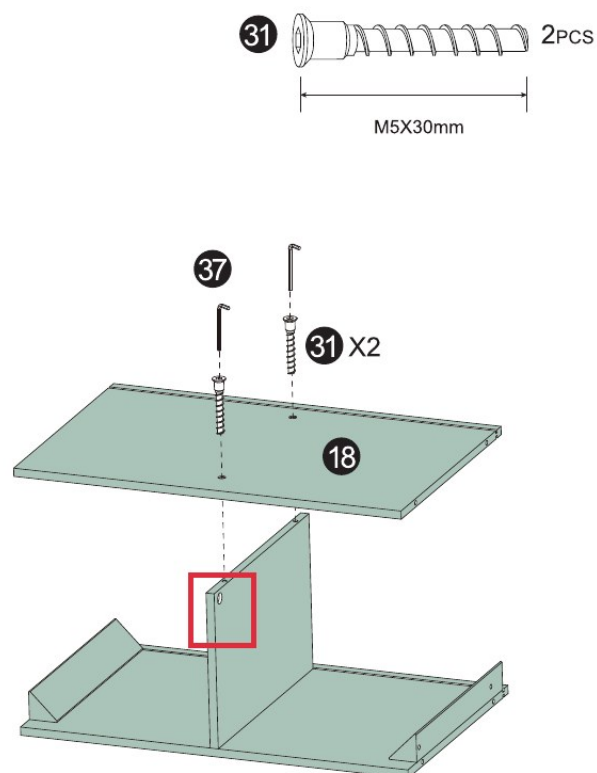

Assembly Instruction

 
 
11

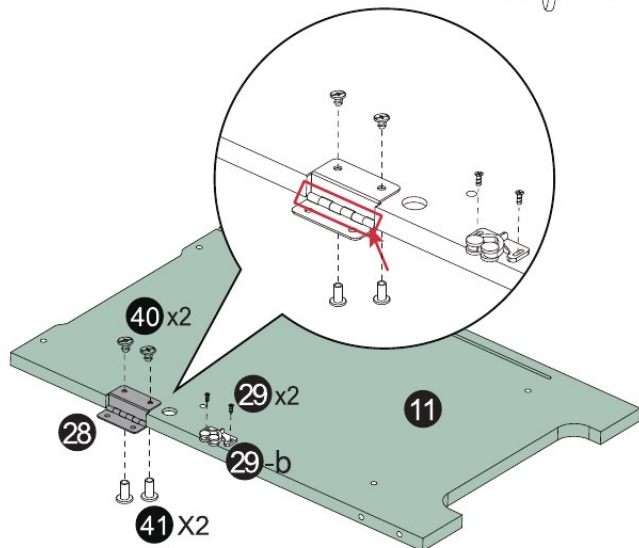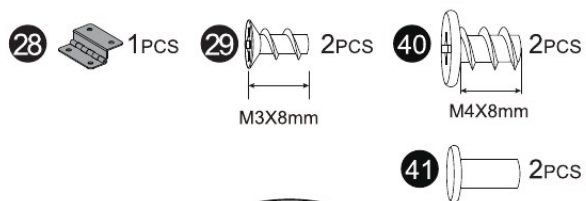



Notice:

Align the axle of 28 with the bottom of the board.

 
 
12

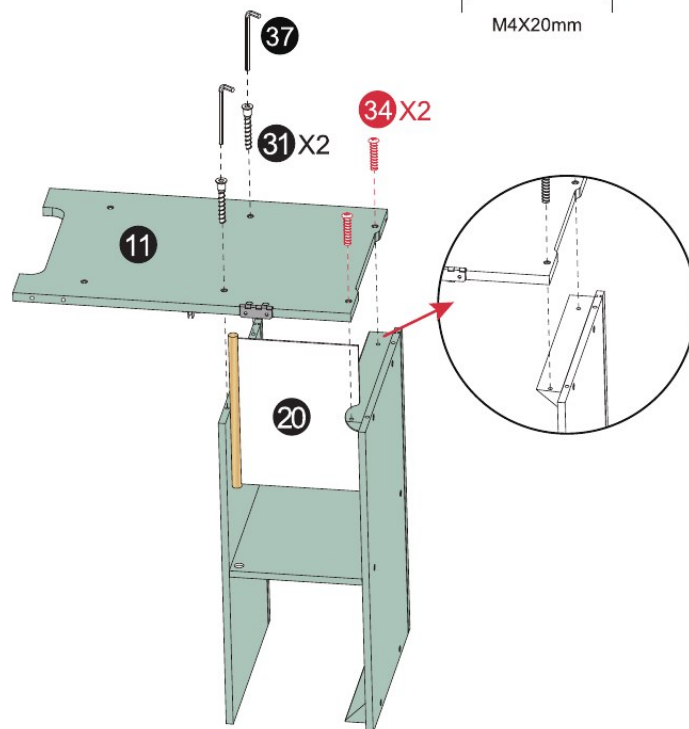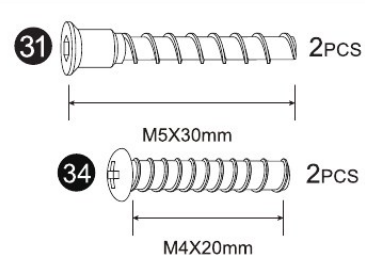

13

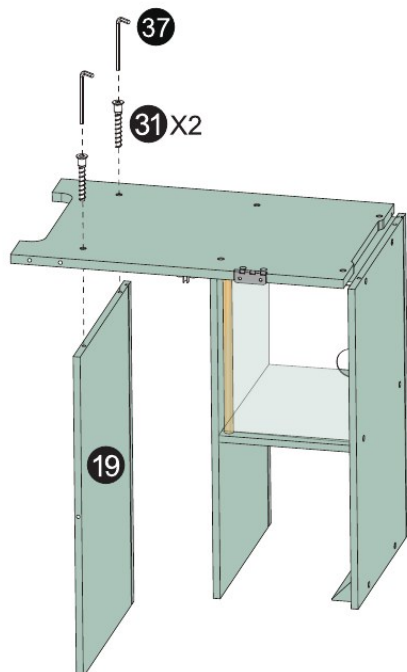 
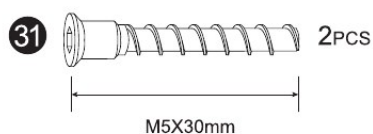 


14

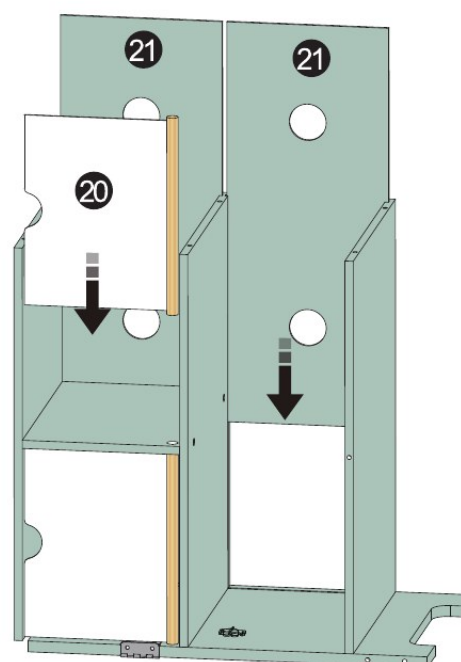 
 


Assembly Instruction

 
 
15

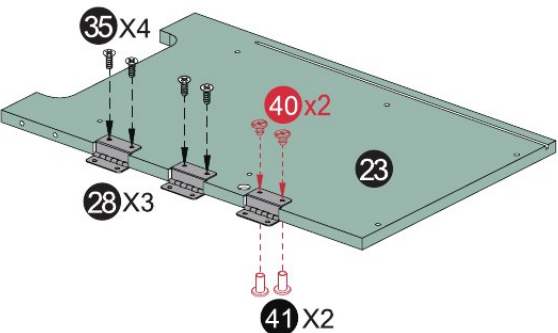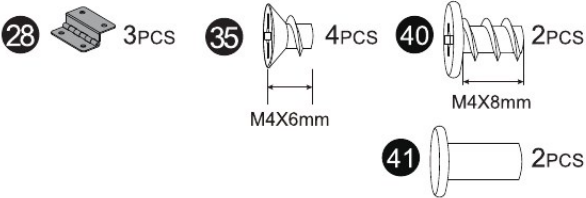



16

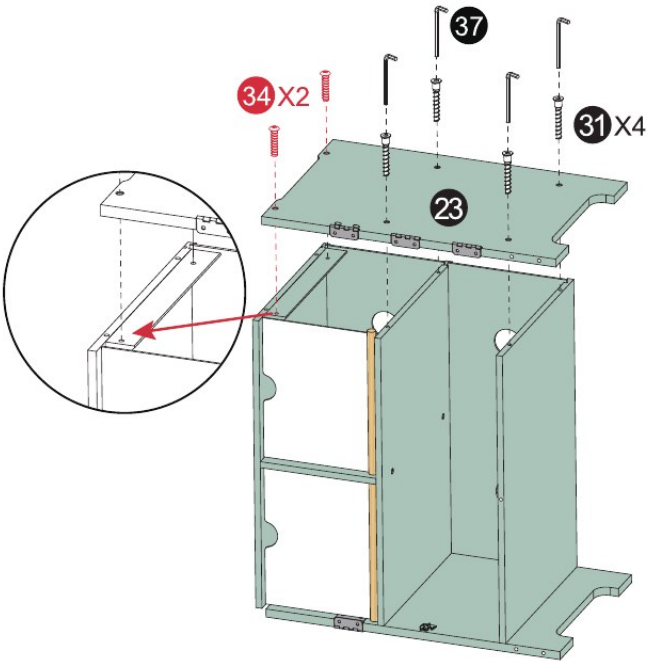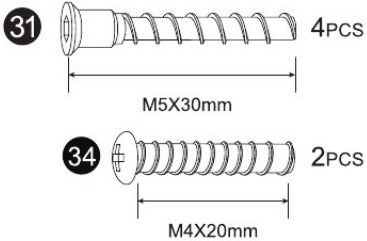  

17

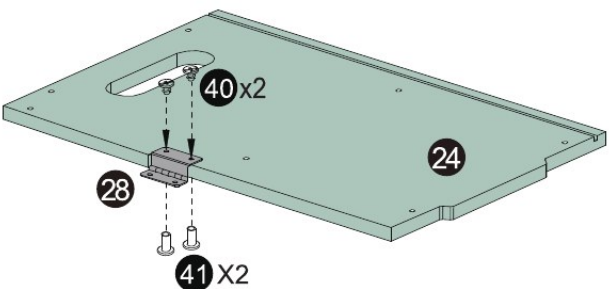  

18

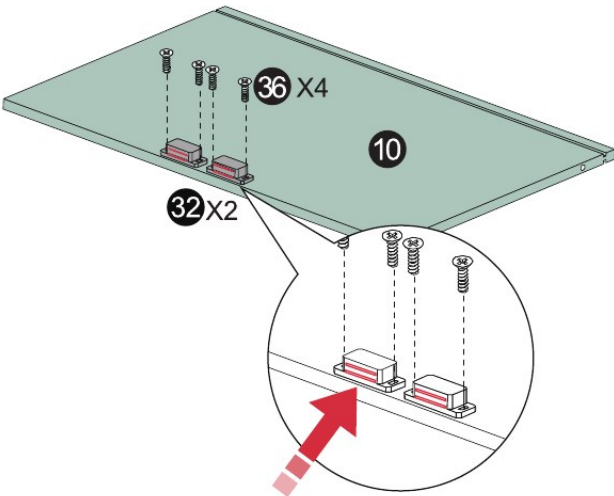  


Notice:

Pay attention to the direction of the magnet.

Assembly Instruction

19

 
- 30 4PCS 38 5PCS
M4X8mm

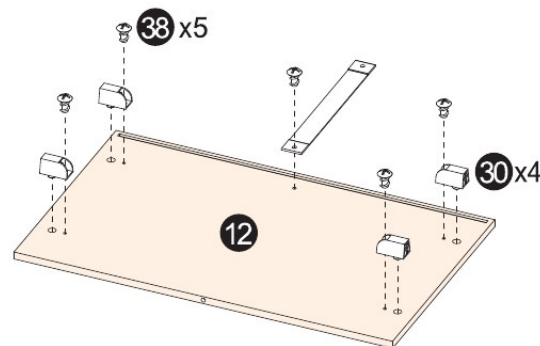


! Notice:
First firmly press Part 30 against the desktop, then securely tighten the screw.

20

 - 31 2PCS M5X30mm
34 2PCS M4X20mm

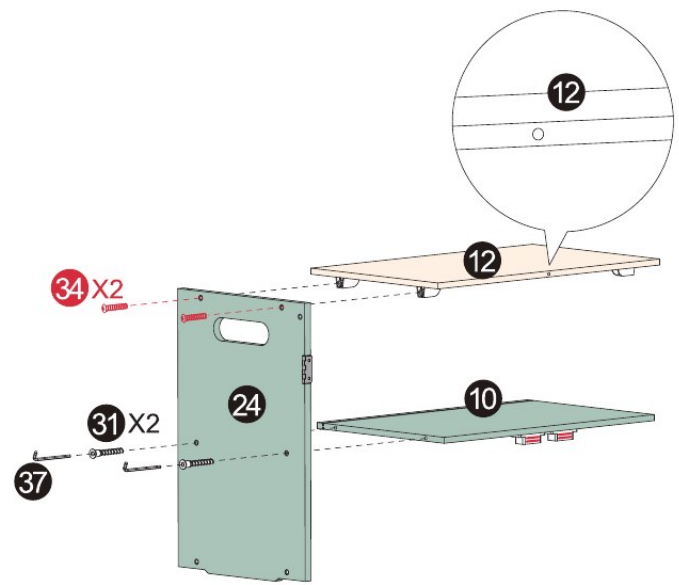


21

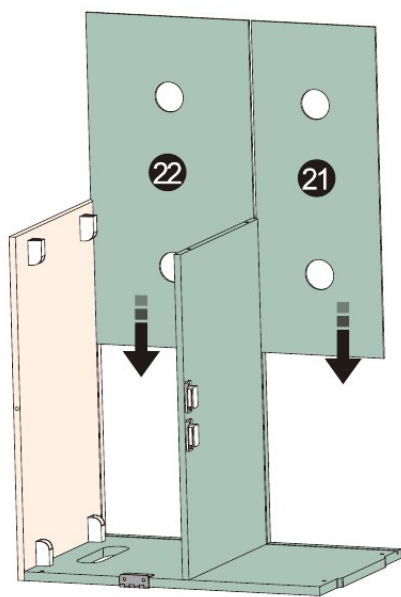 



22

 - 28 1PCS 40 2PCS M4X8mm
41 2PCS

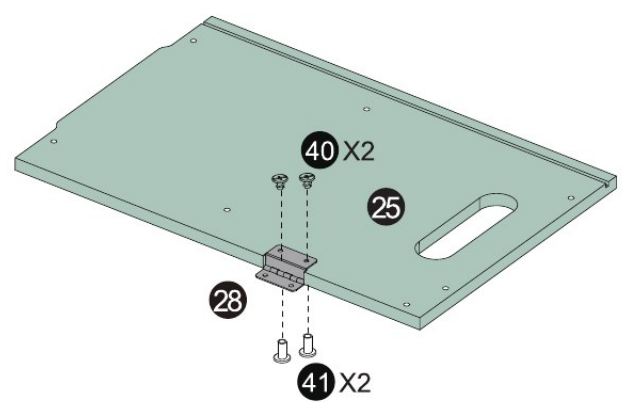


Assembly Instruction

 
 
23

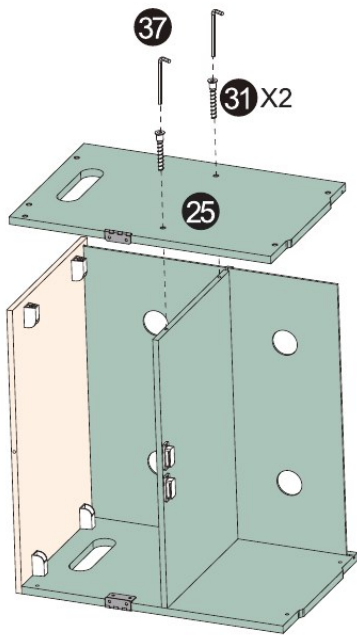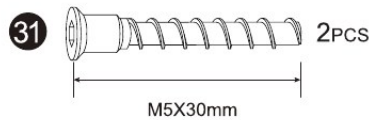



24

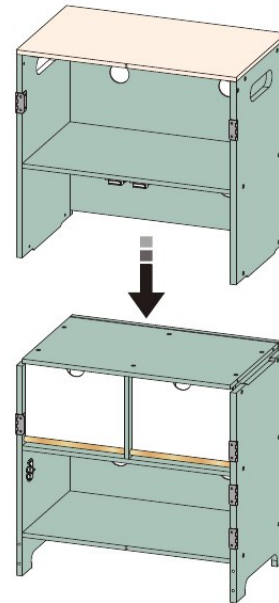 

25

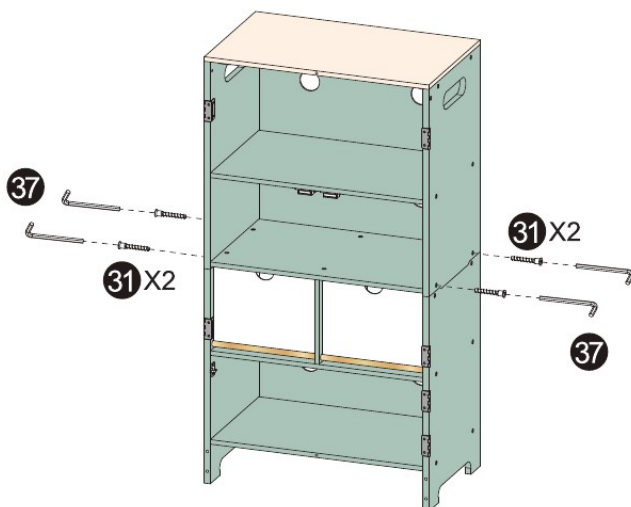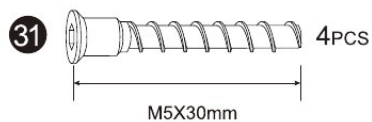  

26

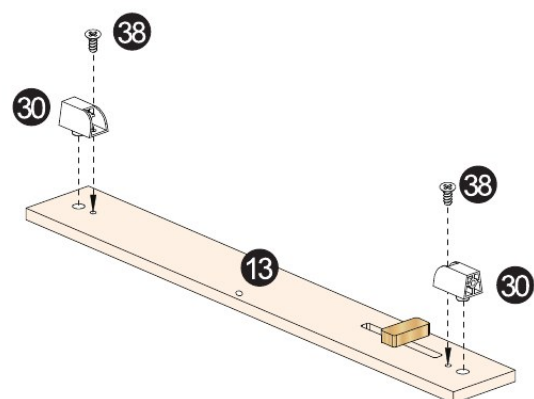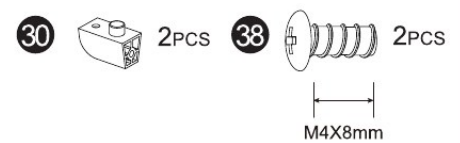  


! Notice:


First firmly press Part 30 against the desktop, then securely tighten the screw.

Assembly Instruction

 27

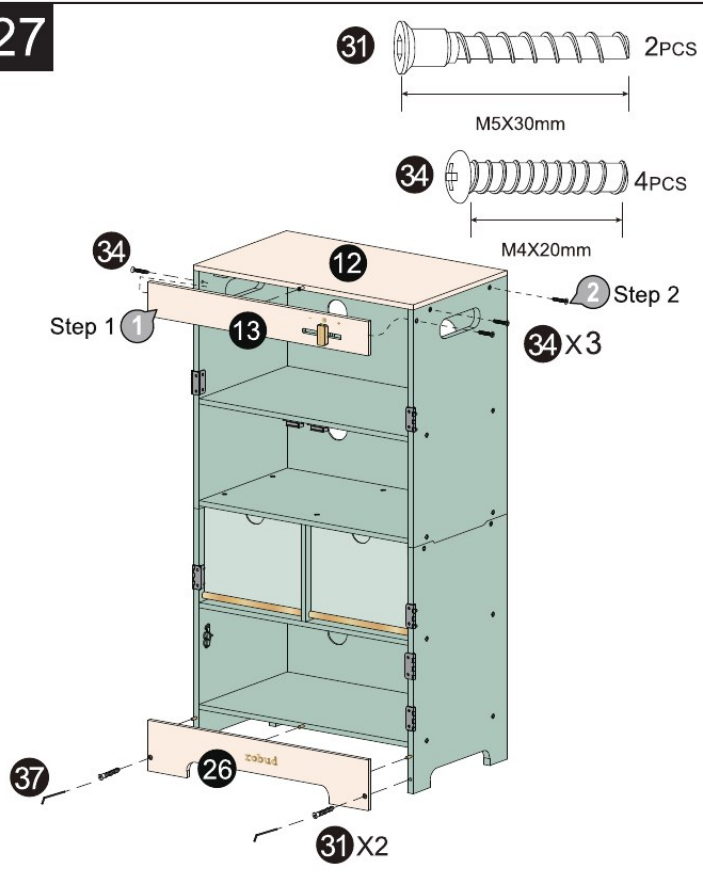


28

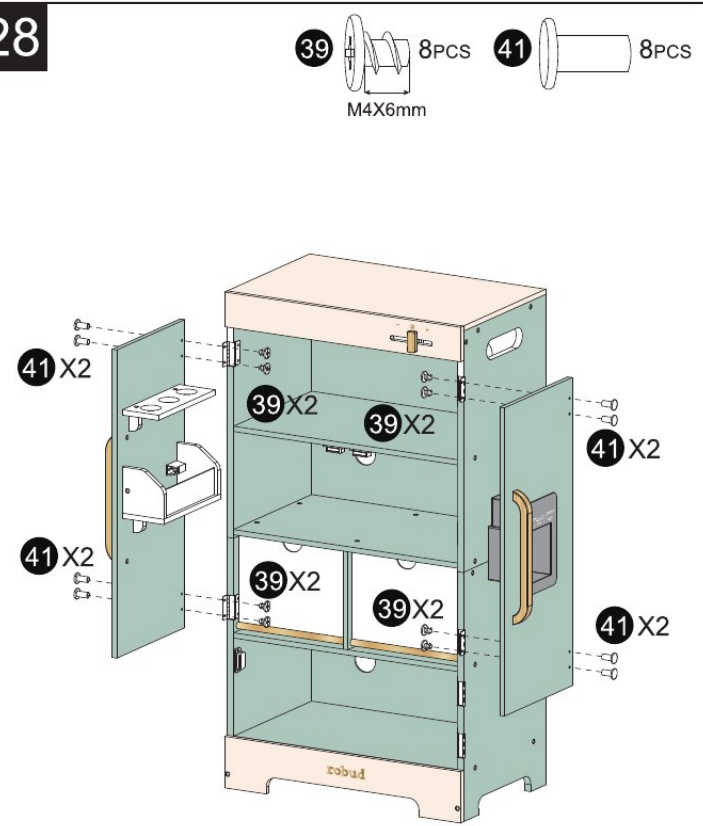 


! Notice:
It is recommended that two people work together to complete this step.

 29



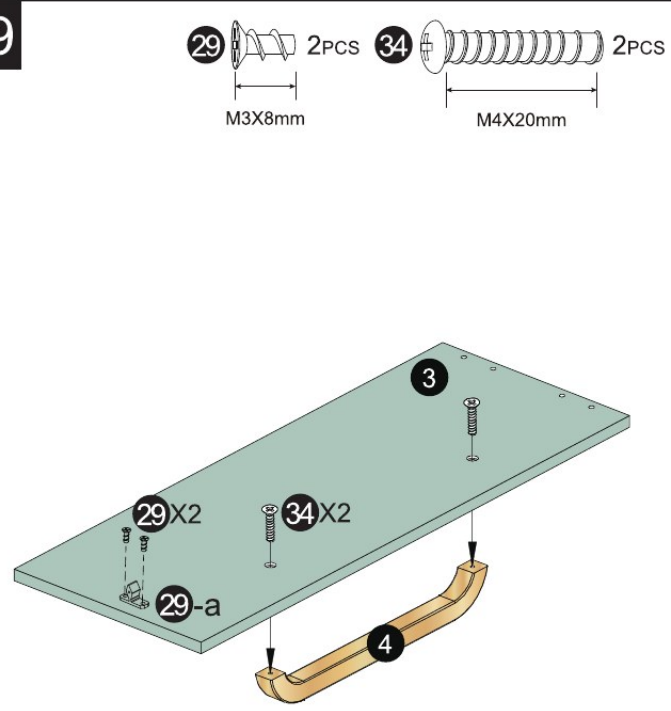


30

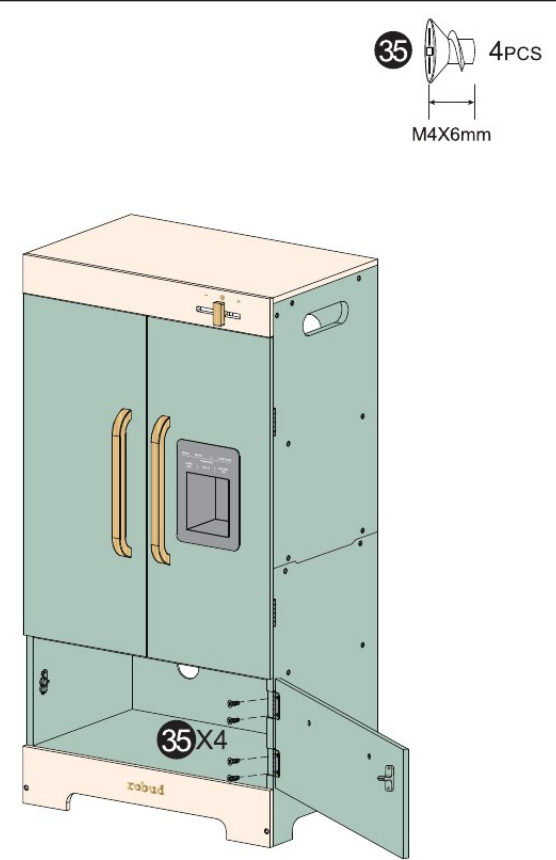 

Assembly Instruction

   31

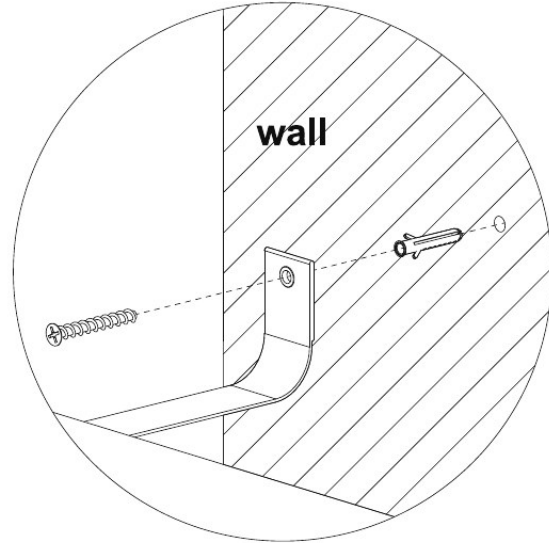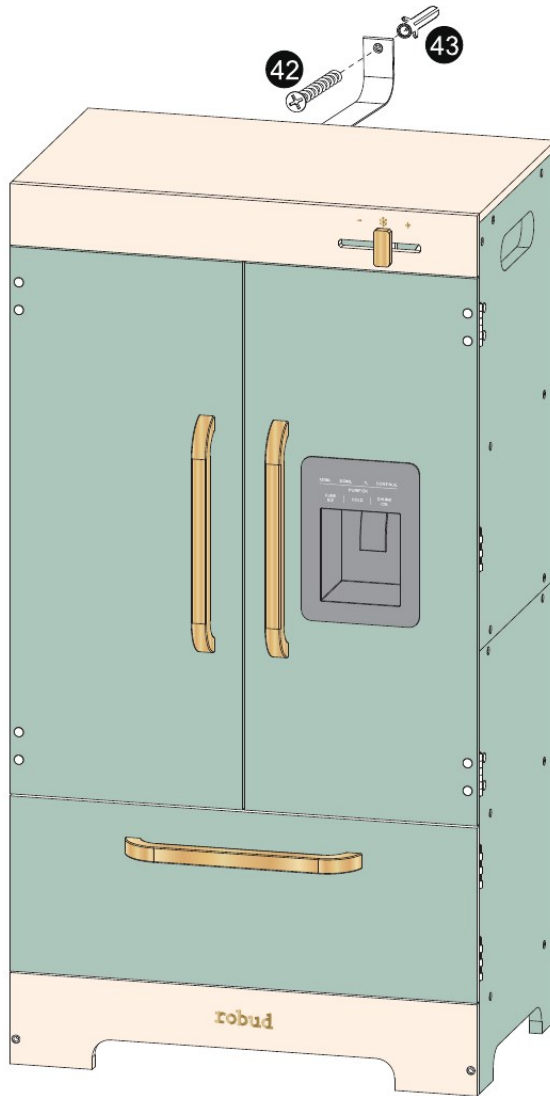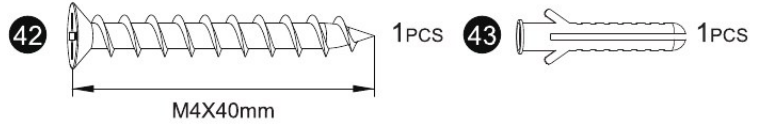

! Notice:

The anti-tip assembly can be secured on the wall to prevent the refrigerator from tipping during play.

It is recommended to place the refrigerator against the wall during use.



Avoid placing the refrigerator in open spaces and prevent your child from climbing on it.

The hardware accessories are primarily suitable for being assembled on walls shown in the instruction.

For other situations, consult your local hardware store to choose more suitable accessories.

Instruction of anti-tip assembly

Suitable Bricks/Materials

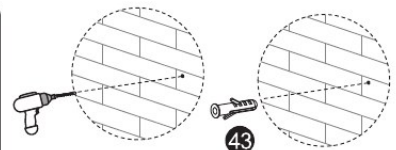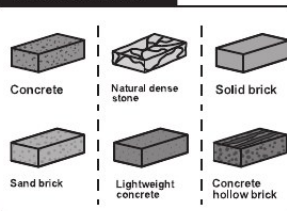

Use the electric drill to drill holes on marks.

The punching depth should be longer than the part to be inserted (the expandable tube 43).

Place the expandable tubes 43 into the drilled holes.

Finally, screw 42 into the hole for the expandable tubes.

Other Products

Modular Kitchen *NEW&HOT*



SKU: WCF14

Name: Dream Kitchen
29.7*13.8*38.6(inch)
75.4*35*98(cm)



SKU: WCF29

Name: Green and gold
refrigerator
18.1*11*40.5(inch)
46*28*103(cm)



SKU: WCF28

Name: Green and gold
oven
16.1*11.8*22.4(inch)
41*30*57(cm)



SKU: WCF30

Name: Green and gold
washing machine
22*11.8*20(inch)
56*30*51(cm)



SKU: WCF04

Name: Vintage Green Kitchen
21.7*11.6*31.5(inch)
55*29.5*80(cm)



SKU: WCF22

Name: Vintage green
refrigerator
23.6*11.8*24(inch)
37.5*30*81(cm)



 
SKU: WCF20

Name: Vintage green
oven
16.1*11.8*22.4(inch)
41*30*57(cm)



SKU: WCF21

Name: Vintage green
washing machine
16.1*11.8*22.4(inch)
60*30*61(cm)

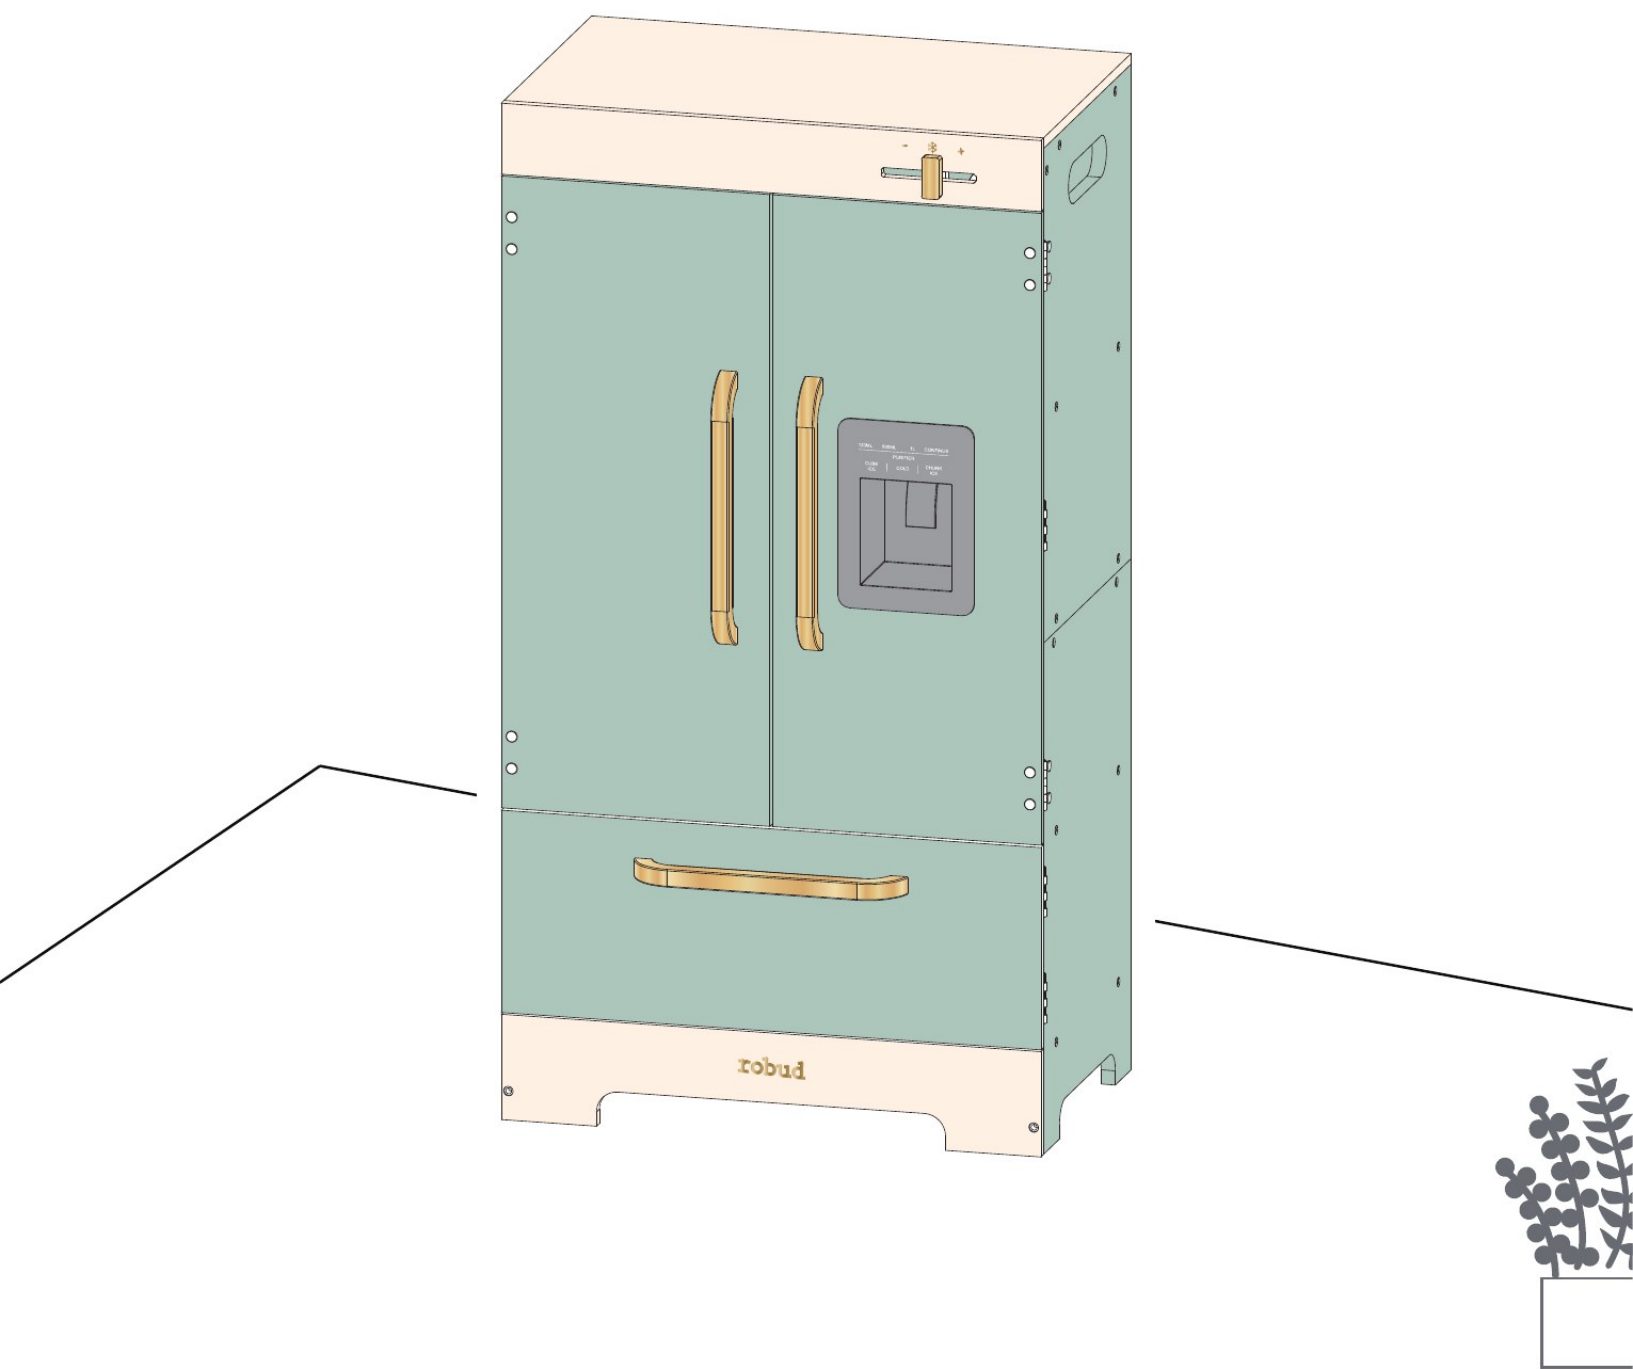

www.robud.com