

Caramel refrigerator

(WCF54)

 


98.1WCF54.150

Assembly Instruction

Please follow this instruction to avoid assembly errors.

For customer service, please contact **E-mail: shop@robud.com**

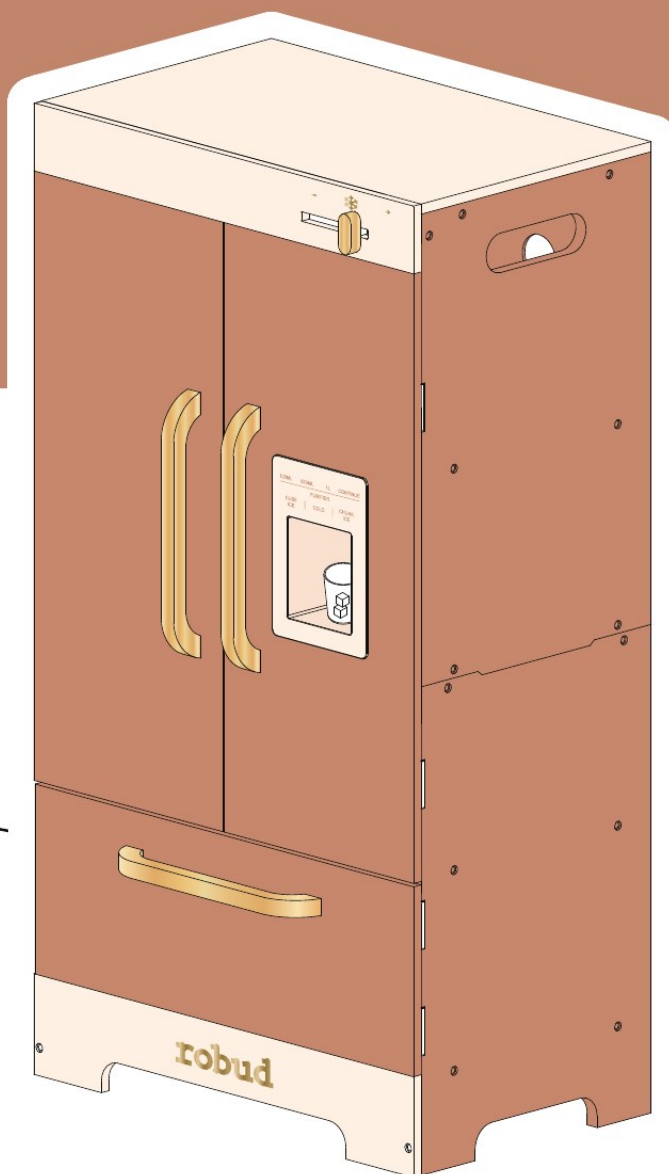

WARNING:

- CHOKING HAZARD-Small parts.Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package,please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- **39** is not a toy! Please keep the tool for future use and store it where children cannot access it.

MAINTENANCE:

- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please keep the product away from water, and don't put liquid in the pot sets.
- Please clean the product with dry soft cloth, don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- The instruction must be retained since it contains important information.



Assembly Tips

 
 


Assembly time: 2-2.5 hours





Recommended Tools:

(Please prepare them by yourself.)

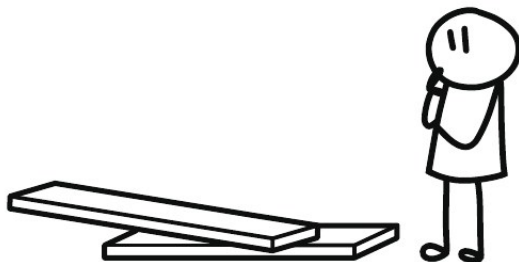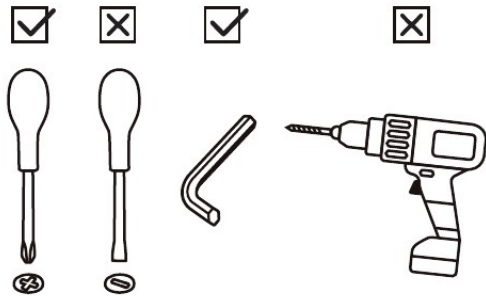

  - Avoid overtightening screws during assembly.
- Screws should be fully tightened once.
- Arrange all accessories on a hard, flat surface for assembly.
- Follow the instructions step by step.

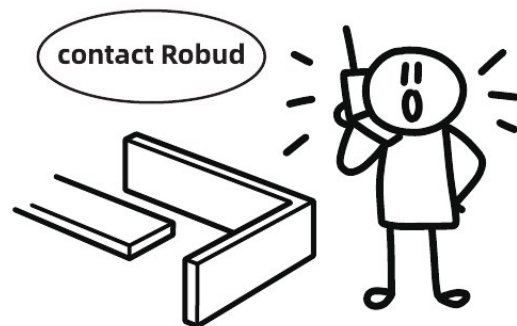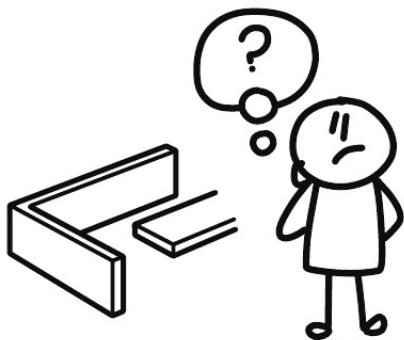

If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us **shop@robud.com**. We are glad to do our best to solve your problem and provide a solution to your satisfaction.

Helpful Hints and Tips

Icon Illustration:

 
! Special attention in assembly

1 Step 1

 Remove the plastic film on surface


2 Step 2

 Perspective conversion

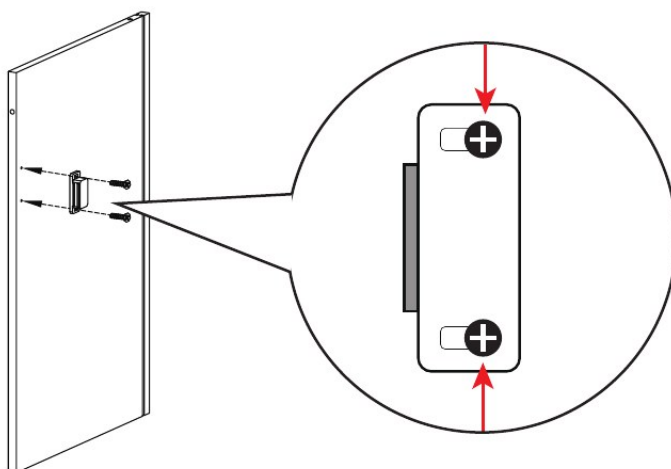

! Notice:















 
When assembling the door stop, hold the screw with the screwdriver first and then adjust the screw to the position shown on the left.

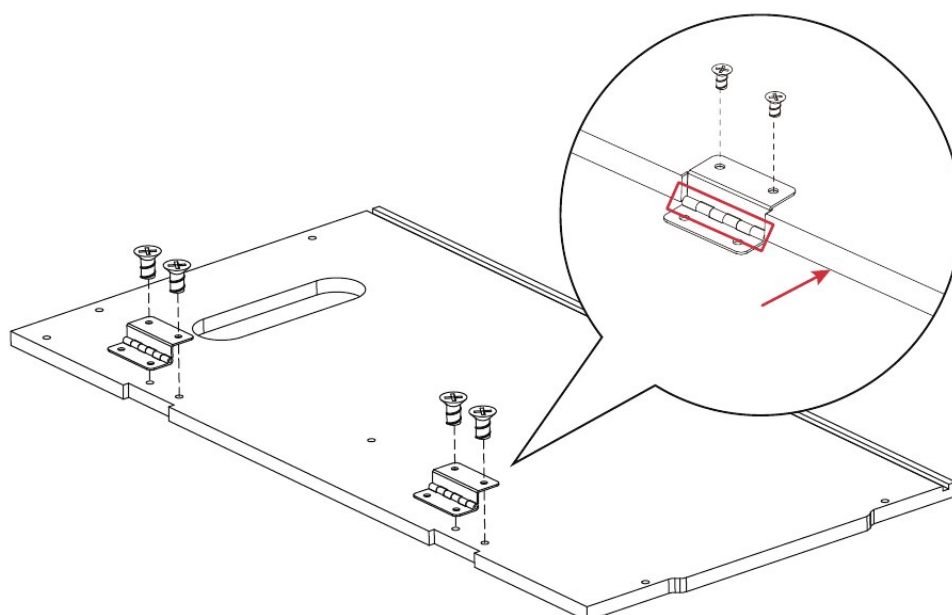


! Notice:

Align the axle of **35** with the bottom of the board.

          
 
 
 
 
 
Product Parts

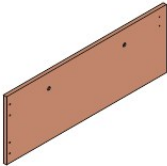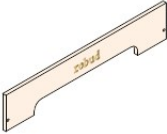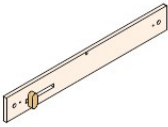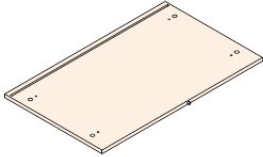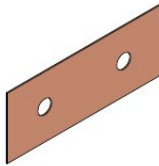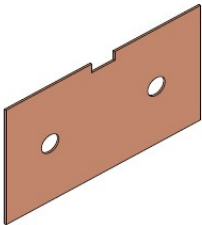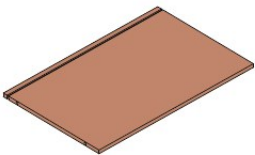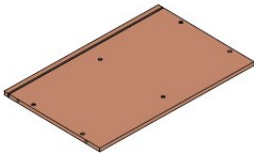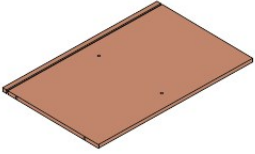1		2		3		4	
x1		x1		x1		x1	
5		6		7		8	
x1		x1		x2		x3	
9		10		11		12	
x1		x1		x1		x1	
13		14		15		16	
x1		x1		x3		x1	
17		18		19		20	
x1		x1		x1		x1	



 
Product Parts

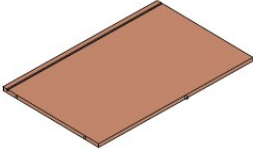21 	22  22-1 22-2	23 	24 
x1	x1	x1	x2
25 	26 	27 	
x1	x2	x1	

      
Hardware and Accessories

28  M4x8mm	29  M4x8mm	30  M3x10mm
x12	x24	x4
31  M3x10mm	32  M4x20mm	33  M5x30mm
x10	x26	x22
34 	35 	36 
x12	x6	x2

   Hardware and Accessories

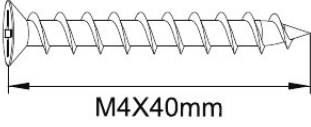
37		38		39	
x1		x1		x1	
40	 M4X40mm	41		42	
x1		x1		x1	

 Assembly Instruction

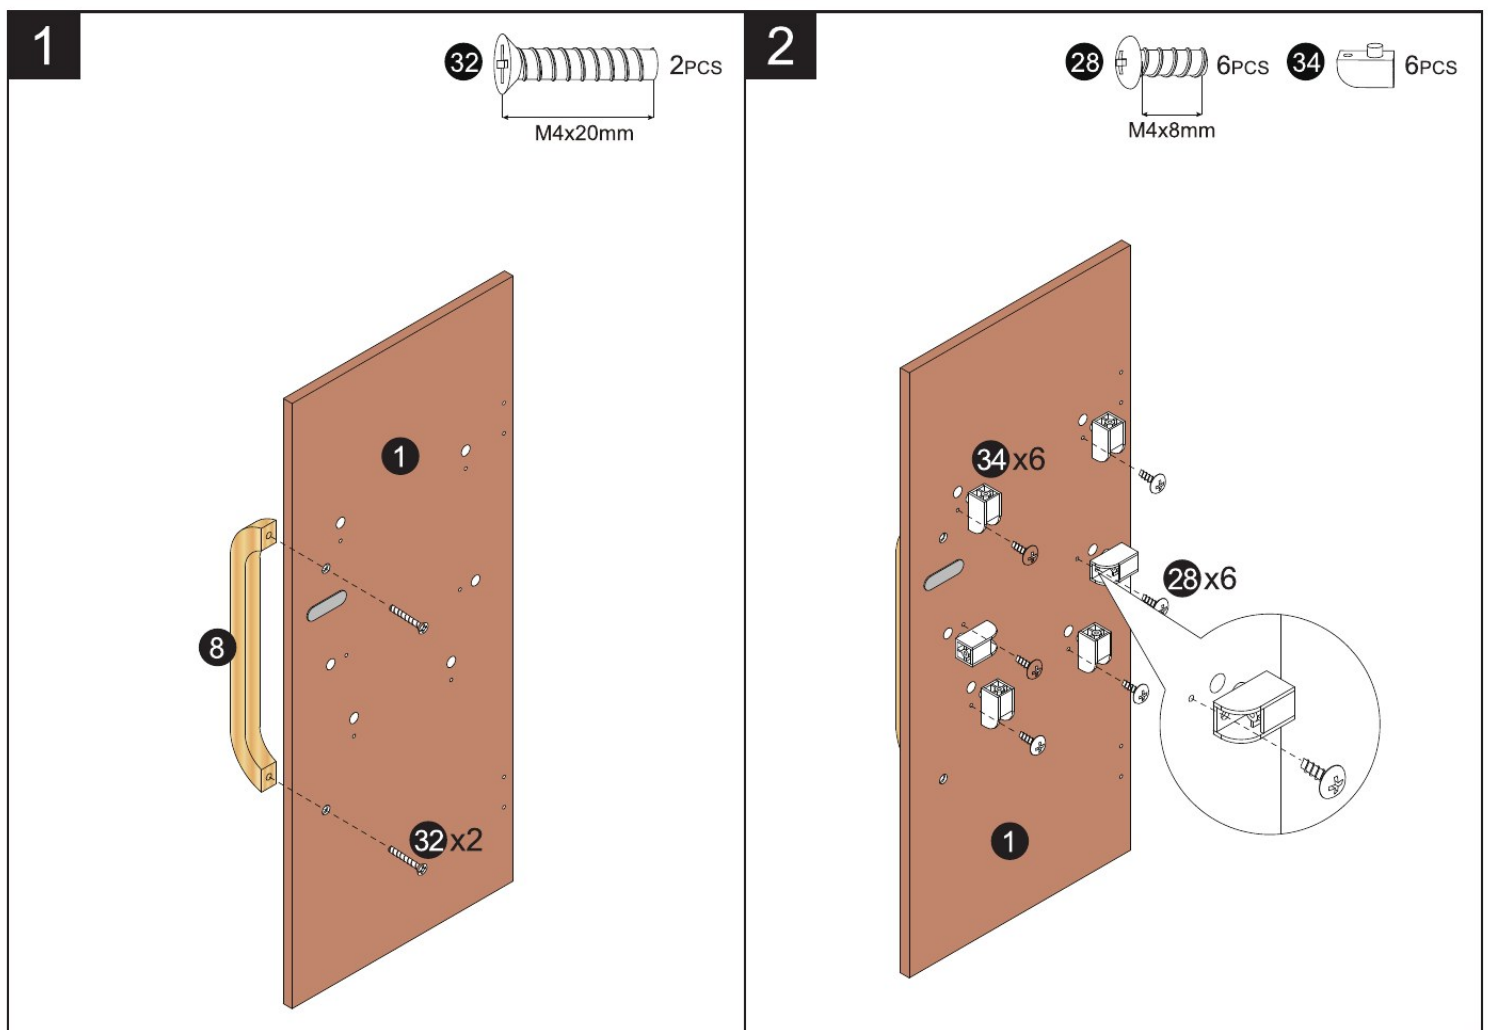


Assembly Instruction

 
3

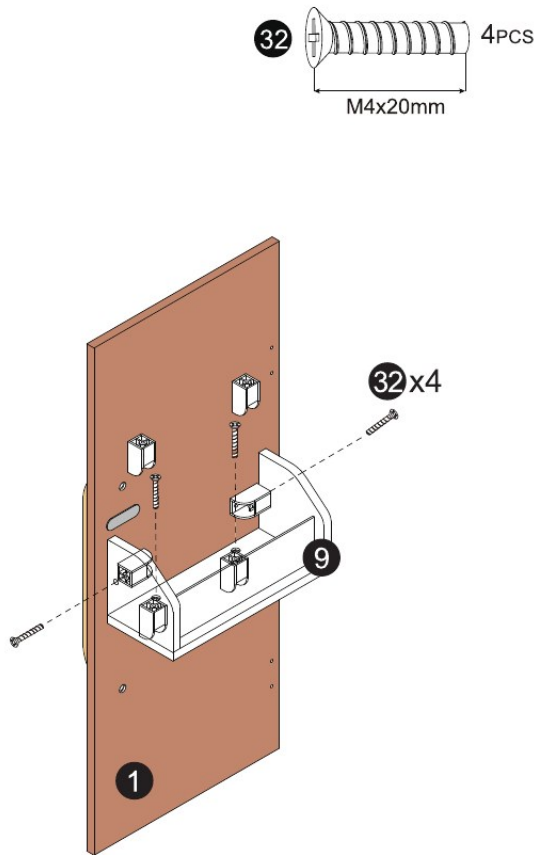


4

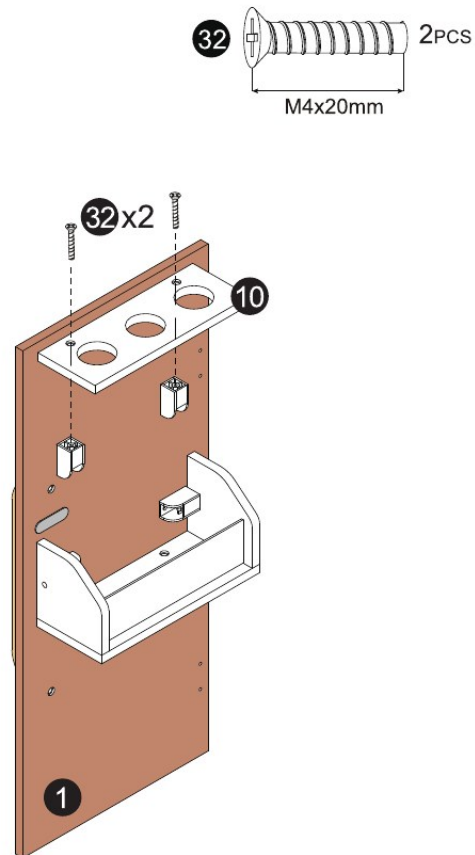 

5

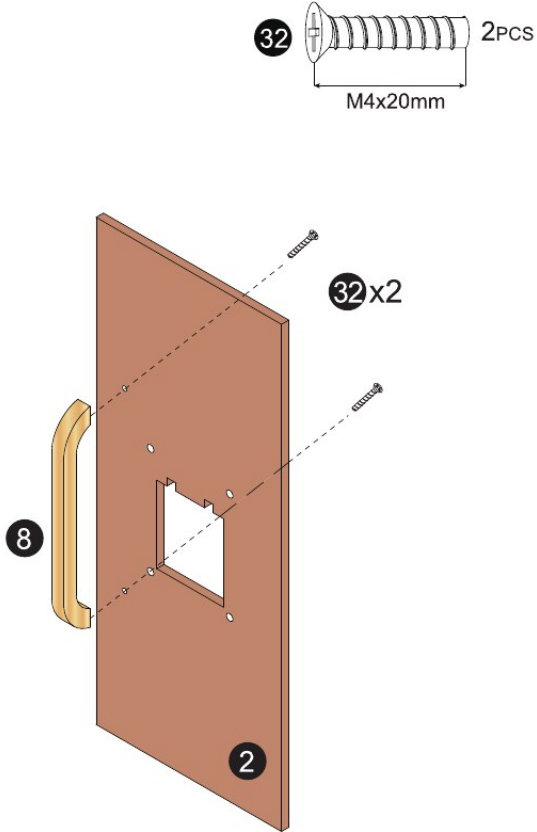 

6

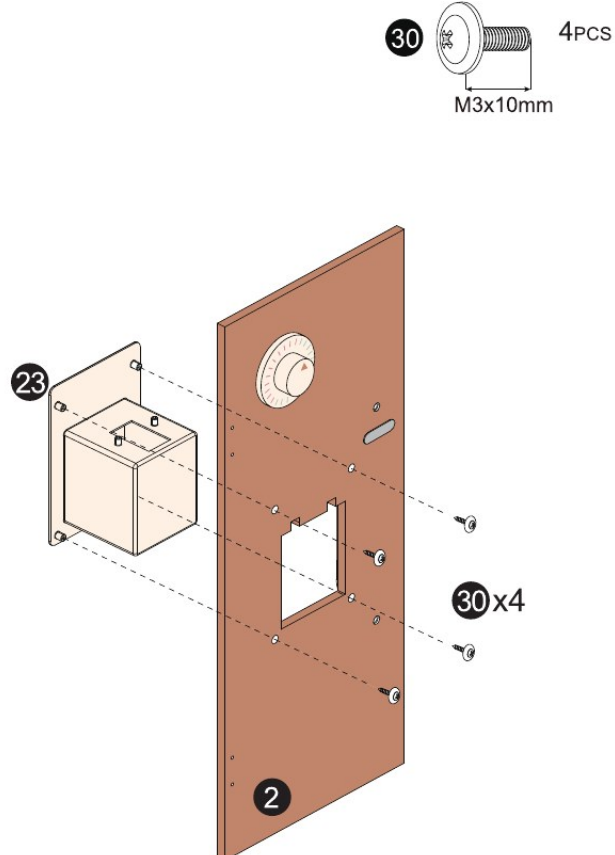 


Assembly Instruction

7

31




 2PCS

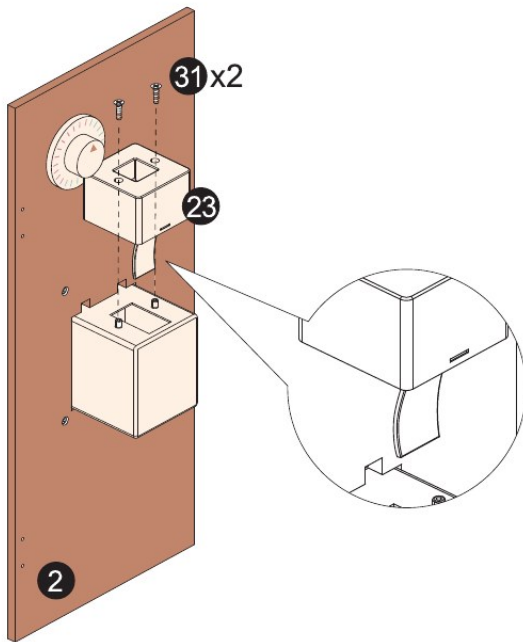


8

 32




4PCS

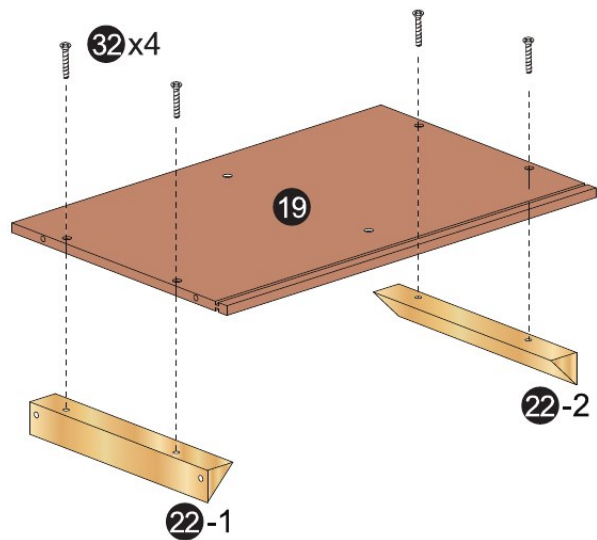 


9

 33



4PCS

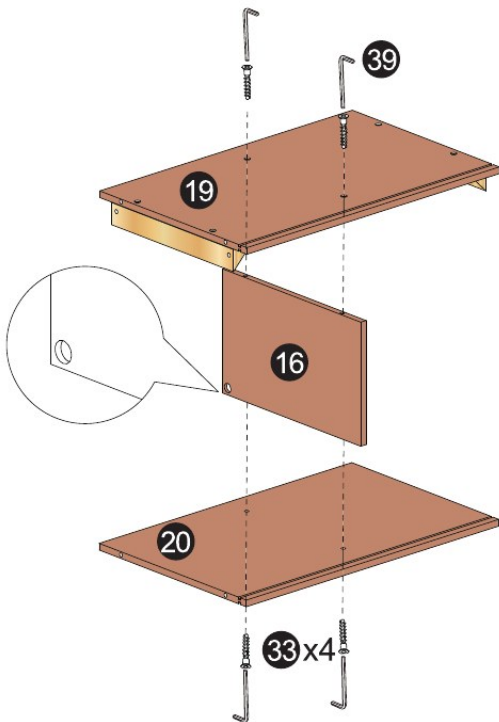 

10

29



2PCS

31

 


2PCS

35



1PCS


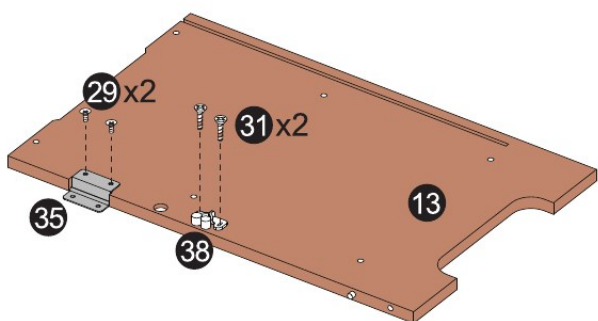


! Notice:


Align the axle of 35 with the bottom of the board.

Assembly Instruction

  
11

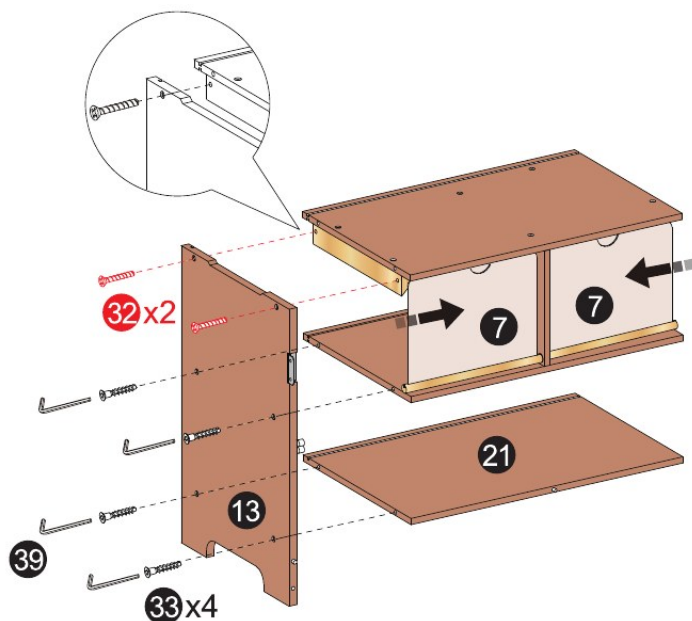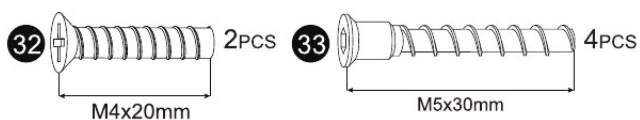

12

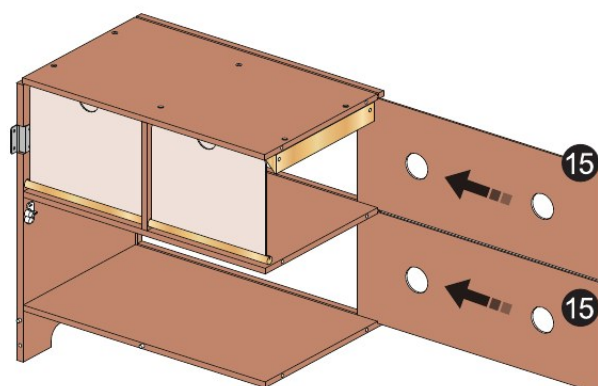 



13

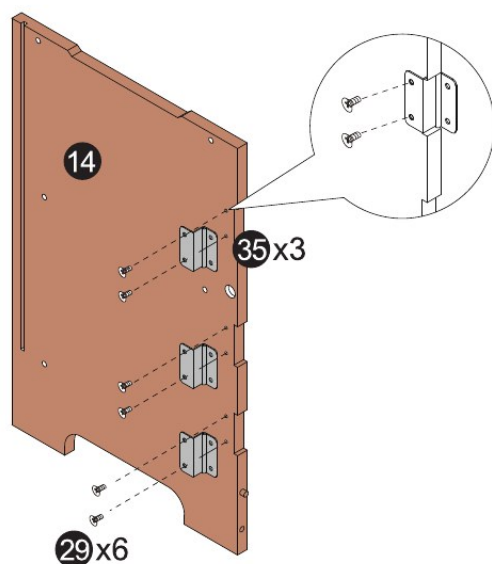 

! Notice:


Align the axle of 35 with the bottom of the board.

  14

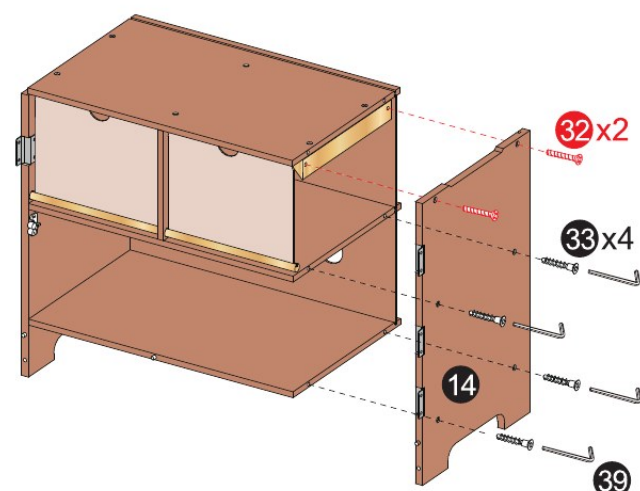
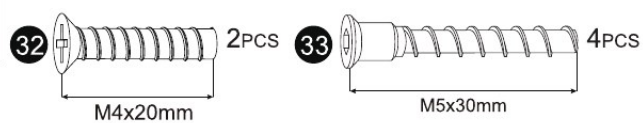


Assembly Instruction


 
15

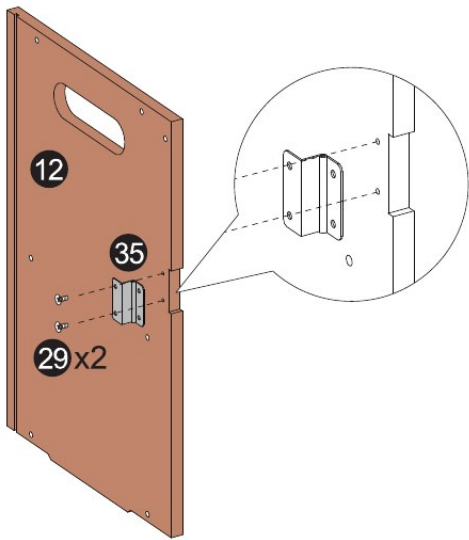


16

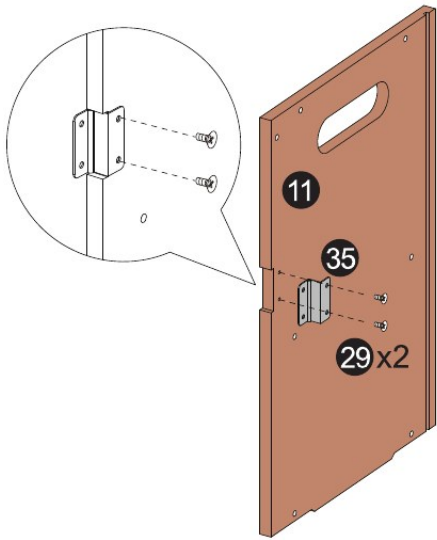  

17

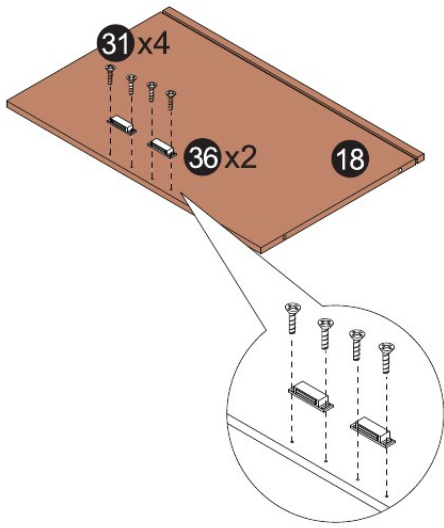  

18


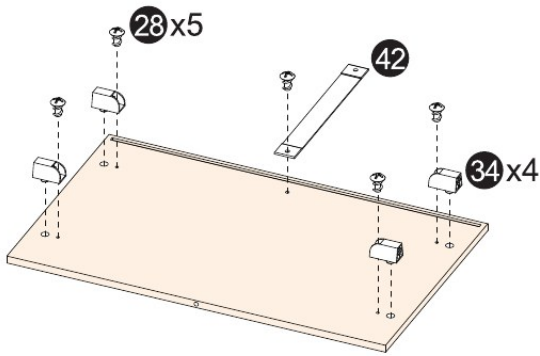 


! Notice:




Pay attention to the direction of the magnet.

Assembly Instruction

 
 
19

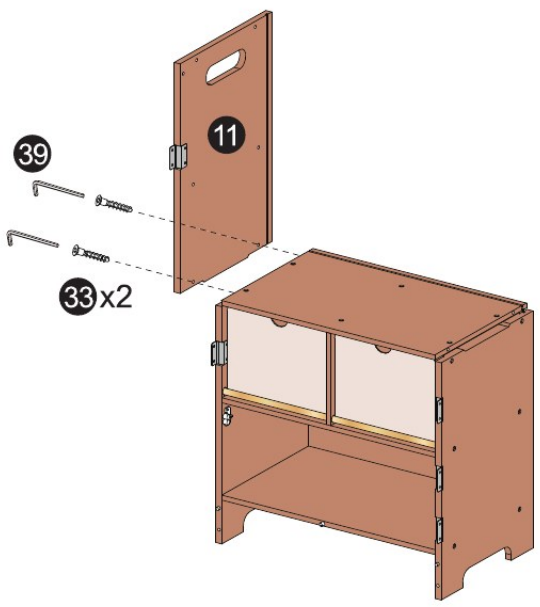

20

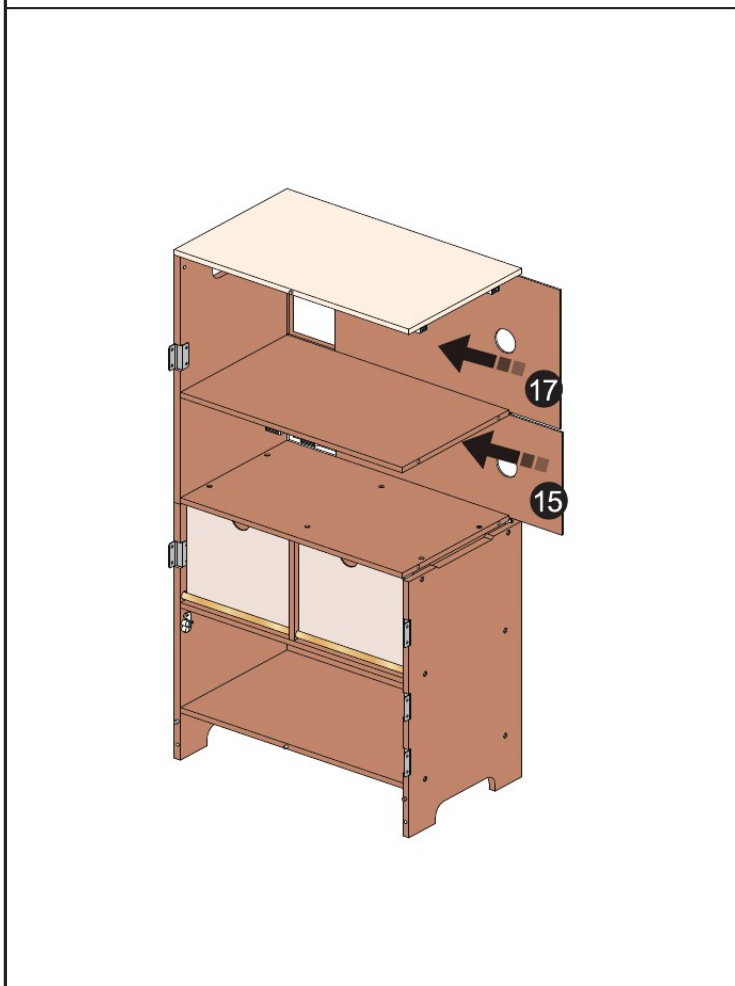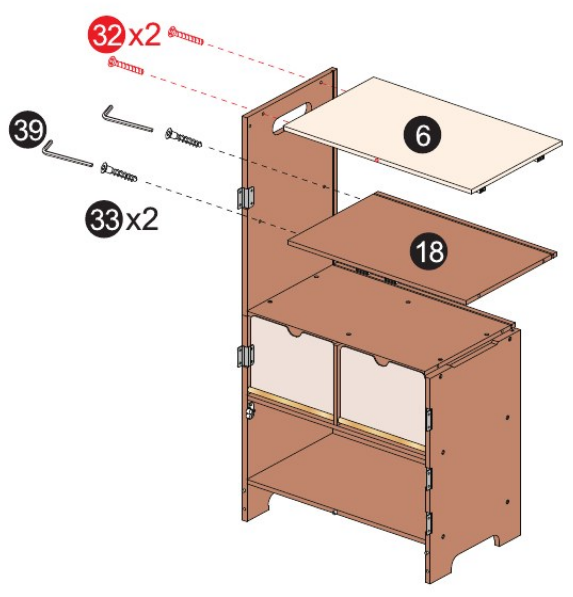   


22

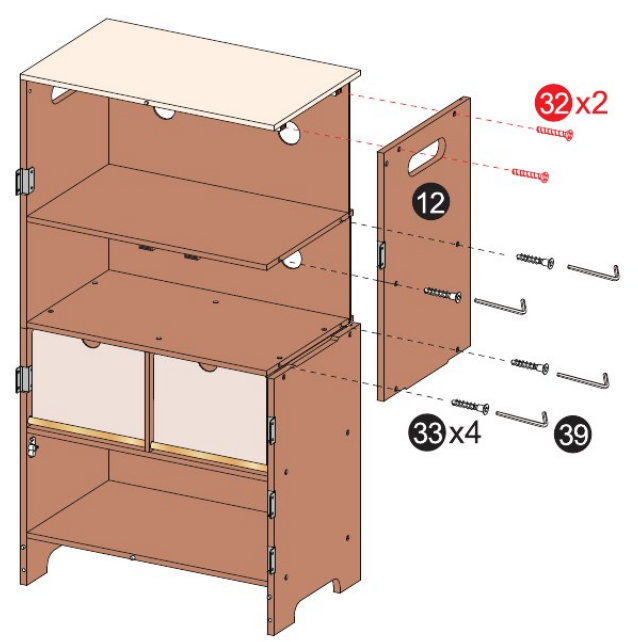 
 


Assembly Instruction


 
23

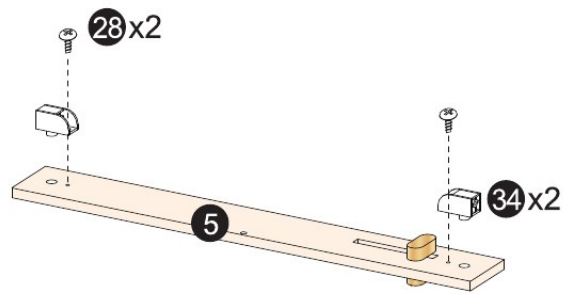



24

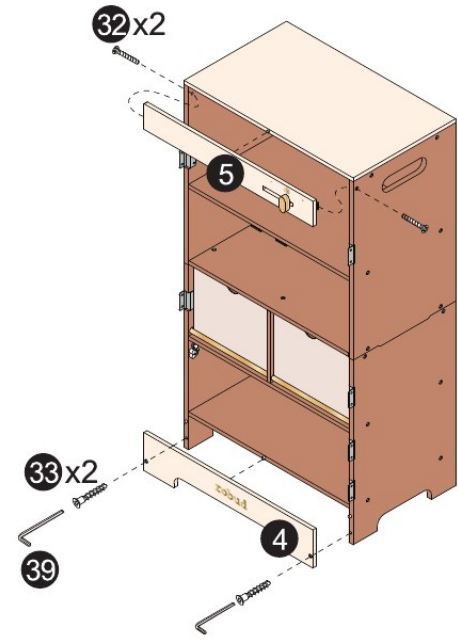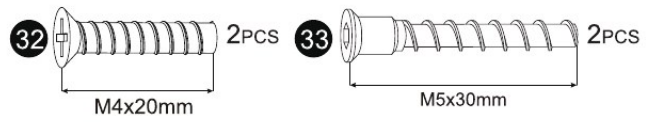  

25

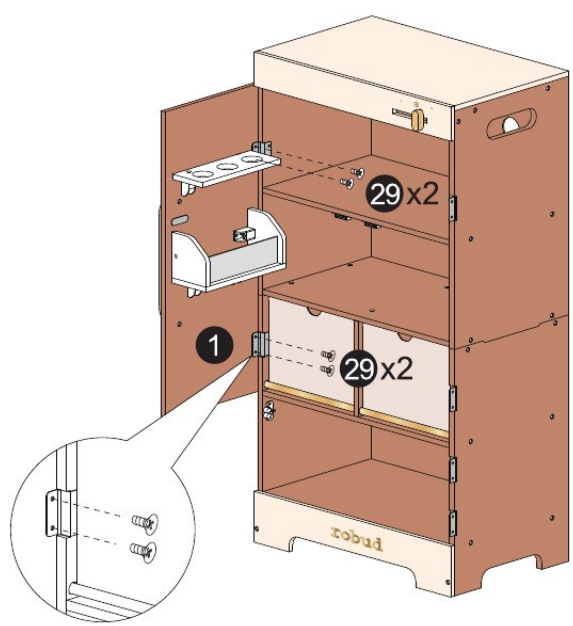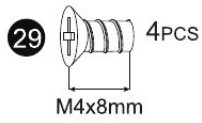  


26

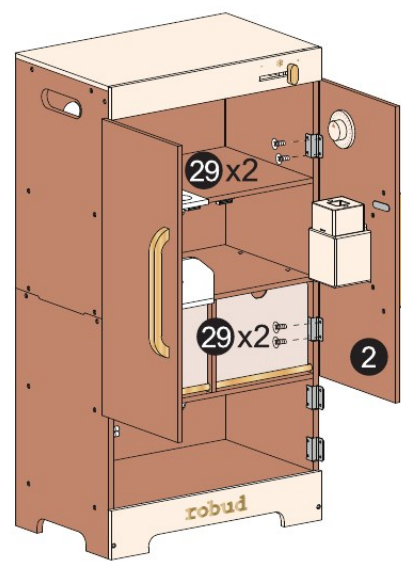 
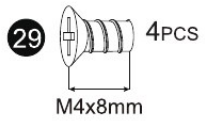 


Assembly Instruction

 
27

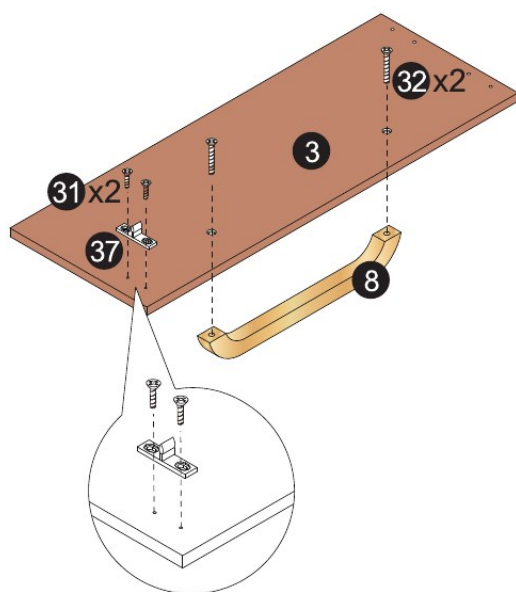

28



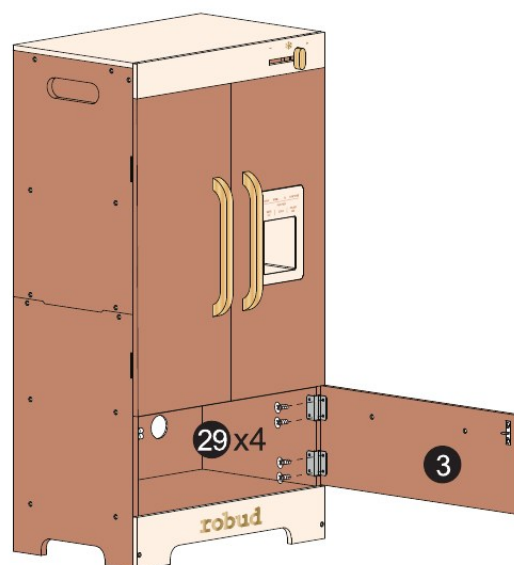 
 


29

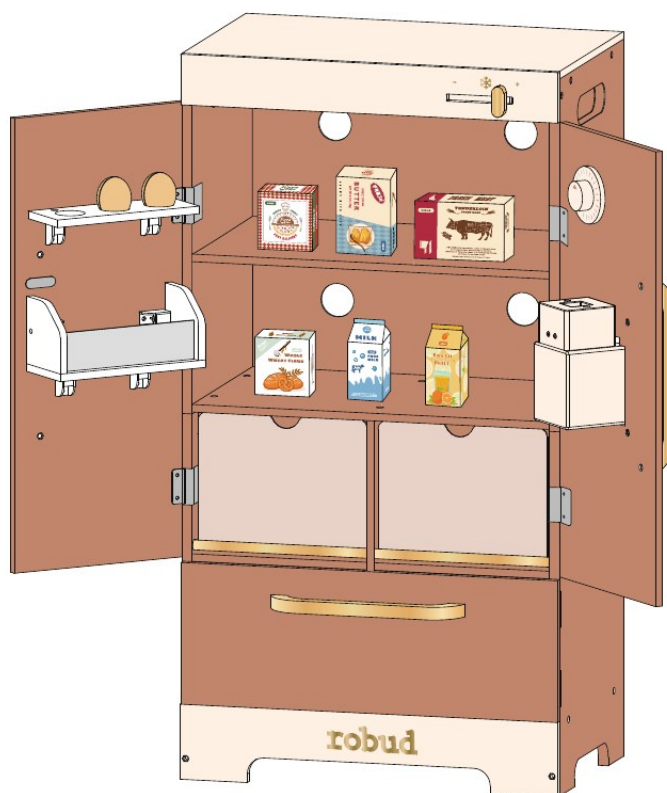 

Assembly Instruction

    30

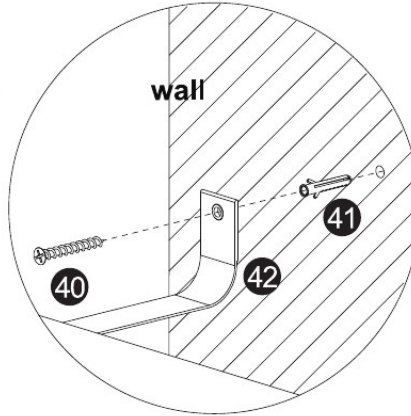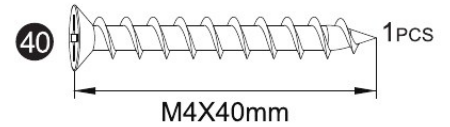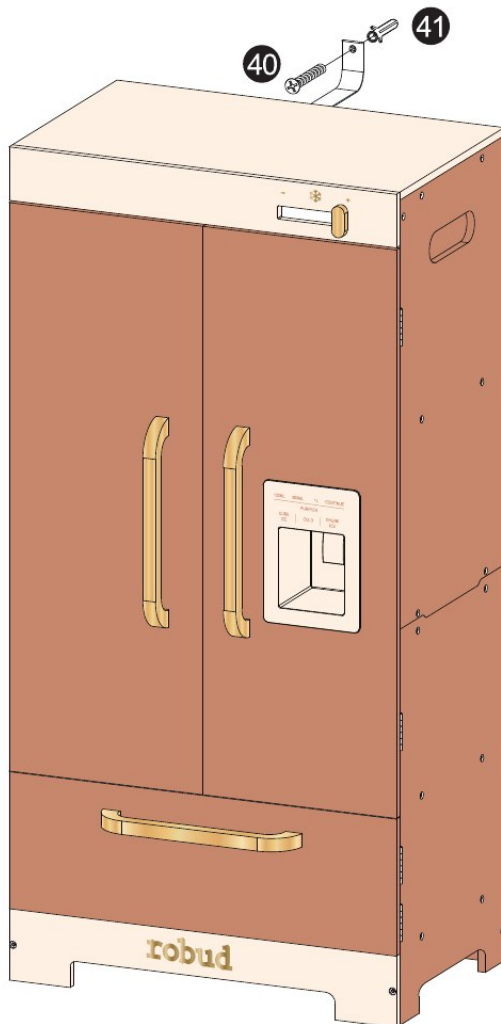

! Notice:

If 42 was not assembled in Step 38, skip this step.

! Notice:

The anti-tip assembly can be secured on the wall to prevent the refrigerator from tipping during play.

It is recommended to place the refrigerator against the wall during use.

 
 
Avoid placing the refrigerator in open spaces and prevent your child from climbing on it.

The hardware accessories are primarily suitable for being assembled on walls shown in the instruction.

For other situations, consult your local hardware store to choose more suitable accessories.

Instruction of anti-tip assembly

suitable Bricks/Materials

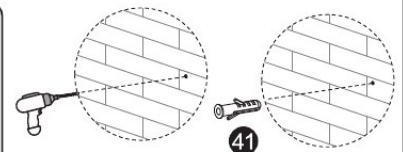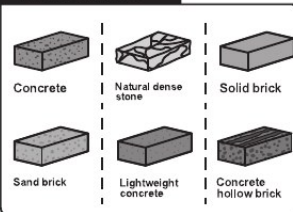

Use the electric drill to drill holes on marks.

The punching depth should be longer than the part to be inserted (the expandable tube 41).

Place the expandable tubes 41 into the drilled holes.

Finally, screw 40 into two hole for the expandable tubes.

Other Products



PRETEND PIAY



Hot

Age:3+

Pink Kitchen

SKU:WCF23
Assembled size:
31.3 *14* 38.6 (inch)
79.5*35.5*98(cm)



 
New

Age:3+

Oatmeal Tableware

SKU:WCF33
Assembled size:
9*2.6*9.4(inch)
22.5*6.5*24(cm)



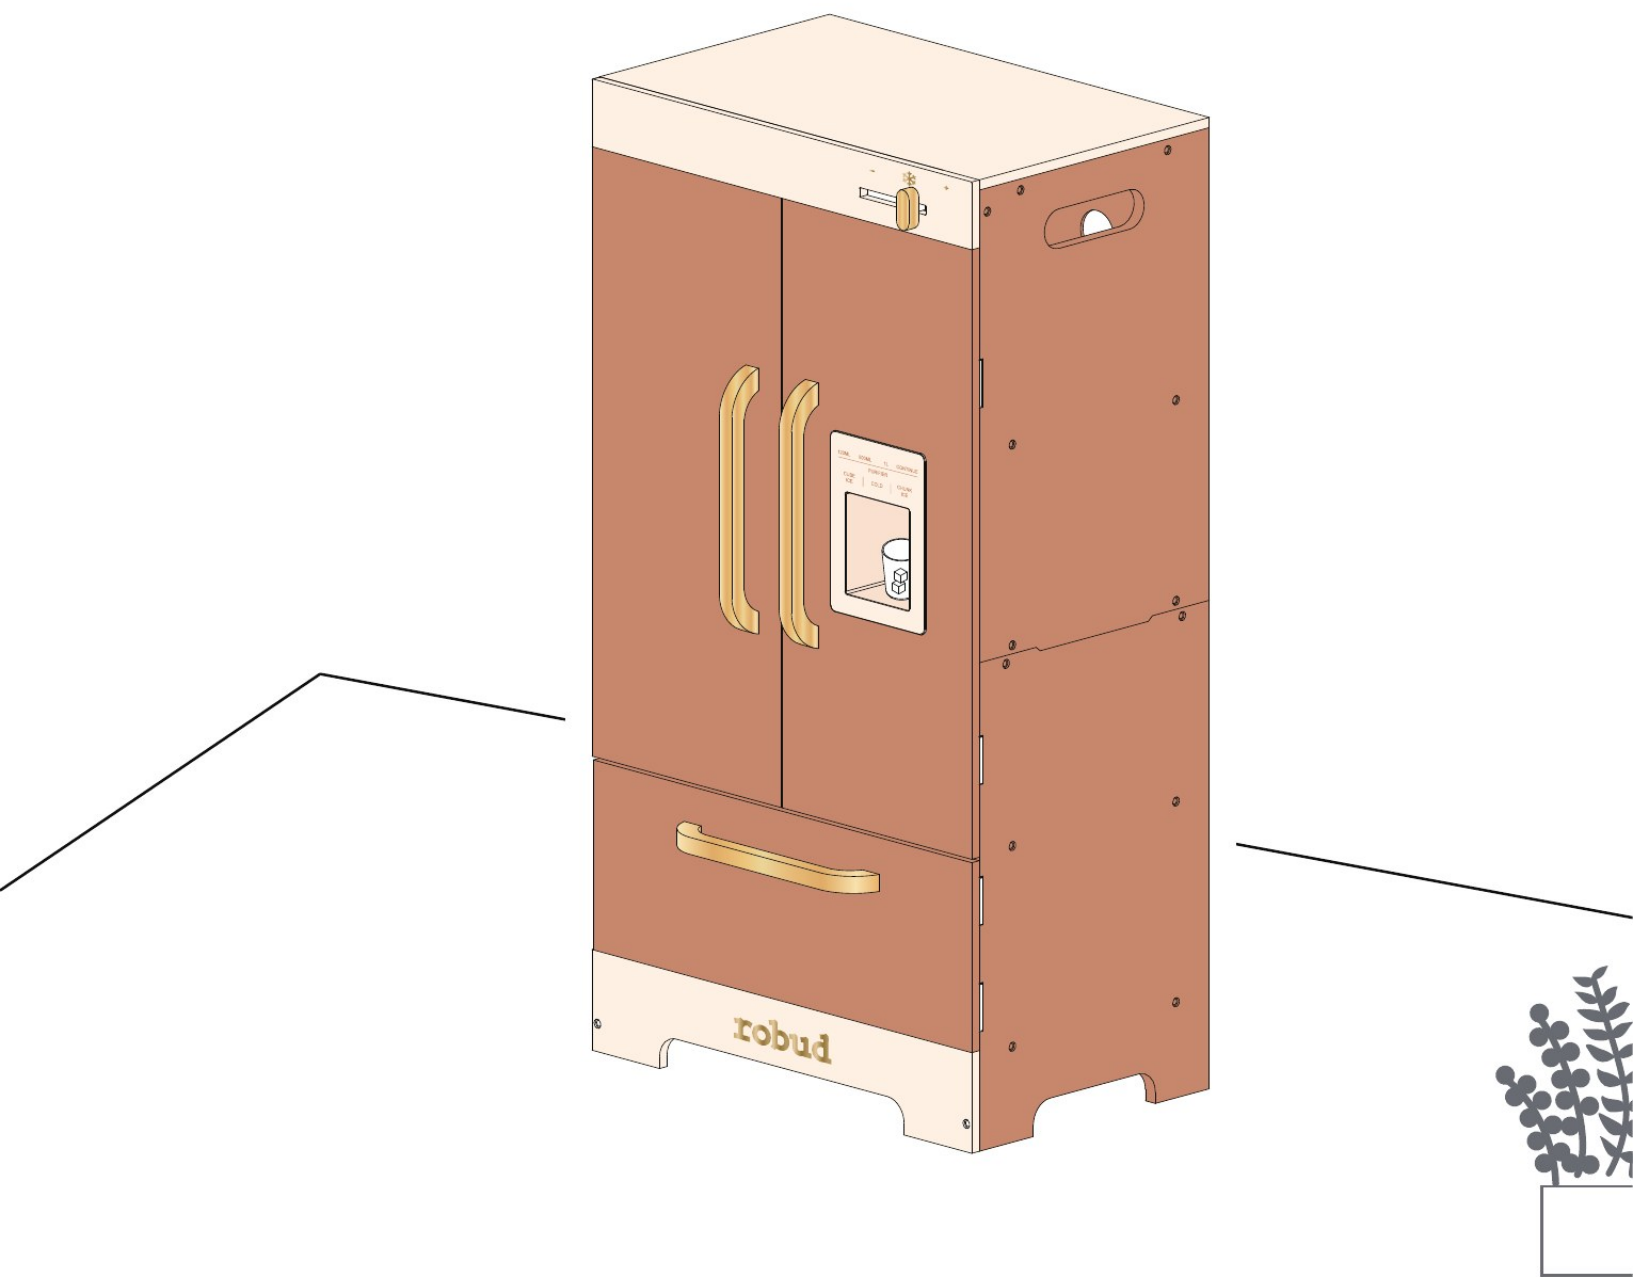

www.robud.com