

Sea Salt Kitchen Oven

(WCF67)-V2

 


98.1WCF67.150

Assembly Instruction

Please follow this instruction to avoid assembly errors.

For customer service, please contact **E-mail: shop@robud.com**

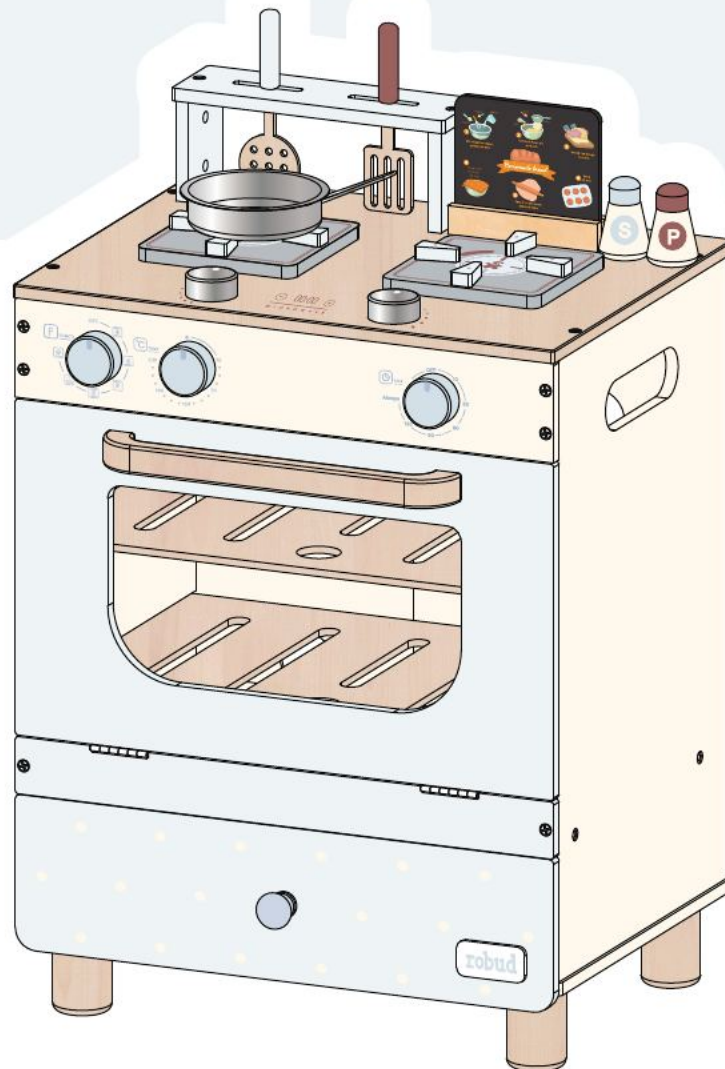

WARNING:

- CHOKING HAZARD-Small parts. Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package, please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- Please keep the product away from fire, substances flammable and humid environments to prevent damage.

Assembly Tips

 
 


Assembly time: 2-2.5 hours





Recommended Tools:

(Please prepare them by yourself.)

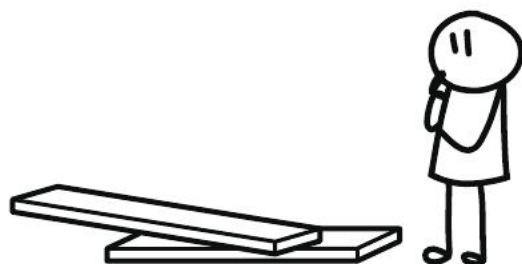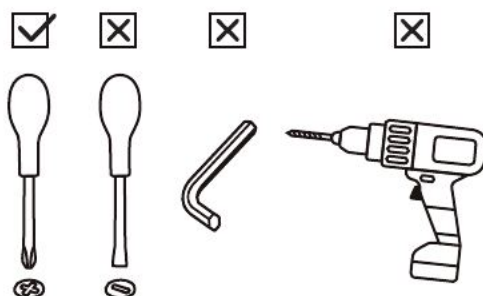

  - Avoid overtightening screws during assembly.
- Screws should be fully tightened once.
- Arrange all accessories on a hard, flat surface for assembly.
- Follow the instructions step by step.

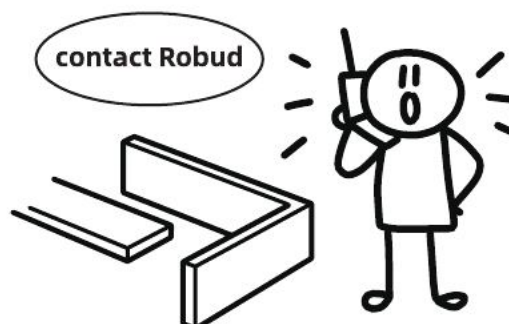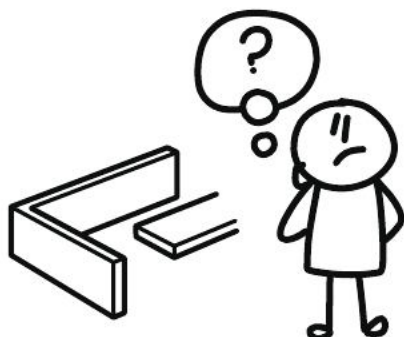

If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us **shop@robud.com**. We are glad to do our best to solve your problem and provide a solution to your satisfaction.

Icon Illustration:



Special attention in assembly



Remove the plastic film on surface



Perspective conversion

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


Step 1










Step 2


Product Parts

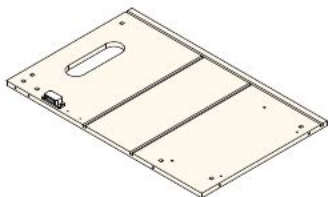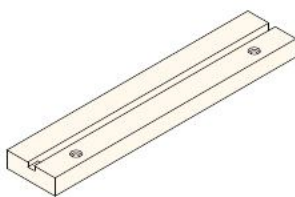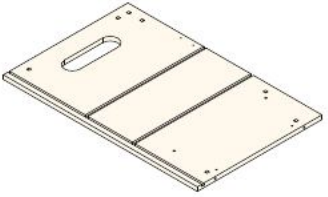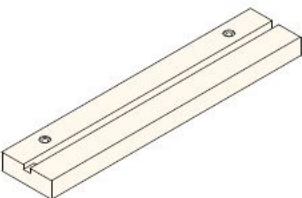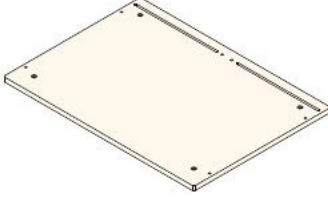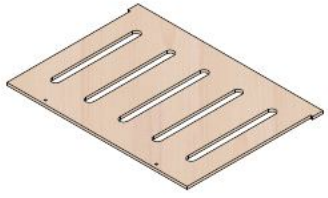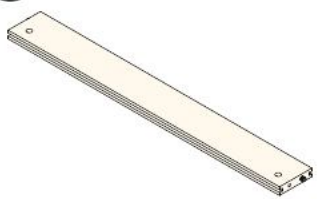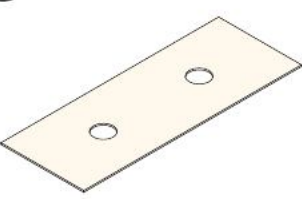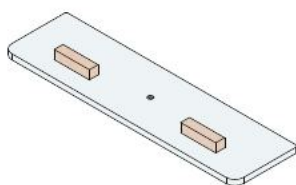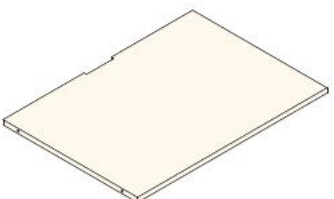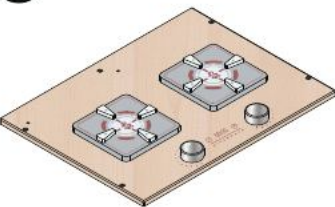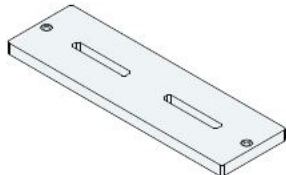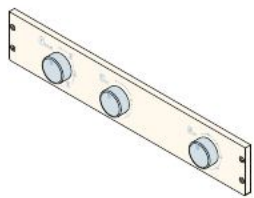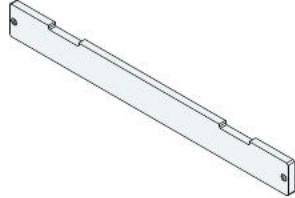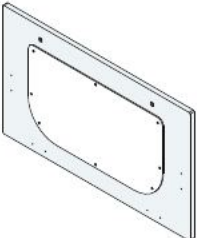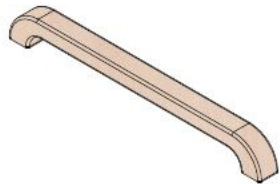1		2		3		4	
	x1		x1		x2		x1
5		6		7		8	
	x1		x1		x4		x1
9		10		11		12	
	x1		x2		x1		x1
13		14		15		16	
	x1		x1		x2		x1
17		18		19		20	
	x1		x1		x1		x1

       
Product Parts&Hardware

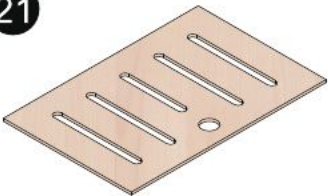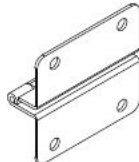21		22		23		24	
x2		x8		x2		x8	
25		26		27		28	
x7		x28		x2		x1	
							
x1							

 Assembly Instruction

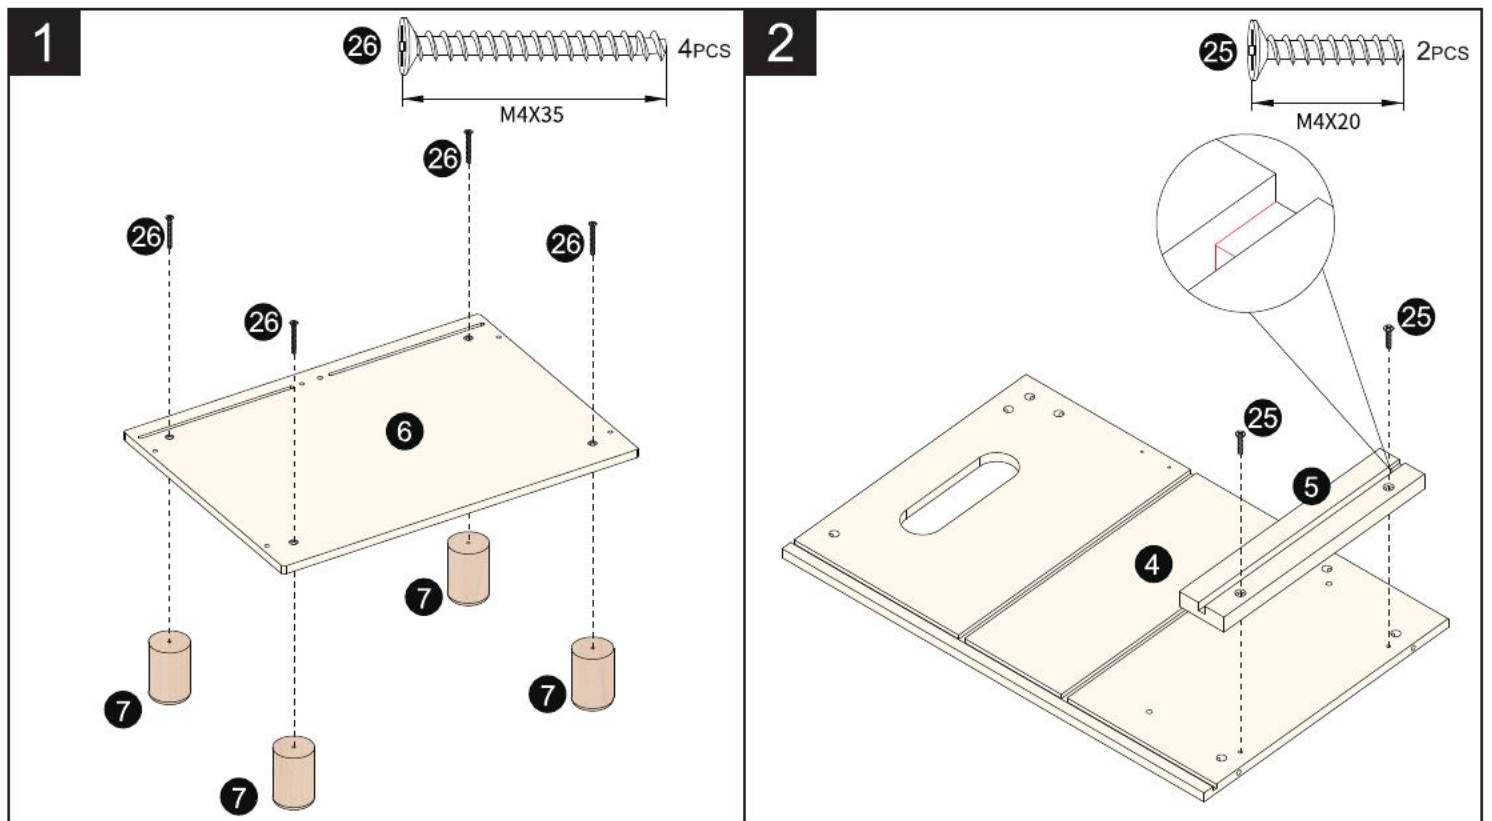


Assembly Instruction

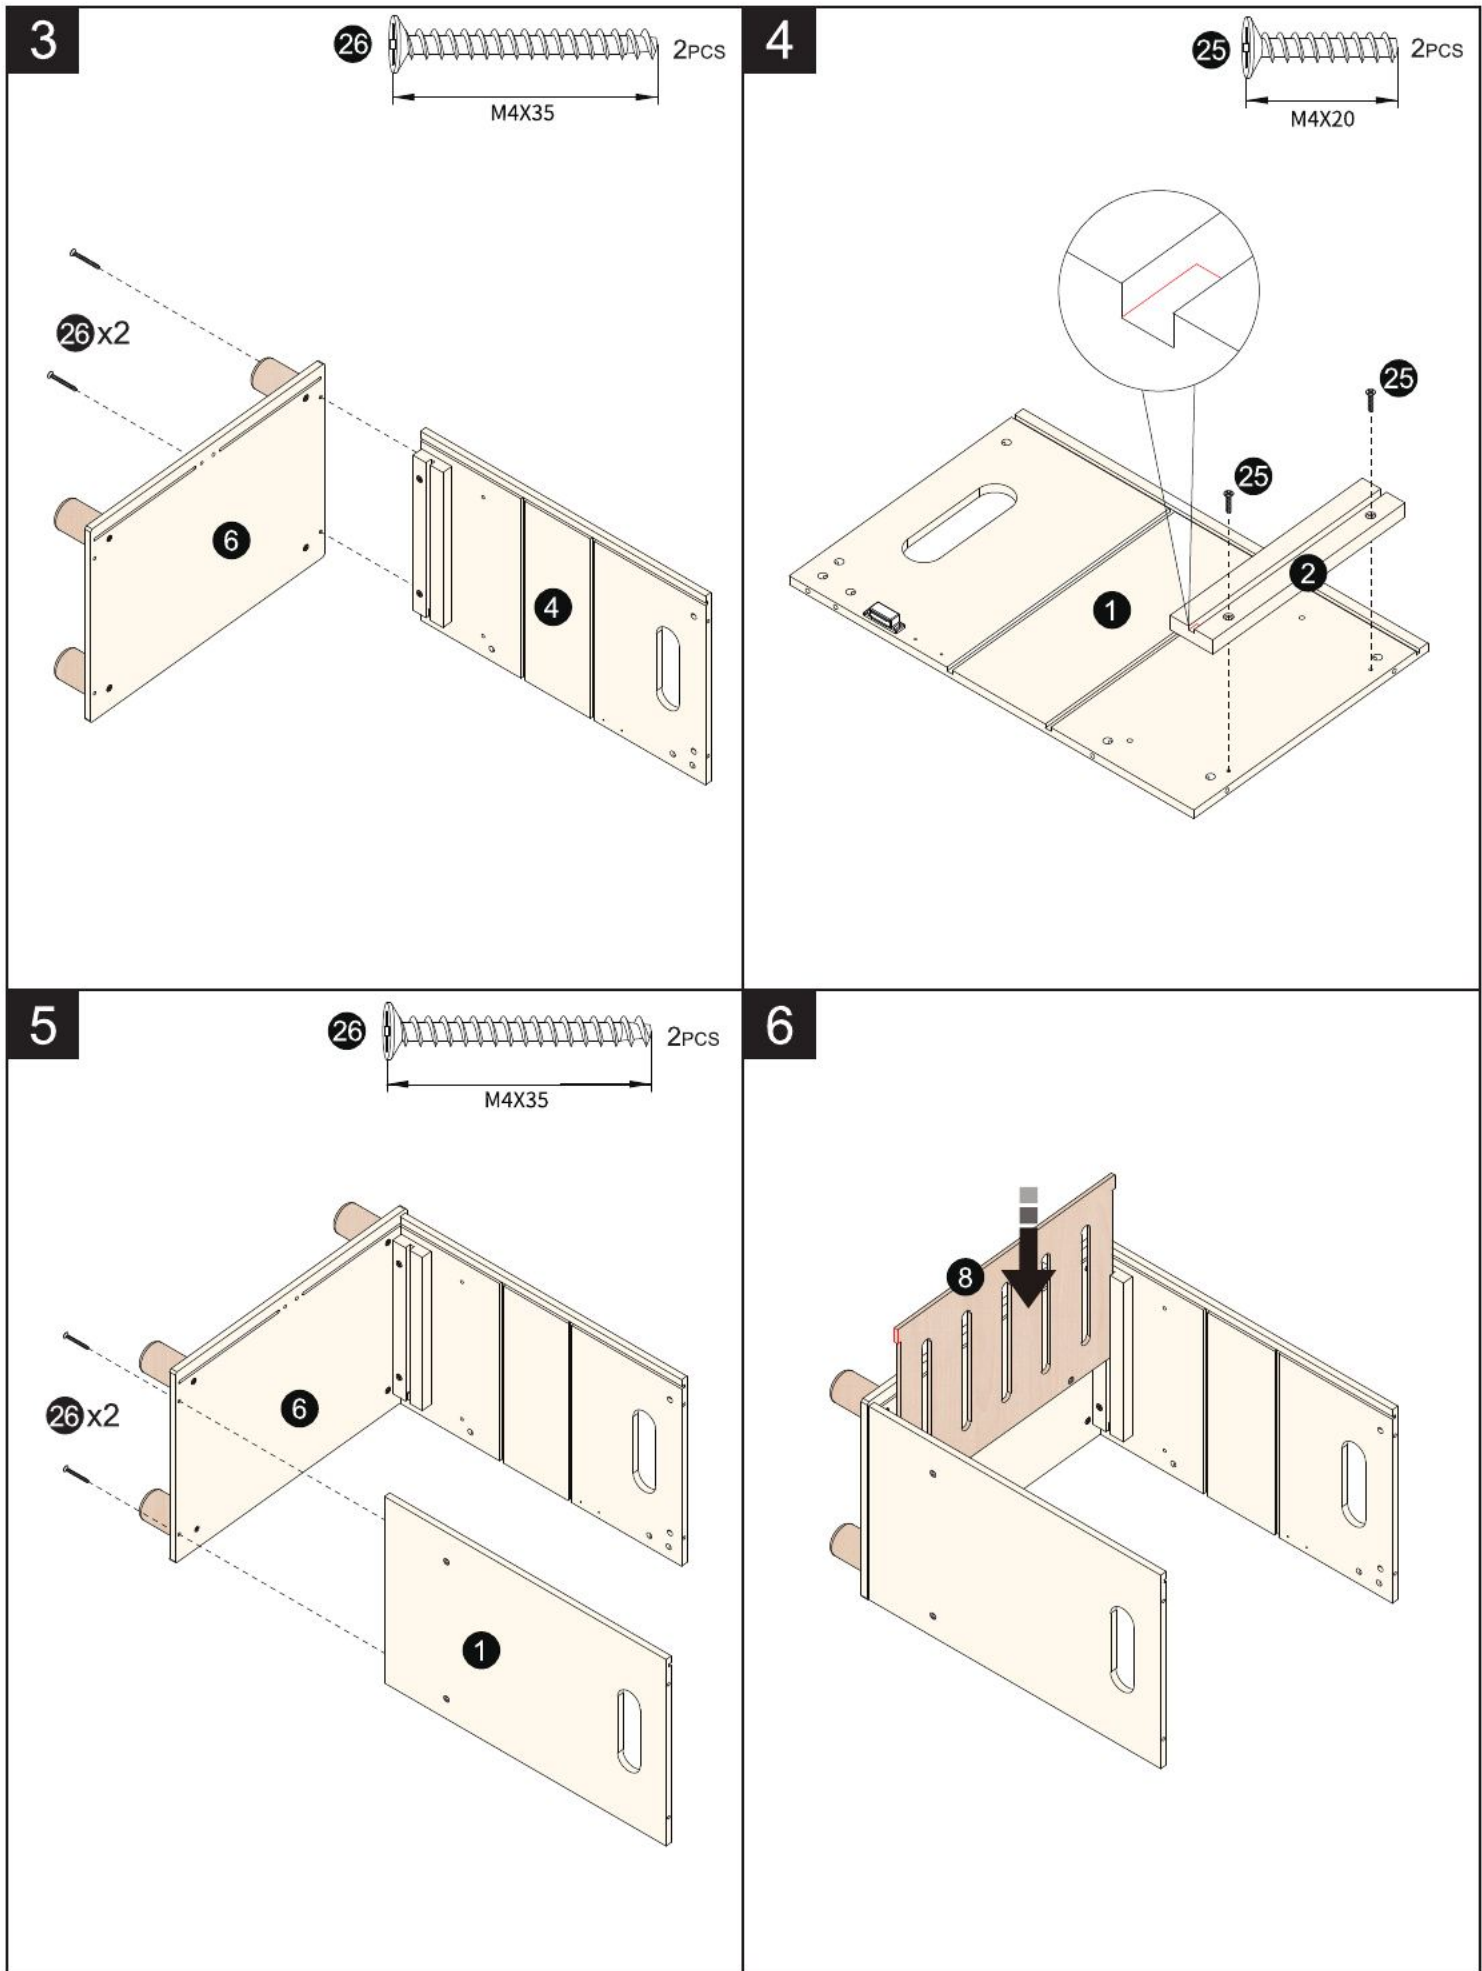 

Assembly Instruction


7

 26




M4X35

 1PCS

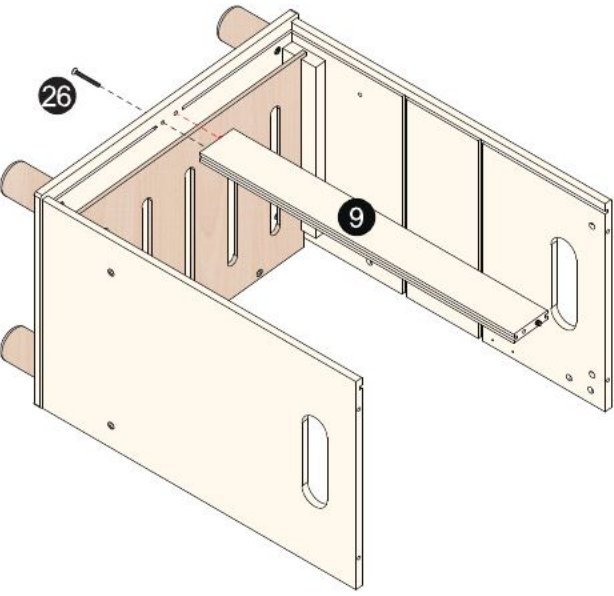


8

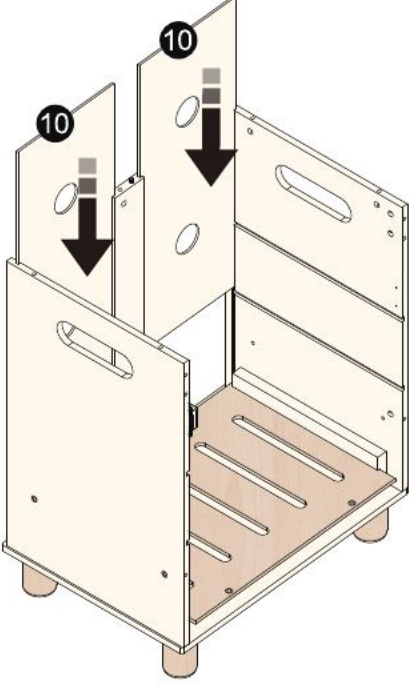 


9

 25




M4X20

 1PCS

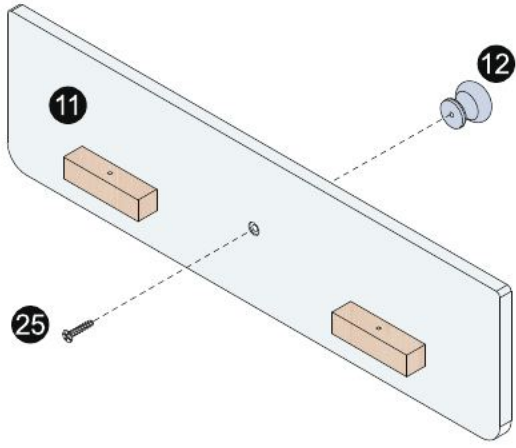


10

 23




M4X14

 
2PCS

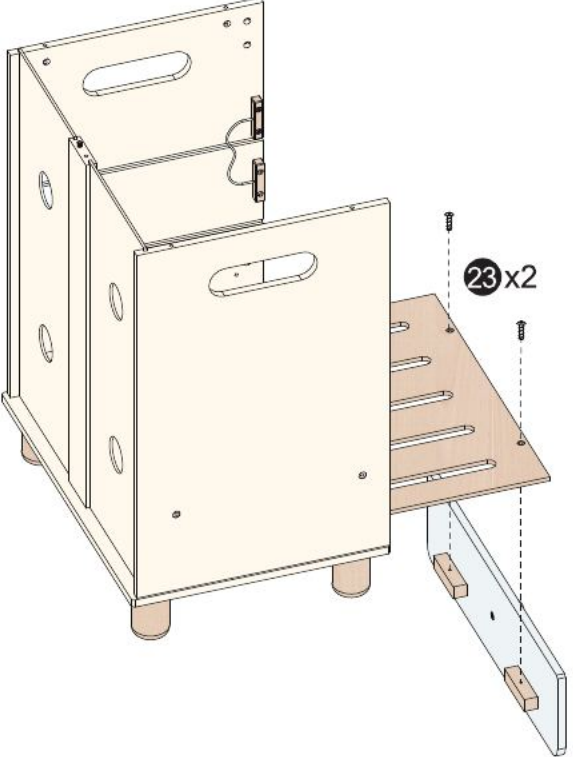


11

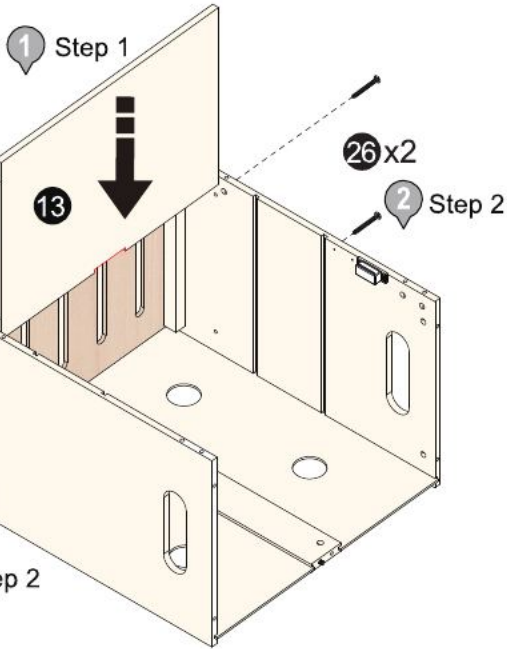 


12

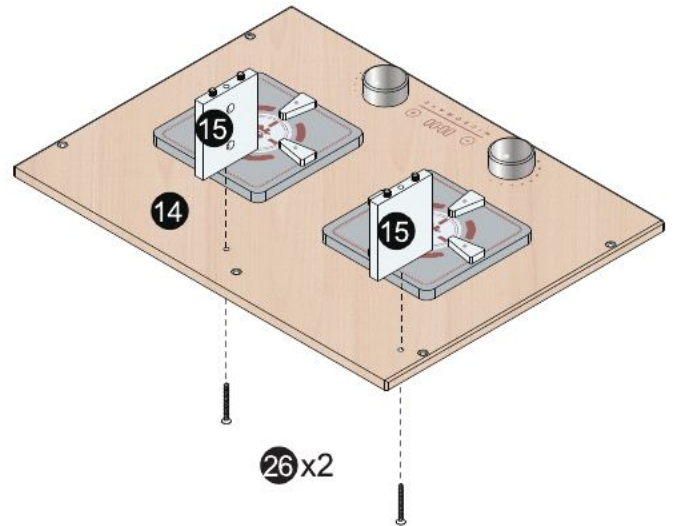 

13

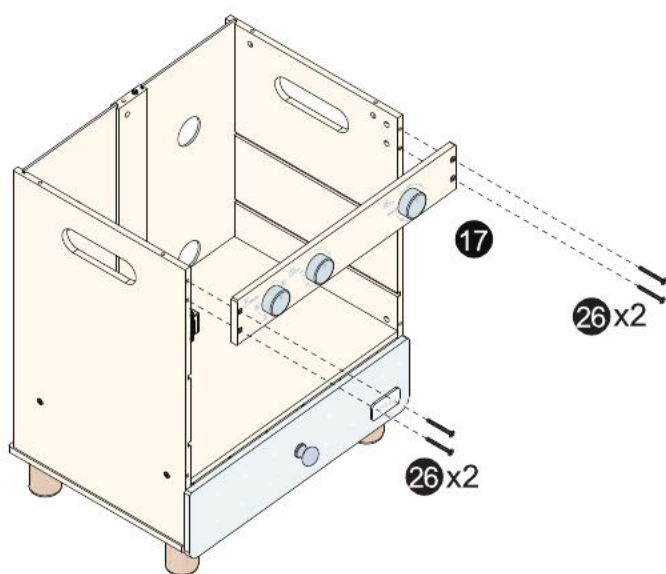 

14


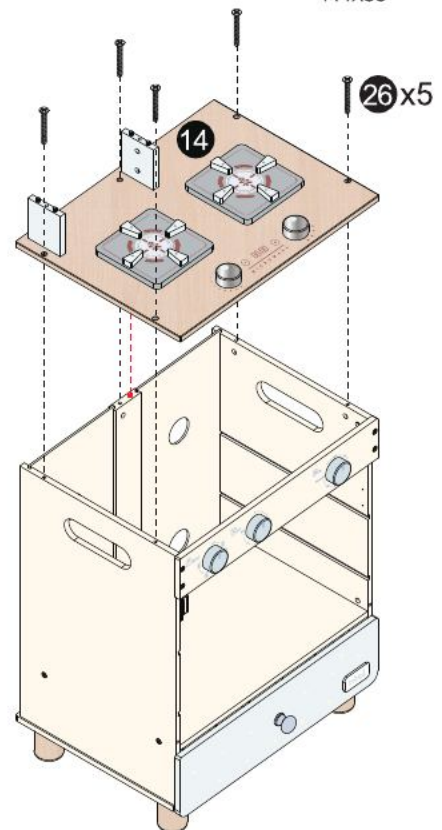 


15





Assembly Instruction

  
19

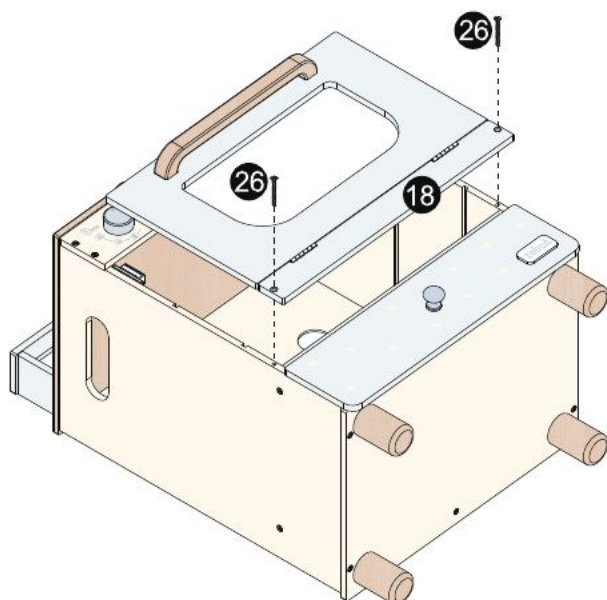



20

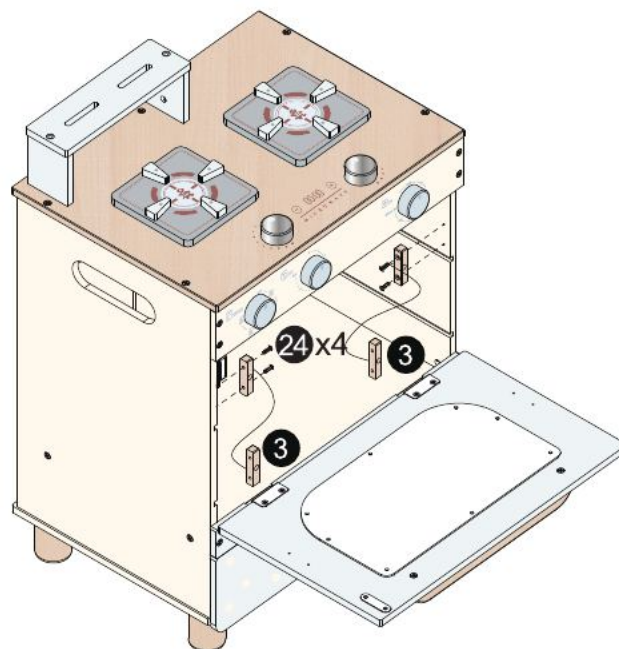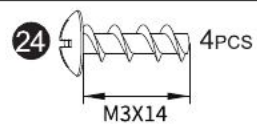  


21

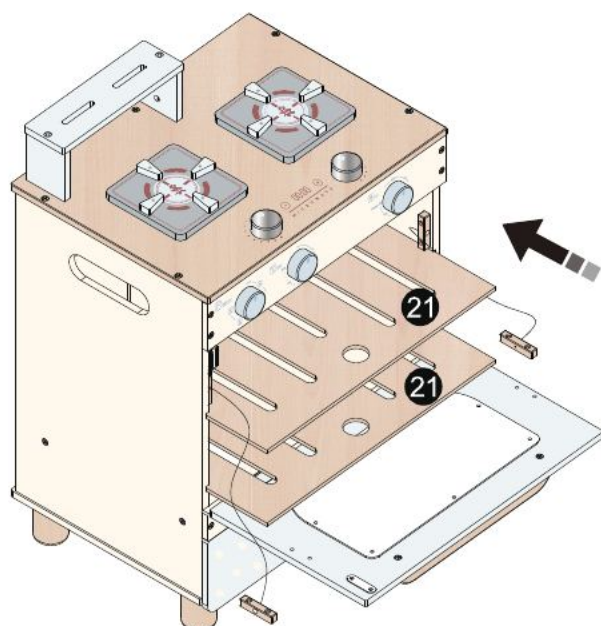 

22

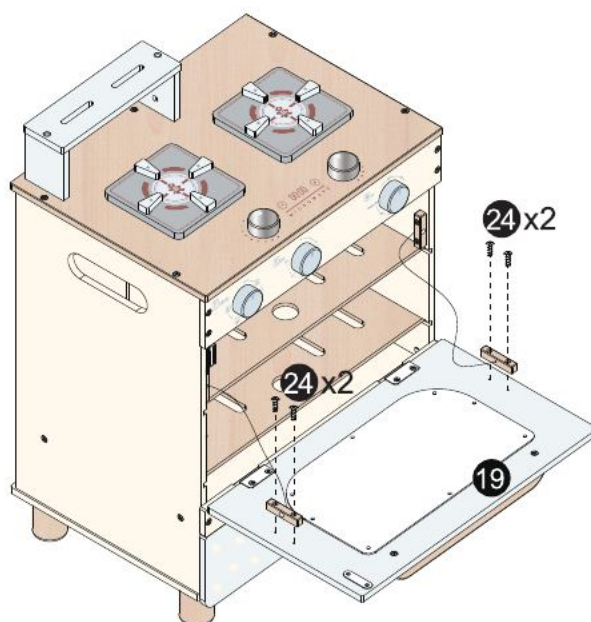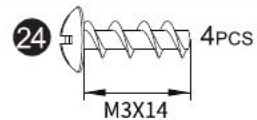  

Assembly Instruction

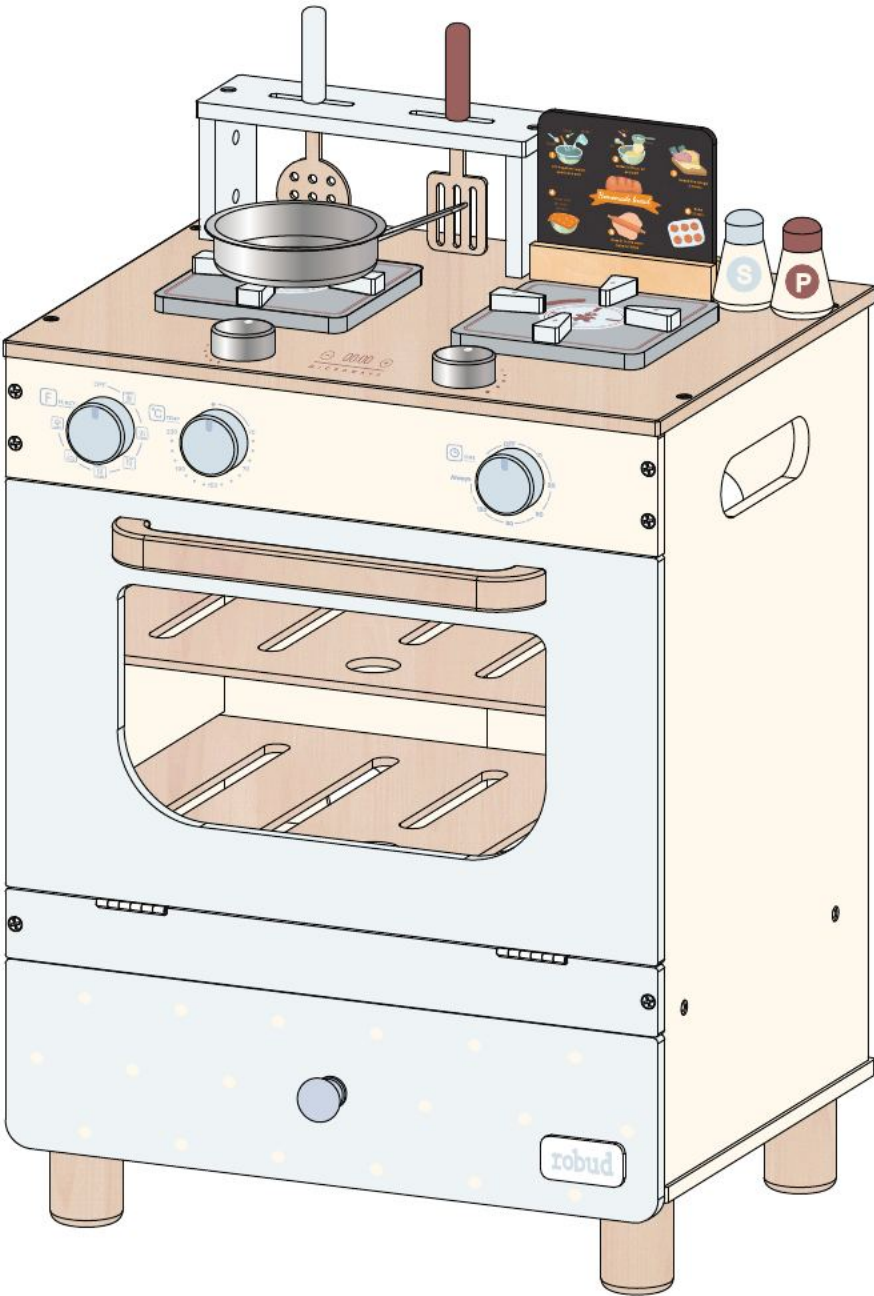 

Other Products



Age:3+

New

Coconut Oatmeal Plate

SKU:WCF34

Assembled size:

12*9*3.3(inch)

30.5*22.5*8.5(cm)

New

Age:3+

Oatmeal Tableware

SKU:WCF33

Assembled size:

9*2.6*9.4(inch)

22.5*6.5*24(cm)



Age:3+

New

 
Caramel Breakfast Machine

SKU:WCF35

Assembled size:

14*6.8*9.2(inch)

36*17.4*23.4(cm)

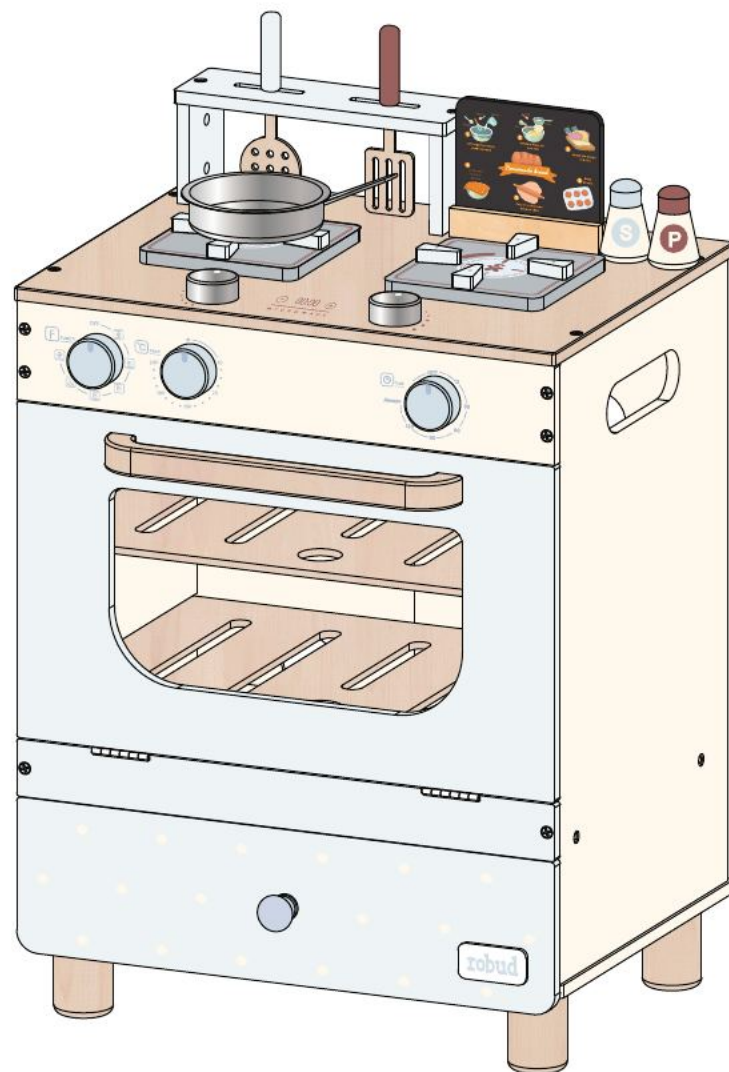

www.robud.com