 


Assembly Instruction

Please follow this instruction to avoid assembly errors.

For customer service, please contact **E-mail: shop@robud.com**

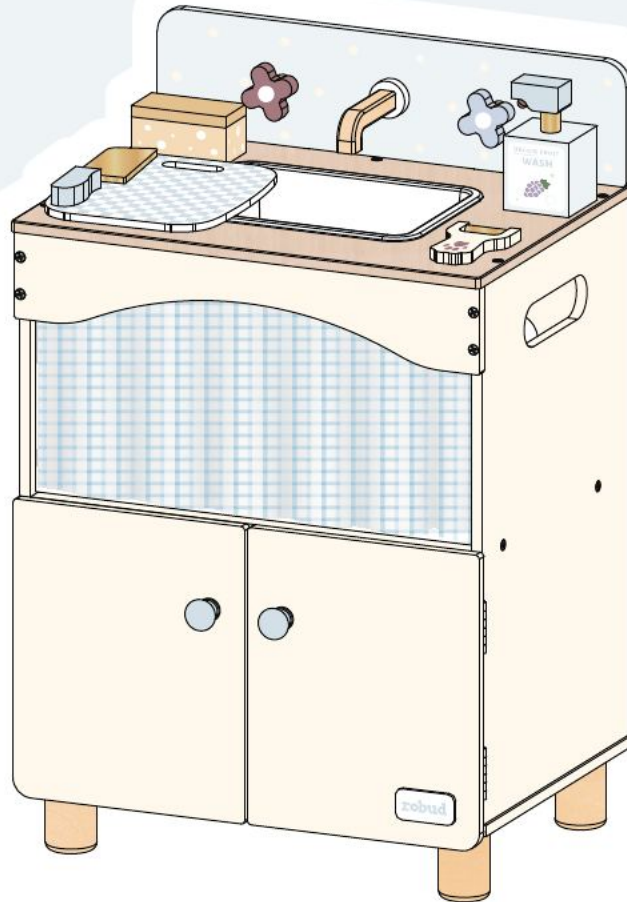

WARNING:

- CHOKING HAZARD-Small parts. STRANGULATION HAZARD-Long cord. Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package, please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- The product requires 2"AAA/LR03/AM4 1.5V" batteries. (Batteries for self-preparation).
- Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity(+ and -).
- Remove the exhausted battery in time.
- The power supply terminal cannot be short circuited.
- Do not connect the wire to a mains outlet.
- The product is not to be connected to more than the recommended number of power supplies.
- Check each part before assembly. If the part is damaged, fix it well before assembly.
- The instruction must be retained since it contains important information.

MAINTENANCE:

- Please clean the product with dry soft cloth, don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please keep the product away from water, and don't put liquid in the toy sets.



Assembly Tips

 
 


Assembly time: 2-2.5 hours





Recommended Tools:

(Please prepare them by yourself.)

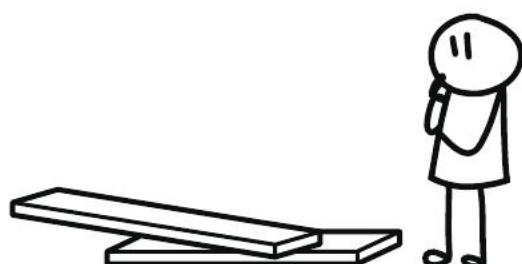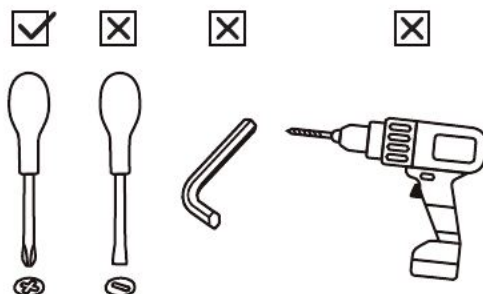

  - Avoid overtightening screws during assembly.
- Screws should be fully tightened once.
- Arrange all accessories on a hard, flat surface for assembly.
- Follow the instructions step by step.

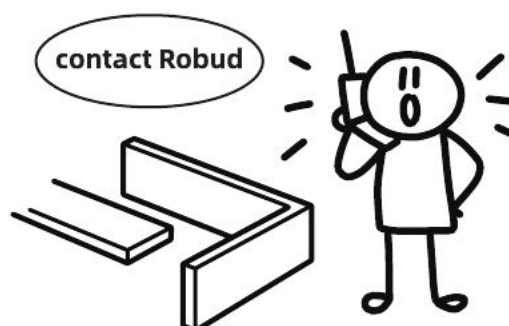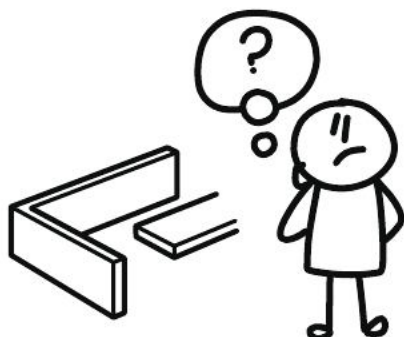

If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us **shop@robud.com**. We are glad to do our best to solve your problem and provide a solution to your satisfaction.

Icon Illustration:



Special attention in assembly



Remove the plastic film on surface



Perspective conversion

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


Step 1






Step 2

Product Parts&Hardware

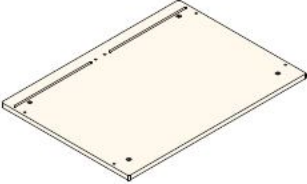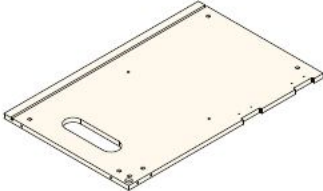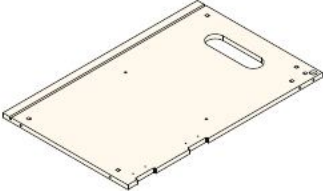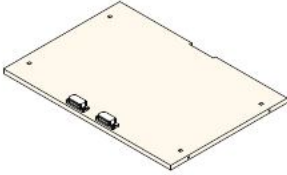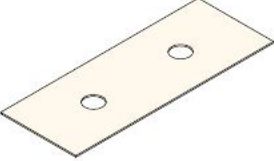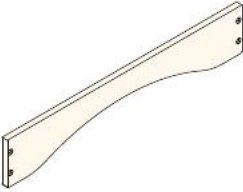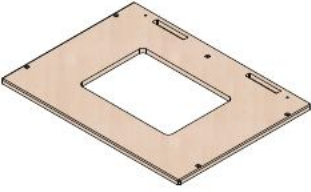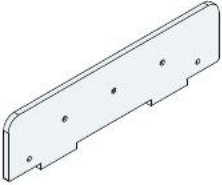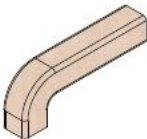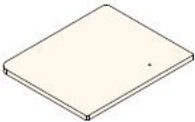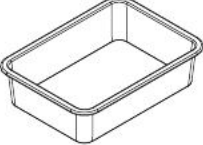
1		2		3		4	
x1		x4		x1		x1	
5		6		7		8	
x1		x1		x2		x1	
9		10		11		12	
x1		x1		x1		x1	
13-1		13-2		14		15	
x1		x1		x1		x1	
17		18		19		20	
x1		x1		x16		x4	

 Product Parts&Hardware

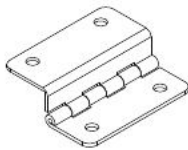
21  M4X35	22 	23 	24 
x25	x2	x4	x1

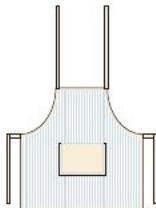  25 
x1

 Assembly Instruction

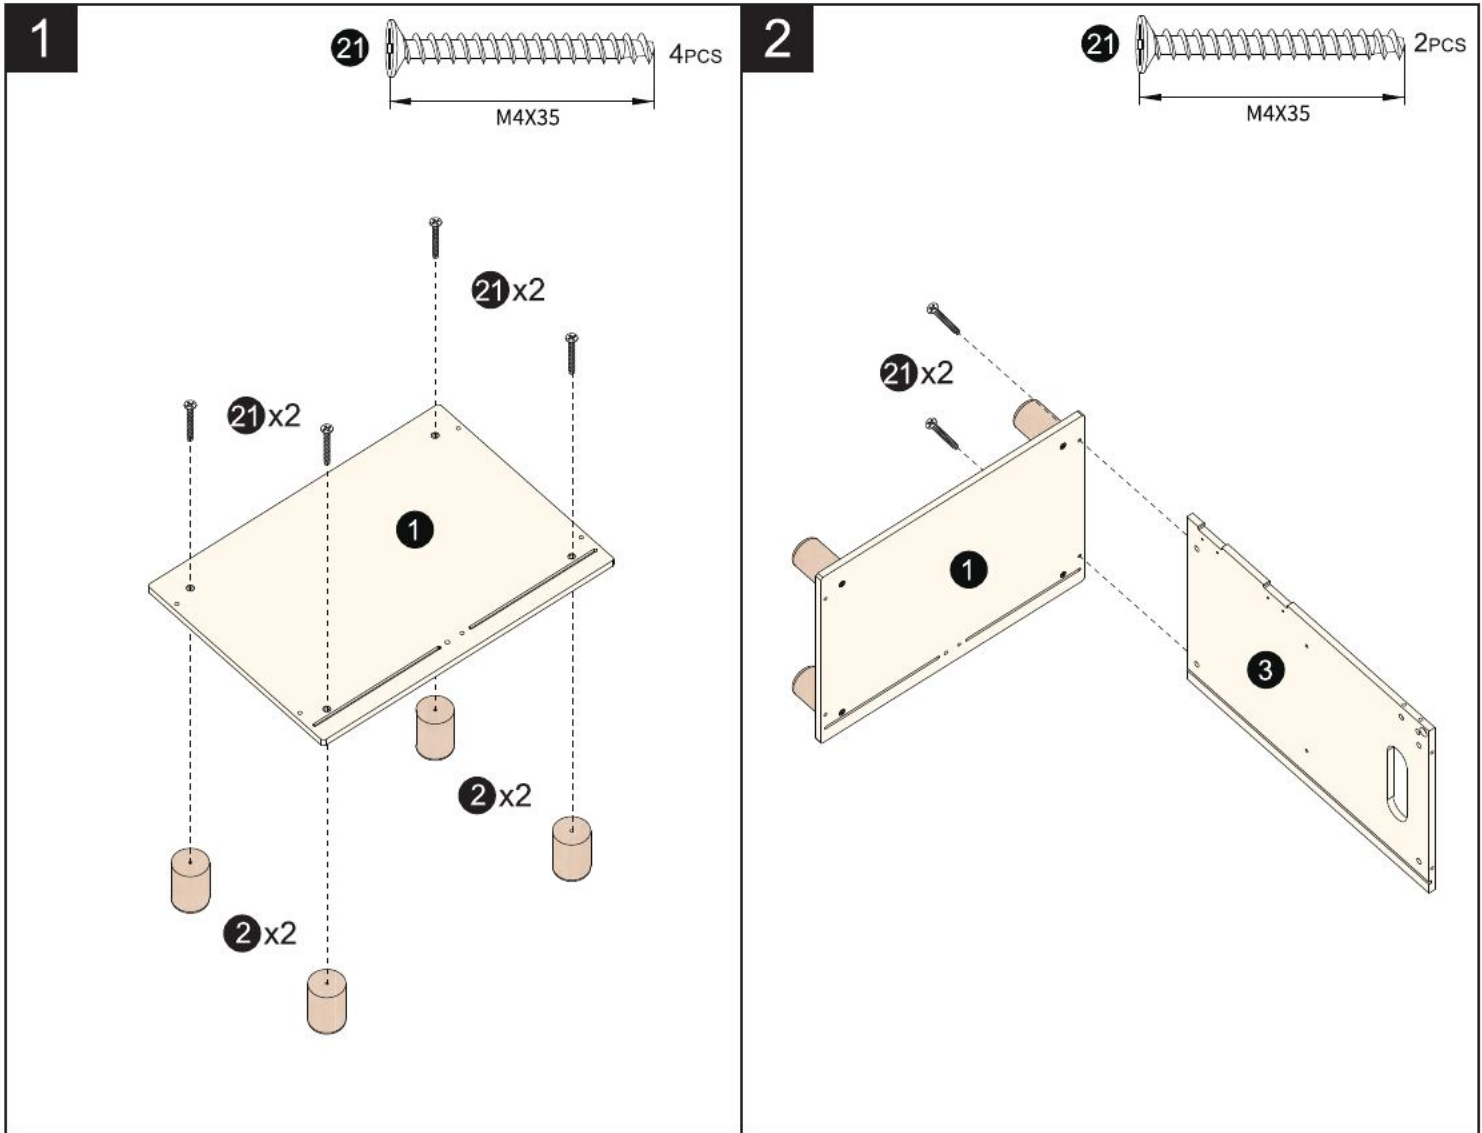


Assembly Instruction

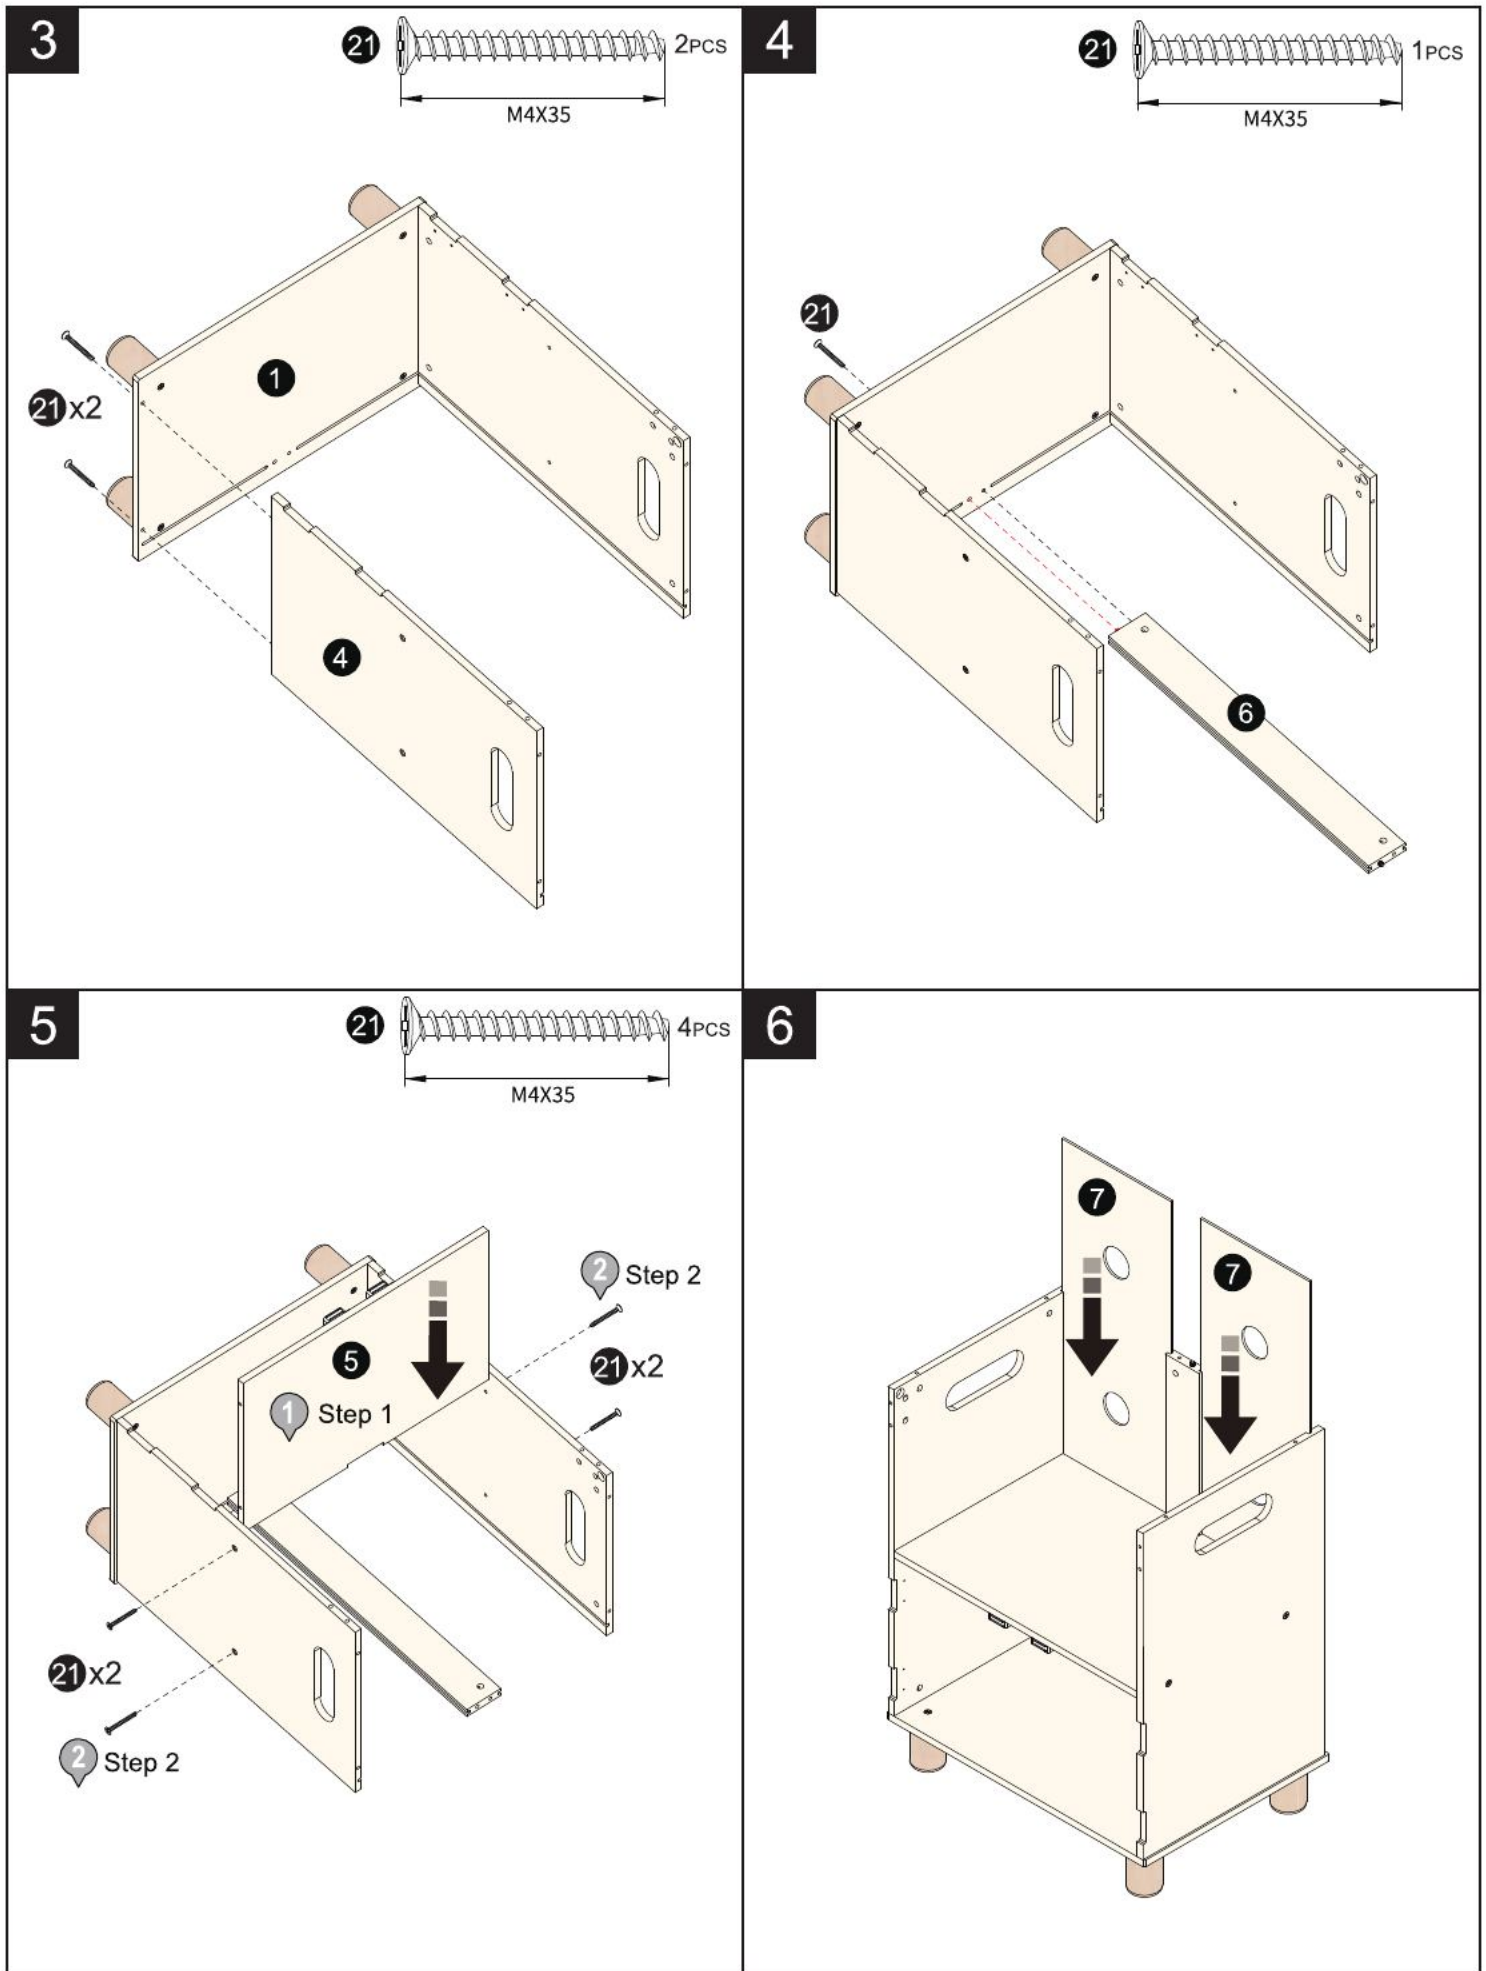 


Assembly Instruction


 
7

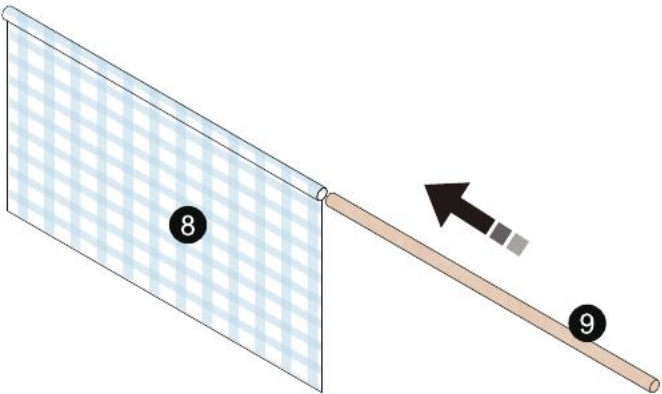



8

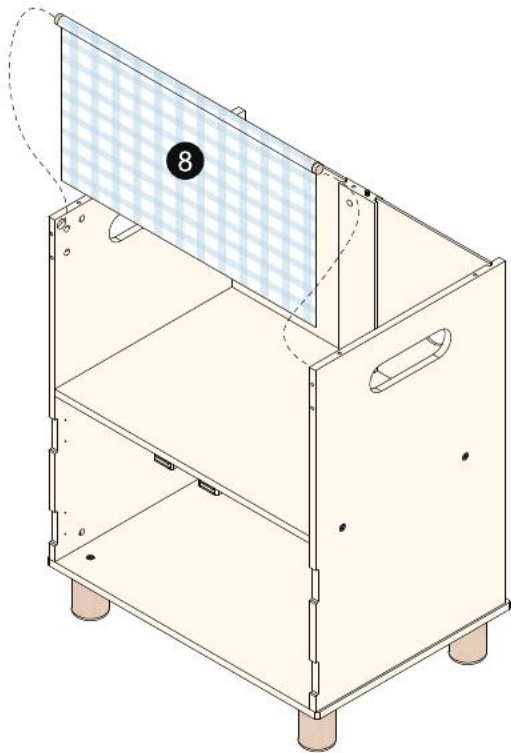 


9

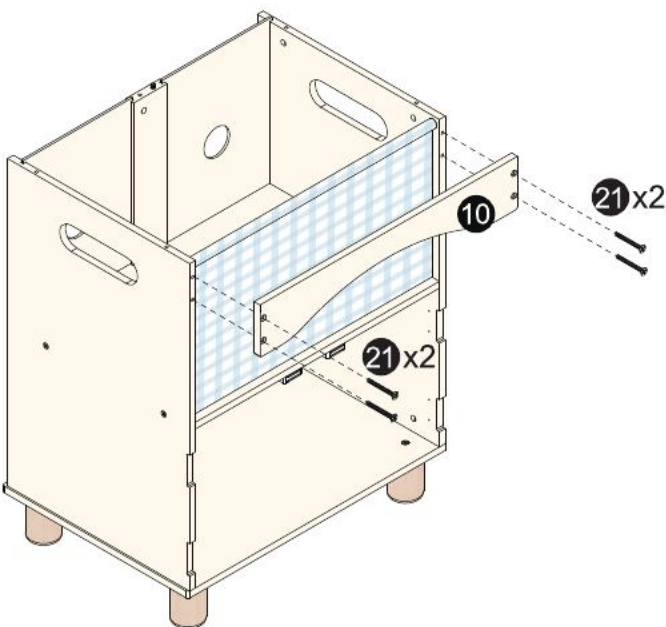  

10

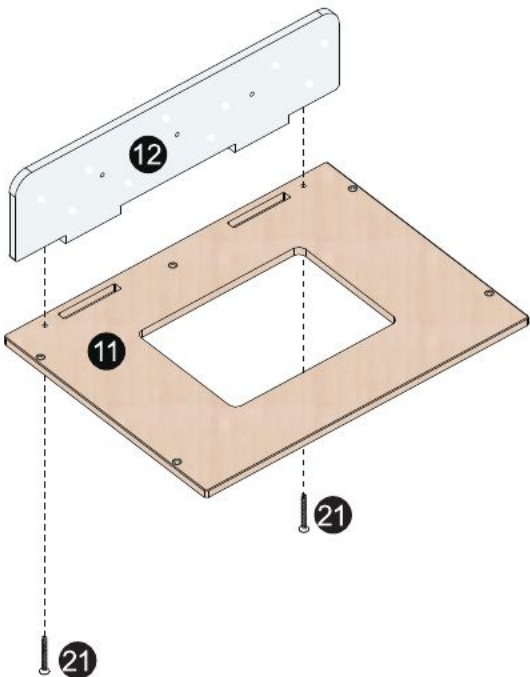 
 


Assembly Instruction


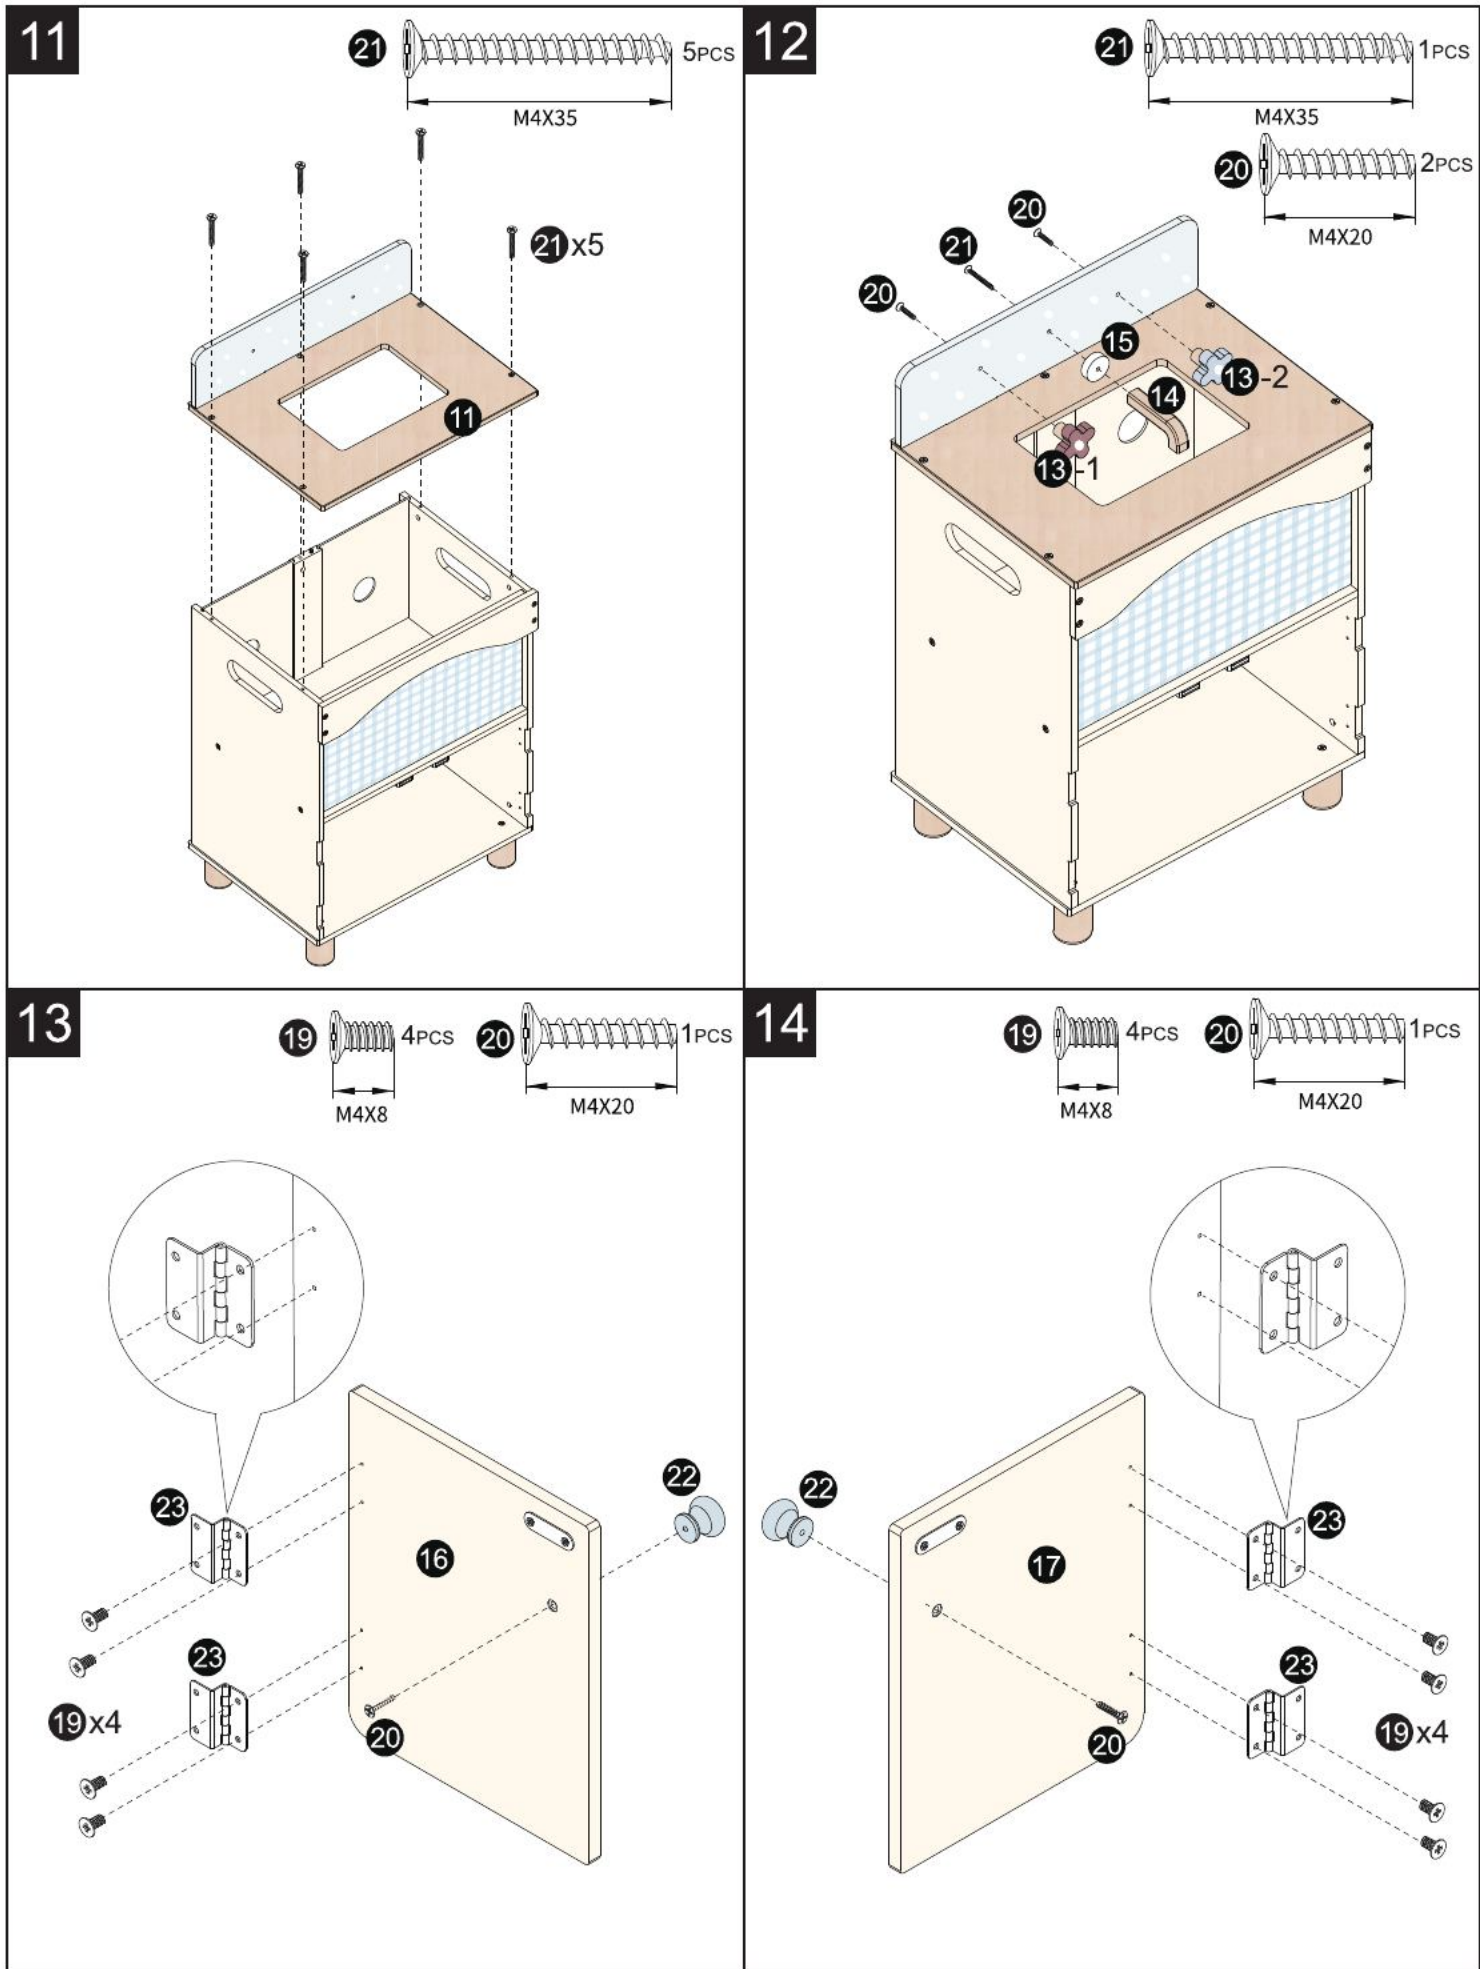 


Assembly Instruction

  
15

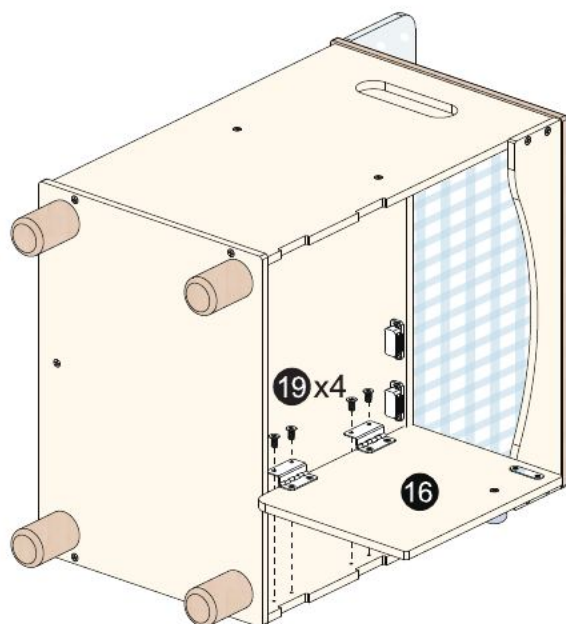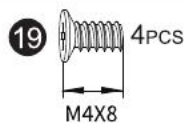


16

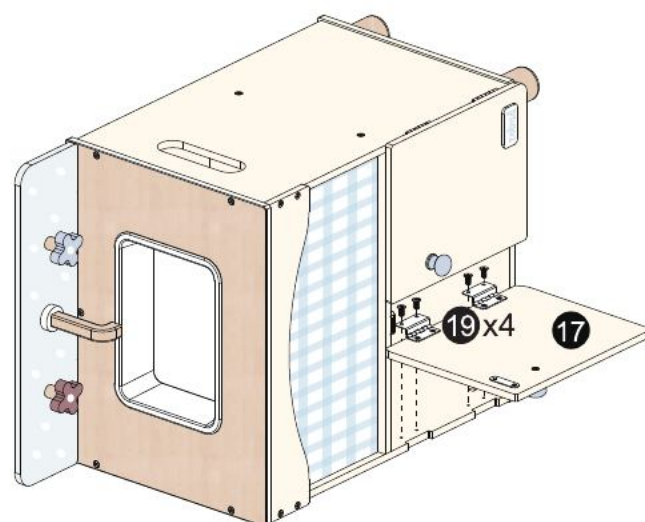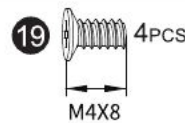  


17

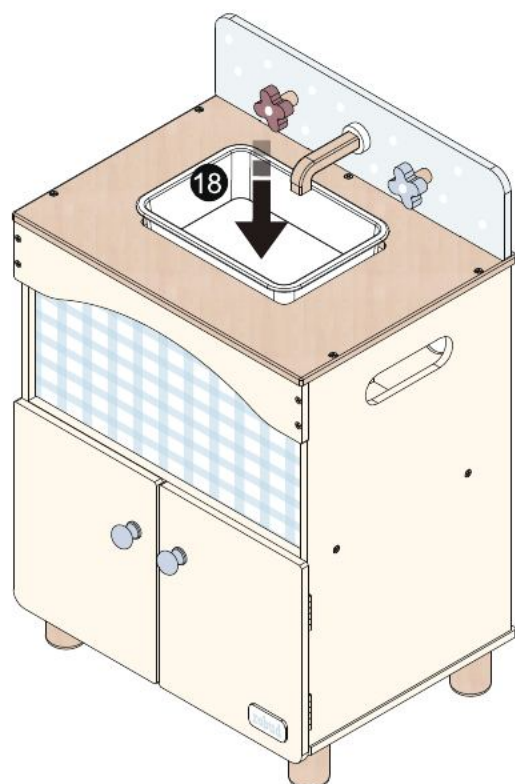 

18

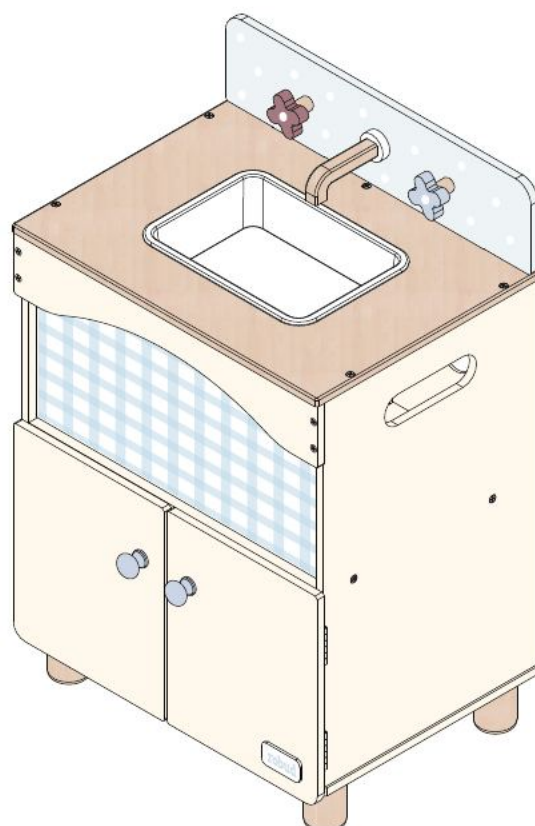 

Assembly Instruction

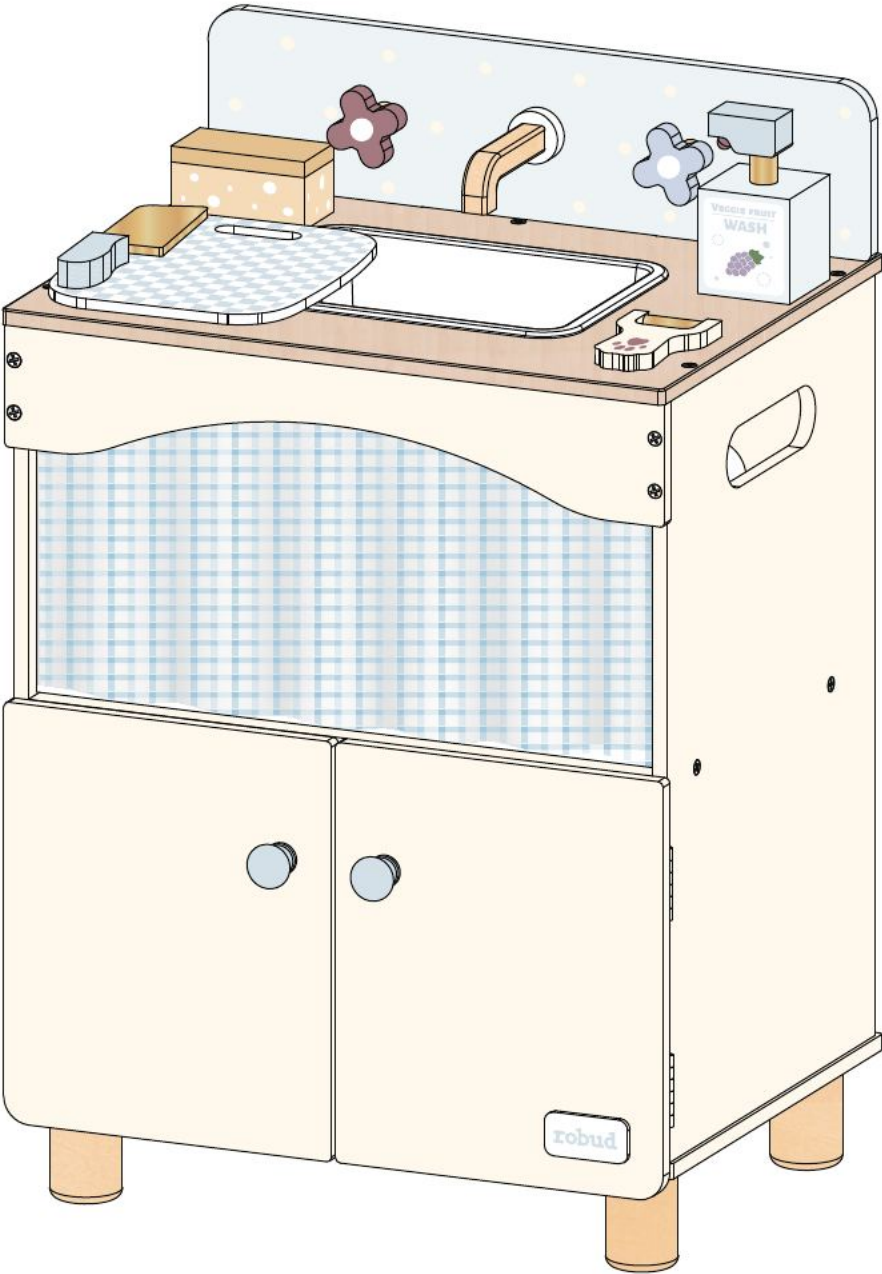 

Assembly Instruction



Age:3+

New

Wooden Cutting Food Playset-Fruit

SKU:WCF43

Assembled size:

4.72*2.36*5.91(inch)

12*6*15(cm)

New

Age:3+

Wooden Cutting Food Playset-Vegetables

SKU:WCF44

Assembled size:

4.72*2.36*5.91(inch)

12*6*15(cm)



Age:3+

New

Wooden Cutting Food Playset-Meat

SKU:WCF45

Assembled size:

4.72*2.36*5.91(inch)

12*6*15(cm)



Other Products



Age:3+

New

Coconut Oatmeal Plate

SKU:WCF34

Assembled size:

12*9*3.3(inch)

30.5*22.5*8.5(cm)

New

Age:3+

Oatmeal Tableware

SKU:WCF33

Assembled size:

9*2.6*9.4(inch)

22.5*6.5*24(cm)



Age:3+

New

 
Caramel Breakfast Machine

SKU:WCF35

Assembled size:

14*6.8*9.2(inch)

36*17.4*23.4(cm)

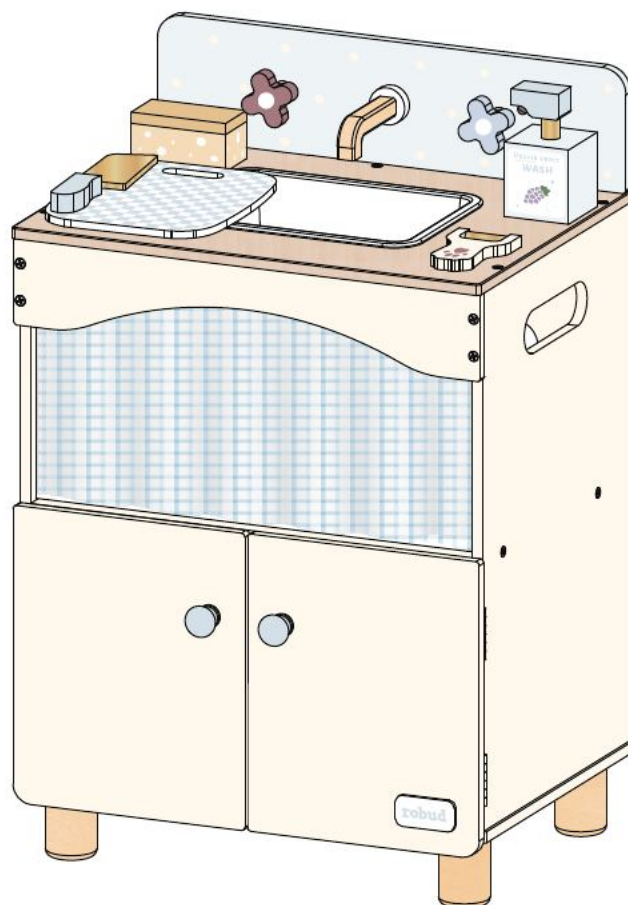

www.robud.com