

Sea Salt Dishwasher

(WCF71)-V1

 


98.1WCF71.150

Assembly Instruction

Please follow this instruction to avoid assembly errors.

For customer service, please contact **E-mail: shop@robud.com**

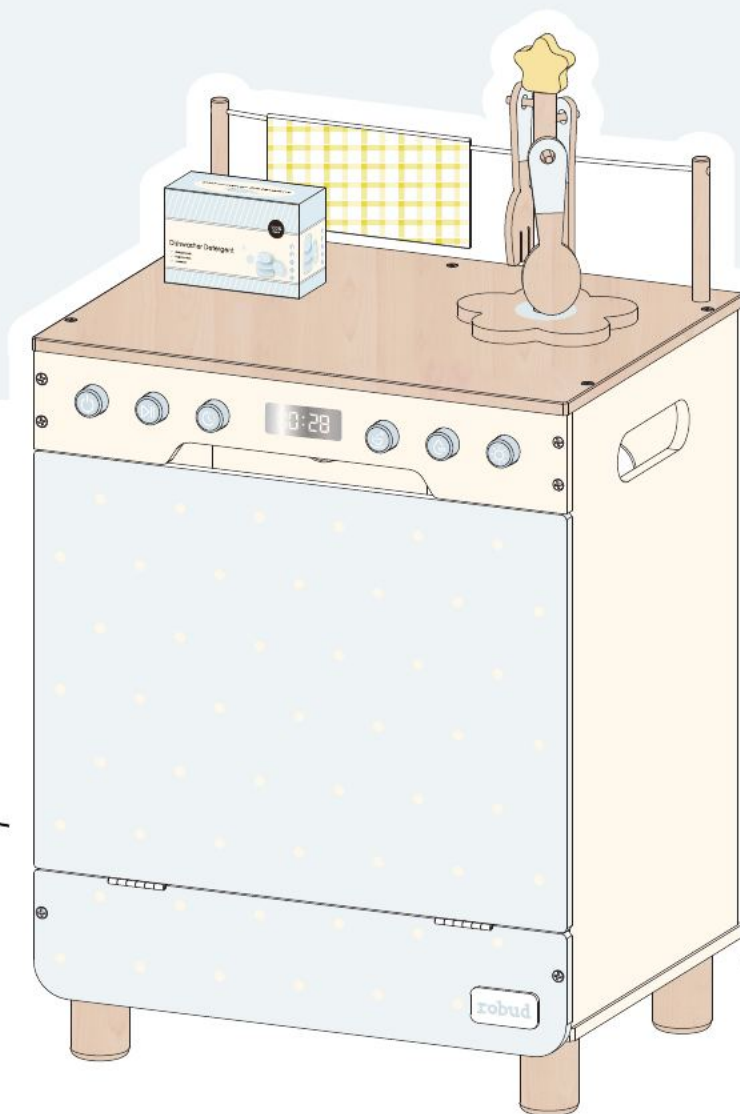

WARNING:

- CHOKING HAZARD-Small parts.Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package,please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.

MAINTENANCE:

- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please keep the product away from water, and don't put liquid in the pot sets.
- Please clean the product with dry soft cloth, don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- The instruction must be retained since it contains important information.



Assembly Tips

 
 


Assembly time: 2-2.5 hours





Recommended Tools:

(Please prepare them by yourself.)

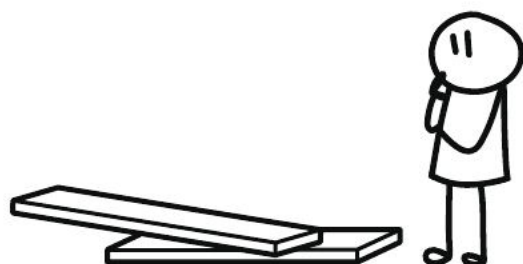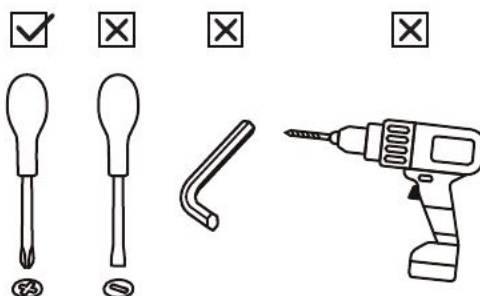

  - Avoid overtightening screws during assembly.
- Screws should be fully tightened once.
- Arrange all accessories on a hard, flat surface for assembly.
- Follow the instructions step by step.

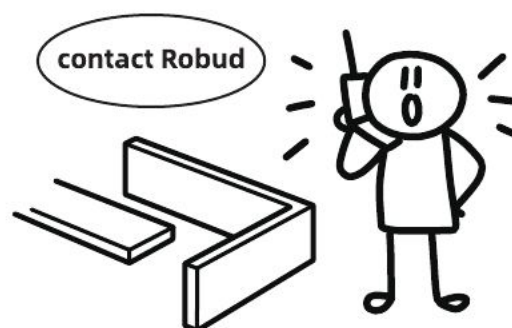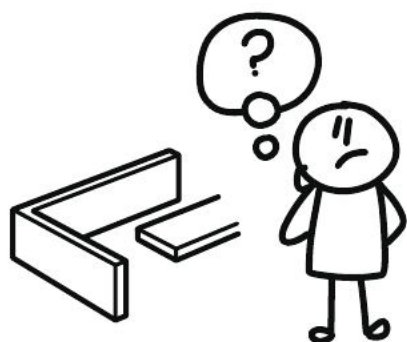

If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us **shop@robud.com**. We are glad to do our best to solve your problem and provide a solution to your satisfaction.

Helpful Hints and Tips

Icon Illustration:


! Special attention in assembly

1 Step 1

 Remove the plastic film on surface


2 Step 2

 Perspective conversion

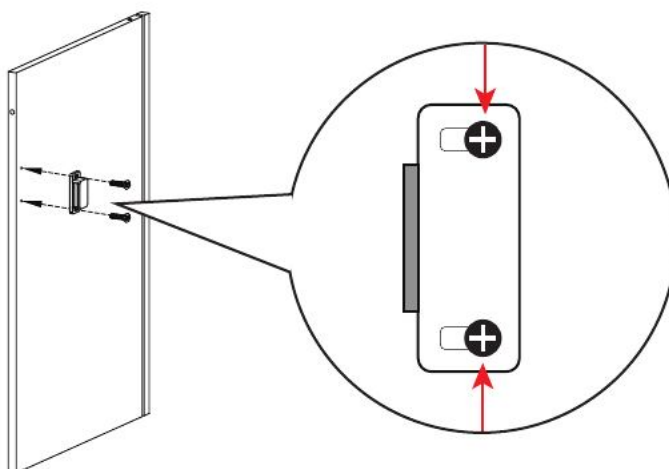

! Notice:














When assembling the door stop, hold the screw with the screwdriver first and then adjust the screw to the position shown on the left.

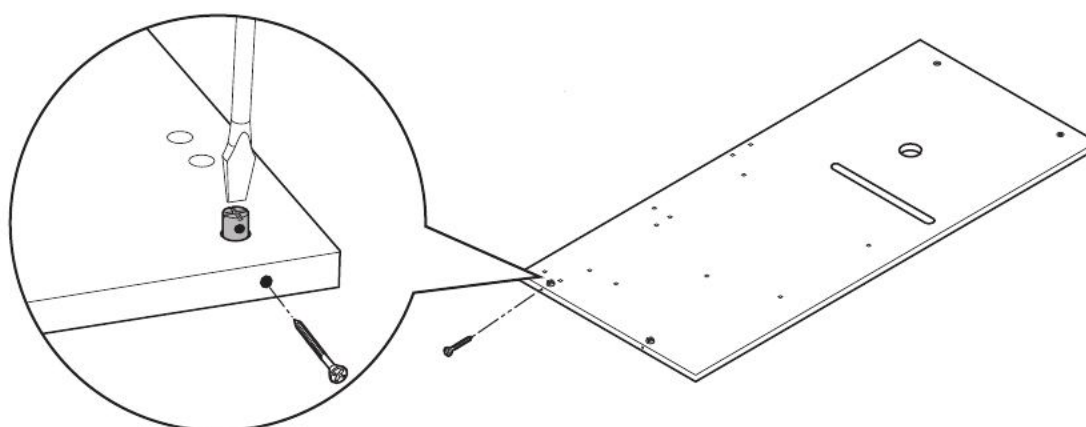











! Notice:

The white plastic part is correctly assembled during production.
If the screws are not in position due to transportation, use a slotted screwdriver to adjust.

Product Parts

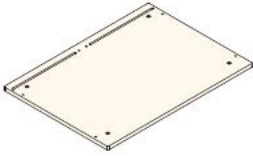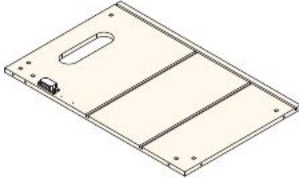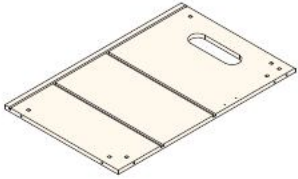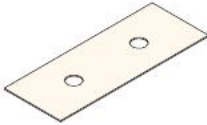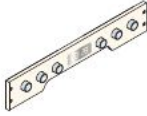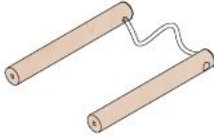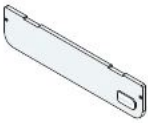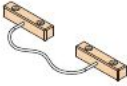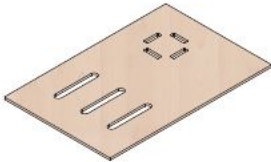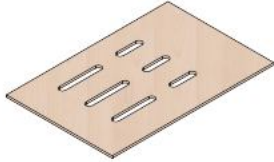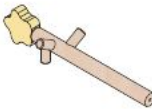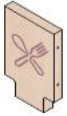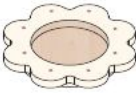1 	2 	3 	4 
x1	x4	x1	x1
5 	6 	7 	8 
x1	x2	x1	x1
9 	10 	11 	12 
x1	x1	x1	x2
13 	14 	15 	16 
x1	x1	x1	x1
17 	18 	19-1  19-2 	20 
x1	x2	x1	x2

Hardware and Accessories

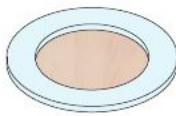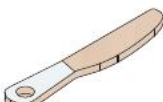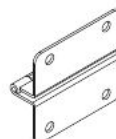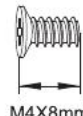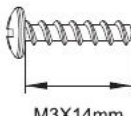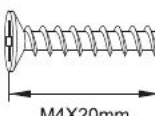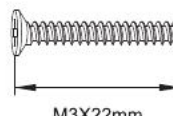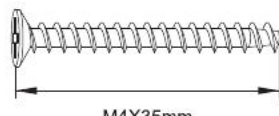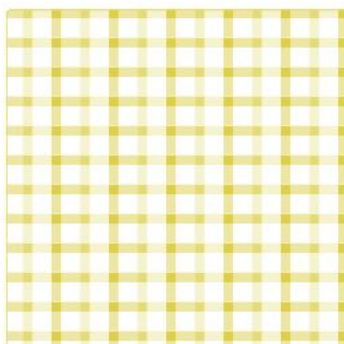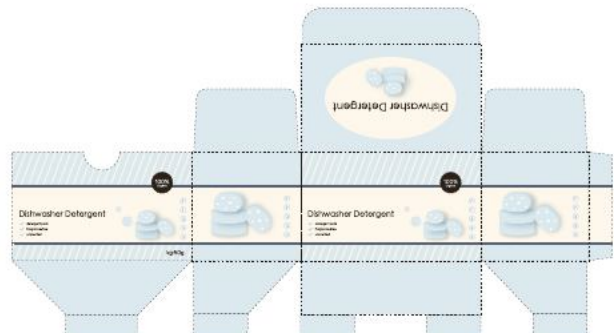21		22		23		24	
x2		x2		x1		x1	
25		26		27		28	
x1		x5		x2		x8	
29		30		31		32	
x10		x3		x8		x20	
							
x1				x1			

Assembly Instruction

1

32

M4X35mm

4PCS

32

1

2

2

2

2

32

M4X35mm

2PCS

32

1

3

3

32

M4X35mm

1PCS

32

5

4

32

M4X35mm

2PCS

 
32

4



5

Assembly Instruction



5

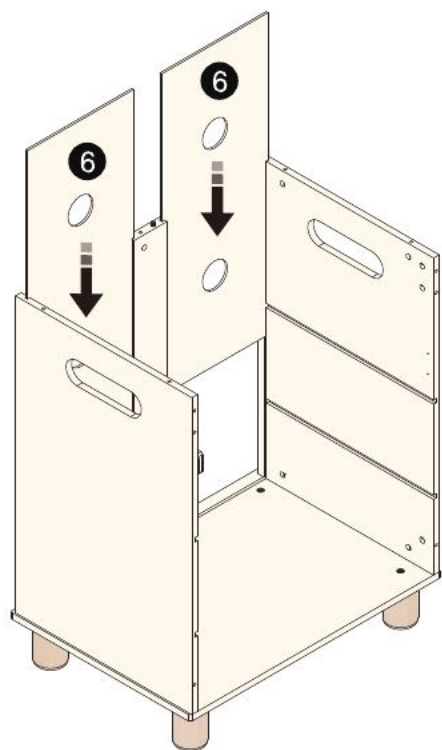



6

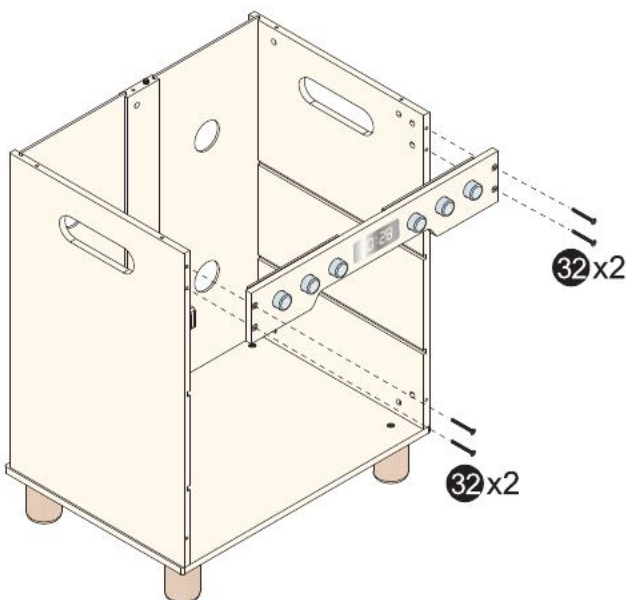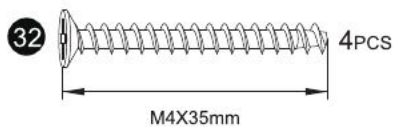  

7

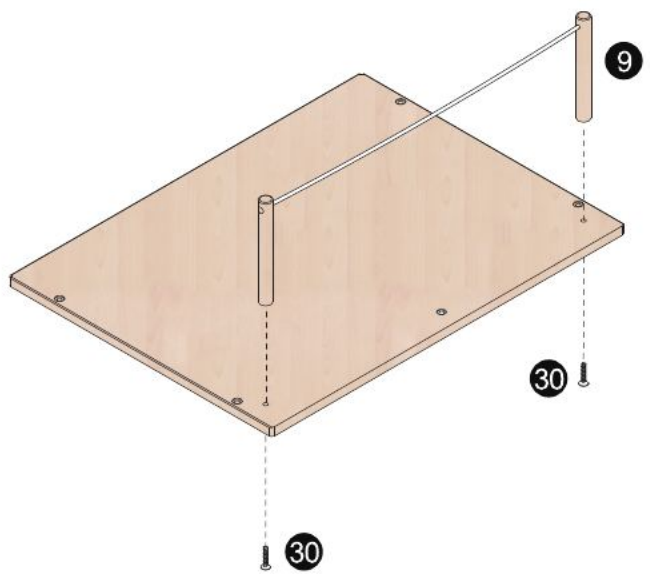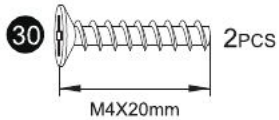  


8

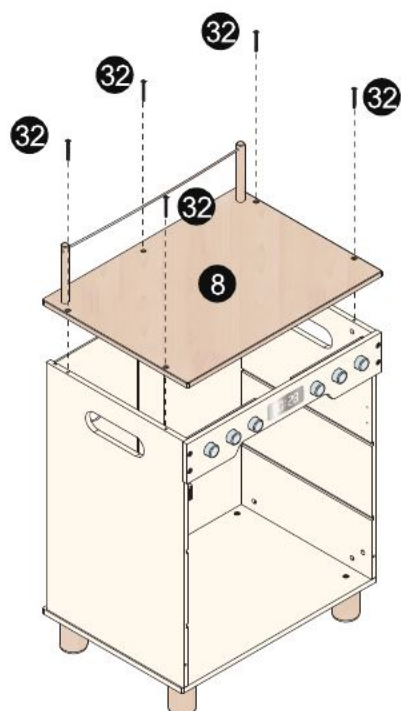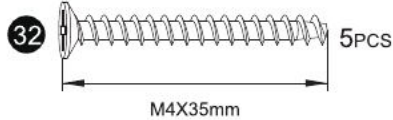  

Assembly Instruction

9

 28




4PCS

28x2




27

 28x2




27

 10

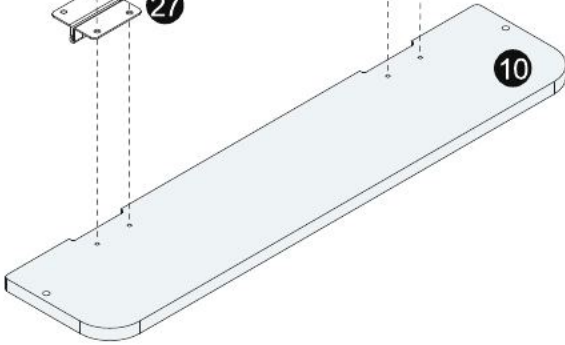

10

 28



4PCS

28x2



27

28x2

 


27

10




11

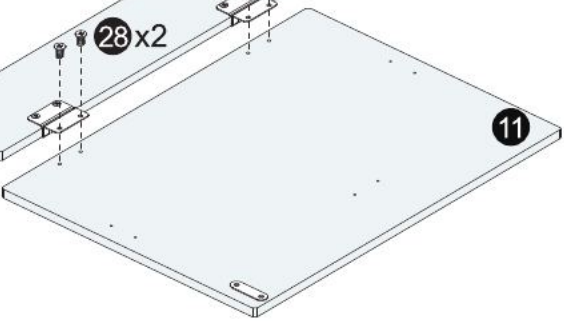

11

 29



2PCS

29x2

 


27

13




10

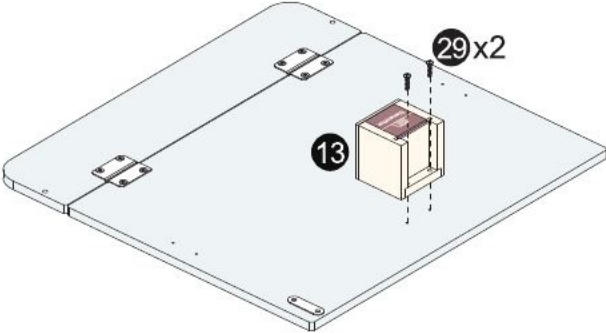


12

 32

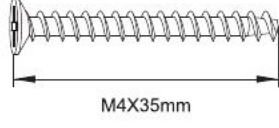


2PCS

 32

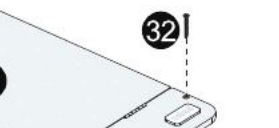


2PCS

 11


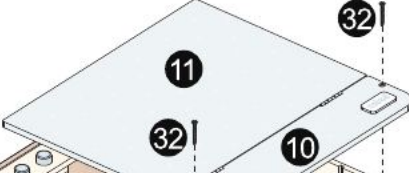


10


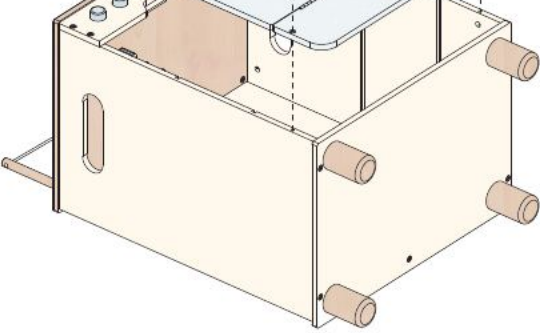 


Assembly Instruction

  
13

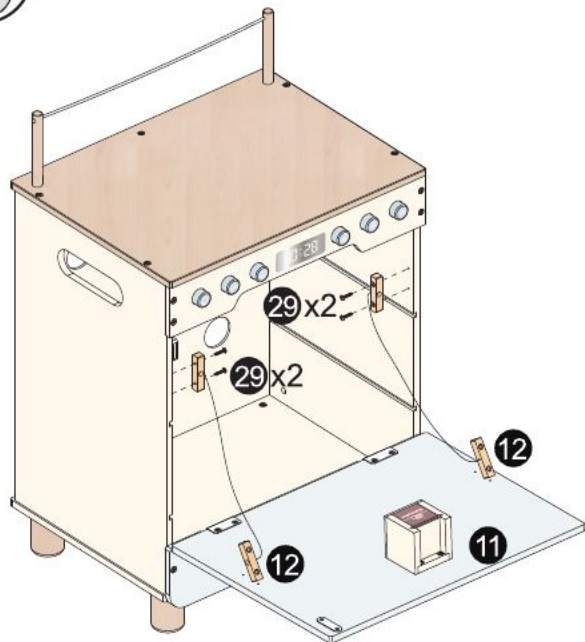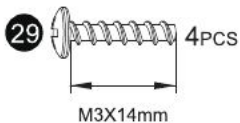



14

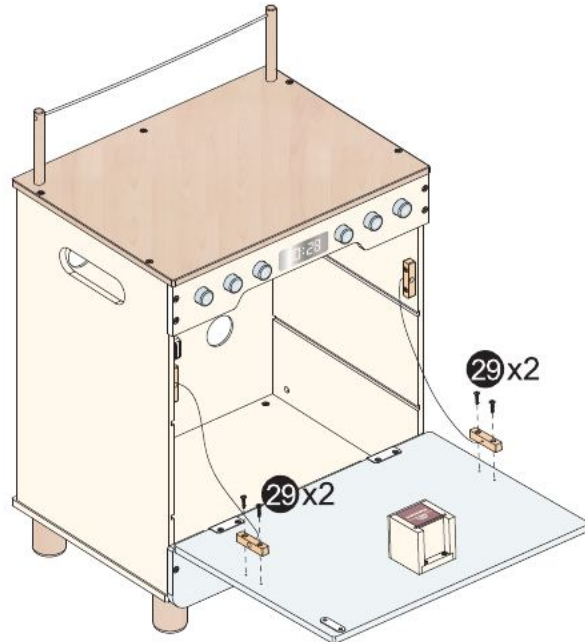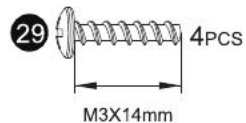  

15


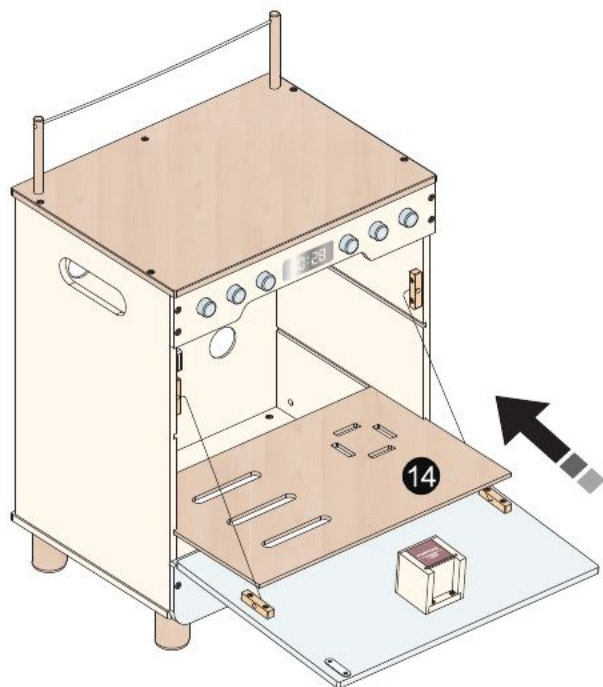 


16

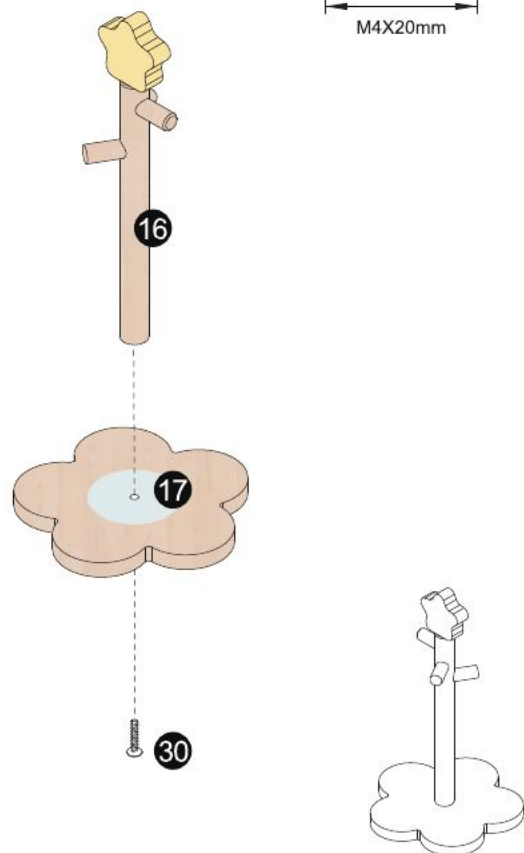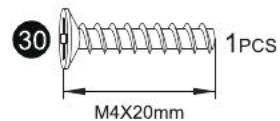  


Assembly Instruction

  
17

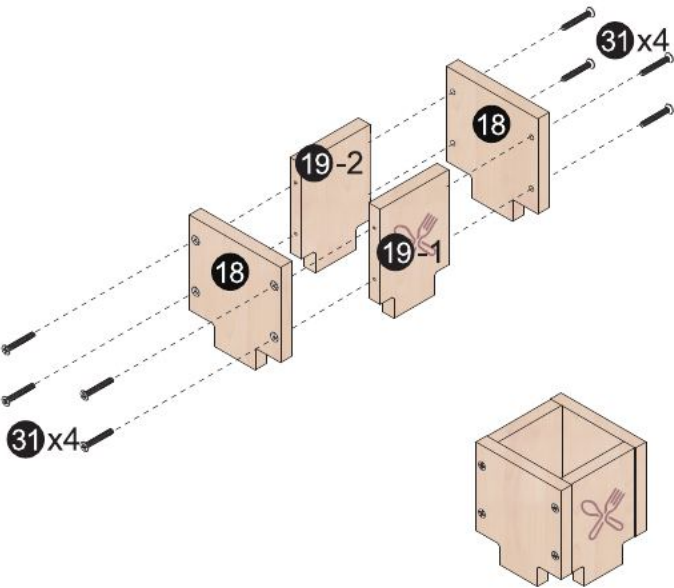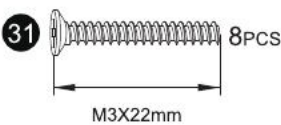


18

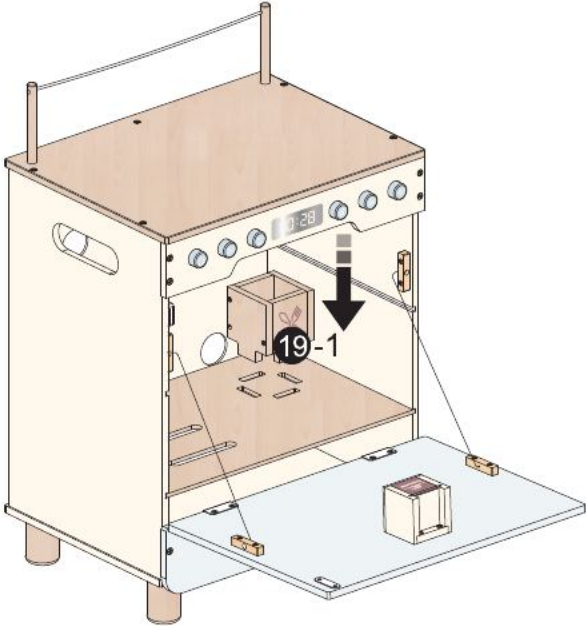 



19

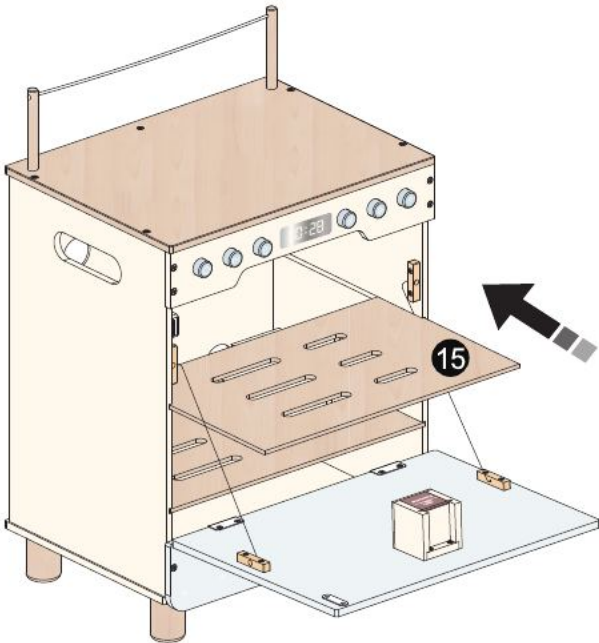 

20

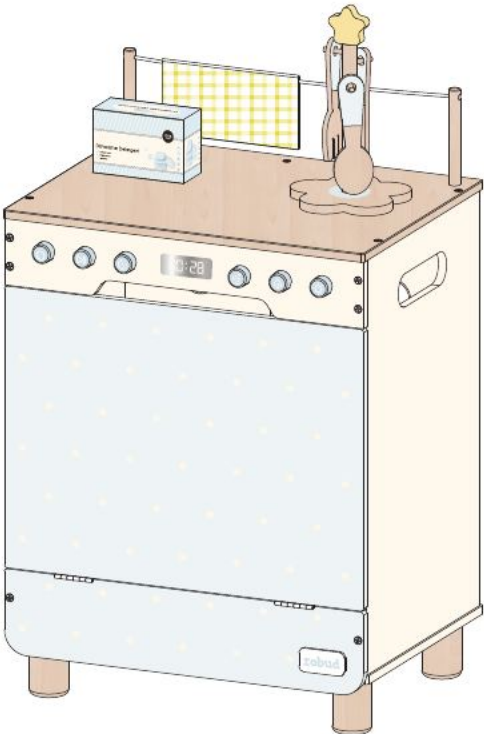 

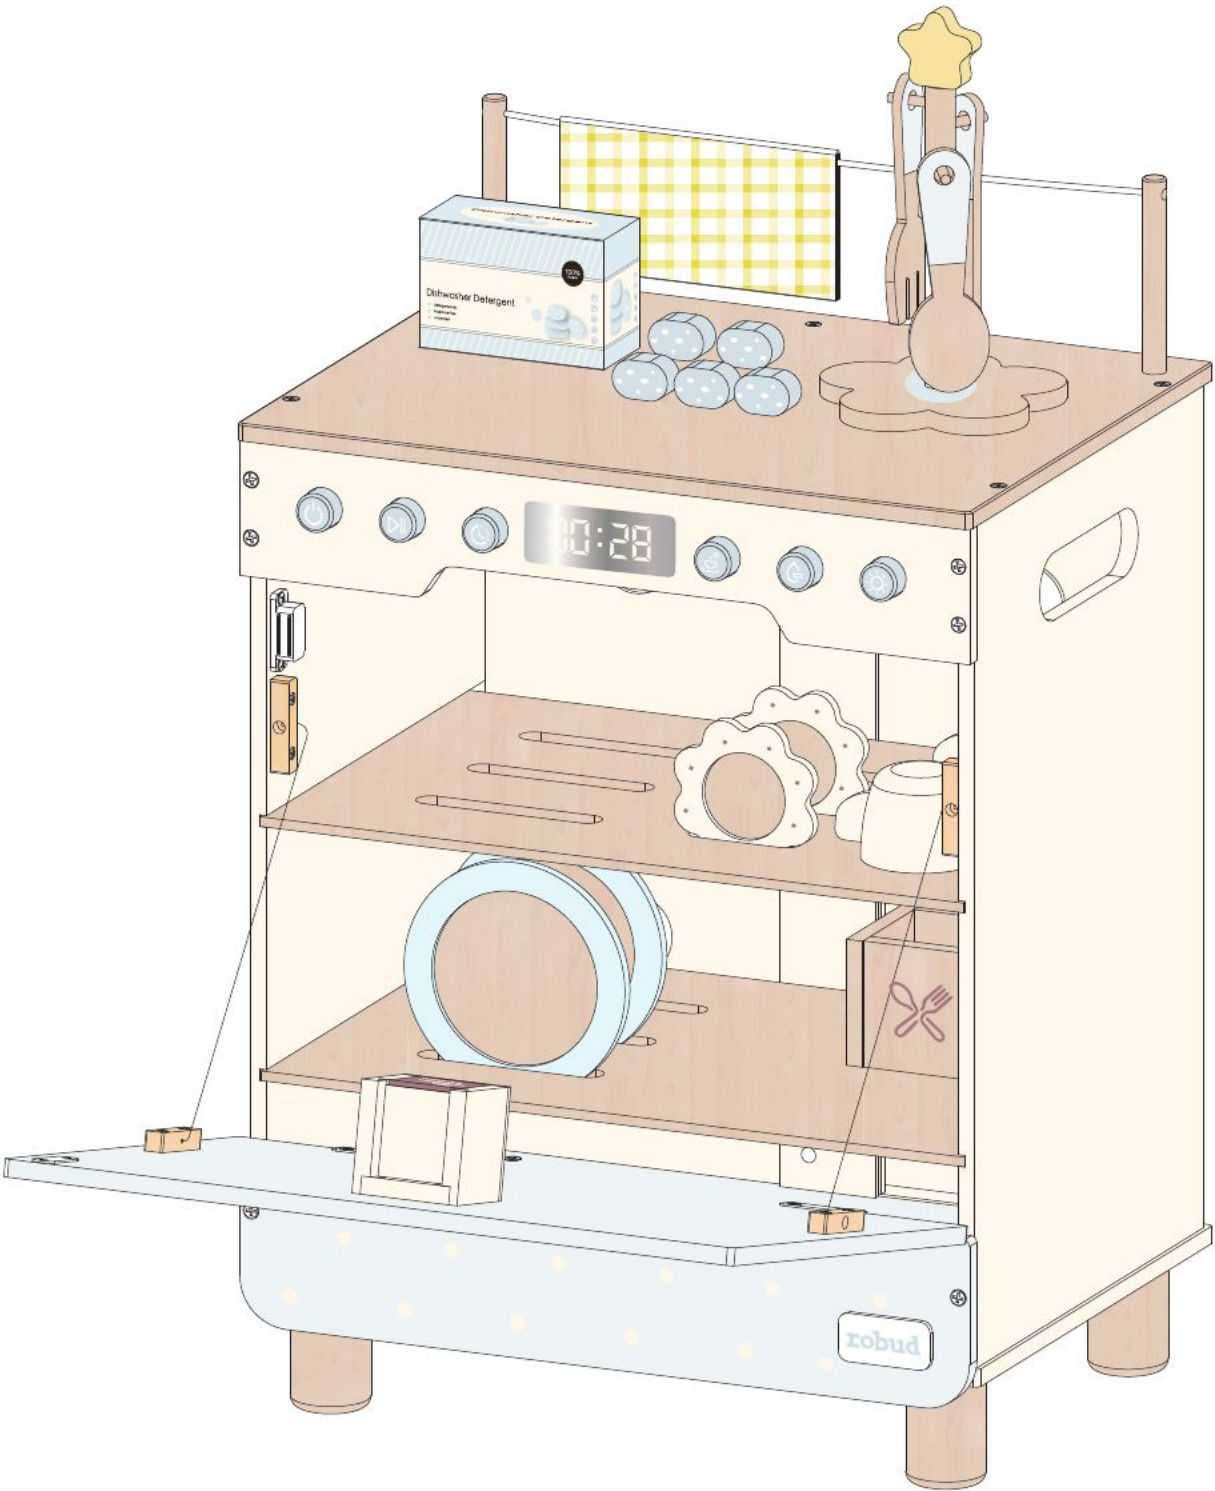 

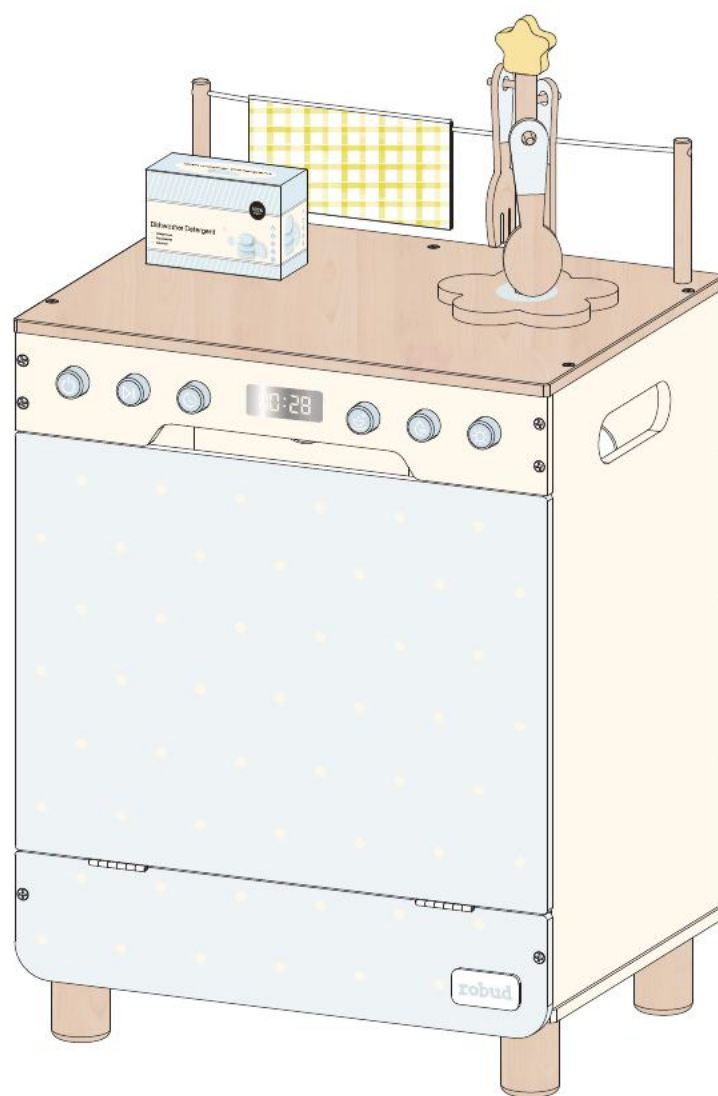 

www.robud.com