

Assembly Instruction

*Please follow this instruction to avoid assembly errors.
*For customer service, please contact **E-mail: shop@robud.com**

WARNING:

- CHOKING HAZARD-Small parts. Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package,please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- Please keep the product away from fire, substances flammable and humid environments to prevent damage.

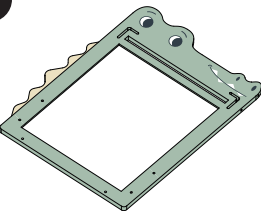 
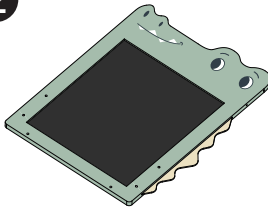 
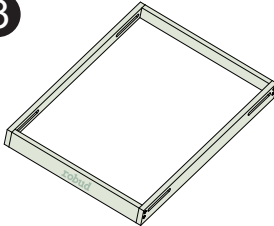 
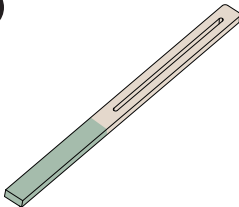 
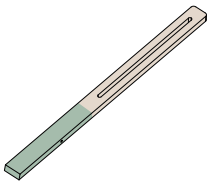 
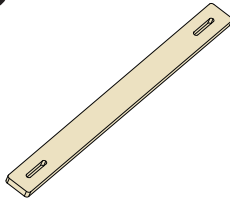 
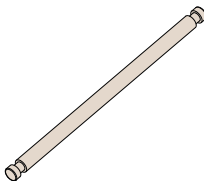 
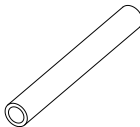 
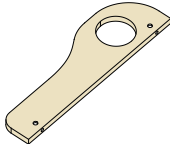 
 
 
 
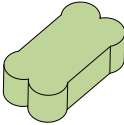 
 
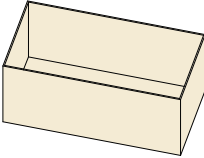 
MAINTENANCE:

- Please clean the product with dry soft cloth,don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- Please keep the product away from water,and don't put liquid in the toy sets.
- The instruction must be retained since it contains important information.




98.1WF013.150


Product Parts and Hardware

			
x1	x1	x1	x2
			
x2	x1	x1	x1
		 M4x30mm	
x2	x2	x12	x10
		  	
x14	x1	x2	

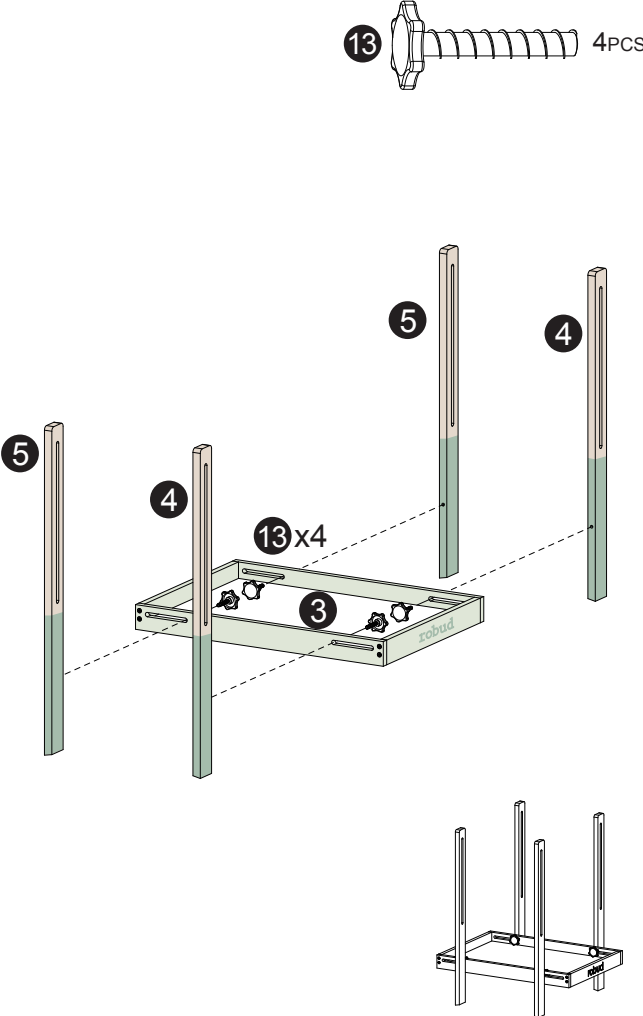 
1




2

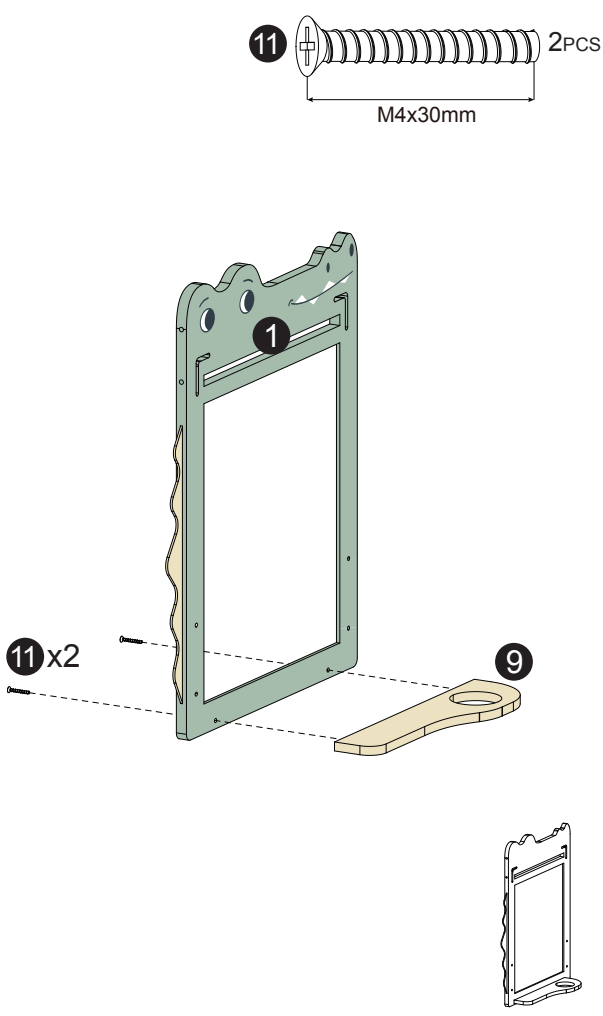 



3

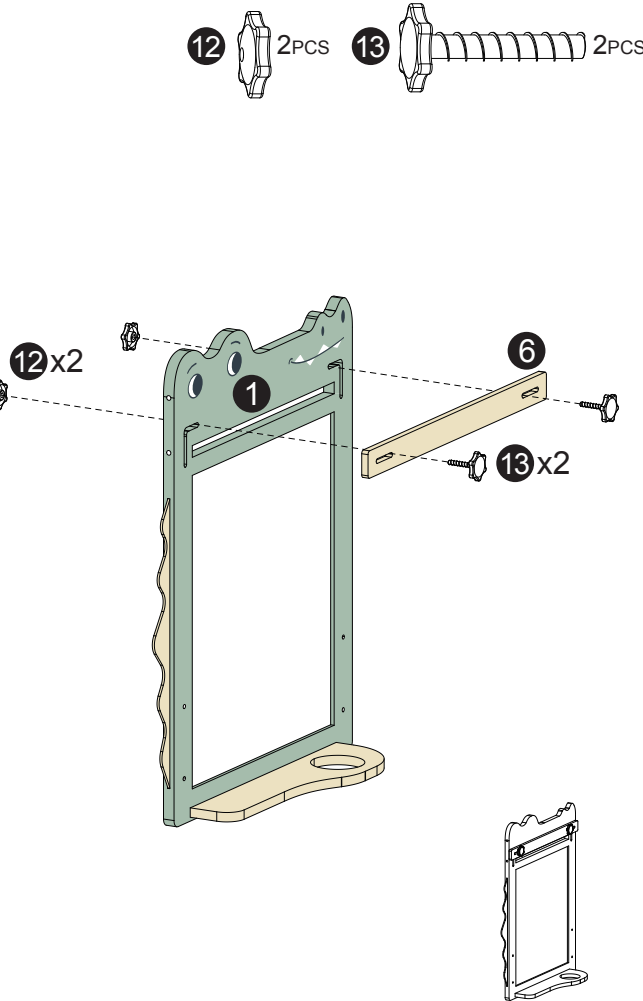 


4

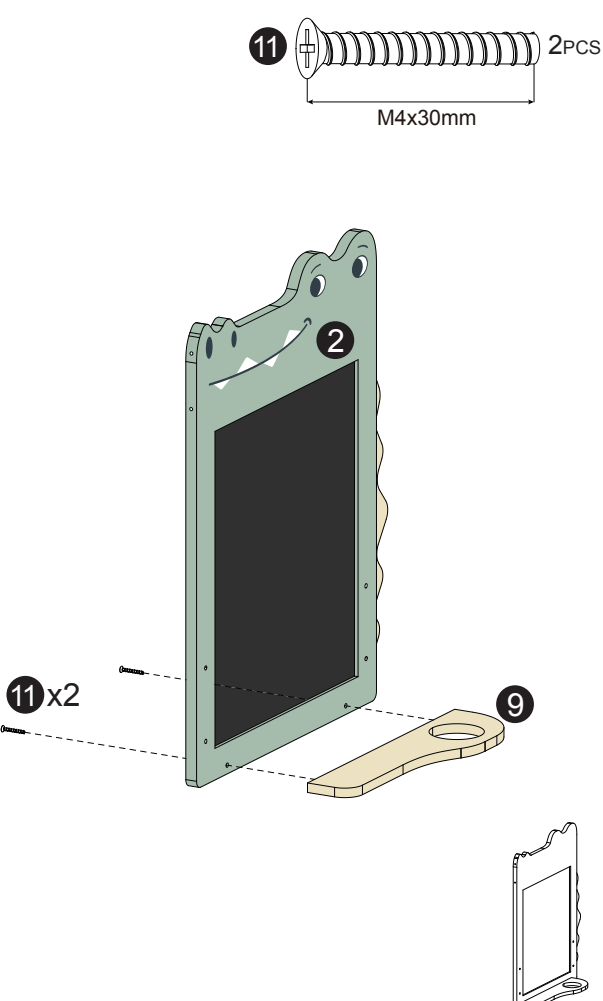 


5

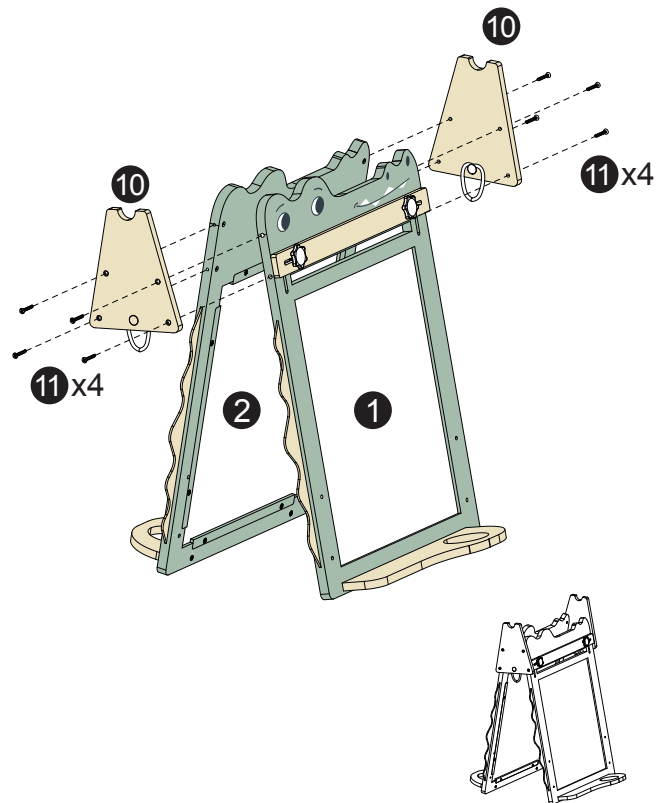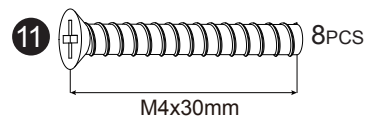  

6

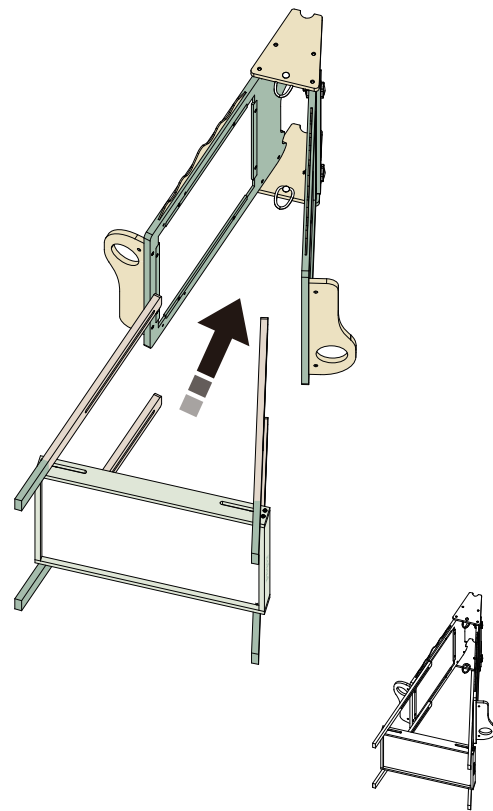 

9

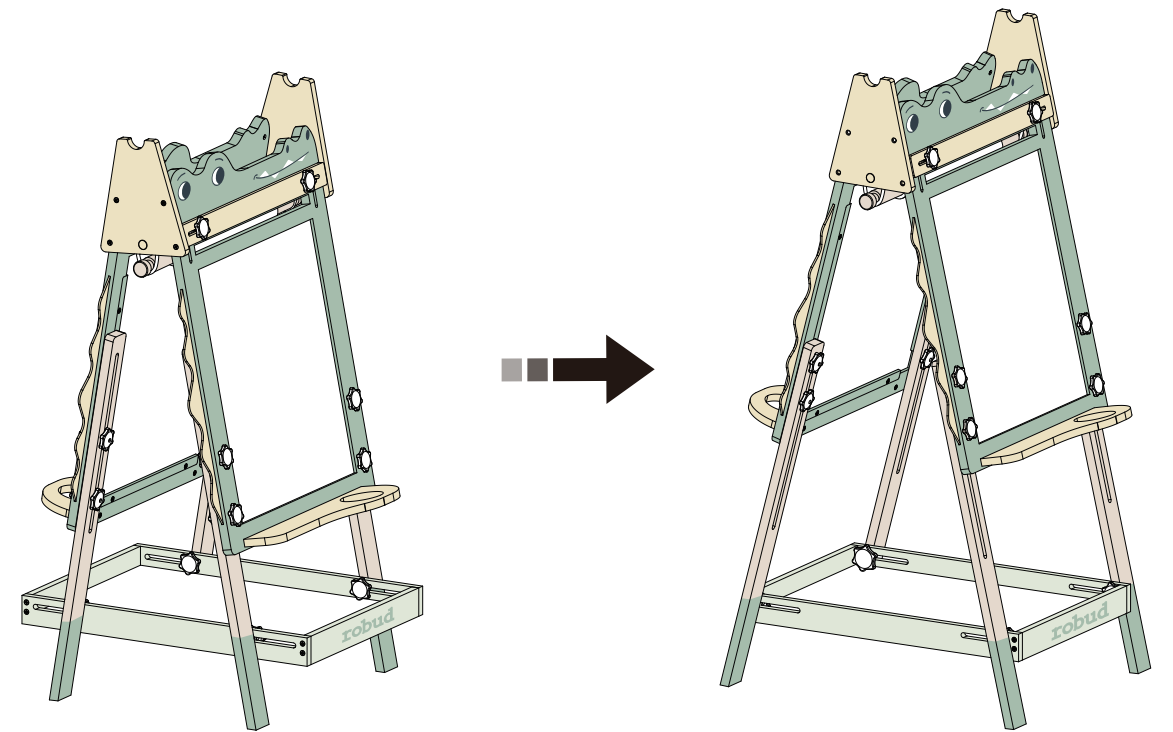 



Steps of adjusting height of the easel:

Step 1: Loosen the four screws of the storage box slightly.


Step 2: Loosen the four screws on one side of the board, and raise the board to the appropriate height, then tighten the screws.

Step 3: Repeat Step 2 on the opposite side of the board.

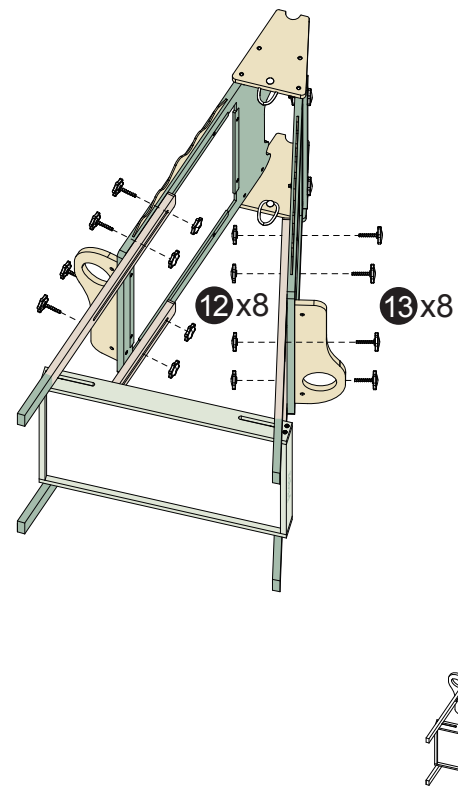  
7



8

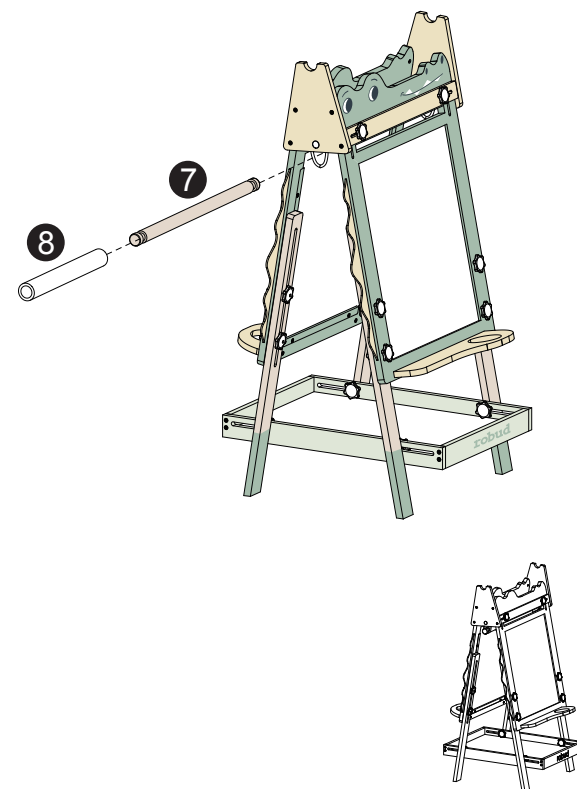 

10

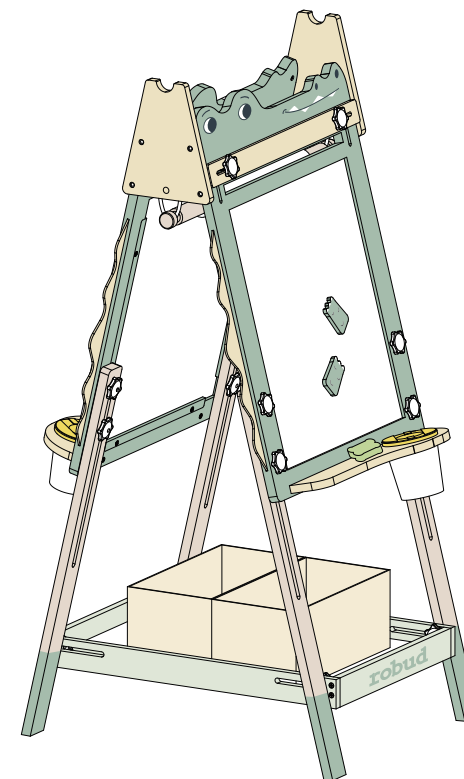 

Accessories

- | | | |
|----|--|----|
| 1. | | x1 |
| 2. | | x2 |
| 3. | | x2 |
| 4. | | x2 |