

Ballet Doll Wardrobe

(WRP44)



 
98.1WRP44.150

Assembly Instruction

*Please follow this instruction to avoid assembly errors.
*For customer service, please contact **E-mail: shop@robud.com**

⚠ WARNING:

- CHOKING HAZARD-Small parts. STRANGULATION HAZARD-Long cord. Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package, please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please clean the product with dry soft cloth, don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- The instruction must be retained since it contains important information.

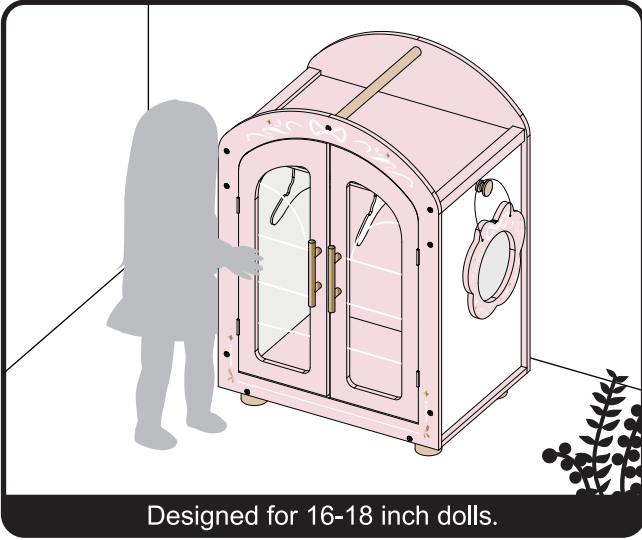

Product Parts				
x1	x1	x1	x1	
x1	x1	x1	x1	
x1	x2	x2	x4	x1
x9	x2	x22	x3	x1

1

14 M4x20mm 4PCS
14x4
5
12x4

2

16 M4x30mm 2PCS
16x2
4
5

3

14 M4x20mm 1PCS
14
13
3

4

16 M4x30mm 2PCS
16x2
5
3

 
 
5

16 M4x30mm 6PCS
16x6
2



6

16 M4x30mm 2PCS
16x2
10
2



7

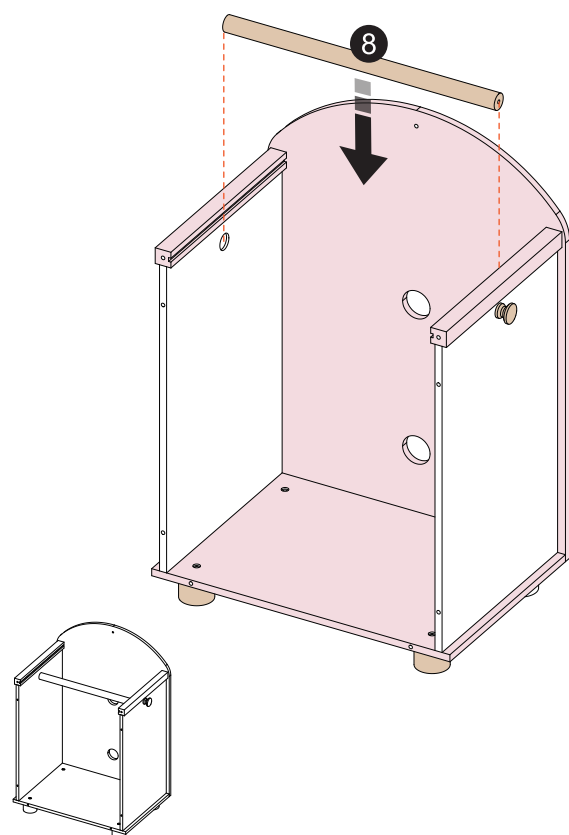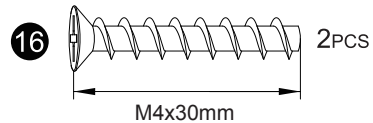



8

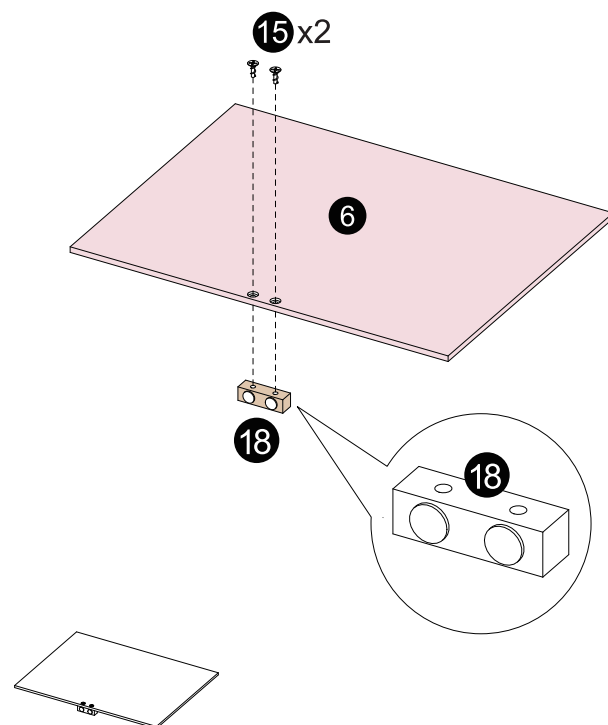  


11

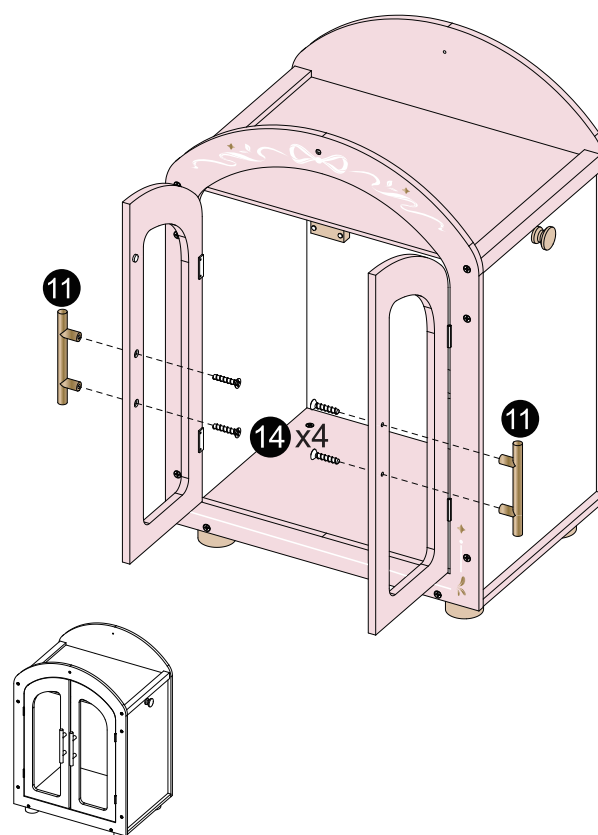  



12

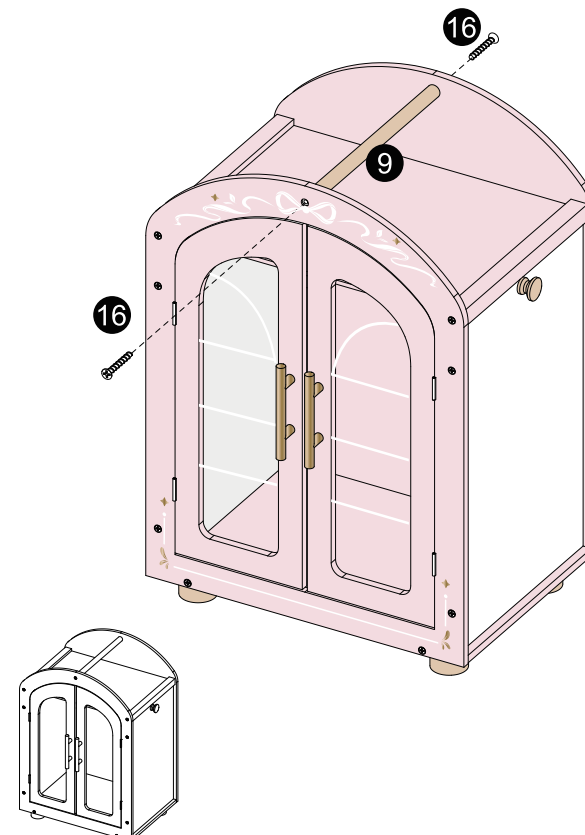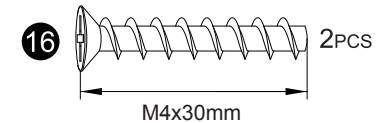  

9

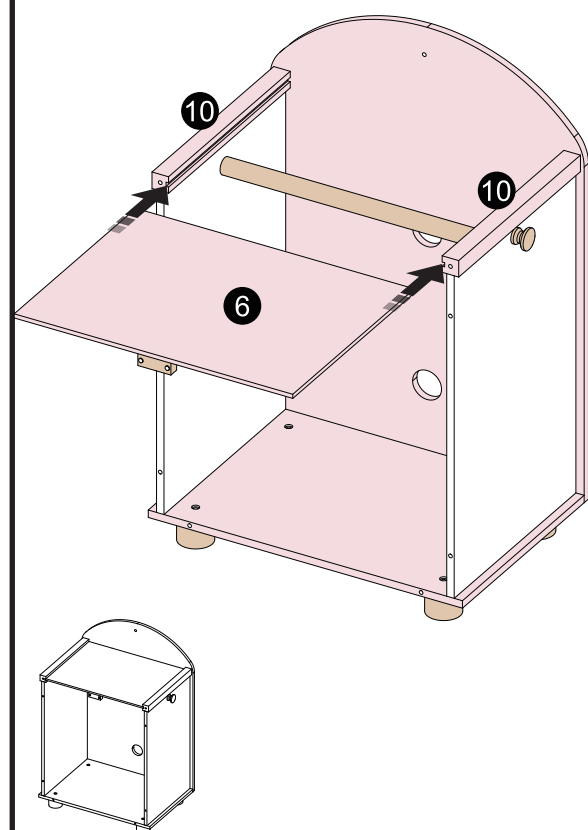 

10

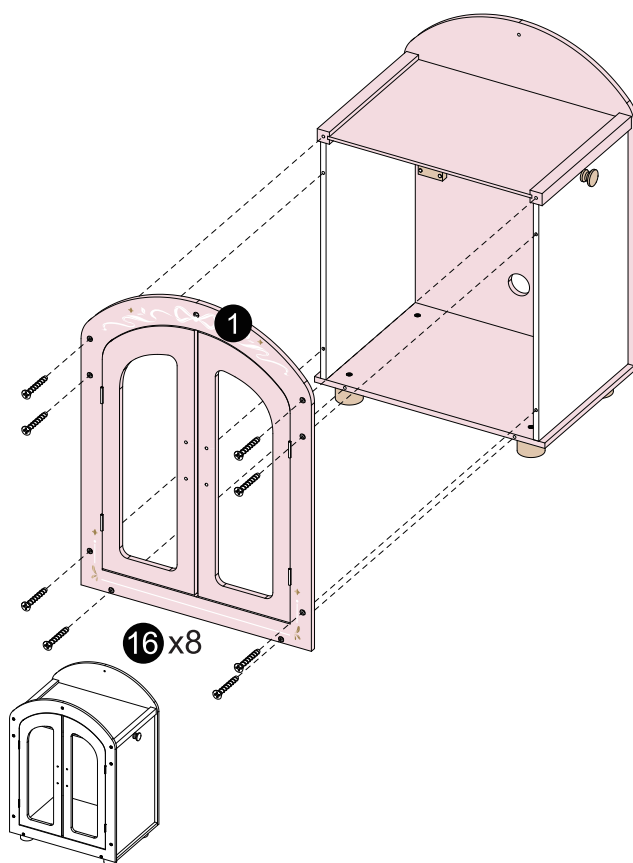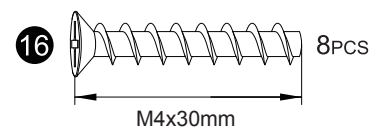  


You have completed the toy , and the following instructions of part assembly can help use it better!



FRIENDLY REMINDER

PARENTAL SUPERVISION REQUIRED

 - This product is suitable for doll furniture designed for 16-18 inch dolls.
- Parents should supervise the play area so that children younger than the intended age range do not interact with this toy.
- Use this toy on a hard, flat, and level surface.
- Do not allow children to pull, climb, sit, or stand on any parts of the toy.

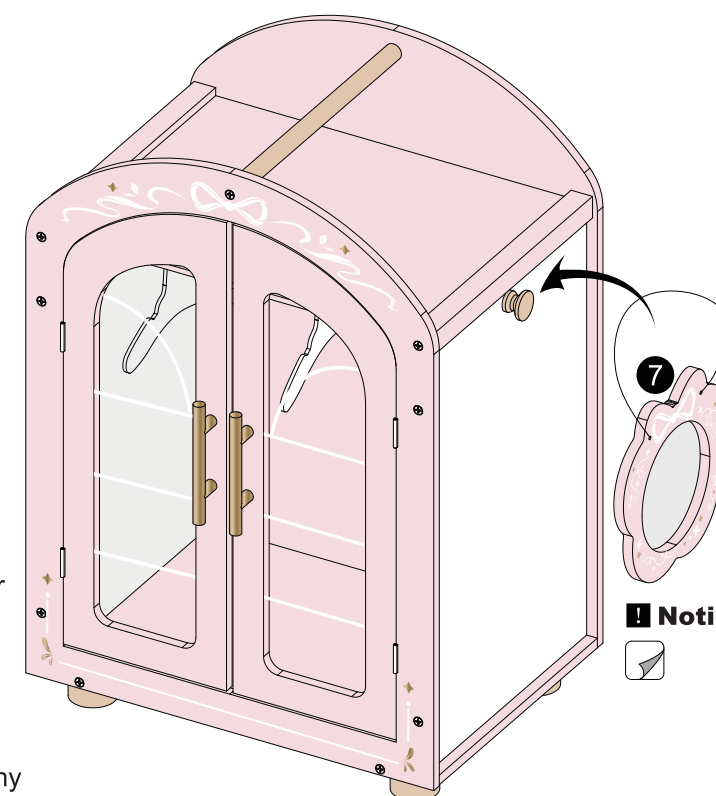

Notice: