 


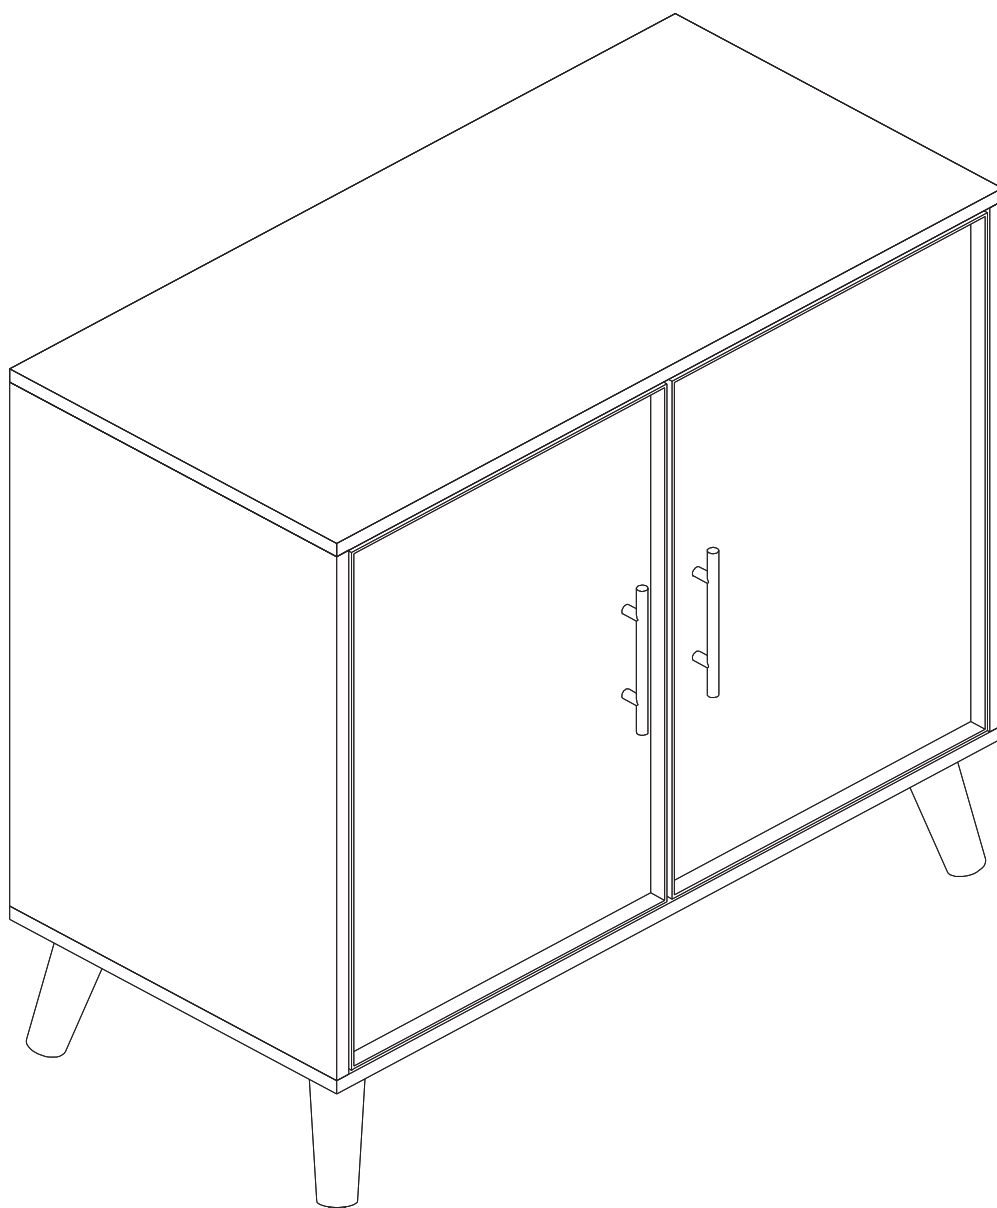

ITEM NO. SCSD1372

Scan for manual,
video & advice.



If you have any questions or concerns,
don't hesitate to reach out to us.

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)
Email: customerservice@hulalahome.com

MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.

 
Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :

This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
200 LBS

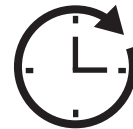

Installation:
30 minutes.



One Person



Before You Start

Please follow the steps below:

-  Unbox the package and check if all parts and accessories are complete.
-  If you find something missing, stop assembly and contact your supplier immediately.
-  Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.
-  NOTE: Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty



We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.



Are you having difficulty with assembly? Missing parts? Please send email with your order number to **customerservice@hulalahome.com**



 
For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.


Exploded Diagram

Please confirm that you have received all the parts in the box and start the installation.

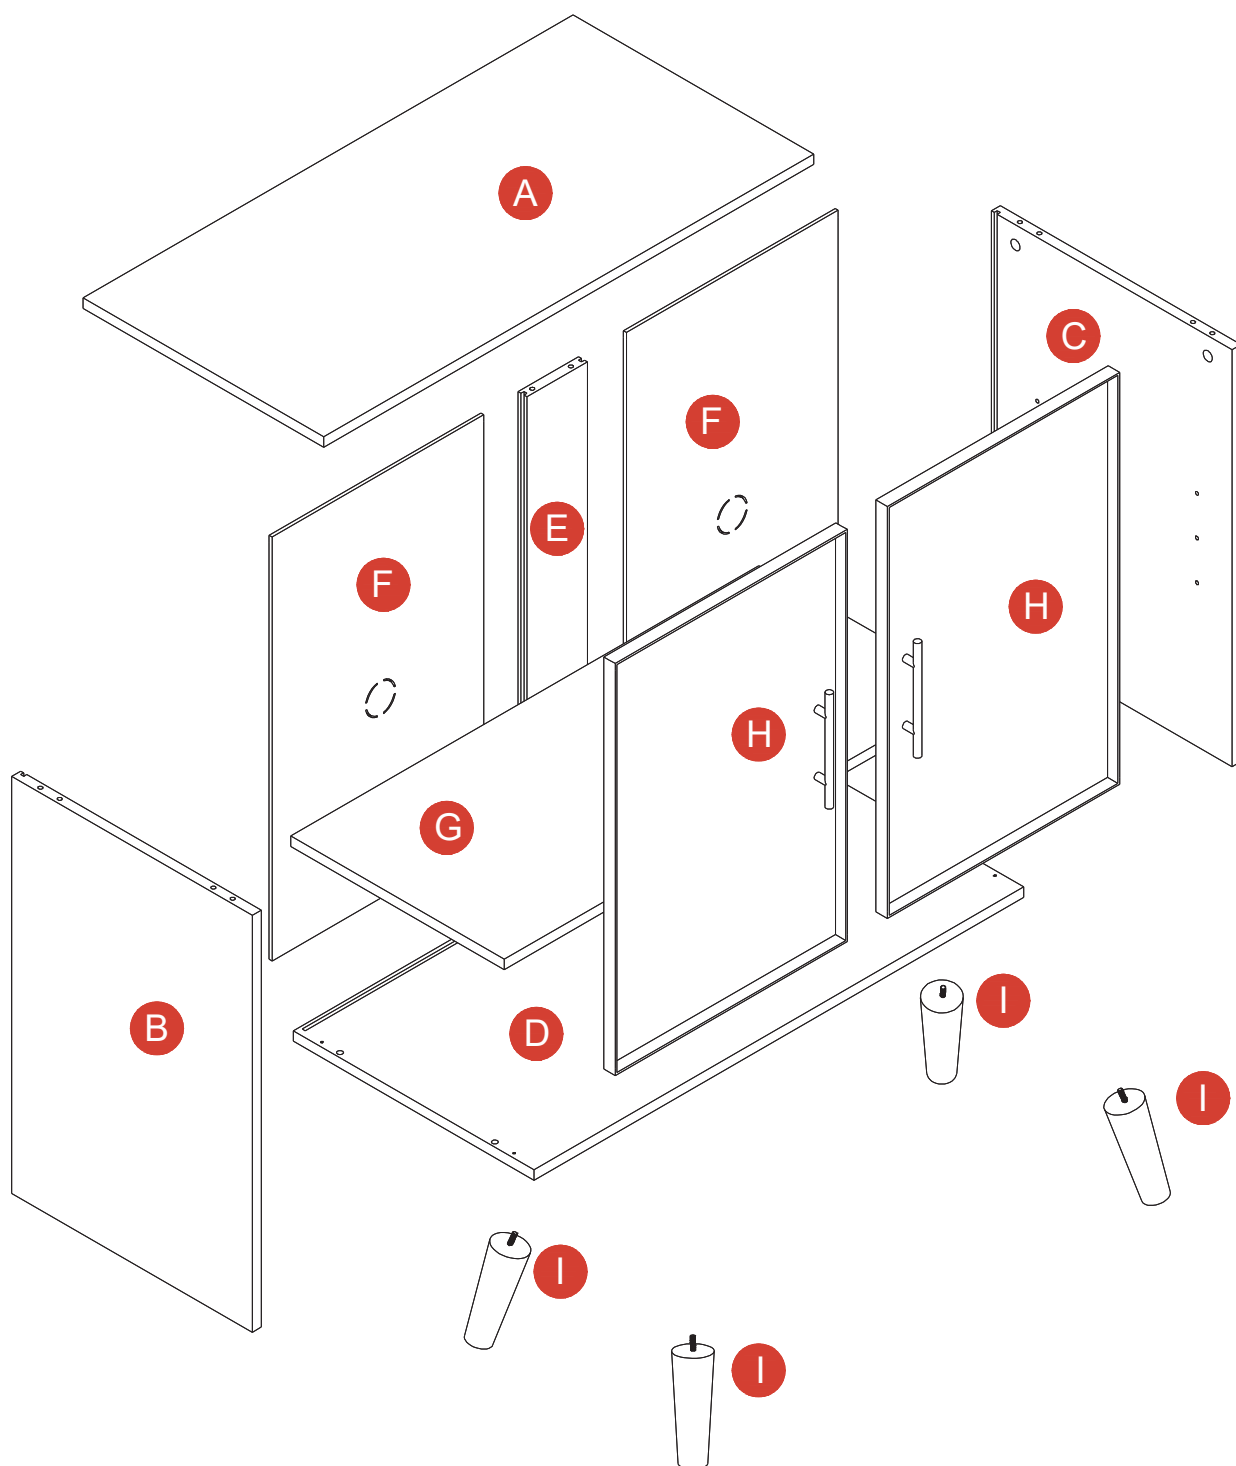


Parts List

 A x1

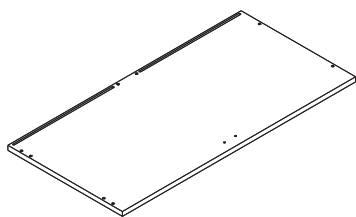


Panel

 B x1




Left side panel

 C x1




Right side panel

 D x1

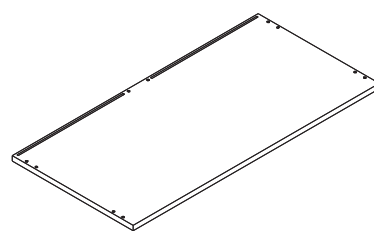

Baseplate

 E x1




Pull strip

F x2




Back panel

 G x1

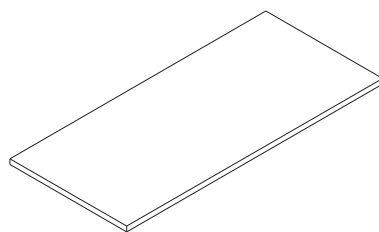

Shelf panel

 H x2

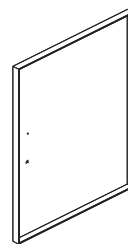

Door

 
I x4



Legs


Hardware List

1 ×1




Door stopper

 2 ×2



Self-tapping screw
D4x30mm

 3 ×4



Layer board support

4 ×4



Expansion pipe
L=30mm

5 ×4



 
Anti-tip component

6 ×2




Hardware pack

7 ×4



Self-tapping screw
D4X40mm

 8 ×4




Self-tapping screw
D4X20mm

9 ×1



Allen Key 4mm
M4

 10 ×14+1



Layer board support

11 ×14+1



Self-tapping screw
D3X14mm

12 ×8+1



 
Eccentric wheel

13 ×24+2



Self-tapping screw
D4X12mm

14 ×4



Internal clamp door hinge
Ø35 nn

15 ×4



 
Huamei Patch

16 ×8+1




Three in one
M6x35mm

17 ×8+1



Tree top
Ø8X30mm

 18 ×2

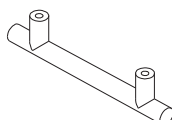


Hold hands

19 ×4+1




Pull screw
M4x16

 20 ×4



Straight repair screws
Ø6.3X40

 21 ×1



Screwdriver




Assembly Instructions

Step 01

1. Insert the three-in-one (16) screw into the corresponding holes of panel (A) and base (D), and tighten it with a screwdriver (21).


2. Pass screw (2) through door stopper (1) and insert it into the corresponding hole of the panel, then tighten it with screwdriver (21).


2		x 2	D4x30mm
16		x 8	M6x35mm
1		x 1	Door stopper
21		x 1	Screwdriver

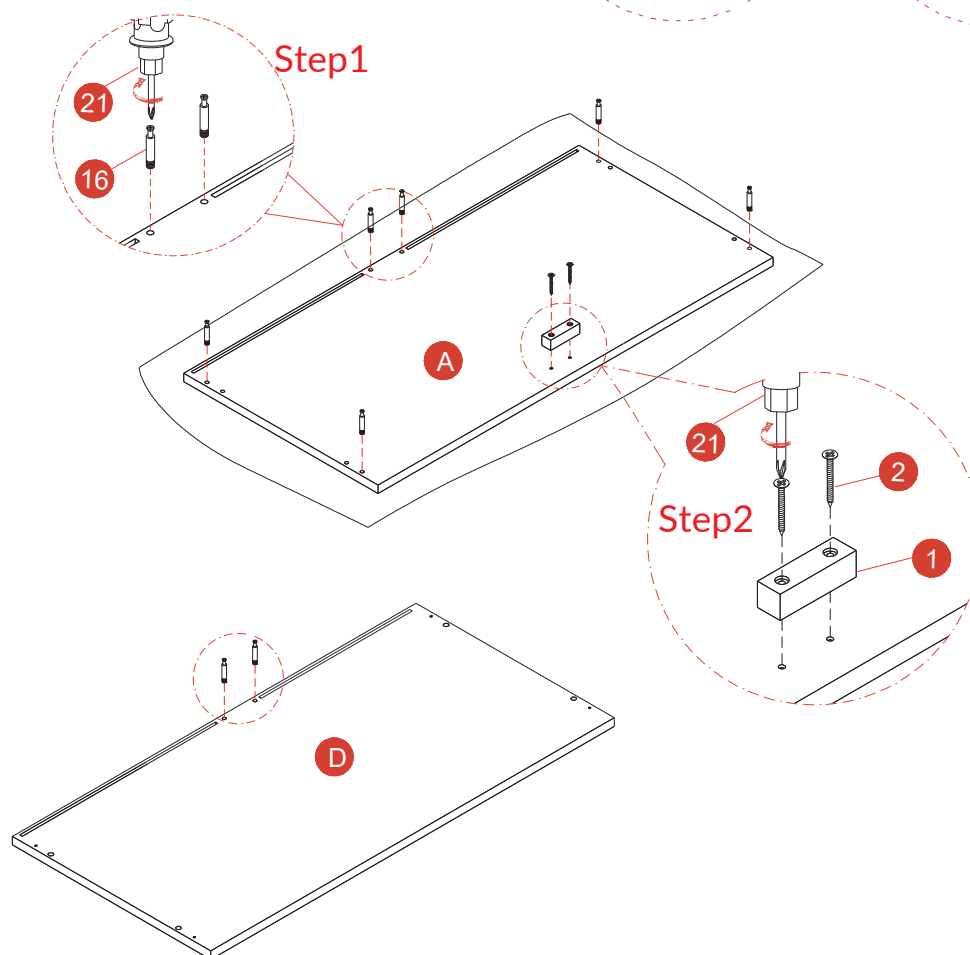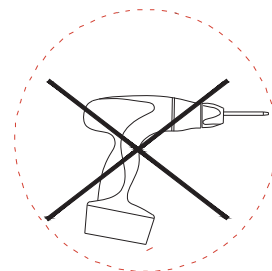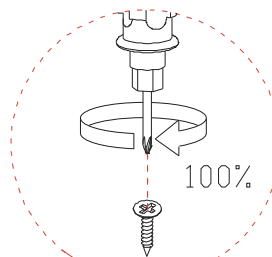   

Step 02

 
1. Install tree top (17) into the corresponding hole on side panel (A).
2. Insert panel (B/E) into the corresponding hole on panel (A), then install eccentric wheel (12) and tighten it with screwdriver (21).
3. Cover the eccentric wheel with (15) pieces of huamei Patch.


17	 x 2	Ø8X30	23	 x 2	Huamei Patch
12	 x 4	Eccentric wheel	21	 x 1	Screwdriver

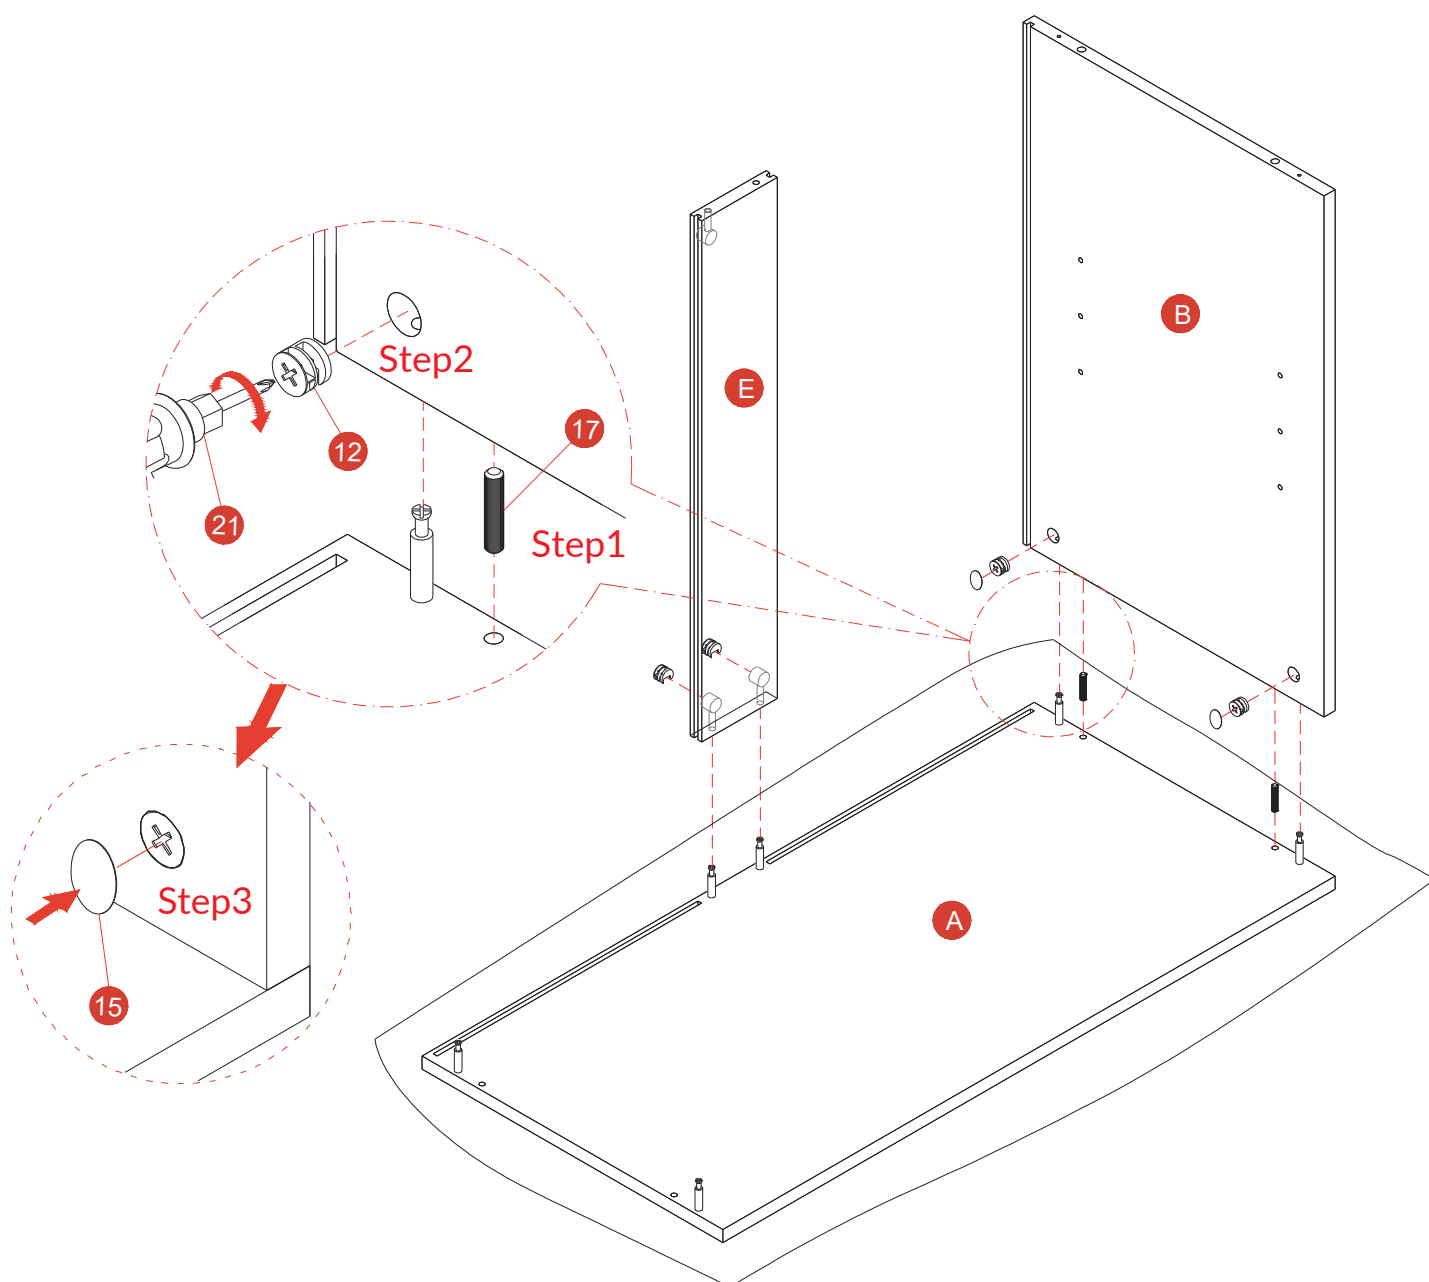 

Step 03

 
1. Insert wooden pin (17) into the corresponding hole on side panel (A).
2. Then insert panel (C) into the corresponding hole on panel (A), and install eccentric wheel (12). Tighten with screwdriver (21).
3. Cover the eccentric wheel with (15) pieces of huamei Patch.

17	 x 2	Ø8x30mm	12	 x 2	Eccentric wheel
15	 x 2	Huamei Patch	21	 x 1	Screwdriver

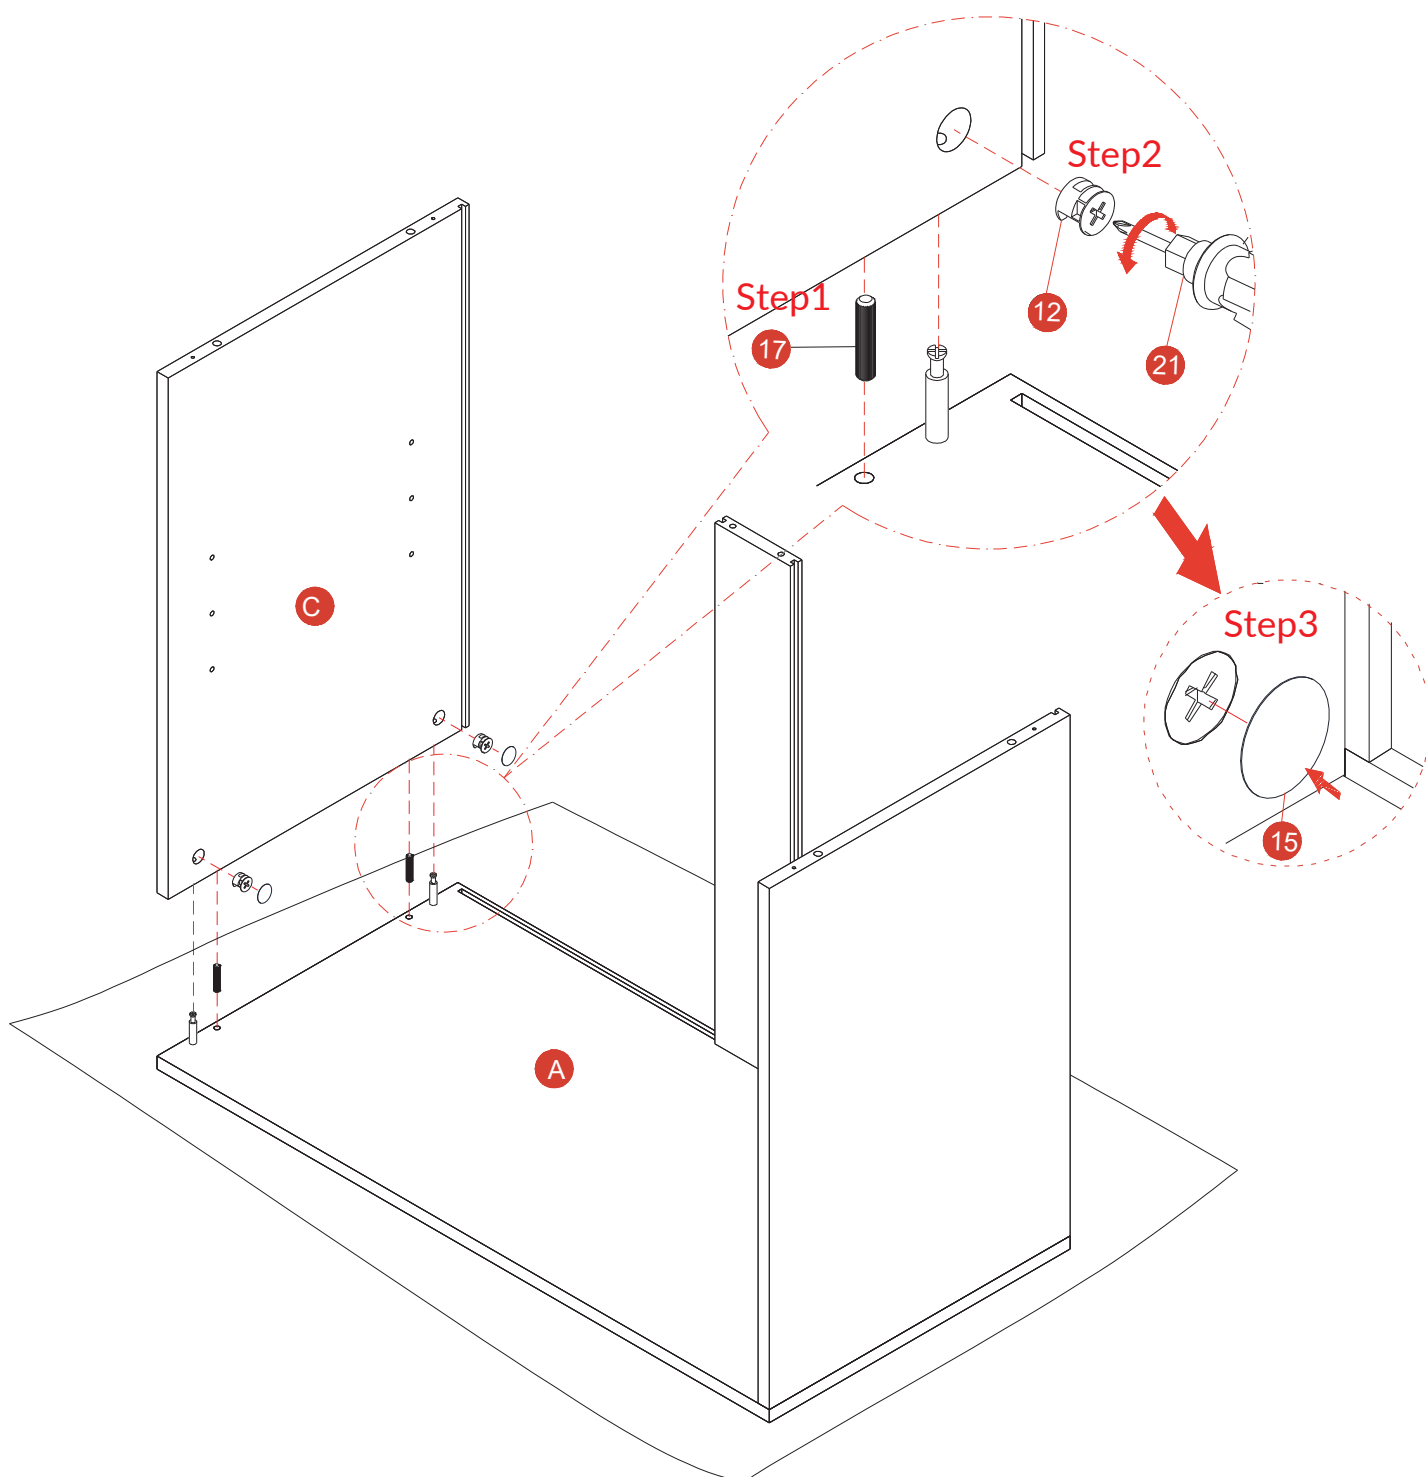 

Step 04

 Insert back panel (F) into the corresponding slot of the cabinet.

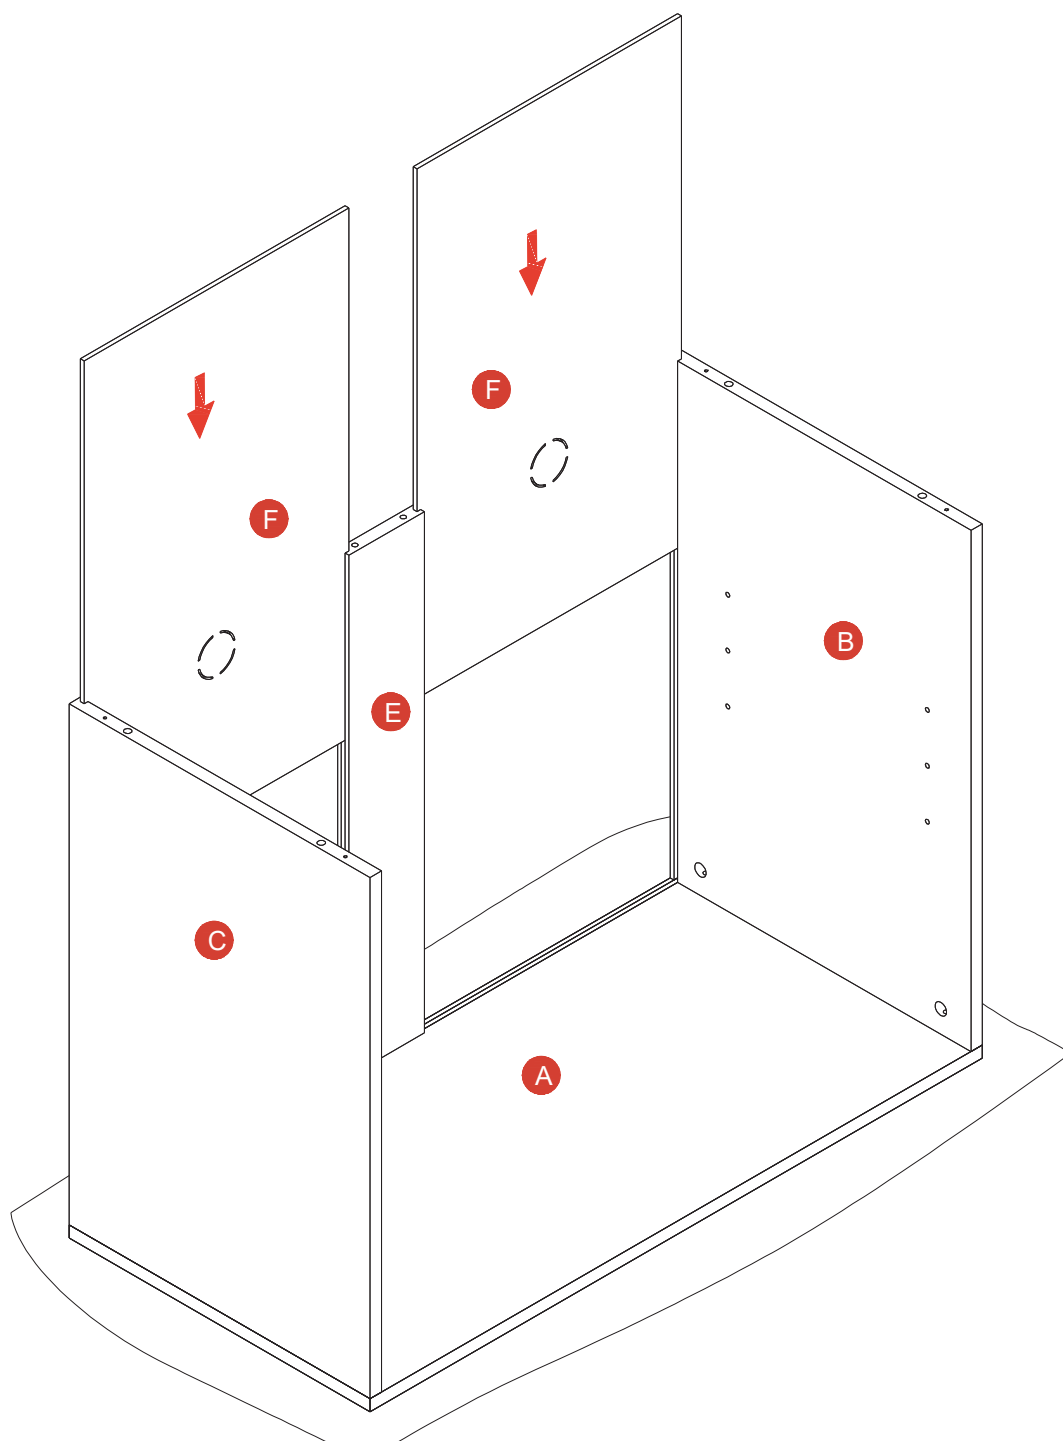


Step 05

1.Insert the tree top (17)into the corresponding holes of side panels (B/C.)
Pass screw(20) through base plate (D) and into the corresponding holes of side panels (B/C), then tighten it with wrench (9).


2.Install the eccentric wheel (12) into the back pull strip (E) and tighten it with screwdriver (21) .

12	 x 4	Ø8x30mm	9	 x 1	M4
20	 x 4	Ø6.3x40mm	12	 x 2	Eccentric wheel
21	 x 1	Screwdriver			




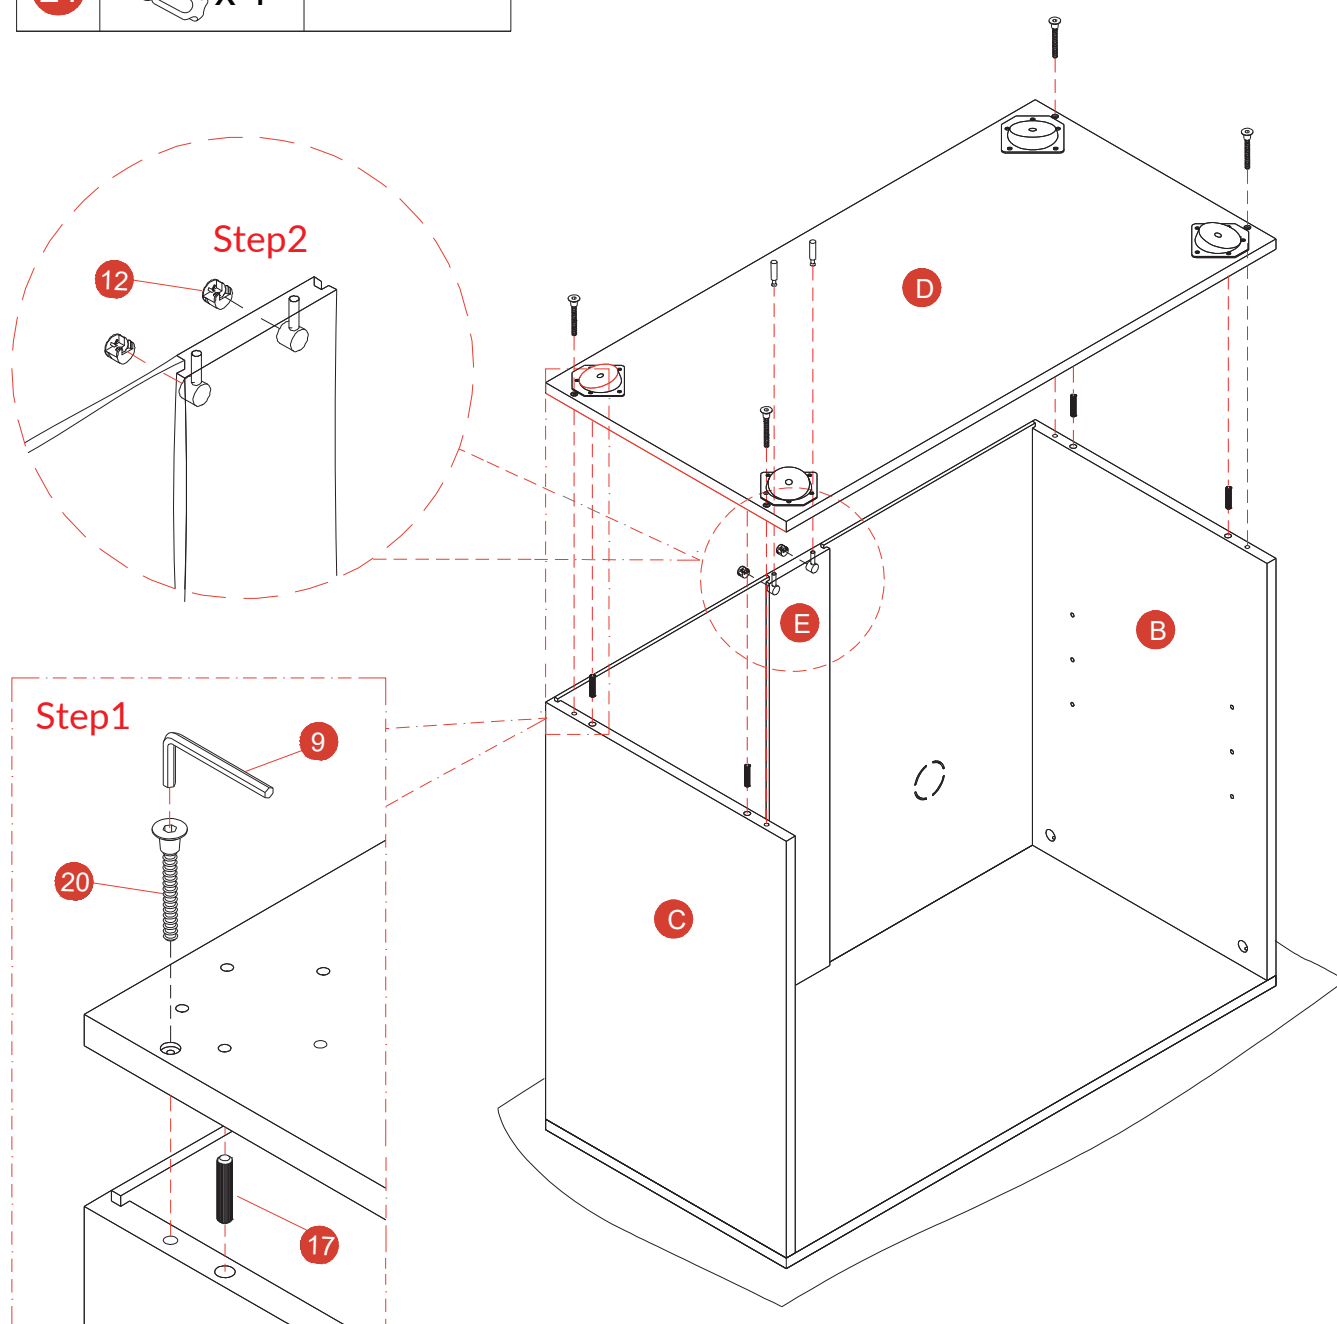 


Step 06

 Attach leg (I) to the holes on the metal plate of base (D) and tighten.

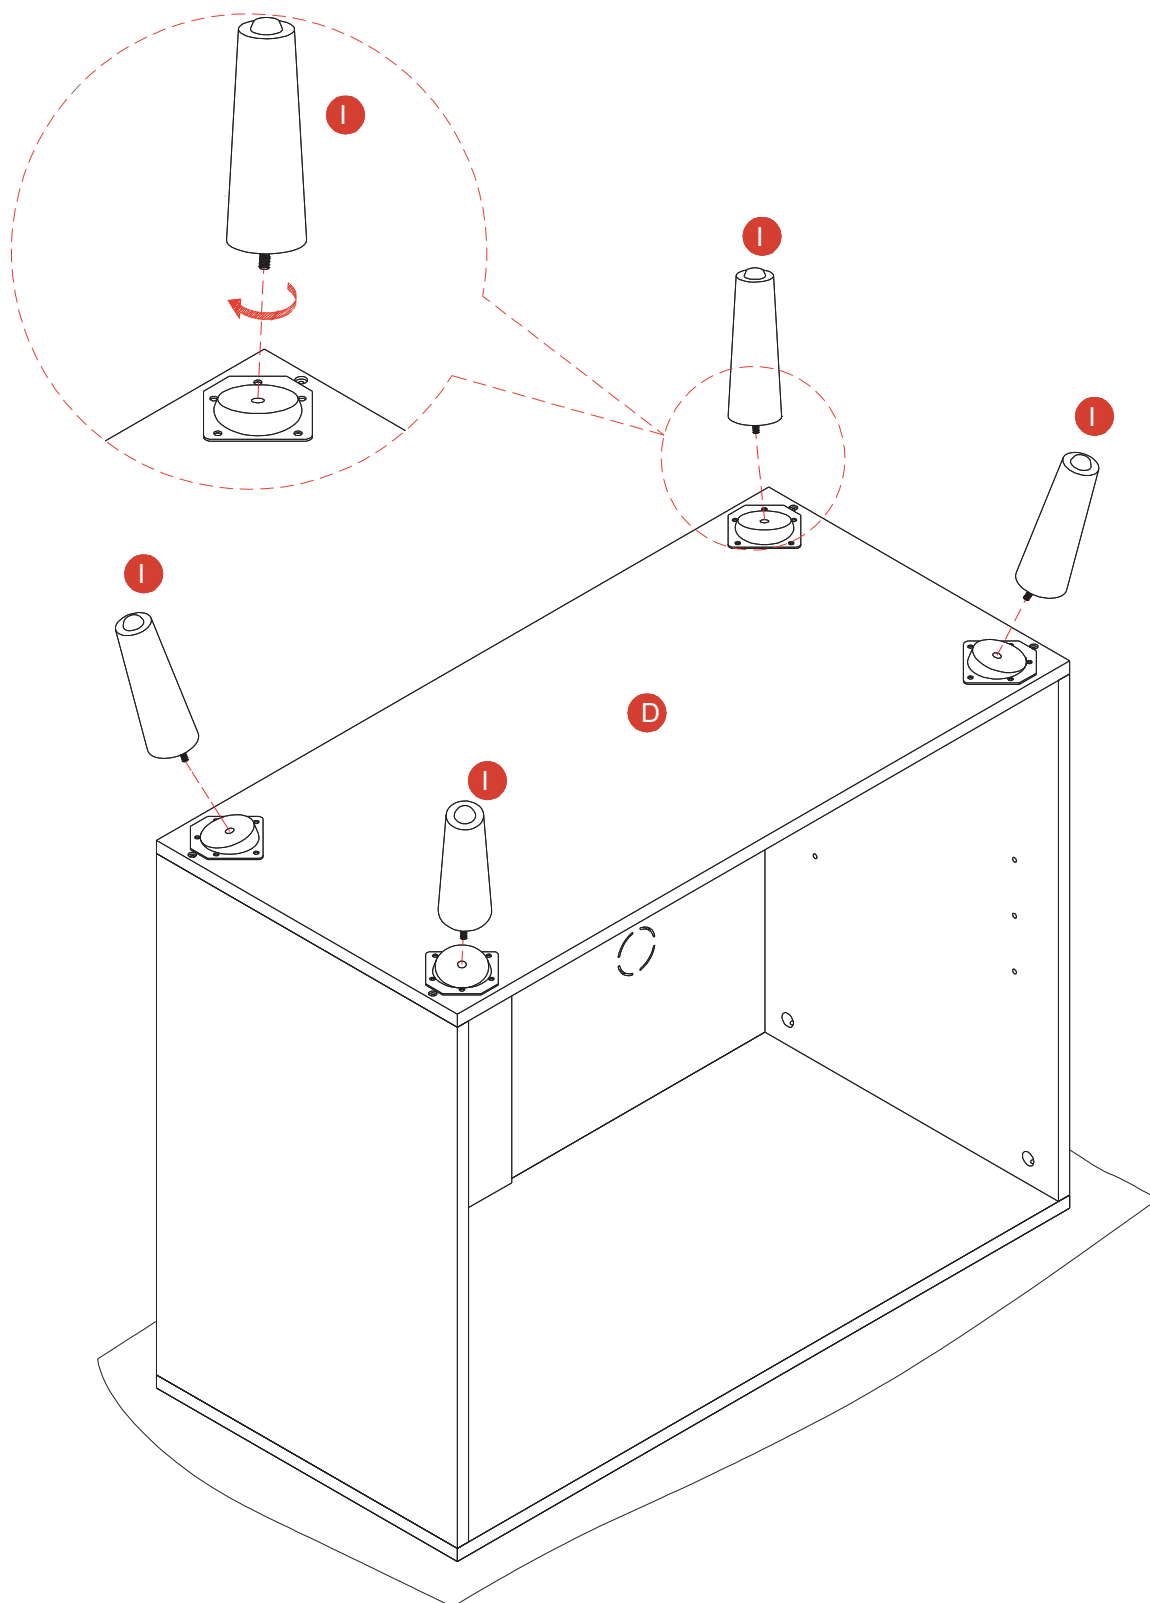

    
Step 07

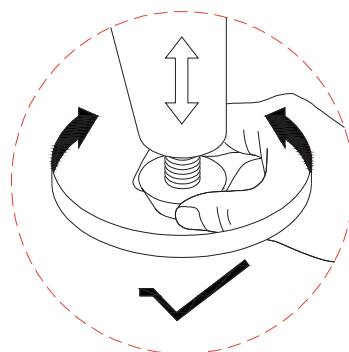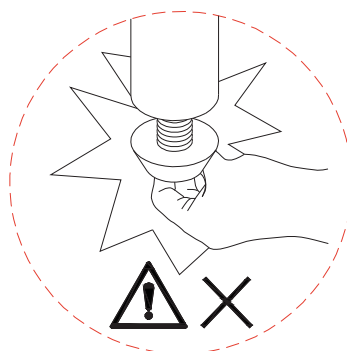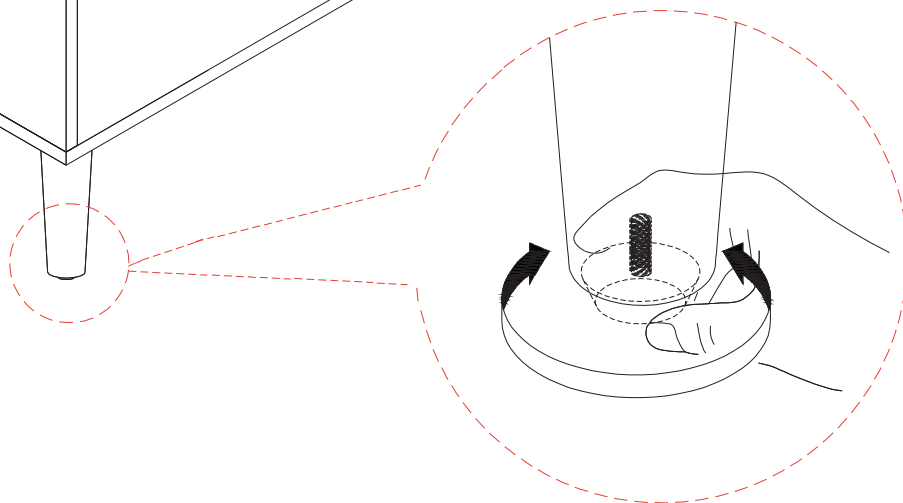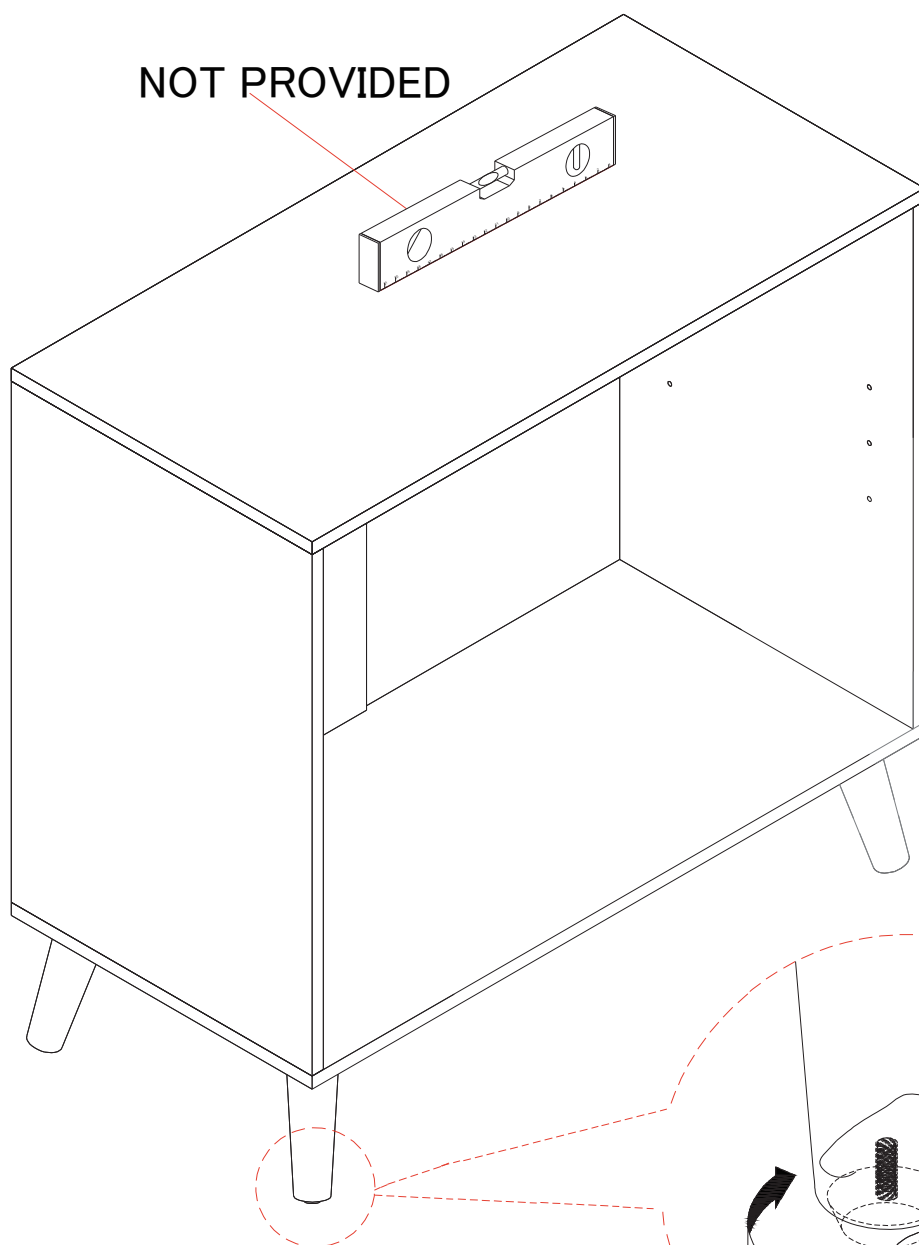


Note:
Before the next step, adjust the feet of the locker to keep it level.

Step 08

 Insert the backboard clip (10) into the side panel groove, pass screw (11) through the backboard clip, and tighten with screwdriver (21).


11	 x 14	D3x14mm	10	 x 14	Layer board support
21	 x 1	Screwdriver			

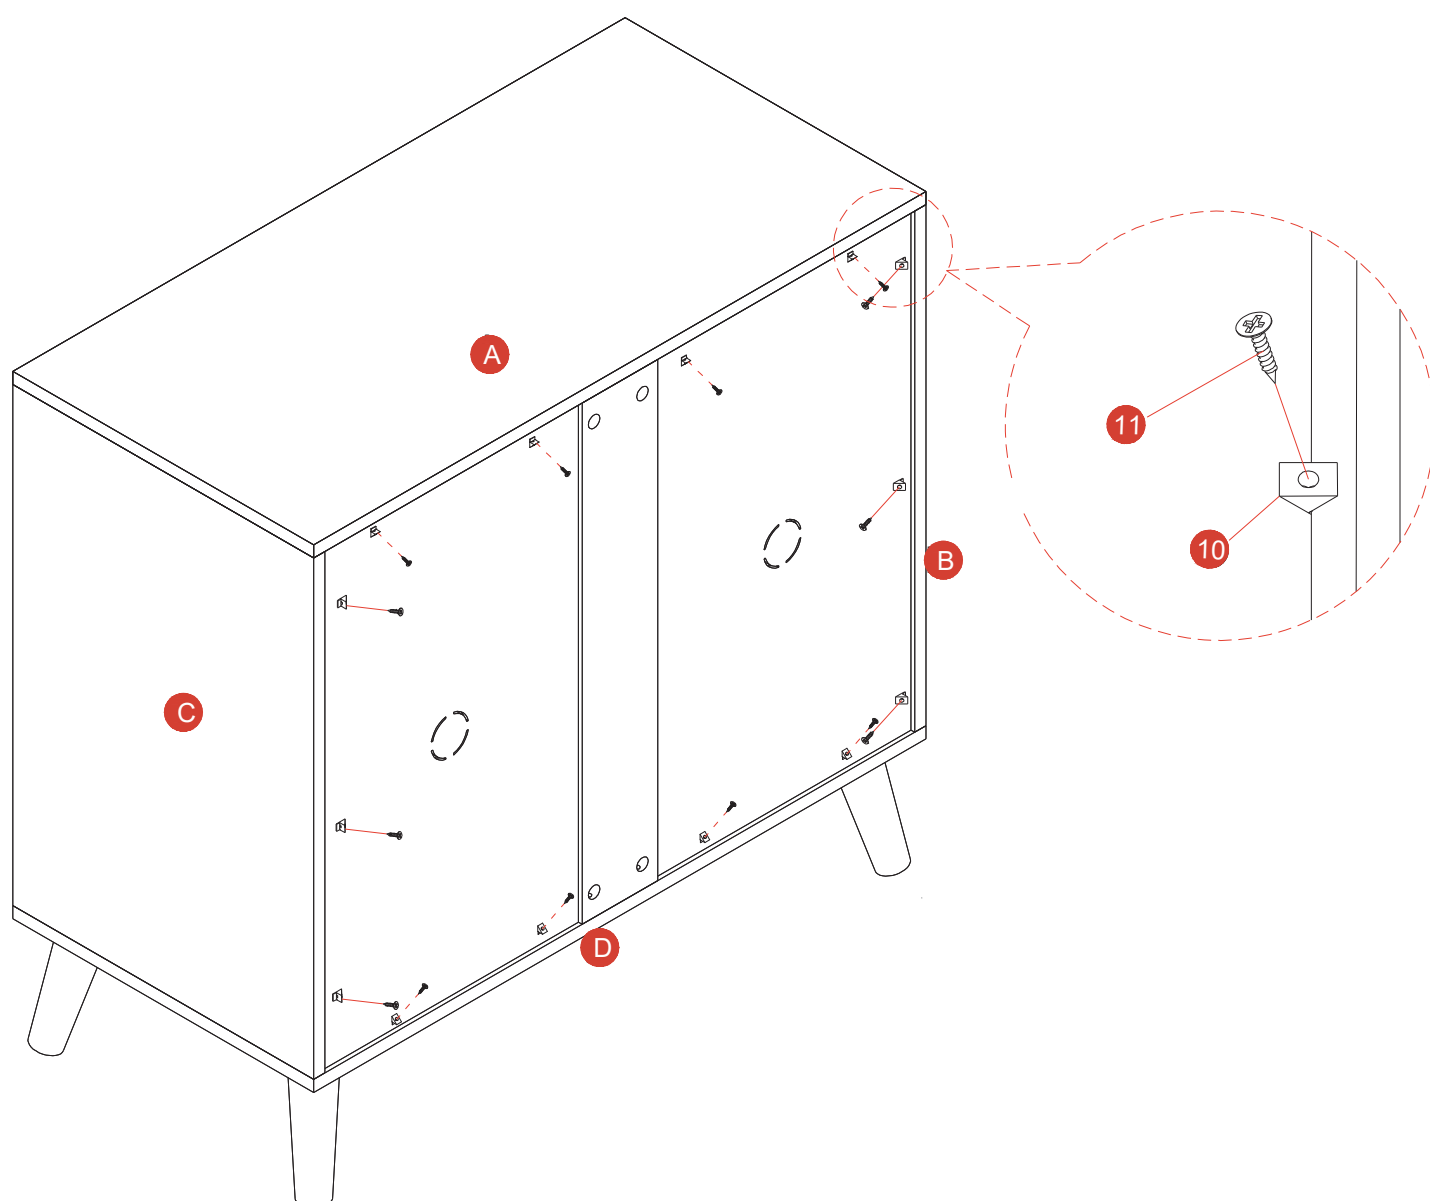 


Step 09

Insert the Layer board support (3) into the corresponding holes of side panels (B/C). Place shelf (G) inside the cabinet.

3		x 4	Layer board support
---	---	-----	---------------------

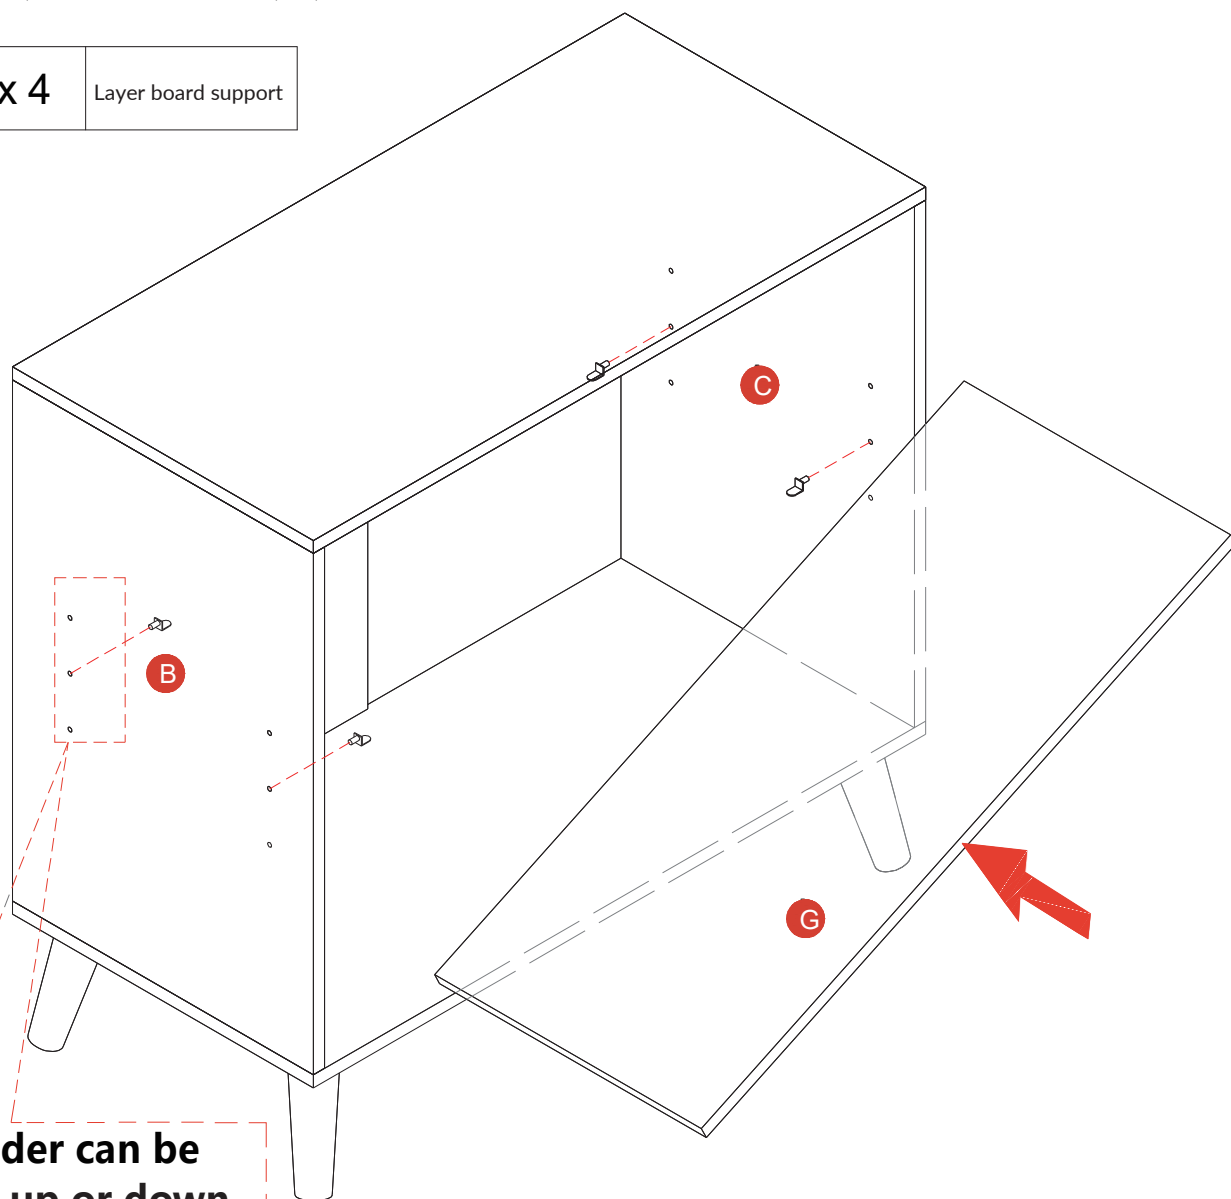 


Shelf holder can be adjusted up or down

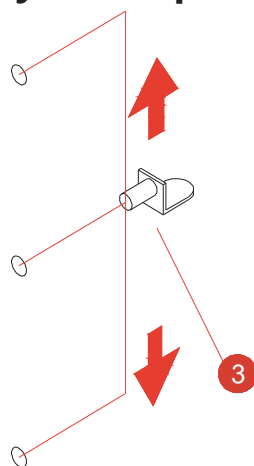 

Step 10


- 1.Pass screw (13) through hinge (14) and install it into the corresponding hole on door panel (H), then tighten it with screwdriver (21).
- 2.Pass handlescrew (19) through the door panel and install it into the corresponding hole of handle (18), then tighten it with screwdriver (21).





14	 x 4	Ø35mm	13	 x 8	D4x12mm
18	 x 2	Hold hands	19	 x 4	M4x16mm
21	 x 1	Screwdriver			

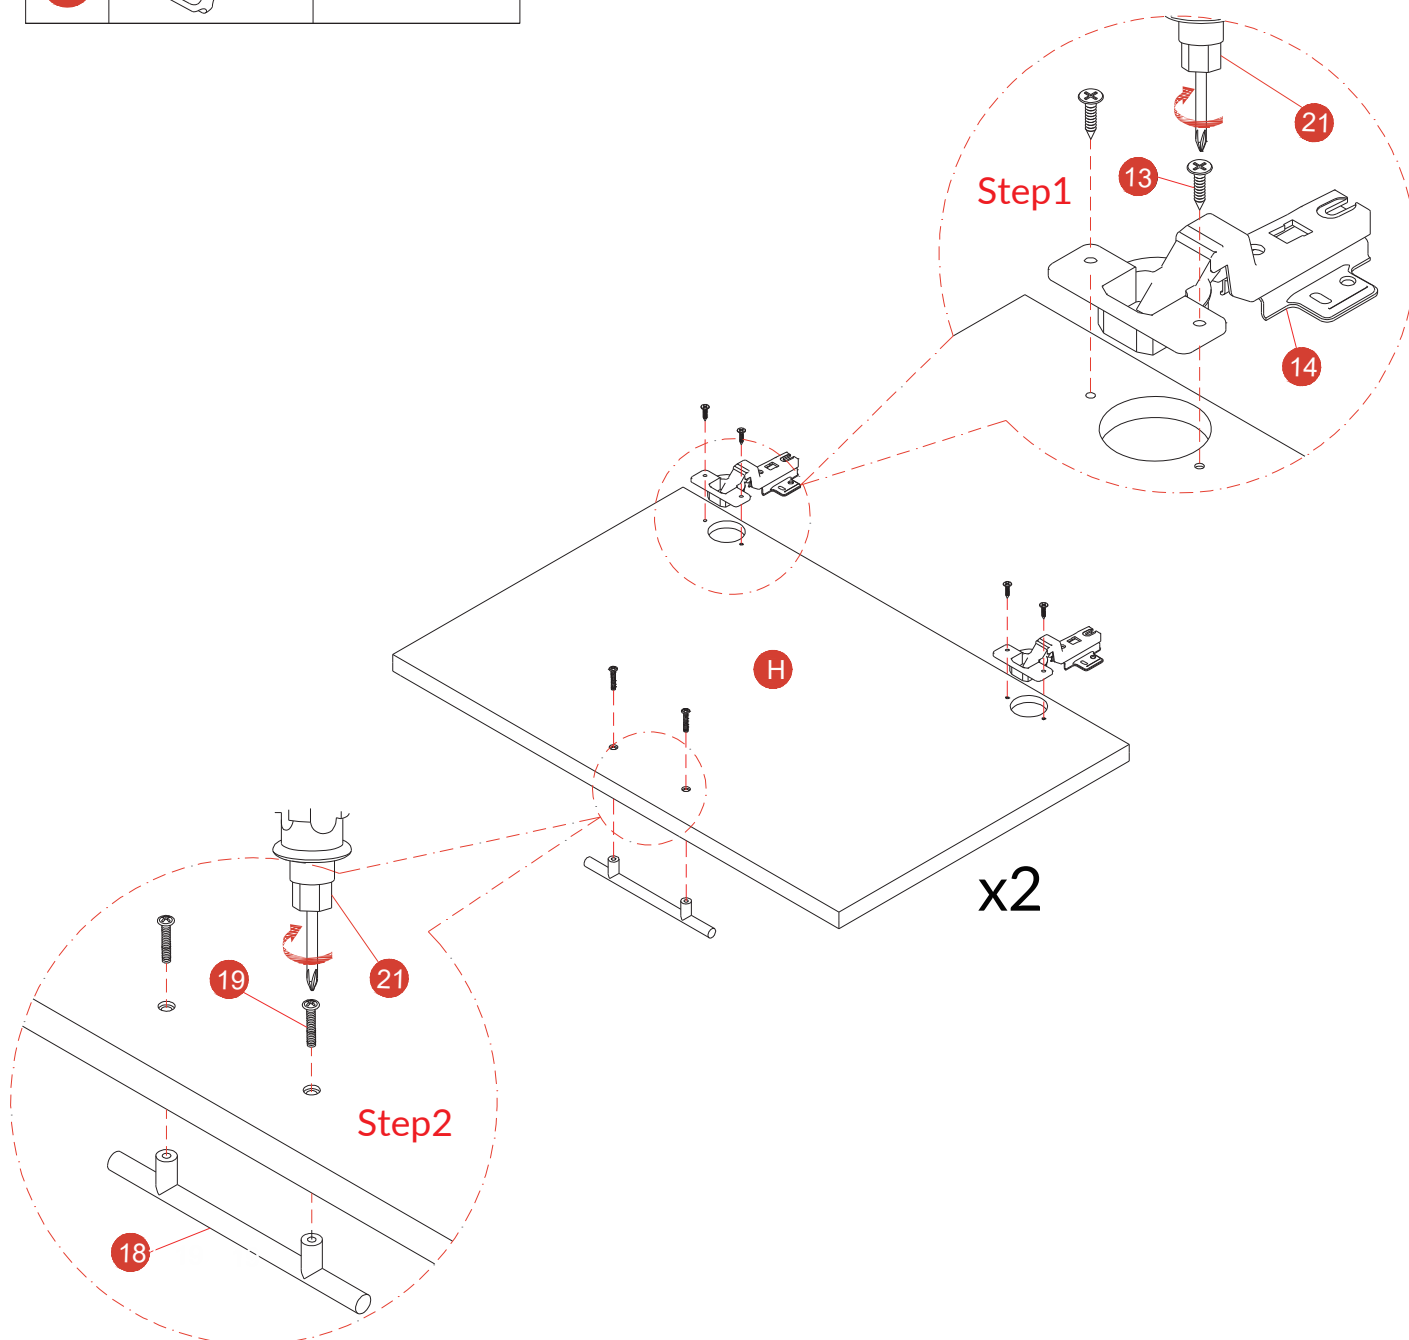 

Step 11

 
Insert screw(13) through the hinge hole on door panel(H) into the corresponding hole on side panel (B/C),and tighten with screwdriver(21).

13	 x 16	D4x12mm
6	 x 1	Screwdriver

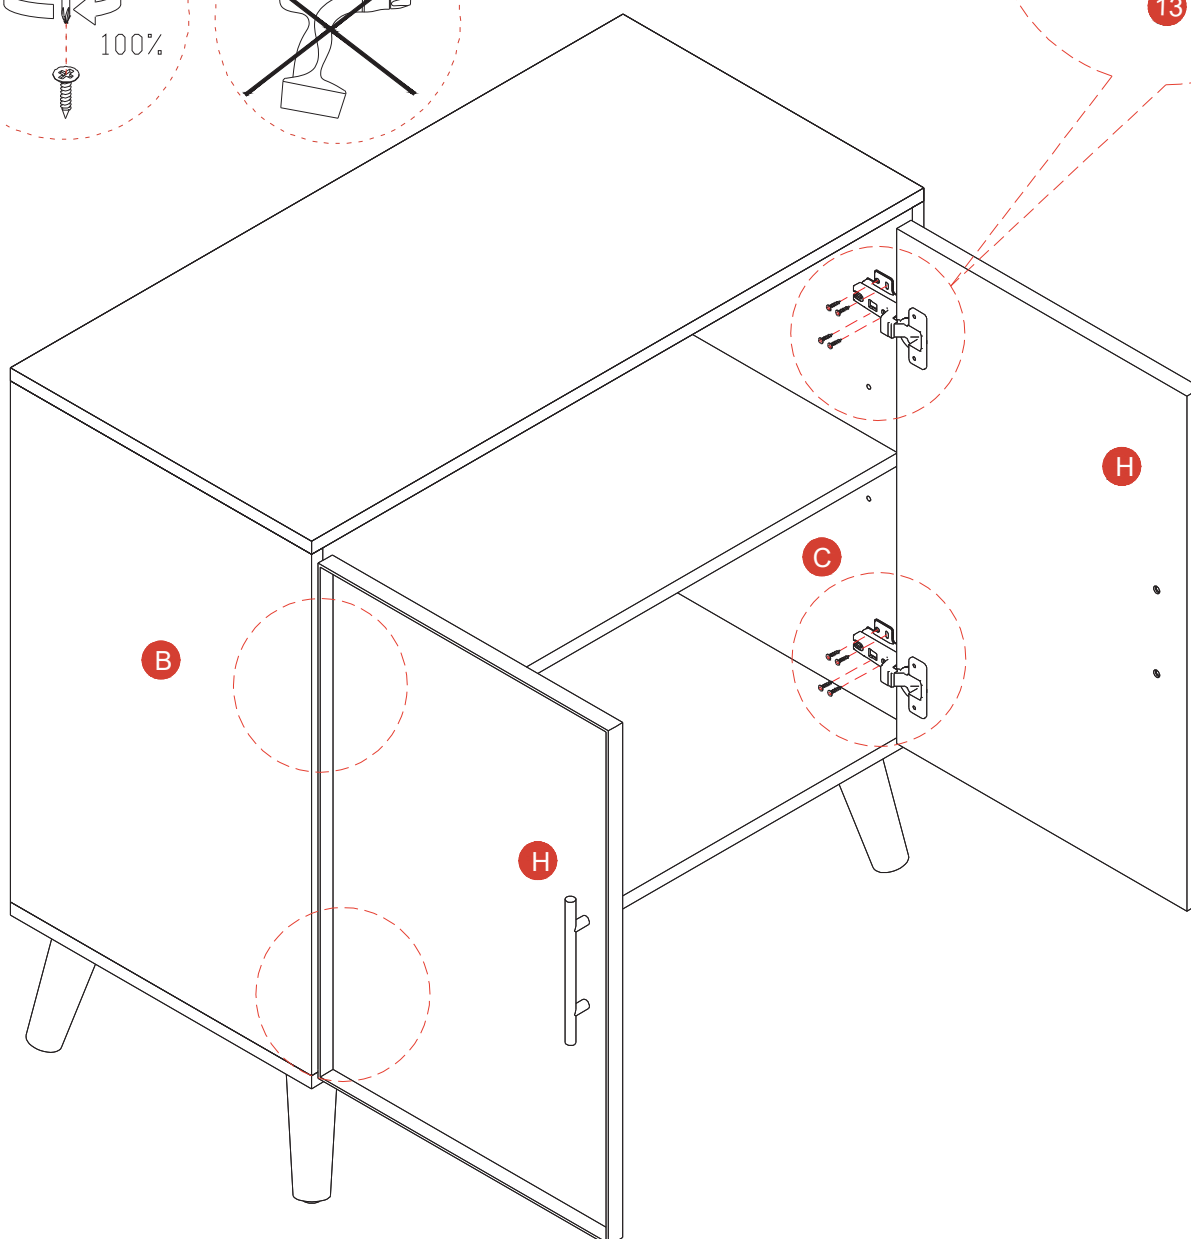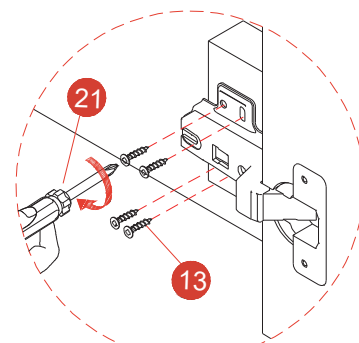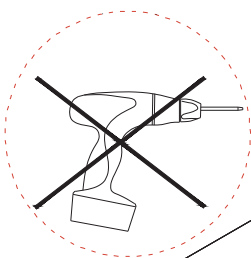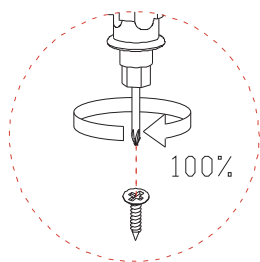    


Door Hinge Adjustment Instructions

 
Concealed hinges are three-way adjustable.

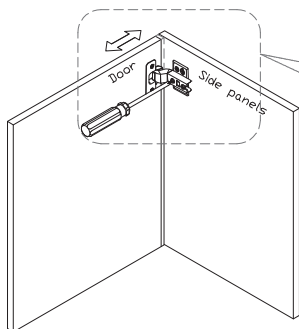


Horizontal by screw adjustment!

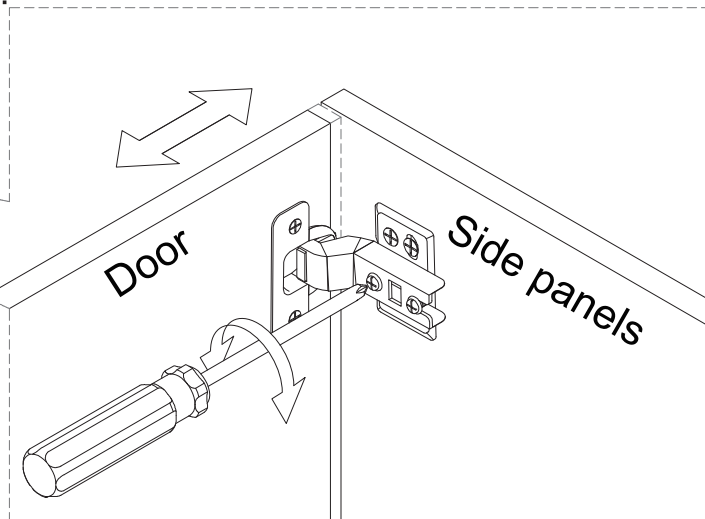 

 
Concealed hinges are three-way adjustable.

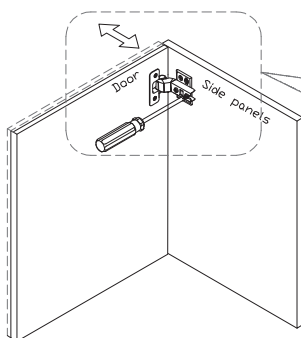

 
In-and-out by loosening the hinge arm mounting screw or via cam adjustment!

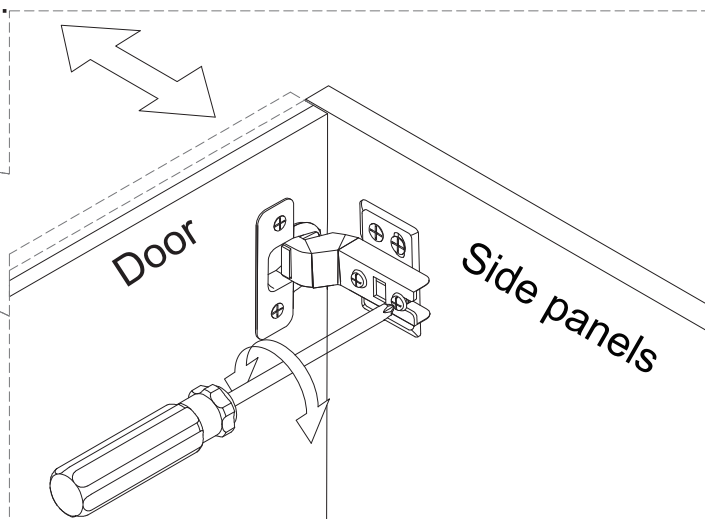

 Concealed hinges are three-way adjustable.

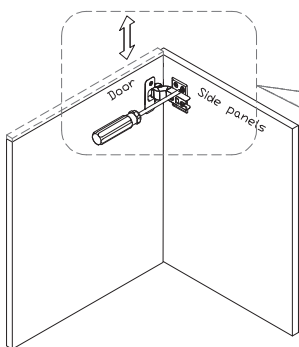





 
Vertical via slots in the mounting plate or via cam adjustment!

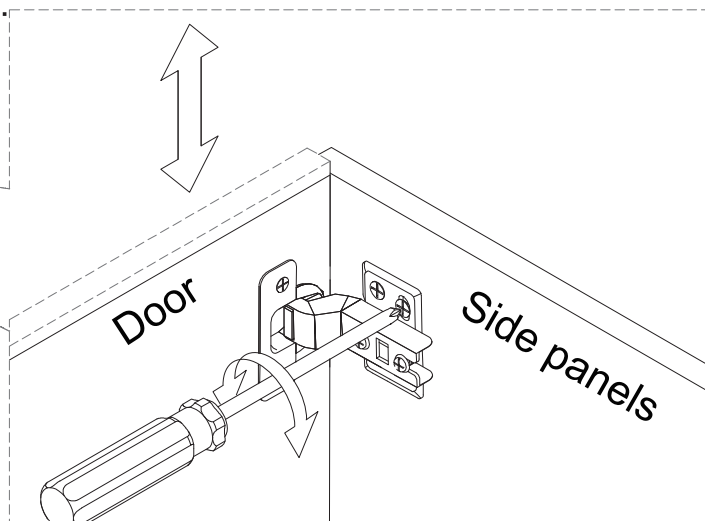

Step 12

 Pass screw (8) through the anti-fall part (5) and insert it behind the panel, then tighten with screwdriver (21) .



8		x 4	D4x20mm
5		x 2	Anti-tip componeng
21		x 1	Screwdriver

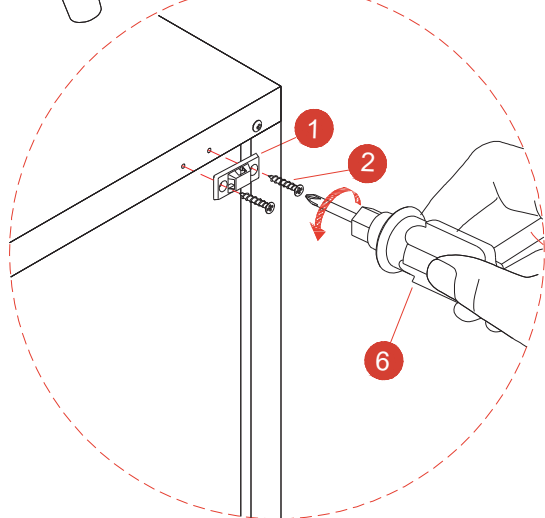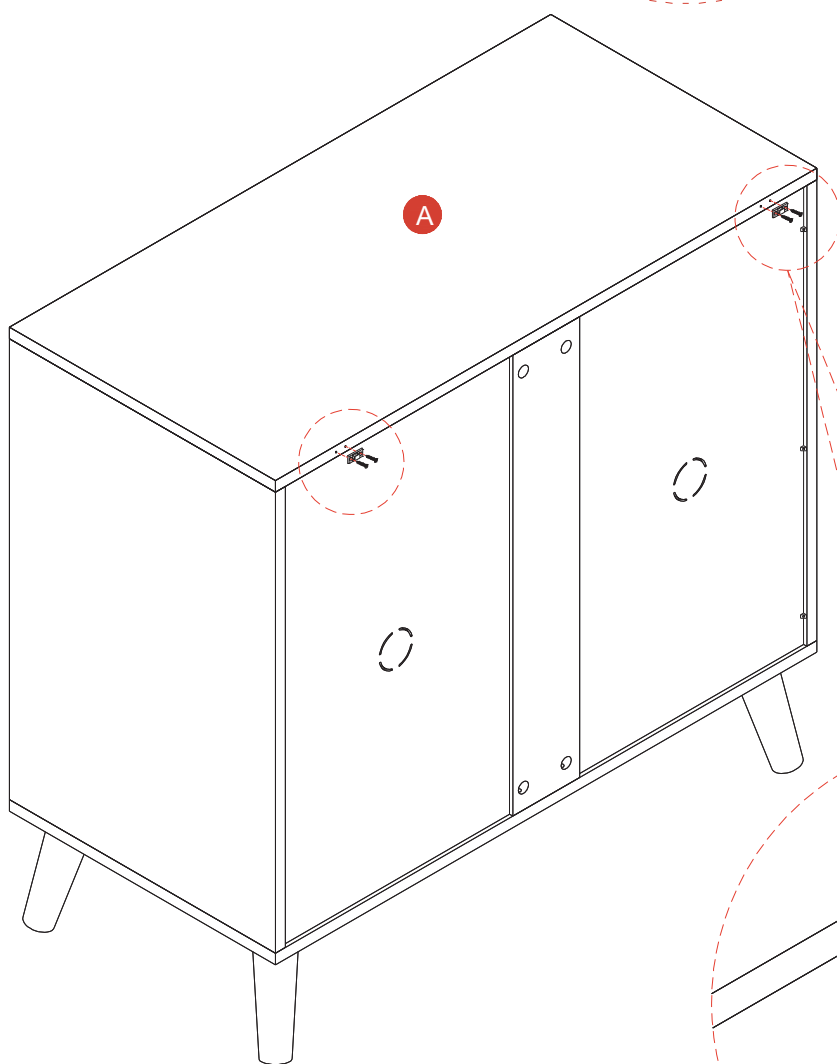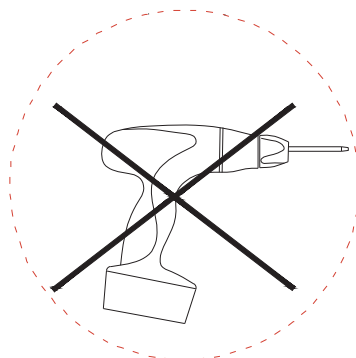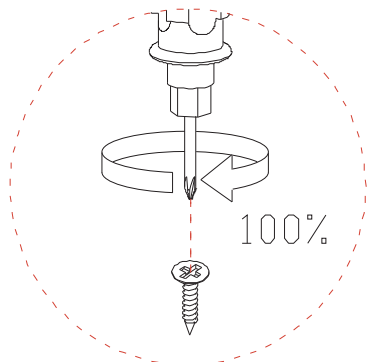    


Step 13

Install Anti-tip device (5) to the wall in this step.


7	 x 4	D4x40mm
5	 x 2	Anti-tip componeng
4	 x 4	L=30mm
21	 x 1	Screwdriver

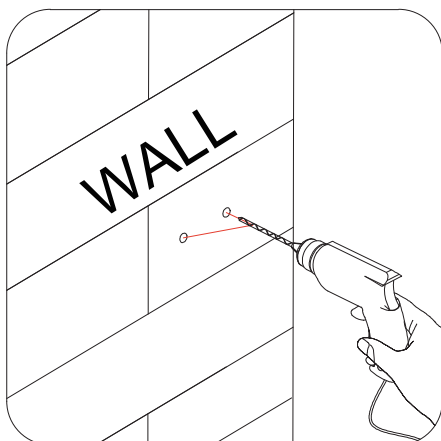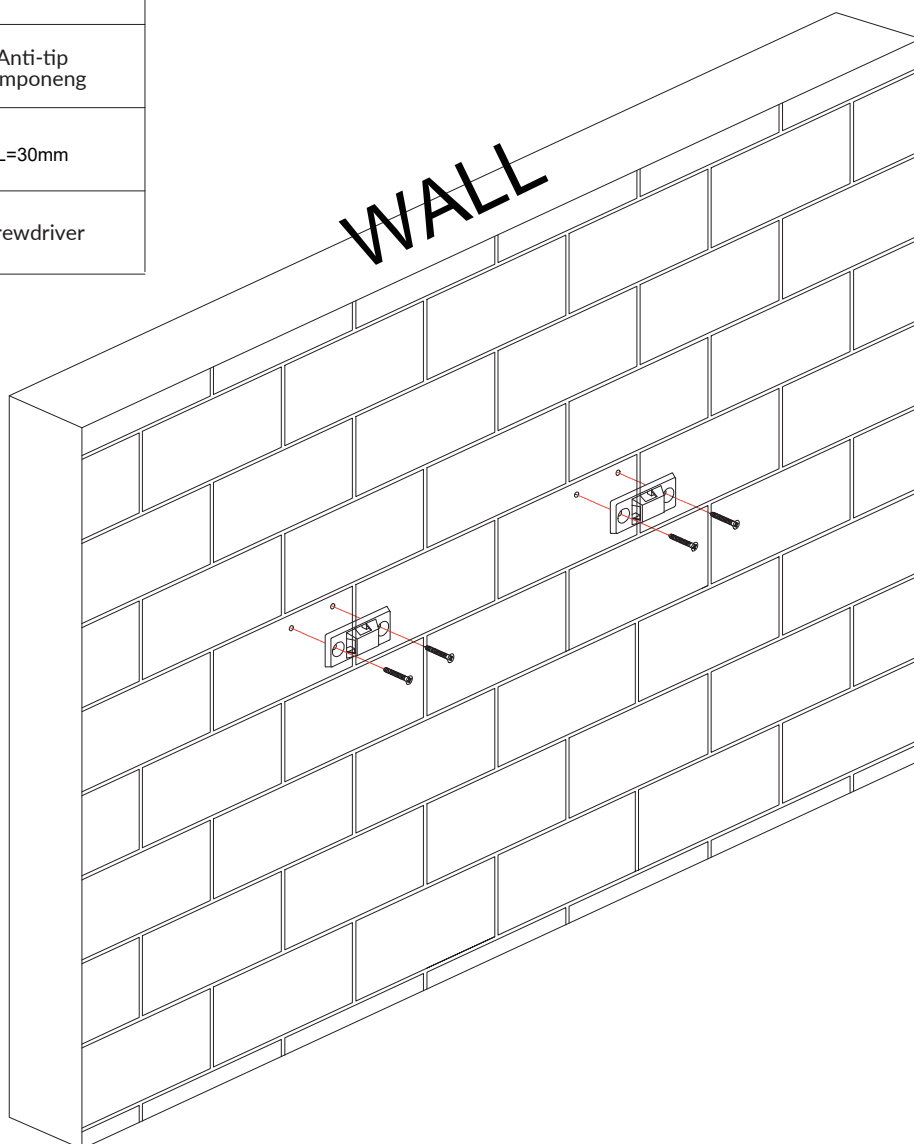  

 1. Drill a hole in the wall with an electric drill.

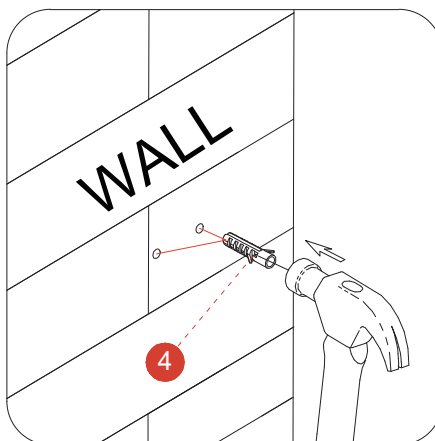

 2. Tap the plastic wall anchor into the hole with a hammer.

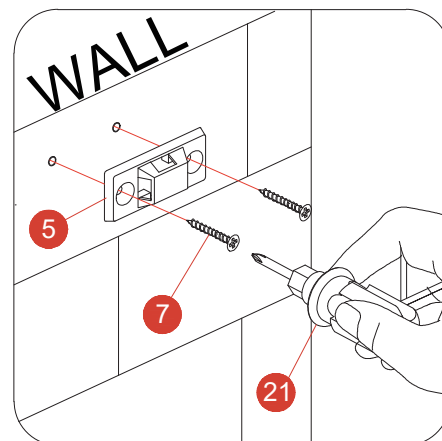

3. Secure the Anti-tip device 7 to the wall with screws 7.

 
 
 
Step 14

WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- For use with televisions weighing 35 lb or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

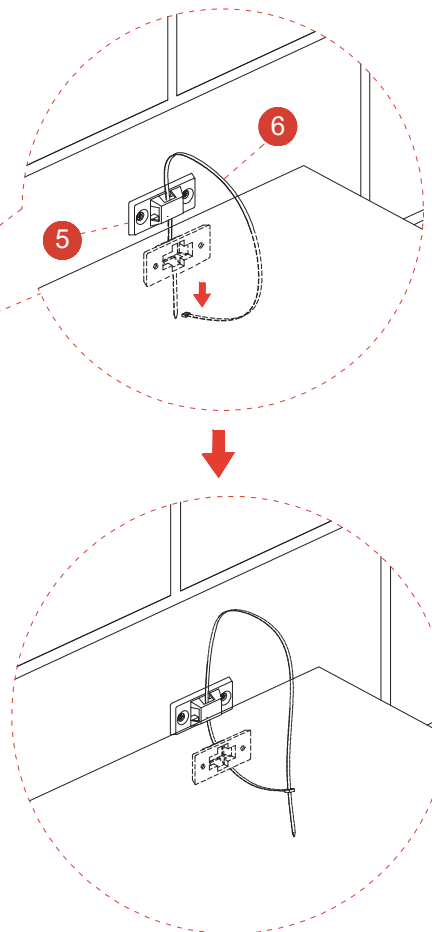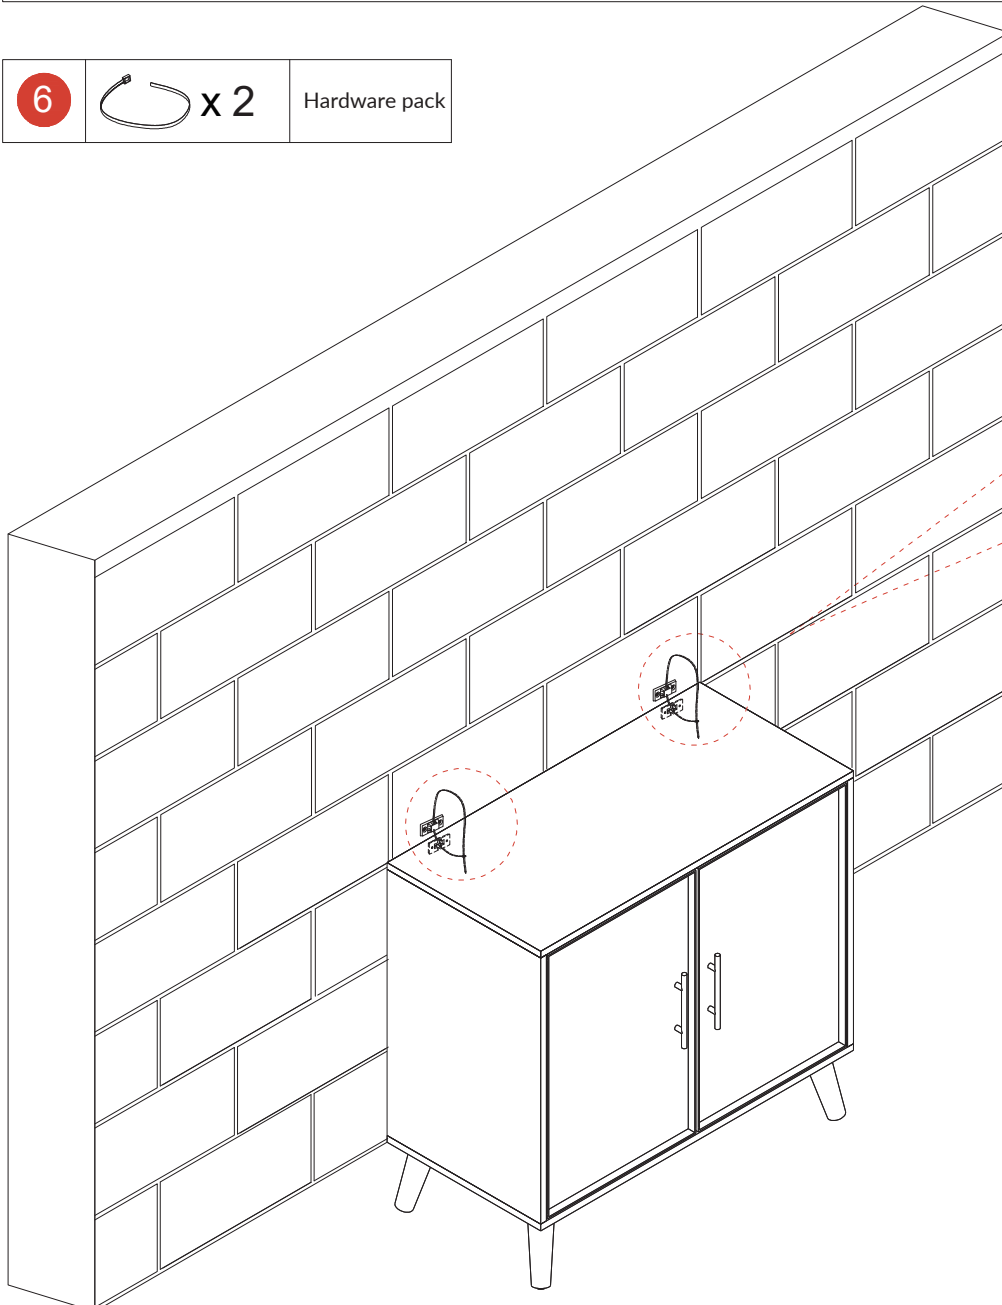

WWW.HULALAHOME.COM

Email: customerservice@hulalahome.com

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)