
# Udreamer

## **UD007** TURNTABLE SYSTEM

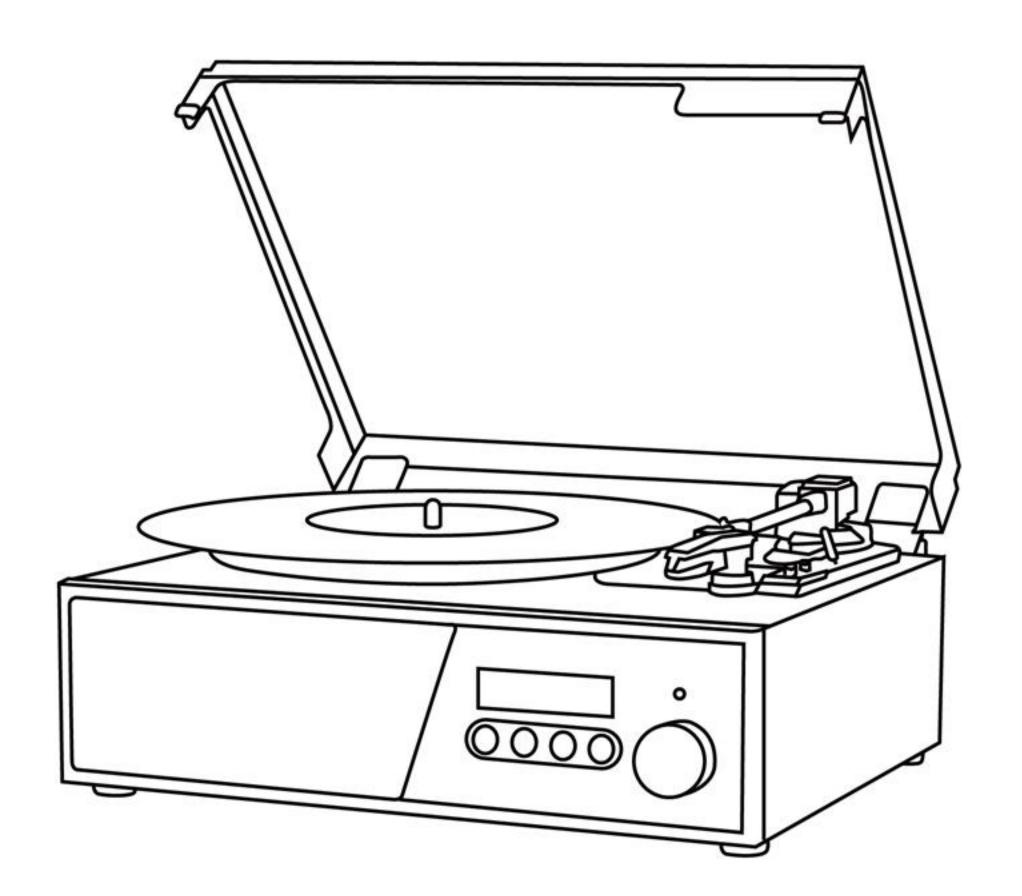

## **USER MANUAL**

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

> Made in China QBZtech@outlook.com

## ▶ Introduction

- Thank you for choosing our Turntable! Please always follow the instructions for safe usage. If you have any questions about the product or experience any problems, please contact us by email: QBZtech@outlook.com

0 0 0 =

#### **Intended Use**

- The Turntable is intended for playing 7", 10", and 12w LPs. All other usages or modifications are regarded as contrary to the operating instructions and contain a great risk of accidents. The manu-facturer accepts no liability for damage(s) resulting from usage that is contrary to these instructions. The device is designed for use in private households. The device must only be used indoors. This device must not be used for commercial purposes.

## Warnings and Safety Instructions

⚠ Please ensure that the packaging is kept out of the reach of children! Risk of suffocation! △ Make sure to keep this user manual. Read the manual carefully before using your

- Be aware of the risks and consequences resulting from misuse of the Turntable. Misuse can result in personal injury, or destruction of the device.
- Use the Turntable only for purposes described in this user manual.
- If the Turntable malfunctions, is dropped or (appears to be) damaged in any manner; do NOT use it and contact Customer Service.
- The Turntable is designed and intended for private, non-commercial use only.
- When you are not using the Turntable, turn the device off and disconnect the device from
- Do not turn up the volume too high to avoid damaging your hearing. Listening to music on a high volume for an extended period of time can damage your hearing.
- Unplug the Turntable during lightning storms.
  Do not block any ventilation openings or cover them with items such as newspapers, tablecloths, or curtains.
- Do not insert your fingers or any objects into the ventilation holes.
- Keep 10 cm ventilation space around the Turntable. - Use the Turntable in moderate climates (between -10°C - +40°C) only.

#### Persons

- The Turntable can be used by children aged if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are supervised. Keep the appliance and its cord out of reach of children.
- The Turntable can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards
- Children shall not play with the appliance.

- Do not manually lower the arm onto the LP disk to avoid damage to the LP disk and stylus. - Do NOT use the Turntable in or near a bath, shower; swimming pool, or over a basin filled with water. Do NOT operate the device with damp or wet hands and do NOT touch the power cord with damp or wet hands. Make sure to prevent any contact with water.
- Turntable in water. If water does get inside the casing, turn the Turntable off immediately and contact our customer service.

- Keep the Turntable away from heat and areas where the surrounding temperature is relatively hot or objects that produce heat (including amplifiers). Do not place candles or other naked flame sour-ces, or heat sources on top of the Turntable.
- Do NOT cover the Turntable when it is switched on. Never put objects on top of the Turntable. Do not place objects filled with liquids on top of the Turntable. This poses a risk of fire, electric shock or injury.
- Always place the Turntable on a stable, even, and horizontal surface.

#### **Electronics**

- Do NOT reconstruct, repair or disassemble the Speaker. This can damage the device. For safety reasons, these parts may only be replaced by authorized service personnel. In order to prevent hazards, please contact customer service if needed.
- Make sure your outlet supplies the correct power voltage to avoid damage to the Turntable. - Always check the power cord and plug before using the Turntable. Do NOT operate it if the cord or plug are damaged. A damaged cord or plug must be replaced by a qualified person in order to avoid damages and personal injuries.

#### - Only use the adapter and accessories provided by Udreamer. This model only suits power cord in output of 5V,1.5A.

- If the power fails during usage, turn off the Turntable immediately and pull the plug from
- Do NOT disconnect the Turntable from its power supply by pulling the cable.
- Do NOT carry or pull the device by its cable.
- Make sure that you do NOT trip over the cable. The cable should not be kinked, trapped or twisted. Do not let the cord hang over the edge of a table or counter; or touch a hot surface.

### ► Receiving Your Shipment

- When receiving your shipment, make sure that the contents are consistent with the packing list. Notify your distributor of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier and notify your distributor at once, giving a detailed description of any damage. Save the damaged packing container to substantiate your claim

## ► Contents of Package


1\*Turntable

1\*User Manual


1\*5V,1.5A Power Cord

1\*Remote Control (Battery not Included)


## ▶ Product Features

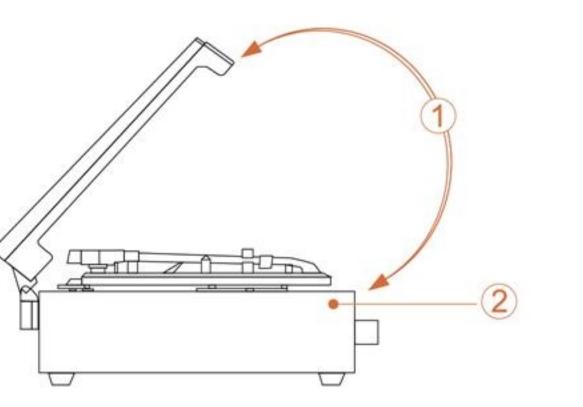

1. Dust Cover 2. Turntable

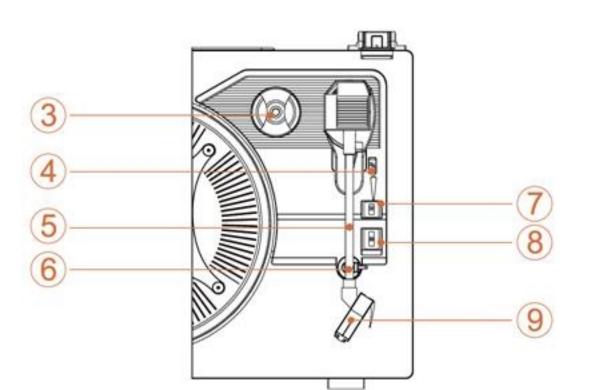

- 3. 45 RPM Adapter; 4. Arm Raise Lever
- 6. Arm Clip
- 7. Auto Stop Switch 8. LP Speed Switch
- 9. Stylus

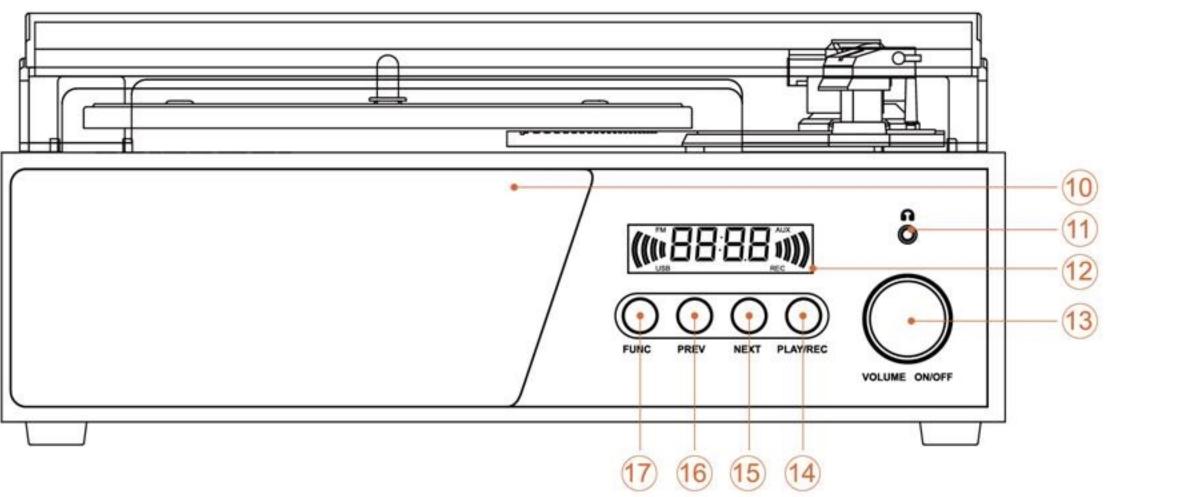

USB AUX IN LINE OUT DC IN

- 10. Built-in Speakers
- Headphone Jack
- 12. LED Display
- 14. PLAY/REC Button
- 15. NEXT(Skip Down)Button 16. PREV(Skip Up)Button

20. AUX Input

21. RCA Output

22. Power Adapter Jack

17. FUNC Button

# ▶ Operating Instructions

- △ Do not block any ventilation openings or cover them with items such as newspapers, tablecloths, or curtains. Do not insert your fingers or any objects into the ventilation
- ⚠ Keep 10 cm ventilation space around the Turntable.
- △ Do not place candles or other naked flame sources, or heat sources on top of the Turntable. Do not place objects filled with liquids on top of the Turntable. This poses a risk of fire, electric shock or injury.

---

Built-in Speaker

Output Power

Built-in Speaker

Impedance

3 Record Sizes

**RPM** 

Input/Output Types

Bluetooth Type

Bluetooth Name

Bluetooth Range

Operating Tem-

perature Range

2x3W

7", 10", 12"

331/3,45, 78

Input: USB, Bluetooth,

3.5 mm AUX input

Turntable

≦10m2

-10°C-+40°C

Output: RCA

32.2\*27.5\*14.1cm

Black

**ABS** 

50-60 Hz

7.5W

DC 5V 1.5A

120 Hz-16kHz

△ Do not manually lower the arm onto the LP disk to avoid damage to the LP disk and

### ▶ Connection

► Technical Data

Size

Weight

Colour

Material

Cable Length

Nominal Voltage

Nominal Frequency

Nominal Power

Consumption

Input/Output

Frequency

Response Rate

▶ Other Features

Auto-stop switch

- Headphone jack

- Belt-driven system

- USB digital to MP3 encoding

- 4 Foot pads that absord vibrations

Ceramic stereo cartridge with stylus

- Connect the power adapter to the power adapter jack. Rotate the VOLUME/ON/OFF button(13) clockwise to turn the unit on. Press FUNC button(17) to choose mode.
- The Function modes are switch from:

PH--USB (only if the USB drive is being connected)--bLUE (Bluetooth)--FM Radio--AUX Input



- Before the LED display changes to the name of the mode, it will show "HI" for a while. So, wait for a while for the function mode.

18. FM Antenna

19. USB Input

#### ▶ Listen to the Phono

- 1. Rotate the VOLUME/ON/OFF button(13) clockwise to turn the unit on. The LED display (12) will show "HI", then change to "PH"
- 2. Remove the stylus protector.
- 3. Place the record on the turntable, use the 45 RPM adapter if required.
- 4. Push the arm raise lever up to raise the arm. Slowly move the arm towards the side of the record. The turntable will start to rotate (turn off the" Auto Stop" switch and the turntable will keep on rotating).
- 5. Put down the arm raise lever and gently drop the arm. The record will start playing.
- 6. Push the arm raise lever up to raise the arm. The turntable will still be rotating, but the record will stop playing. To continue playing, gently put down the arm lever. 7. Turn the Volume Button to the right to turn up the volume. Turn the button to the left
- to turn the volume down. 8. When the record is done playing, push the arm lever upwards to raise the arm and
- move it to the arm rest. Gently put down the arm lever.
- 9. Turn off the turntable or stop it manually (see step 7).

## Bluetooth Connecting and Playback

- 1. Rotate the VOLUME/ON/OFF button(13) clockwise to turn the unit on. Press FUNC button(17) to choose Bluetooth mode, the LED display (12) will show "bLUE".
- 2.The text "bLUE" on the display will flash meaning the unit is searching and waiting to connect to Bluetooth
- 3. Switch the Bluetooth function of your Bluetooth device on (such as a mobile phone) and select the Bluetooth equipment code "Turntable" to connect.
- 4. When the Bluetooth device has connected successfully, the text "bLUE" will no longer flash but be static.
- 5. Start playback of the music on your Bluetooth device and enjoy the music through the speakers of this unit.
- 6. Adjust the Volume knob to the desired volume level.
- 7. You can press the PREV, NEXT and PLAY/REC button to control the music playback.
- 8. If you want to connect the unit to another Bluetooth enabled device after you've already successfully paired, turn off the Bluetooth on the device that was previously paired with the unit. The text "bLUE" on the display will begin flashing, repeat step 2-5
- Note: Maximum Bluetooth communication range: Line of sight approx. 10m (30 feet)

## ▶ Listening to Radio

#### Manual Tuning

- 1. Rotate the VOLUME/ON/OFF button(13) clockwise to turn the unit on. Press FUNC button(17) to choose FM Radio mode, the LED display will show radio frequency and also "FM" on the upper left corner of the LED display.
- 2. Press the PREV or NEXT button to tune your desired station.
- 3. Adjust volume knob for the desired volume level.

## **Auto Tuning**

- 1. Rotate the VOLUME/ON/OFF button(13) clockwise to turn the unit on. Press FUNC button(17) to choose FM Radio mode, the LED display will show radio frequency and also "FM" on the upper left corner of the LED display
- 2. Hold the PREV or NEXT button, it will start seeking automatically and stop until a radio station is reached.

#### **Hints for Best Reception**

FM: the receiver has a built-in FM wire antenna (21) hanging at the rear cabinet. This wire should be totally unraveled and extended for best reception.

## ▶ Playback of MP3 Song via USB Storage Media

The system is able to decode and playback all MP3 file which stored in the memory media with USB connector (not supplied). Plug in the USB pen drive to the USB socket.

Connecting the USB upside down or backwards could damage the audio system or the storage media (USB thumb drive). Check to be sure the direction is correct before connection.

- 1. Plug in the USB drive with the USB symbol facing upwards, making sure it is fully
- 2. Rotate the VOLUME/ON/OFF button(13) clockwise to turn the unit on. Press FUNC button(17) to choose USB mode, the LED display (12) will show "USB on the bottom left corner of LED display"
- 3. The system will start reading the storage media after connecting and start playback automatically
- 4. You can press the PREV, NEXT or PLAY/REC button to control the music playback (Press "PREV" to go to previous track, press "Next" to go to next track, press" PLAY/REC" to be
- 5. Adjust the volume to the desired level.

#### Remark

- USB port does not support connection with USB extension cable and is not designed for communication with computer directly.
- If no USB is being plugged before switching the function mode, the unit will skip the USB mode and switch from PH mode to bLUE mode directly. So, please ensure the USB device must be plugged in before all operation.
- The system can detect and read the file under MP3 and format only though the USB port...
- Due to variances in MP3 encoding format, some MP3 players may not play when connected to the USB socket. Please note this is not a malfunction of the system.

# ▶ Encoding from Phono into MP3 File via USB Storage

The system is able to encode the Phono to MP3 format and recording at USB Storage Media with USB connecting port.

- 1.Plug in the USB flash drive you wish to record onto (make sure it has enough free space). 2. Follow the instruction "Listen to the Phono" above and get prepared the playback of the
- desired track you want to record but do not start the playback.
- 3.Press the PLAY/REC directly and a "REC" text will appear at the bottom right hand corner of the LED display, meaning the system is starting the encoding mode.
- 4. Start playback at Phono for the track which you want to record.
- 5.Press the PLAY/REC button again ,and the "REC" text will disappear from the LED display, means the recording is finish.
- 6.The recording track has been stored in your USB pen drive.If you don't unplug the USB, the turntable will play the recording track first, then continue to play the songs on the vinyl. 7. Follow the step 3-5 if you want to continue another track of recording without unplug

## ► Aux Input Connection

Connect the unit to any auxiliary device (i.e. MP3 player, or iPod® (not included) by connecting the aux in jack with one end of 3.5mm stereo cable (not provided) and the other end connect to the auxiliary device to perform the music.

- 1.Plugged the Aux in jack from your external device
- 2.Rotate the VOLUME/ON/OFF button(13) clockwise to turn the unit on.Press FUNC button(17) to choose AUX Input mode, the LED display (12) will show "AUX on the center and a small "AUX" on the upper right corner of LED display.
- 3.Start to playback your device and adjust On-off/Volume knob to the desire volume level. If the distortion was too high, reduce the volume level of your auxiliary device.

### ► RCA Output Connection

## How to connect an external speaker

Active Speaker:

- 1. Connect the RCA audio cable (Not included) to the RCA output jack at the back of the
- 2. Plug the other end into your active speaker. The sound will be transferred from the turntable to your external active speaker.

Passive Speaker:

- 1. Connect the RCA audio cable(Not included) to the RCA output jack at the back of the turntable. Plug the other end into an amplifier.
- 2. Connect the amplifier with your passive speaker. The sound will be transferred from the turntable to your passive speaker.

## ► Auto Stop Switch

- 1. When you turn on the Auto Stop Switch, the turntable will stop spinning automatically.
- 2. When you turn off the Auto Stop Switch, the turntable will keep spinning.
- 3. Turn the Auto Stop Switch on if your record only has a few songs on it.
- 4. Turn the Auto Stop Switch off if your record has many songs on it.
- When your record is scratched or damaged, it could keep spinning or repeat skipping when the Auto Stop Switch is turned on. If this is the case, change the record or position the arm to its original place to stop it.

## ▶ Remote Control

- 1. ON/OFF: Not work on remote control. Please turn on/off the turntable on
  - turntable system instead on remote
- 2. FUNC: Press to select different function mode
- 3. PLAY MODE: Hold for automatical searching for stations.
- 4. MUTE: Press to suspend the sound output temporally
  - Press again to resume the sound output.
- 5. **MEMORY:** Hold for deleting the radio frequency
- 5. **SKIP DOWN:** In USB mode:to select previous track - In FM mode:tuning the radio station
  - In Bluetooth mode: to select previous track
- 7. PLAY/PAUSE: Press once to pause play temporarily in USB,
  - AUX IN, Bluetooth, FM Radio mode.
  - Press once again to start playback USB,AUX IN, Bluetooth, FM Radio mode.
- 8. SKIP UP: In USB mode: to select next track
  - In FM mode:tuning the radio station
- In Bluetooth mode:to select next track 9. **REC:** - Press to encode phono to USB in MP3 format
- 10. **TB:** Play the vinyl encoded

#### How to Encode Vinyl into MP3 Format by Remote Control?

- You can change the extension and position of FM antenna for seek new radio frequency
- 1. Plug in USB pen drive
- 2. Turn on the turntable via turntable system
- 3. Press FUNC on remote control to choose PH mode and start to play vinyl
- 4. Press REC on remote control to start encoding
- 5. Press TB to finish the encoding. The turntable will playback the encording music first, then continue to vinyl playback.


## How to Use the FM Radio through Remote Control?

- Long press the PLAYMODE button via remote control, the turntable will seek the radio frequency automatically and store the radio frequency follow the sequence of station numbers P-01,P-02,P-03.....
- Press SKIP DOWN or SKIP UP button to choose the radio frequency you don't like Long Press MEMORY button, it will delete the radio frequency you choosed Note: The turntable can only store 50 stations.
- You can change the extension and position of FM antenna for seek new radio frequency

## **Battery Replacement**

The battery compartment is located on the back of the remote control.

- 1. Remove the battery compartment door by pressing in on the tab and lifting it off.
- 2. Insert two AAA size batteries (excluded) into the battery compartment following the polarity markings inside the battery compartment. 3. Replace the battery compartment door.

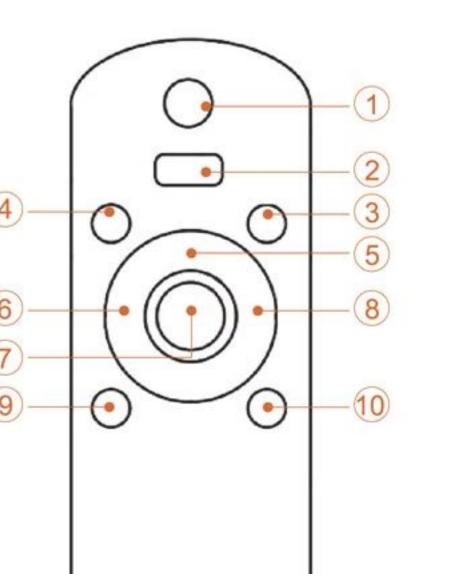

#### **Battery Precautions**

- Replacement of batteries must be done by an adult.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed.
- Only batteries of the equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Dispose of batteries properly. Do not dispose of batteries in fire. The batteries may explode or leak.



## ▶ Maintenance and Cleaning

- Clean the Turntable with a clean, soft and damp cloth. Do not use (aggressive) cleaningagents or abrasives.



## ▶ Storage

- Store the Turntable in a clean and dry place. Do not store the device in extreme high or extreme low temperatures.



## ▶ Service

- If you need service or information regarding your product, please contact the Udreamer Customer Support at QBZtech@outlook.com

## ▶ Warranty

- Within 1 month from the date of purchase, any problems caused by product's performances under normal operation, without overhaul, can be replaced for a new turntable or be fully refunded.
- Within a half of year from the date of purchase, any problems caused by product's performances under normal operation, without overhaul, can be accepted by free maintenance service.

- This warranty does not cover:damages caused by misuse or incorrect repair; parts subject to wear; defects that the customer was aware of at the time of purchase; damages or defects caused by customer neglect; damages or defects caused by third parties.

## ▶ Disclaimer

- Changes reserved; specifications are subject to change without stating grounds for doing so.