


<div><div><div><div></div><div>NYXI</div></div><div>User Manual For Joy-Pad Controller</div></div><div></div></div>	<div><div><div><div><div><div>L Button</div><div>ZL Button</div><div>SL Button</div><div>LED Indicator</div><div>Sync Button</div><div>3R Button</div></div><div><div>Slide Rail</div><div>Unlock Set Button</div><div>Turbo Button</div><div>Back Button</div></div></div><div><div><div>- Button</div><div>LED Indicator</div><div>LED Indicator</div><div>Left Stick</div><div>Directional Button</div><div>Capture Button</div><div>Frame</div><div>HOME Button</div></div><div><div><div>+ Button</div><div>X Button</div><div>Y Button</div><div>A Button</div><div>B Button</div></div><div><div>Right Stick</div></div></div></div></div></div><div><div>1.Product description</div><div>Joy-Con Wireless Bluetooth is the standard controller for Nintendo Switch. It can be connected to the host screen via the rail and can also be used wirelessly without the rail. It has the functions of the normal controller. In some specific games, a single Joy-Con can be used horizontally like the joystick, and in some games, the two Joy-Con can be grabbed by hands like a somatosensory joystick. Joy-Con is equipped with a motor vibration and 6 axis function, and the joystick has a cool atmosphere light, allowing you to be immersed in the game. With Wake-up and One-click Connect Function, no NFC function, no infrared camera, does not support live upgrade, only a local upgrade package.</div></div><div><div>2.Product Parameters</div><div><div>(1) Joy-Con size: 111,8*58,6*53mm (a single)</div><div>(2) Weight of Joy-Con: 75 ± 5g (a single)</div><div>(3) Material: New ABS material</div><div>(4) Connection Method: Bluetooth</div><div>(5) Input Voltage and Current: DC 4,5 ~ 5,5V 400mA</div><div>(6) Battery Capacity: 400mh Charging time: 2H Usage time: 8H</div><div>(7) Vibration: Each Joy-Con handles with a motor, a powerful vibration mode</div><div>(8) Built-in six-axis gyroscope and acceleration function for the better gaming experience</div><div>(9) TURBO function: Supports burst function and erase burst function</div></div></div></div>	<div><div>3.Connection Method</div><div><div>※ Please do not touch the joystick during the connection process of Joy-Pad, and keep the handle still for more than 5 seconds after the connection is successful. This can prevent drifting during the game.</div></div></div> <div><div>(1) User guide</div><div><div>① Left-right discrimination: Joy-Con faces up, the Joy-Con handle with the "+" button on the upper right is installed on the left side of the NS host, and the Joy-Con handle with the "+" button on the upper left is installed on the right side of the NS host.</div><div>② Attache Joy-Con to the NS host: The side with the "+" and "-" buttons up, along the slide rails on both sides of the host screen, slide Joy-Con from top to bottom until it clicks, indicating successful installation.</div><div>③ Detach Joy-Con on the device: Find the unlock key on the upper back of Joy-Con, hold down the unlock key and slide Joy-Con from bottom to top until Joy-Con is completely detached from the device, and then release the unlocking button.</div></div></div> <div><div>(2) Connect to use</div><div><div>① First connection</div><div>Method 1: Install the two Joy-Con on the rails on both sides of the host screen respectively, Slide the Joy-Con up and down until it clicks. The host will have an icon to indicate that the connection is successful. After a successful connection, you can detach the Joy-Con to use, and the Joy-Con will automatically connect to the host. Note: A host can connect up to 6 control devices, and a Joy-Con is equivalent to one control device.</div><div>Method 2: 1. Press the host power button to enter the host interface 2. Do the following: "Controllers-" Change Style / Order ", after accessing this interface, press the SYNC button on both Joy-Con for more than 2 seconds to connect, at this time, the 4 LEDs will flash like a marquee. Once the connection is successful, the corresponding LED indicator is always on, then press the L + R button to use it.</div><div>② Log in again</div><div>Method 1: When Joy-Con is installed in the slide rails of the host screen, press the HOME button on Joy-Con can directly wake up the host.</div><div>Method 2: When Joy-Con and the host are separated, And the host is in sleep, then long-press the screenshot button and the HOME button for 1-2 seconds to wake up the two Joy-Con, the 4 LEDs flash quickly to connect to the host.</div></div></div>
--	---	--