






ASSEMBLY INSTRUCTION

Dining chair TN-1029

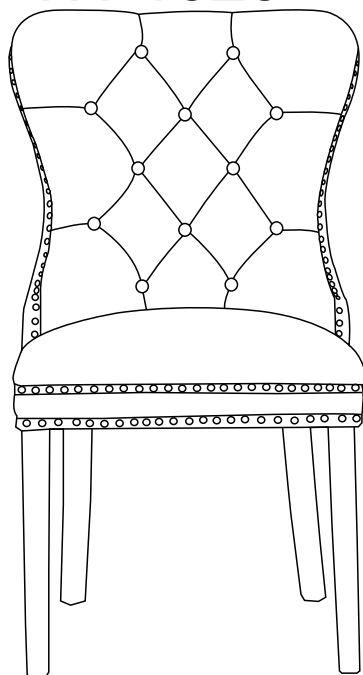


Hardware List

LABEL		DESCRIPTION	QTY
H1		Spring washer	8
H2		Screw M8x70mm	4
H3		Screw M8x50mm	4
H4		Allen key M8	1

Assembly Steps


1

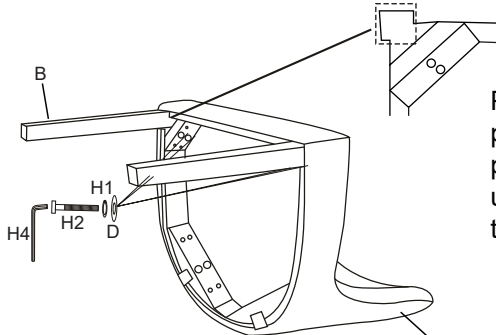

Put the front leg in the dotted box place, if you put it in the wrong place, it still can work, but the uneven force will cause the leg to break.


Tighten all the screws to 80% of maximum tightness

3

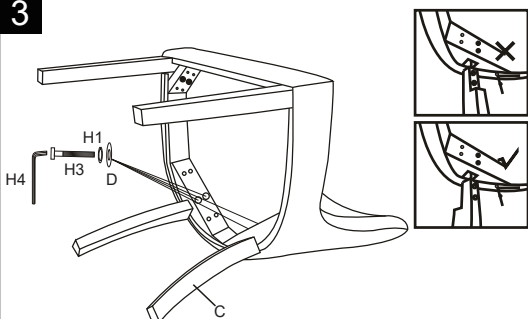

Tighten all the screws to 80% of maximum tightness

4

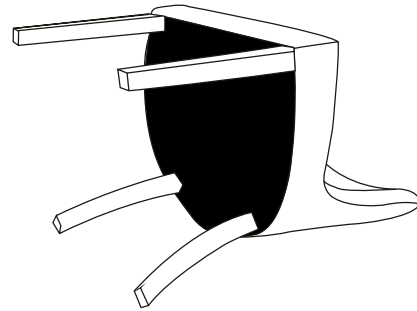





Adjust the chair legs until level, then fully tighten all the screws.
Close the zipper of bottom Non-Woven fabric.

WARNING:

DO NOT STAND ON THE PRODUCT, DO NOT USE THIS PRODUCT AS A STEP LADDER.
DO NOT USE THIS PRODUCT UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
PLEASE DO NOT USE KNIFE TO OPEN ANY PARTS OF THE BOX OR PRODUCT.

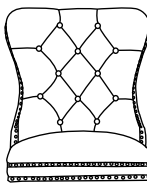Component List

LABEL		DESCRIPTION	QTY
A		Seat	1
B		Front leg	2
C		Back leg	2
D		Flat washer	8