
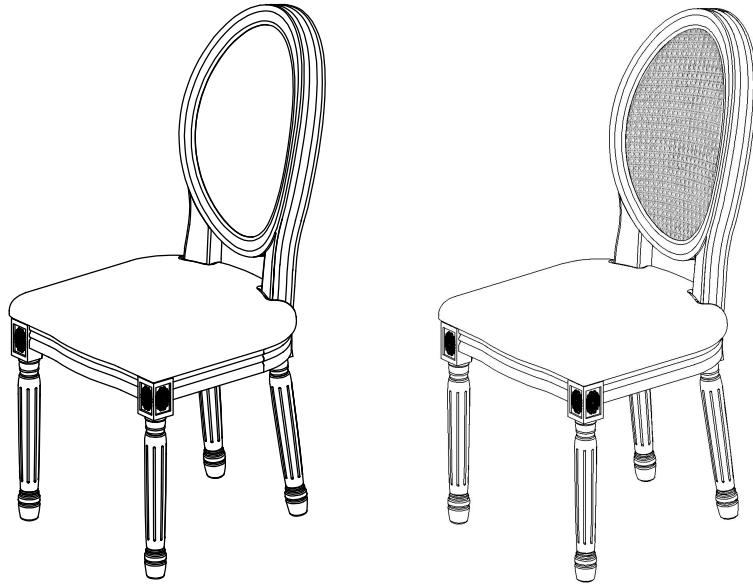
 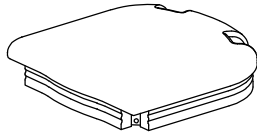



ASSEMBLY INSTRUCTION


 



Dining chair
TN-7105KD & TN-7105RLKD




Component List

| LABEL | | DESCRIPTION | QTY |
|-------|---|-------------|-----|
| A |  | Seat | 1 |
| B |  | Back | 1 |
| C |  | Front leg | 2 |


Hardware List

| LABEL | | DESCRIPTION | QTY |
|-------|---|----------------------------|-----|
| H1 |  | Bolts M8×55mm | 8 |
| H2 |  | Bolts M8×60mm | 1 |
| H3 |  | Spring washer M8 | 9 |
| H4 |  | Flat washer M8×22×1.5mm | 9 |
| H5 |  | Allen key M8 | 1 |


1

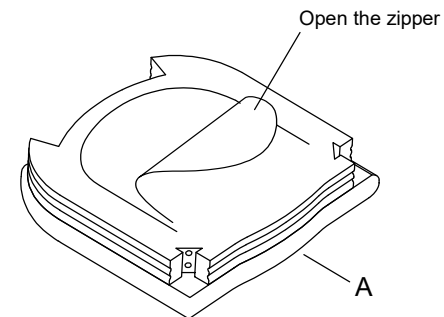


2

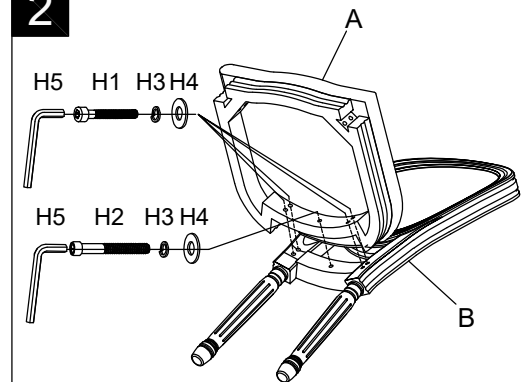

3

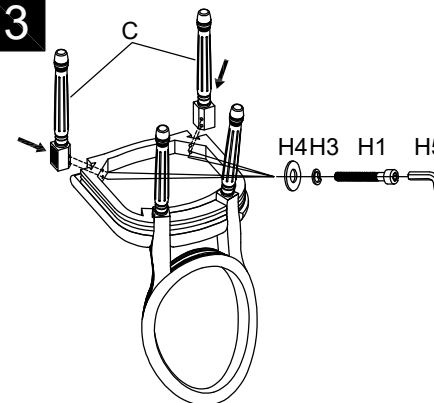

4

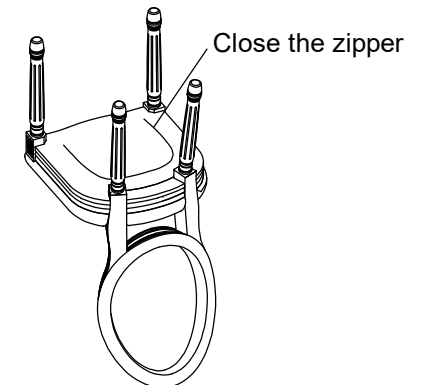

Adjust the chair so that it is leveled, then fully tighten all the bolts.

Tighten the bolts to 80% tightness.