 


User Manual

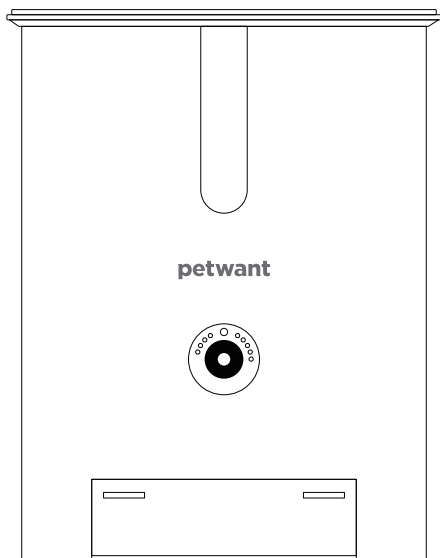

Love in your heart, Smart in every moment

Smart Pet Feeder

Thanks for purchasing our Smart Pet Feeder.

We want to walk into the pets life together with you and offer what pets really need.

To have a better user experience, please read the manual carefully and kindly keep it for further reference.

Package Contents

- Main body
- Food bowl
- DC adapter
- User guide

Meet Your Smart Cat Feeder



 
 
1. Main Body




2. Power Adapter



3. User Manual

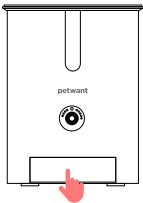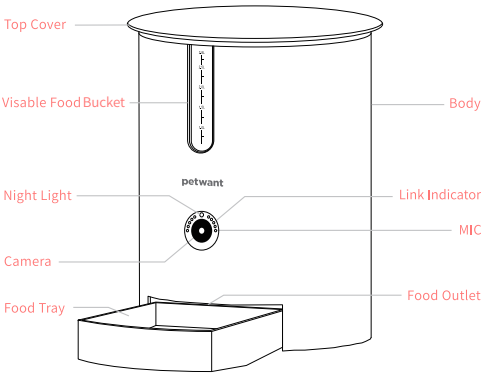


Press here Pop-up/draw back

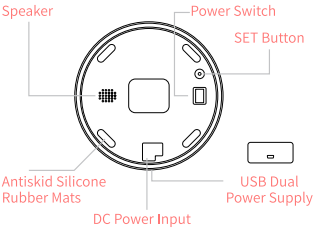 

Assemble & Disassemble Notice


* Food Bucket:

 1. Use both palm and lift up the food bucket to take out
2. Press down the food bucket and rotate the impeller to fix food bucket on bottom slot

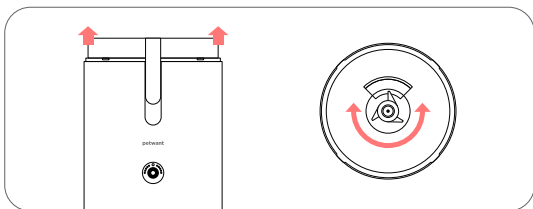

* Food Tray:

 1. Lean back the pet feeder and align the food tray with the buckle inside.
2. push the food tray in the pet feeder direction and get it fixed.

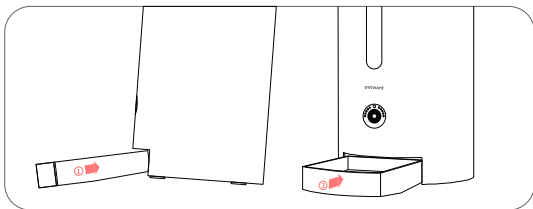

⚠ Attention:

1. Power off and unplug the pet feeder before cleaning.
2. Use the semi-wet cloth to wipe the pet feeder.
3. Food tray and food bucket is dish-washer supported.
4. Do not use the water to clean the base and control panel directly, or it will cause the electronic part broken.
5. Keep the food bucket dry before assembling the food bucket.

Download "Tuya Smart"

Scan the QR code to download "Tuya Smart"

 
Please scan the following QR code to download the Tuya Smart application.

Please allow network access and location access for normally using.



Register Your Account

Click "Register" to create a new account followed by the instructions in APP.

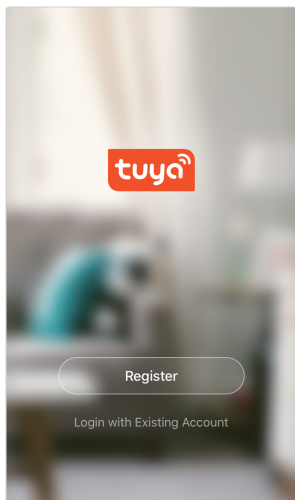


Check Before Using

1. Please ensure you have received all the accessories mentioned in Package Contents
2. Please ensure that you are using 2.4G Hz WiFi frequency while trying to get configuration
3. If you do not know how to open the 2.4G WiFi frequency, please follow below instructions:
 - a. Please enter the router setting page through your phone or computer;
 - b. Find the network settings or frequency settings option;
 - c. Switch on 2.4G WiFi frequency and save settings.
3. The default pairing mode will be EZ mode, please ensure the link indicator is quick flashing in Meanwhile, you will hear EZ Mode by voice notice.
4. If you fail to get connected through EZ mode, please long press "SET" button to switch the pairing mode to AP mode, then you will hear AP Mode by voice notice.


Note: The link indicator and alarm light will flash alternately, please go on and complete your configuration by AP mode

Add Device- EZ mode

 
① Click Add Device

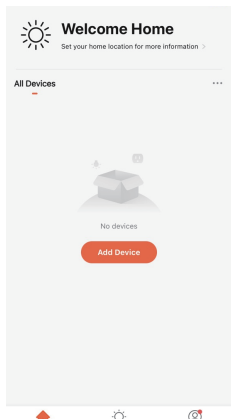

 
② Find Small Home Appliances and select Pet Feeder With Camera(Wi-Fi)

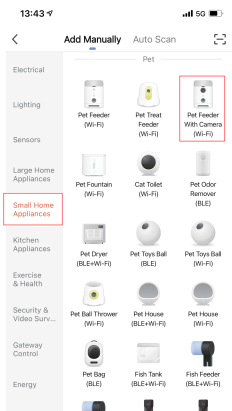


 
③ Select EZ MODE from the drop-down menu in the upper right corner. Then tap next.

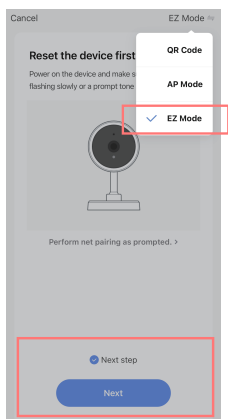

 ④ Please ensure you have successfully connected to 2.4G Wi-Fi and entered the correct password. Then tap next.

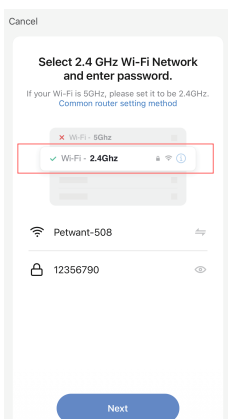

  
⑤ It will take you 1-2 mins while configuration, please wait in patient.

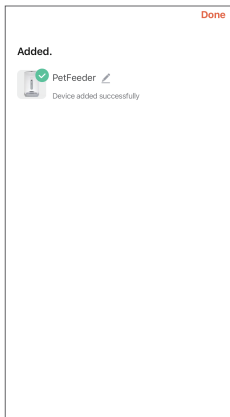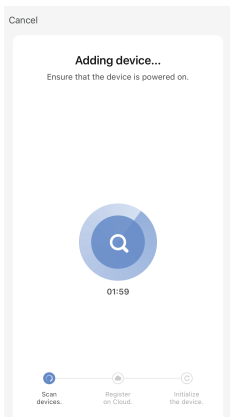


Add Device- AP Mode

Note: If you fail to connect your pet feeder through EZ mode, please long press “set” button for 3 seconds to switch the pairing mode. You need to wait for several seconds while mode switching, you will hear AP Mode when successfully switch to AP mode.

 ① Click Add Device

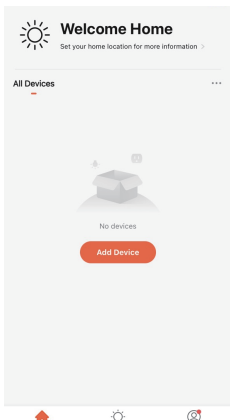

 ② Find Small Home Appliances and select Pet Feeder With Camera (Wi-Fi)

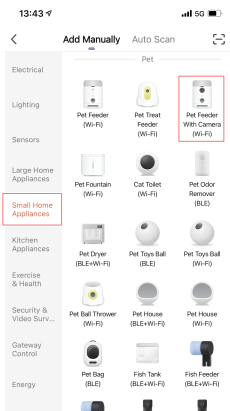


Mode Switch:

a) If you fail to get the feeder connected, please long press 3 seconds and you will hear “AP Mode” .

b) Please wait for 30 seconds and then follow the instructions below to get connected with your pet feeder in AP Mode.

c) Also, you can long press set button again to switch to the EZ Mode, you will hear “EZ Mode” as well.

 
Note: If you get your pet feeder connected in AP mode, then the default pairing mode will be AP mode. If you get your pet feeder connected in EZ mode, then the default pairing mode will be EZ mode.

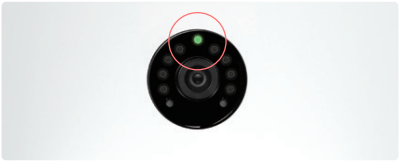


Add Device- AP Mode

Note: If you fail to connect your pet feeder through EZ mode, please long press “set” button for 5 seconds to switch the pairing mode. You need to wait for several seconds while mode switching, you will hear AP Mode when successfully switch to AP mode.

 
① Click Add Device

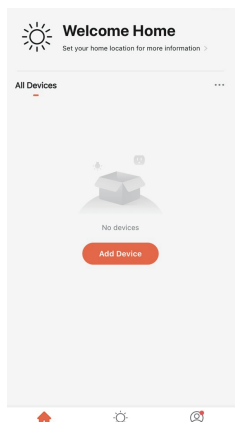

 
② Find Small Home Appliances and select Pet Feeder With Cam-
era(Wi-Fi)

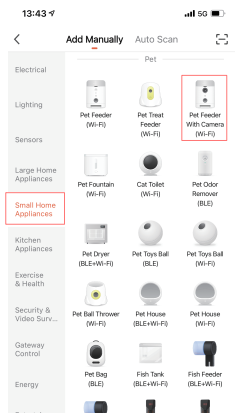

 ③ Select AP MODE from the dropdown menu in the upper right corner. Then click "Power on the device...flashing rapidly" and click Next.

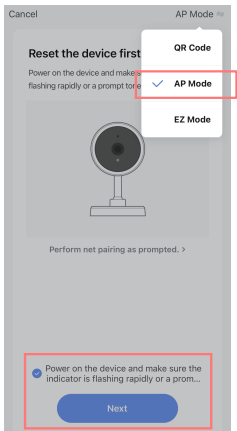

 
④ Please ensure you have successfully connected to 2.4G WiFi and entered the correct password. Then tap next.

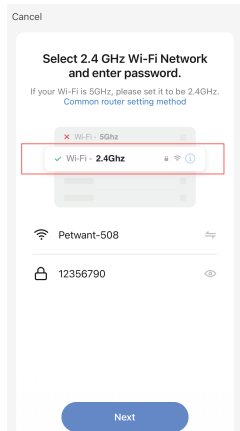


⑤ Click "Go to Connect" and select "Smartlife-XXX" in WLAN page.



 ⑥ Wait until the Hot-spot got connected with your phone and then back to the APP. (You may wait for around 1 min to complete the configuration)

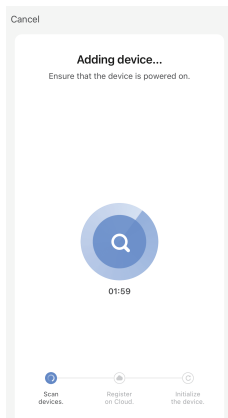

 The pet feeder should be placed near (max. distance 3m) your router while the connection is established. At the same time, your smartphone should be quite close (max. distance 1 m) to the feed dispenser.



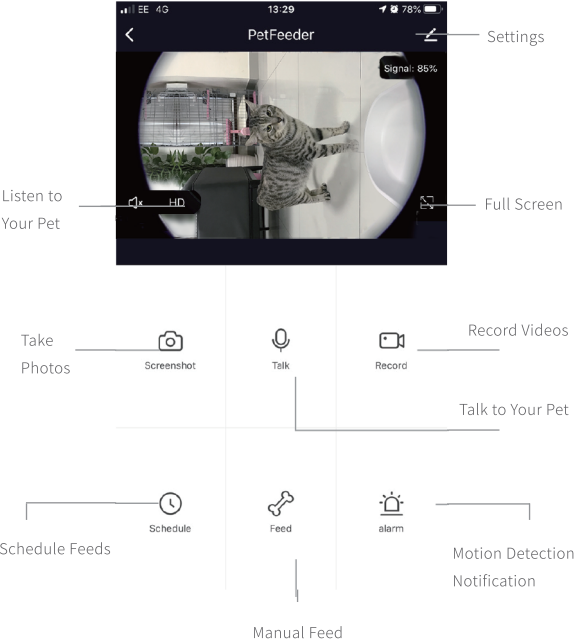


Note: Android page will be different from IOS page. The functions settings can be easily reach out.

Program Your Feedings

Click “Schedule” to add feeding times. Here you can set different feeding times and portions. You can set up to 6 meals and 8 portions per meal.

   In the overview of all feeding times, you can simply activate or deactivate individual feeding times.

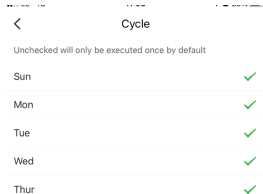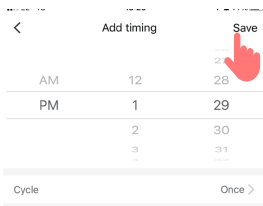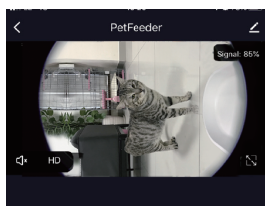


Manual feeding

1. Press “Feed” and choose the number of portions that you want to give out right now.
2. By pressing “Short Record” you can record a 10-second long audio message. This is played at meal time to get your pet’s attention.

Motion detection

 Under “Alarm” you can activate the motion detection of your camera to receive notification when your pet approaches the dispenser.

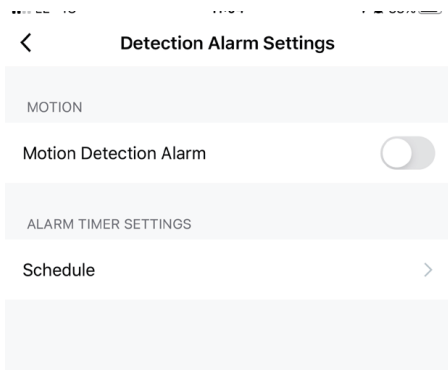

Other settings

You can access additional features by going into the settings menu.

 
These are:

- Checking the feeder's status.
- Activating IR (night) vision
- Activating and deactivating motion detection
- Flipping the display on the screen
- Sharing your device with others
- You can also set the audio mode to one-way or two-way

Notifications centre

Under “Me” and “Message Centre” you can activate or deactivate notifications and manage these.

If you activate notifications, you get messages at each feeding time or if the feed container is empty, and also when your pet approaches the feeder.

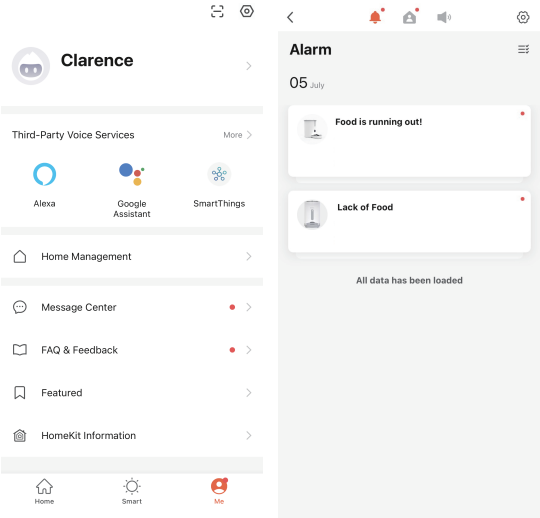

Important safety instructions

Read all of the instructions below before using this product. Do not make any changes or create settings that are not described in this manual.

If physical injury, loss of data or damage is caused by failure to follow instructions, the warranty does not apply.

- This product can be used by children aged from 12 years above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of this product in a safe way and understand the hazards involved.
- Do not place anything on the top of the product.
- Do not expose the product to the temperature lower than 20°C.
- Ensure the desiccant package is intact before use to avoid it mixing with food.
- The product can only hold dry pet food with a diameter of 5 to 20mm.
- If the adapter is getting wet, cut off power. Never unplug the glove without insulating gloves. Contact our Customer Support to purchase a replacement.
- To avoid electric shock, do not place the power cord or plug in water or other liquids. Only use a power cord that is recommended or sold by the product manufacturer.
- Dispose of packaging properly. Some components may be packed in poly bags which can cause suffocation. Keep them away from children and pets.
- When the batteries are running low, replace them immediately; or the battery corrosion will damage the product.