


Pet Cage Feeder F4 LCD

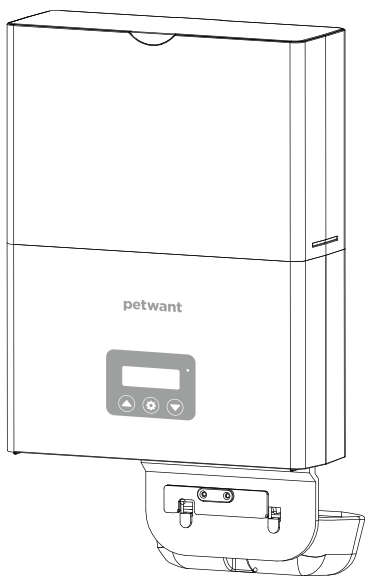

Pet Cage Feeder
User Guide

petwant

Dear Pet Lovers:

Thanks for purchasing our Pet Cage Feeder.


This User Guide is intended to provide your pets with a better life.

To have a better user experience, please read all directions before using this product and retain this guide for reference.


Scan the QR code and follow our
Facebook, through which you would get high
quality after-sales services




Standard Parts

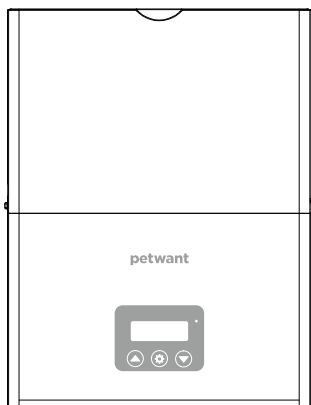

Body

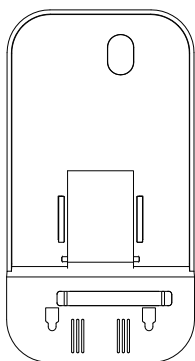


Hanging Board

 

Food Tray




Knob

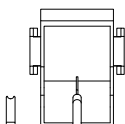


Silicone Gasket
Food Outlet



User's Guide

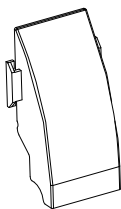


Food Outlet Cover

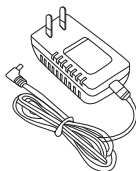


Adapter


Meet Your Automatic Pet Feeder

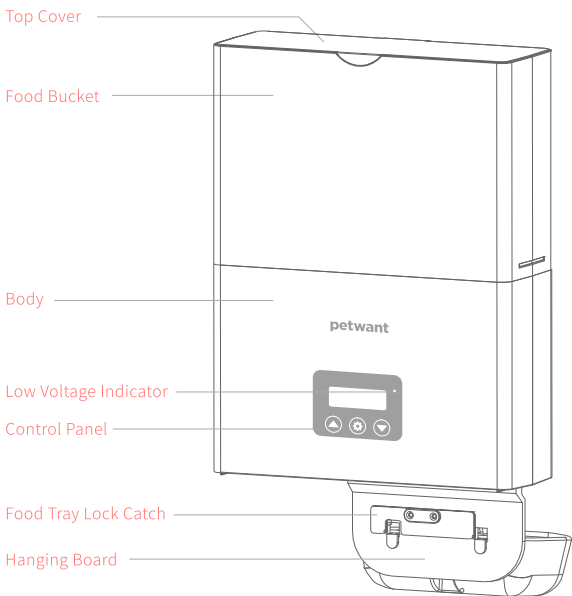


DC Power Interface Reset Power Switch

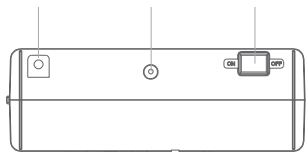


Battery Compartment

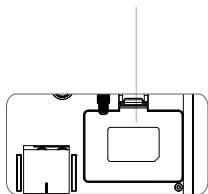


Food Tray

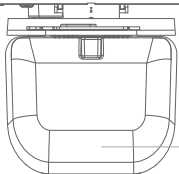


Installation Steps

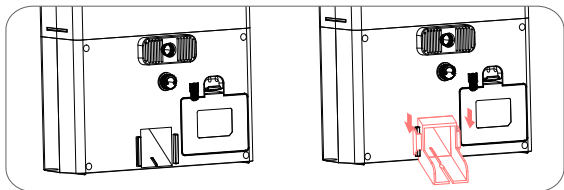


Install the food outlet.

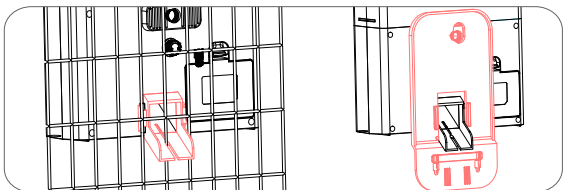

Choose the suitable place to fix your feeder and install the hanging board.

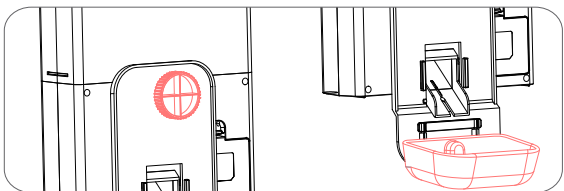

Fasten the knob and install the food tray.

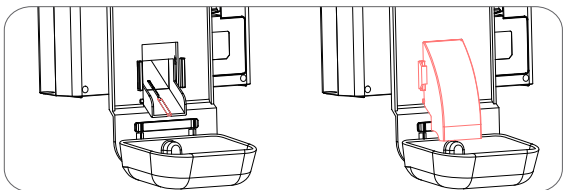

Install the silicone gasket and install food outlet cover.

How to operate



Test before using:

1. Plug in and switch on, then you can start to set up your automatic cage feeder.
2. Long press "⚙️" button to unlock your control panel.
3. Please long press "▲" button for one second. The feeder will instantly rotate one portion for an instant feeding.

Set the Current Time:

1. Press "⚙️". The hour digits will flash.
2. Press "▲" or "▼" to find the current hour and press "⚙️" again to save.
3. Once the hour is saved, the minutes digits will flash.
4. Press "▲" or "▼" to find the current minute and press "⚙️" again to save.




Set Up Your Automatic Pet Feeder

3. Setting the First Meal Time:

Once the time is saved, the unit will enter Meal Time Setting Mode.

The LCD will display, icon "①" and the hour digits will flash. Repeat the Step 2 to set the feeding time.

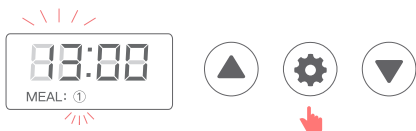

4. Setting the First Meal Portion:

① Once the feeding time is set, the unit will enter Meal Portion mode.

The LCD will display the " P " and the portion digits will flash.

② Press "▲" or "▼" to set the portions (up to 20 portions and 11 ± 2 ml per portion) and press "⚙️" again to save.

③ Repeat the steps above to set additional meals.

④ If you just need 3 meals, you can hold and press "⚙️" for 3s to save and exit set mode.



⚠️ Cleaning Your Smart Feeder

1. Please cut off the power and unplug the adapter before cleaning.
2. Clean the unit with a damp cloth rather than a soaked cloth.
3. The food tank can be removed for cleaning.
4. The food tank can be cleaned in the automatic dishwasher.
5. It needs to be wiped clean and completely dry before refilling the food.

FAQ

1. Unlock the Screen:

If no operations happened within 25 seconds, the LCD display will light off and the feeder will be locked. You need to long press the "●" at the bottom of the feeder to unlock your feeder.

2. Instant Feeding:

Please hold "▲" button for 1 second to have an instant feeding. The feeder will dispense one portion.

3. Lack of Food Notification:

The feeder will not dispense any food when the tank is empty. You only need to refill your feeder with pet food. The feeder will return to normal operation after you have dispensed an instant feeding.

4. How to deal with [E2:JA]:

The feeder won't dispense the food when tray is full. You need to clear the food inside the tray. The feeder will return to normal operation after you dispense an instant feeding.

5. Exit current operation:

Under the state of setting (when the digits are flashing), press RESET button for 1.5s to exit current operation and you will return to time interface. The program you set will be saved automatically after exiting.

6. Restore Factory Setting:

Under the state of setting, press RESET button at the bottom for 1.5s and then you will delete all the settings. The settings can be reset after deleted.

7. When the indicator is flashing:

When it's in battery mode and the voltage of the battery supply is under 3.6V, the alarm indicator will flash. To keep the normal use, please change the battery in time.

8. How to deal with [E4:--]:

Please check whether the food outlet is block or the impeller is broken, if not, please contact the seller to replace the motor.

Important Safety Information

Explanation of Attention Words and Symbols used in this guide



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

WARNING

WARNING indicates a hazardous situation which if not avoided could result in death or serious injury.

CAUTION

CAUTION used without the safety alert symbol, indicates a hazardous situation which is harm to your pets if not avoided.

NOTICE

NOTICE is used to deal with safe-using practices that not related to personal injury.

WARNING

- ★ Do NOT place any foreign object in the pet feeder.
- ★ Do NOT use outdoors. FOR INDOOR HOUSEHOLD USE ONLY.
- ★ Do NOT use an appliance for anything other than its intended use.
- ★ Do NOT allow children to play or around pet feeder.
- ★ Do NOT place anything on top of the pet feeder. The unit starts automatically.
- ★ Do NOT disassemble the pet feeder other than components as instructed in this operating guide.
- ★ Do NOT install or store pet feeder where it will be exposed to weather or temperatures below -20°C.
- ★ Base should NOT be submerged in water at any time, as this may damage electronic components.
- ★ Do NOT use this pet feeder with puppies or kittens. Dogs or cats not able to reach the food tray or with any physical disability.
- ★ Do NOT operate any appliance if it has a damaged power cord or plug, or if malfunction or has been damaged. Call the Customer Care Center immediately for further instructions.
- ★ Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard plastic protector) in to protect the power cord.
- ★ Do NOT attempt to repair the pet feeder by yourself.

Important Safety Information

- ★ If an extension cord is necessary, an extension cord with a proper rating should be used.
- ★ Do NOT use pet feeder for anything other than intended use. Using attachments not recommended or sold by the manufacturer may cause an unsafe condition.
- ★ Do NOT lift pet feeder by lid, hopper, bowl or bowl holder. Lift and carry feeder using both hands and hopper base, while keeping unit in upright position.
- ★ For dry food only. Do NOT use wet, canned or moist food.
- ★ To avoid tripping, always position power cord out of the way of foot traffic.
- ★ If the plug of this device gets wet, turn off the electricity to that wall outlet. Do NOT attempt to unplug.
- ★ Examine this appliance after installation. Do NOT plug in if there is water on the Power Cord or plug.
- ★ To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.
- ★ If using power cord, Do NOT place power cord or plug in water or other liquids.
- ★ Dispose of all packaging materials properly. Some items may be packed in polybags; these bags could cause suffocation; keep away from children and pets.

CAUTION

- ★ Fit for small dogs or cats only.
- ★ Pet feeder should be placed on a level surface.
- ★ Always unplug any appliance when not in use, before putting on or taking off parts and before cleaning. Never pull on the electrical power cord to remove the plug from the wall outlet.

NOTICE

- ★ Read and observe all important notices listed on the pet feeder and in the packaging.
- ★ Attention: Rated voltage and rated current for DC adapter is 5V 1A. If the power supply does not meet the requirements, it may cause damage to the feeder.

SAVE THESE INSTRUCTIONS

Statement



FCC STATEMENT :

★ This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

★ This device may not cause harmful interference.

★ This device must accept any interference received, including interference that may cause undesired operation.



Declaration of Conformity

Hereby, Shenzhen Petwant Pet Products Co., Ltd, declares that this F4 LCD is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

