


# 正面

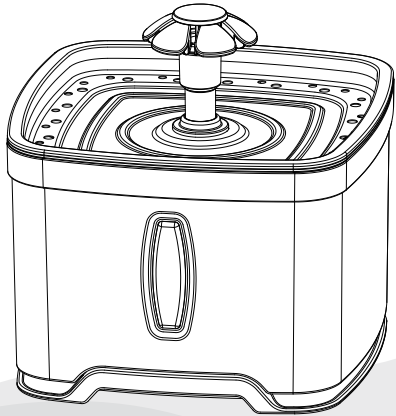

### Pet Fountain

**Before we start: Care instructions**

To keep providing fresh, clean water for your pet, remember these three simple tasks:

**Refill often.**

Keep the water level up. The pump is designed to work in at least one inch of water. The pump can fail if it runs dry.


**Clean your pump and your fountain.**

Take your pump and fountain apart to clean with soap and water every two to four weeks. Be careful not to get soap in the filters, as it will not rinse out.

**Replace your filters.**


Replace the carbon filter every four weeks when you clean your fountain.  
Replace the foam filter every two months.

**What you have:**

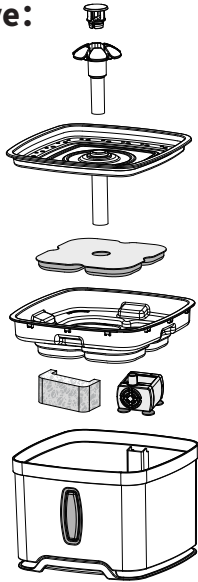

### Setup instructions

**❶ Schematic diagram for pump instillation**

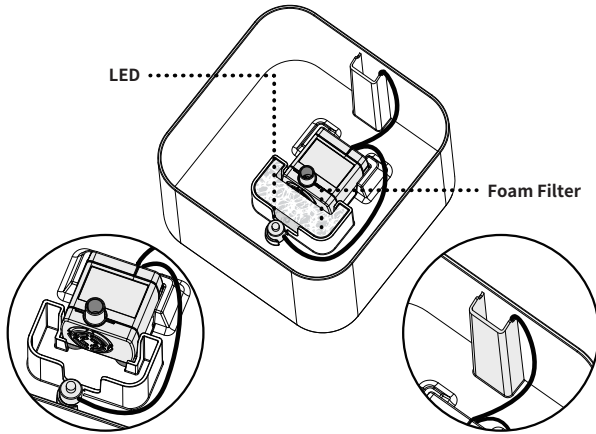

LED


Foam Filter

Put the pump according the direction

Put the cord in the notch

# 背面


**❷ Install the filter:**

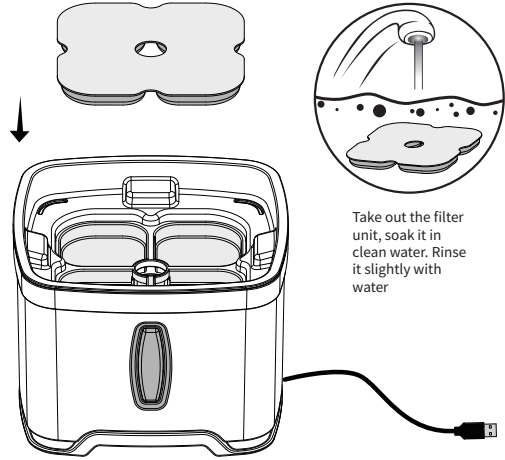

Install the filter the filter tray

Take out the filter unit, soak it in clean water. Rinse it slightly with water


**❸ Install the lid & flower**

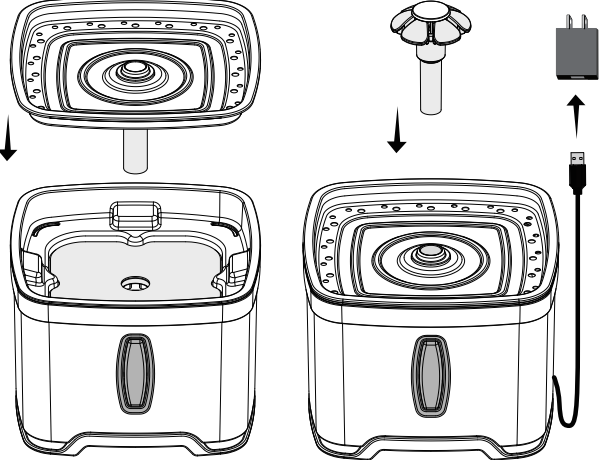

Install the lid

Install the flower in sequence, connect the power adaptor

### Use instructions

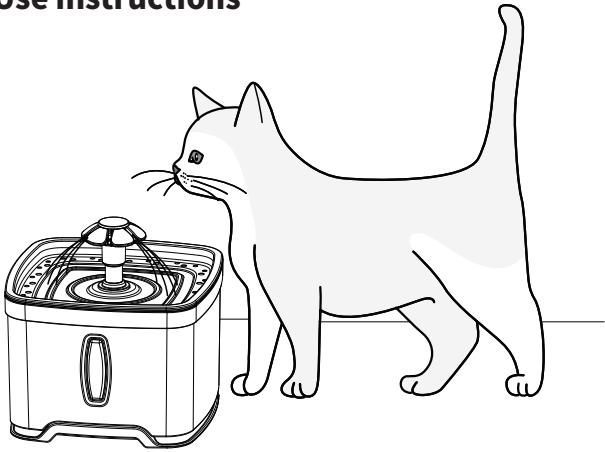


Place the fountain where your pet will use it. Fill the vessel with water, leaving a half inch of space between the water and the rim. Make sure your hands, the cord and the power adaptor are dry.

**Keep health and happiness flowing!**

**To extend product life, please clean the pump every 2 weeks.**

1. Remove the Pump Cover
2. Remove the Impeller cap by placing your fingernail underneath the small lip located.
3. Remove the Impeller and clean the parts with soap and warm water.

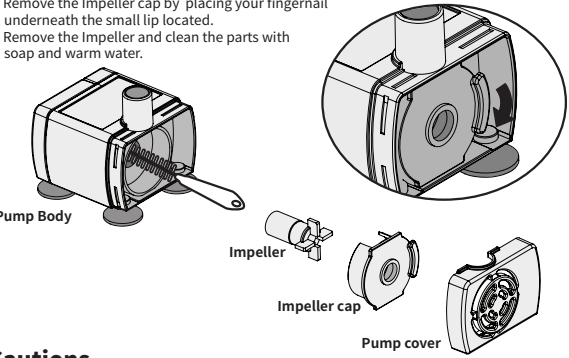

Pump Body

Impeller

Impeller cap

Pump cover

**Cautions**

1. Be sure to shut down and disconnect the power supply for safety when the equipment is not in use.
2. This product is for indoor use only.
3. The power adapter and wire plug must not be flooded during cleaning.
4. This product is not allowed to run without water (can be ignored for models with the function of outage automatically without water).
5. Please disconnect the power supply before maintaining and cleaning the machine.