



User Manual

Smart Pet Feeder

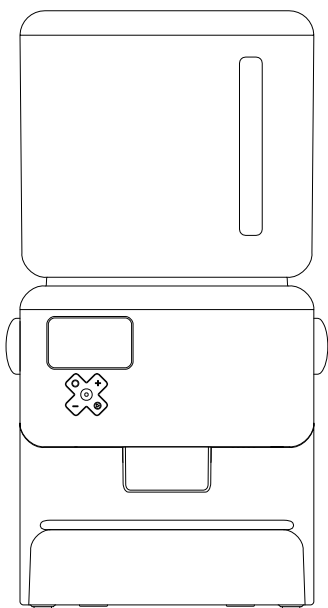

THANKS FOR CHOOSING OUR AUTOMATIC PET FEEDER

 Components




1.Main Body




2.Food Bowl Base



 3. USB Cable



 4. Desiccant




5.Manual




6. Impeller

Features

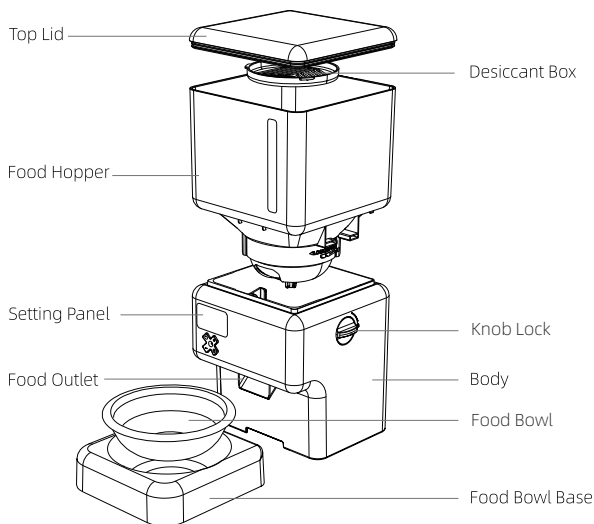

Features

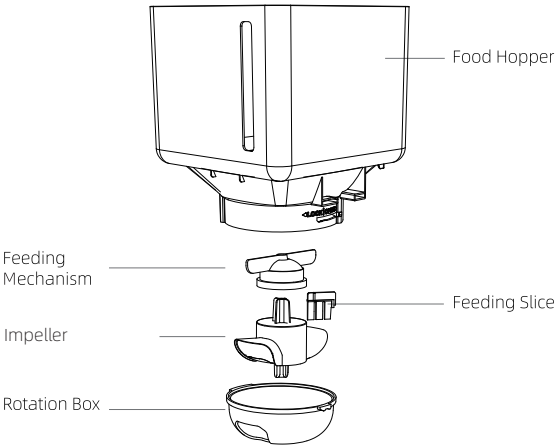

Parameters

Name	Parameters
Product Name	Automatic Pet Feeder
Product Model	F9-L
Dimension	L284.5mm*W184mm*H342mm (With Food Tray)
Color Box Size	L191.5mm*W177mm*H360mm
Material	ABS
N.W	Around 2.2KG
Food Appliance	5~15mm Dry Food , Freeze Dried Food
Pets Appliance	Cats & Small Size Dogs
Capacity	3.5L
Power	DC 5V1A Adapter / 4 * D Size Batteries
Rated Voltage	DC 5V
Rated Power	0.5W
Working Temperature	5°C~50°C

Product Instructions

Panel Unlocking/Locking



Press "O" 3s unlock panel, screen will light up
Finished setting, press "O" 3s to save and return to main page
Then press "O" 3s lock panel, screen turns dark

Current Time Setting



Press "O" 3s unlock
**Only first time use,
when feeder plug in power
panel will auto unlock*



Single press "O"
enter "+/-" switch
12H or 24H



Single press "O" start
time setting, press "+/-"
to add or reduce time.
Set hour first then press "O"
to enter minute setting.

Feeding Schedule Setting



Finish current time setting,
press "O" to start
first meal setting
Press "+/-" set time



Press "O" to start portion
set, press "+/-" to add
or reduce portion
**Max 10 portions*



Press "O" to set the second
meal feeding time
**According to the first
meal set repeat until
finish left the 2nd to 10th
feeding plan*



Press "O" 3s to lock
screen, panel turns dark
**Must unlock panel to do
other settings*



Set the feeding meals number you need,
Max support 10 meals,
Press "O" 3s to save feeding plan,
Return to home page,
feeding shcdule indicator will flash to remind

Notice: When setting "00:00" feeding time or "P-00" feeding, this feeding plan will not work.





Low Power Mode (Batteries powered only)



Under low power mode,
press any button, the
screen will show locked status



Screen Status Icons

	ON	Panel Locked
	OFF	Panel Unlock
	ON	Low Power
	FLASH	
	ON	Voice Recorded
	OFF	No Voice Record
	FLASH	Voice Recording
	ON	Meal ON
	OFF	Meal OFF
	FLASH	Next Meal

Manual Feeding



Unlock panel,
press "+" 1s to manual feeding one portion

Recording



Unlock panel, press "Ⓜ" and hold on, screen "Ⓜ" lights up then start recording. Screen will start counting down from "A-10" to "A-00", Speaking to the button "Ⓜ", finish the recording then release the button

New recording need to repeat the above process

Recording Playback




Unlock panel, press "Ⓜ" to play the recording
If no recording then no voice comes out

Factory Setting



Unlock panel, press "○" and "-" the at same time for 3s, pet feeder will clean up all settings Including the feeding plan and voice recording.

Setup and Assemble Feeder

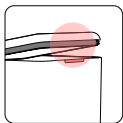

Lift The Latch

Snap your fingers on the food bucket in the recessed position on the back. Lift upward to open the lid



Place Desiccant

Rotate the desiccant box counterclockwise to tear off the outer package of desiccant. Put the desiccant into the box and rotate it clockwise to close it.

Desiccant is not edible,
Please keep it away from children, the elderly and pets.

Plug in Power Adapter

①Battery power supply: remove the battery cover by releasing the retaining clip, insert 4 good quality alkaline "D" batteries and reinstall the battery cover.

Note: Please use safe and standard alkaline batteries. Do not mix batteries of different specifications and models.

②Power adapter supply: plug in the power adapter and connect the power cable into the card slot.

Install Food Bowl


Tilt the base unit back slightly, align the buckle of the food bowl with the base unit to install; the same steps to disassemble.

Fill Pet Food

Open the lid, fill the hopper with a suitable quantity of dry food well in excess of a daily amount. To maintain maximum food freshness, we recommend that a maximum of 10 days food is loaded.

Note: The device only support 5-15mm dry pet food or freeze dired food.

Grain Size Self-check:

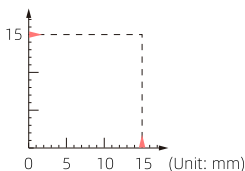

Disassemble & Clean

Clean the Food Hopper


- ① Turn both knob locks to the unlocked position, unlock the food bucket.




- ② To disassemble, hold both sides of the food bucket and lift upwards.
- ③ Disassemble the impeller/ feeding slice and feeding mechanism.
- ④ The main body of the feeder is not dish washer-safe. Do not immerse the main body in water, this could damage the internal electronics and cause the batteries to short out, create an electrical shock, or catch fire.
- ⑤ Make sure all parts of the feeder are completely clean and dry before filling with food.

Assemble the Food Hopper

- ① Align food hopper with slots in the main body and press down.

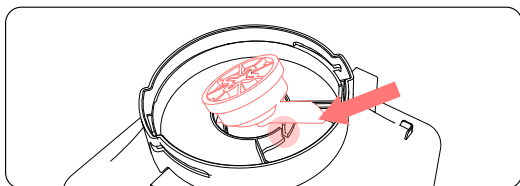

- ② Fix the feeding slice and impellers as the above picture shows. (Please pay attention to "+" shape directions.)
- ③ Align the impeller bottom cover with slots and rotate in anticlockwise direction until you hear the crack sound.
- ④ Adjust the impeller and make the rubber parts cover the food outlet shows in the picture.

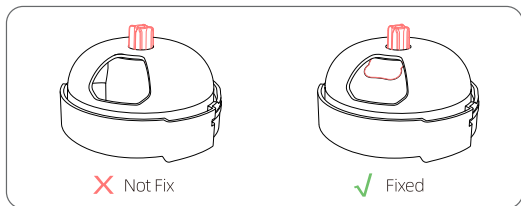

If the impeller is not well fixed , it may cause the device not able to dispense the food.

Clean the Food Bowl

The food bowl is dishwasher-safe once removed from the main body.

Clean the Body

Use the dry soft cloth to wipe it, the body is not waterproof, please do not use wet cloth.

Replace the desiccant pack

Open the desiccant box cover and replace the desiccant pack. It is suggested to replace it every one or two months.

Replace Alkaline Batteries

Unplug and open battery lid at the bottom, then you can replace the batteries

Replace Alkaline Batteries

Take out the food hopper and empty the food hopper then fill the fresh food and proceed instant feeding once.

Warnings

- ①Please keep the food hopper dry after cleaning it.
- ②Please replace the food on a regular basis if your pets did not eat up.(For time period, please refer to the food packing instruction)
- ③Please clean and maintenance your device on a regular basis to prolong the using period of your pet feeder.

FAQ

What happened to your device	How to check by yourself	How to solve it
No display on LED Screen	No plug or battery inside	Plug in or install batteries
	Low power mode	Single press button light up screen
Unable to fix the food hopper	Impellers are not well fixed	Check and rotate the impeller
	Unlock Knob Lock	Make sure Knob Lock is unlocking
E1 -- Display	Impurities inside food hopper	Clean the impurities inside of food hopper
	Food size inapplicable	Ensure to use 5-15mm dry food
E4 -- Display	Photoelectric sensor faulty	Contact After-sale service
	Motor faulty	Contact After-sale service
E5 LP Display	Dry batteries low power	Replace the new dry batteries.

Safety Precautions

Read all instructions carefully before attempting to operate this device.

Ensure power supply

- 1.Please check the power supply before going out.
- 2.Device has RTC time saving function, timer will not stop working when switch off.
- 3.Please pay attention to the battery display when powered by batteries, users need to replace the batteries when " E5:LP" shows on device screen;
- 4.It's suggested to replace the batteries once a year if you do not get the device work by batteries, for the power will be running off with time goes by.
- 5.When powered by batteries, it is normal for the electric quantity icon to fluctuate occasionally because of the large transient current.

- Before leaving for extended time, always replace Battery Backup with 4 new “D” size batteries.
- DO NOT place any foreign objects in the feeder.
- DO NOT operate feeder without Bowl, Food Hopper and Lid securely in place.
- To avoid tripped , always keep power cord out of the way of foot traffic.
- Feeder must be placed on a level surface.
- DO NOT disassemble feeder other than Bowl, Lid and Battery Cover.
- Dispose of all packaging material properly. Some items may be packed in poly bags; these bags could cause suffocation; keep away from both children and pets.
- DO NOT attempt any repairs or modifications to the feeder.
- Check with your veterinarian if you are unsure about the proper MEAL SIZE for your pet.

Keep Device

1. Device need to be placed horizontally and firmly, it's not allowed to tipped one side and rock or upside down.
2. Keep device placed in a dry area and not expose the device under sunlight. Also not to place the feeder in a high place to avoid the damage from dropping;
3. Do not remove any parts from the feeders beside food tray and food hopper.
4. Do not place anything on top of this feeder.
5. Ensure there is no barriers near the food outlet to make the pets can be fed normally.

Caution

- For indoor use ONLY.
- Its NOT dishwasher safe. Hand clean only.
- For dry food use ONLY. Works best with 5-15 mm food diameter or smaller.
- NOT recommended for puppies or kittens less than 7 months old or unable to reach the feeding dish.
- DO NOT use this feeder with puppies, kittens, dogs or cats with any physical disability.
- Intended for use with dogs or cats ONLY.
- DO NOT allow children to play with, in or around feeder.