 


正面

WIRELESS SENSOR

Automatic Pet Water Fountain

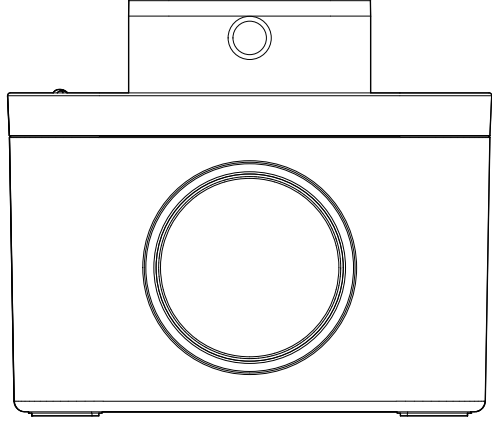

 
Instructions Manual

Use safety instructions


- Failure to comply with the following terms may result in the product being unable to function properly or other unexpected losses.
- Strictly follow the instructions to install and use the product.
- Choose to use this product according to the actual situation of the pet.
- Please use in a cool, dry, and away from ignition environment.
- This product is in low voltage mode, but pet biting wires may cause electrical leakage. Please use it under correct guidance.
- Please use a DCSV-1A power adapter that meets national and regional standards, otherwise this product may be misused or pose a safety hazard.
- Keep it horizontal and do not overturn the product, as it may cause the equipment to malfunction or water to spill.
- Do not rinse or soak the battery during operation, and do not open the Type-C waterproof plug when wiping and cleaning.
- Please do not place the product in the dishwasher for cleaning.
- If you do not use this product for a long time or move it, please unplug the power cord.
- If children are using this device, please ensure to use it under the guidance of an adult.
- Before going out on a long vacation, please be sure to check the remaining water volume and battery status in the water dispenser.
- Please carry out repairs under the guidance of professionals to avoid various injuries. If there are any problems with product use, please contact customer service promptly.

Accessories List

Open the packaging, please check if the following components are complete first.

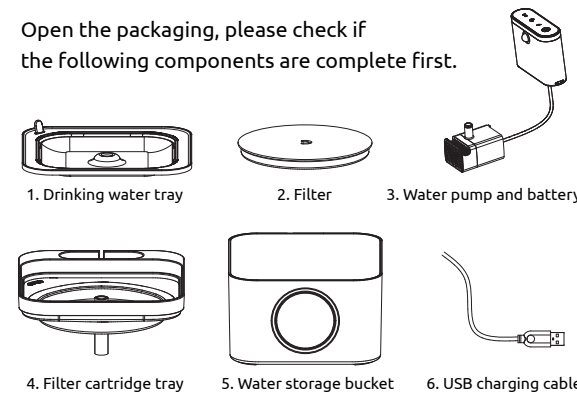

Product Introduction

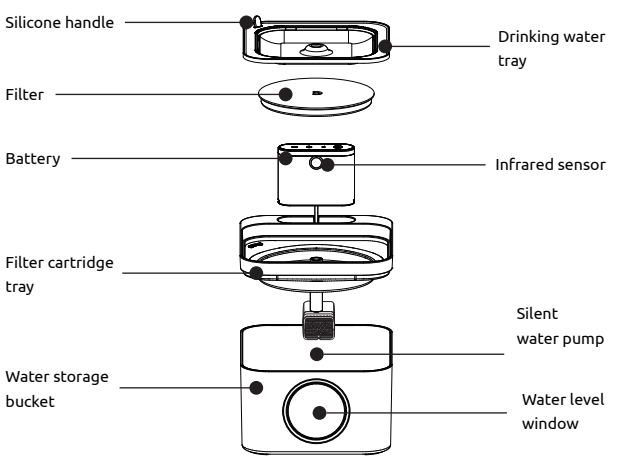 

Indicator light description

Type-c DC power supply

- When the battery is fully charged during operation, the white light in the corresponding mode remains on.
- During battery charging during operation, the white light in the corresponding mode flashes and the device is charging while working.
- When shutting down, the battery is fully charged and all indicator lights turn off.
- When the battery is being charged while shutting down, the power mode indicator light is red, and the breathing light flashes. When fully charged, the red light goes out.

Battery powered

 
- When fully charged, the induction mode and other white lights remain on.
- When the battery is low, the white light in induction mode remains on, while the red light in power mode flashes.
- Turn off and all indicator lights turn off.

Timing mode

In timing mode
The water pump operates every 10 minutes
Water outlet time 30 seconds

Power mode

In power mode
Continuous water discharge

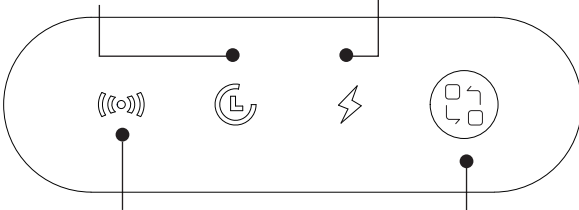

Induction mode

In induction mode
Water out for 30 seconds

Function keys

 
Long press for 2 seconds to turn on/off
Default to induction mode after startup
Short press the function key to cycle between induction mode and timing mode
The power mode will only be turned on when Type-c is powered on

反面


Instructions for use

For initial use, please follow the below steps:

- Before installation, soak the filter element in clean water at 5-50 °C for about 5 minutes.
 - The water soaked in the filter element is colorless or yellow, which is normal, but cannot be consumed.
- Rinse the drinking water tray and water tank with clean water.
 - It is strictly prohibited to put this product and its components into the dishwasher for cleaning
- Pour clean and hygienic water into the water tank. The water volume needs to be within the specified range (1-3L).
 - Water temperature requirement: 5-50 °C

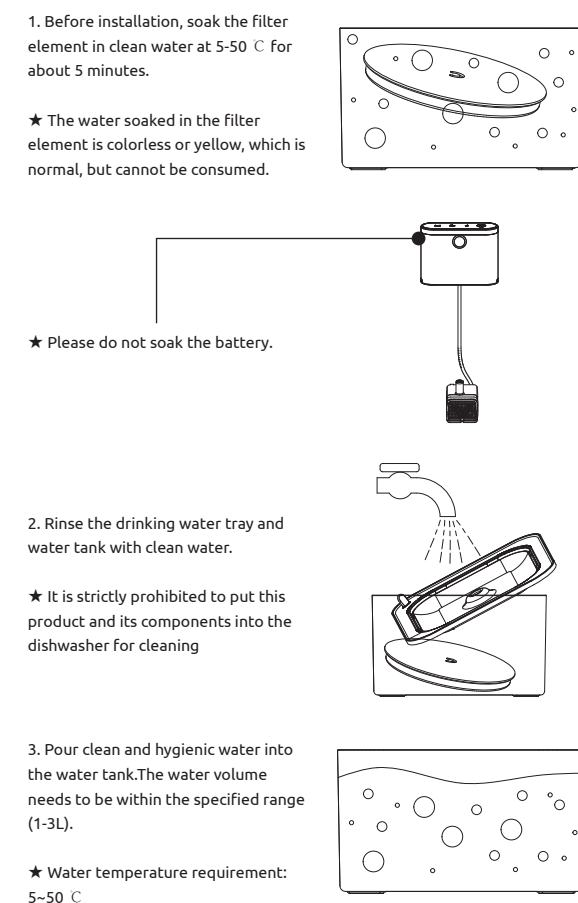

 - Place the battery into the filter tray.
- Place the filter cartridge tray into the water tank.
- Place the assembled water dispenser on a stable ground, turn it on, and the water dispenser will start working.

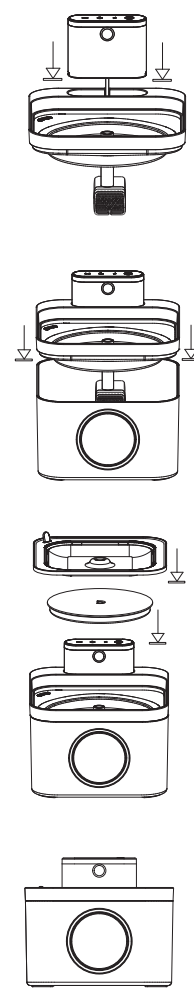


How to add water

Fill the water dispenser with water directly from a handheld container in daily use, without the need for disassembly and refilling


Remove the tray component of the assembled water dispenser from the water storage bucket (as shown in the figure)

 Without moving the water dispenser, hold a container and add purified water to the highest water level line (as shown in the figure)

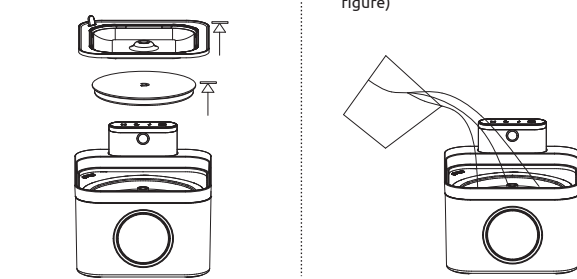


How to connect to the power

 - Install the upper cover of the installed battery and turn on the switch to use it.
- If the battery is dead, connect the USB charging cable to the charging port on the upper cover and insert the adapter into the socket for charging.

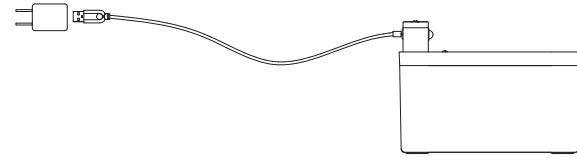

Water pump cleaning

 - Cleaning the water pump can extend its service life. It is recommended to clean it once every 1-2 months to prevent dirt from blocking the water path, leading to abnormal phenomena such as poor water quality, noise, etc.
- Wash and clean with clean water and a brush, as shown in Figures 1 to 4.

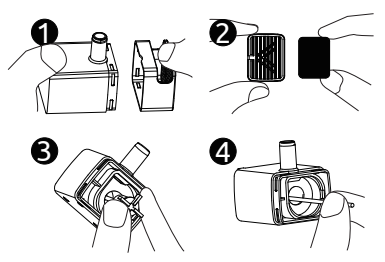

Work mode switching

Type-c DC power supply

- Press and hold for 2 second to turn on the power and enter the power mode. Power mode: The power mode light is always white (the first light near the button is the power mode light) and enters a continuous water output state.
- Short press to switch modes when turned on: power mode - timing mode - induction mode.
- Timing mode: The timer indicator light is always white, works for 30 seconds, stops for 10 minutes, and cycles.
- Induction mode: The induction indicator light is always on, and the induction starts working when there are someone or animals. The duration is 30 seconds, and the induction is not triggered repeatedly during the working period. (140 * 2 meters)

Battery powered

- Press and hold for 2 second to turn on the machine and enter induction mode. Induction mode: The induction indicator light is white and always on, and the induction starts working when there are someone or animals. The duration is 30 seconds, and the induction is not triggered repeatedly during the working period. (140 * 2 meters)
- Short press to switch mode during power on: induction mode - timing mode, cycle.
- Timing mode: The timer indicator light is always white, works for 30 seconds, stops for 10 minutes, and cycles.
- Press and hold the button for 2 second to shut down the device.