
OWNER'S MANUAL

Patio Sectional Chair

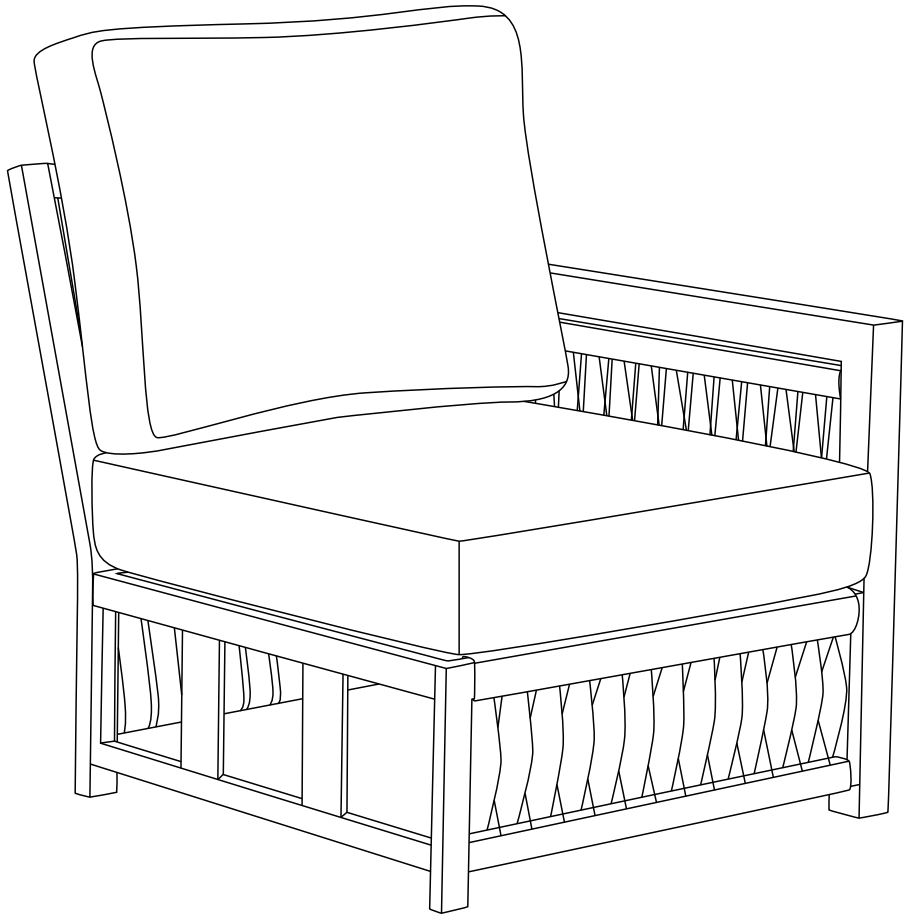

Contact Us

If you have any questions,
Please contact customer service.

Email: JW_outdoor@outlook.com

Customer Service: +1 (888) 541-7768

Hours: Mon–Fri, 9 AM–6 PM EST

SAFETY PRECAUTIONS

WARNING



Please read and understand this entire manual before attempting to assemble or install the product.



Some parts may have sharp edges. Please wear protective gloves when assemble or install the product.



Assemble the item on a soft, non-abrasive surface to avoid damage, such as carpeting.



Keep all the children and pets away from assembly area. Children and pets should be supervised when they are in the area of the dining set construction.

CAUTION

- Please do not exceed the weight limitations of this item.
- Firmly secure all bolts, screws and knobs before use. Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.

ATTENTION

- Check every part with the part list before assembly. If any part is missing or damaged, do not attempt to assemble the product and contact us immediately.
- We care about every customer's experience. Please feel free to contact us if you have any advice. We will offer you efficient solutions ASAP.
- We recommend you to use waterproof furniture cover for the entire patio dining set when out of use to keep them longer performance.
- You could adjust the foot leveler to keep table or chair in balance.

WARRANTY COVERAGE REQUIREMENTS

- Pictures of the damaged parts. The order number of your product.
- Please gather all of this information BEFORE you contact us.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

Email :
JW_outdoor@outlook.com

PRODUCT WARRANTY INSTRUCTION

Free Warranty Period:

The free warranty period starts from the product receipt date and lasts one year.

Coverage during the Free Warranty Period:

1. If any components of the purchased product are damaged due to non-human-induced reasons natural wear and tear excluded , corresponding new parts will be replaced free of charge.

2. If the entire purchased product is damaged due to non-human -induced reasons natural wear and tear excluded and cannot be further used, corresponding parts or a brand-new product will be replaced free of charge.

Coverage after the Free Warranty Period:

After the warranty period expires, replacement components will be provided to customers at cost price for continued service.

Additional Services:

After purchasing the product, customers can consult our staff for any product-related inquiries.

Contact Email :

JW_outdoor@outlook.com

ACCESSORIES DISPLAY

Part List

A


Back



1PC

B

Seat

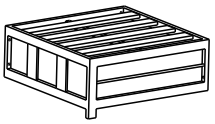

1PC

C


Armrest



1PC

D


Washer



7PC

E


Bolt M6*35

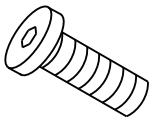

5PC

F

Bolt M6*60

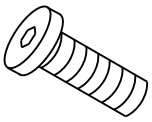

2PC

G


Allen Key



1PC

H


Back Cushion



1PC

I

Seat Cushion



1PC

PRODUCT ASSEMBLY

STEP 1

(Tip: Please Do Not Tighten Screws Until Assembly Is Complete.)



A: X1




B: X1



E: X3



D: X3

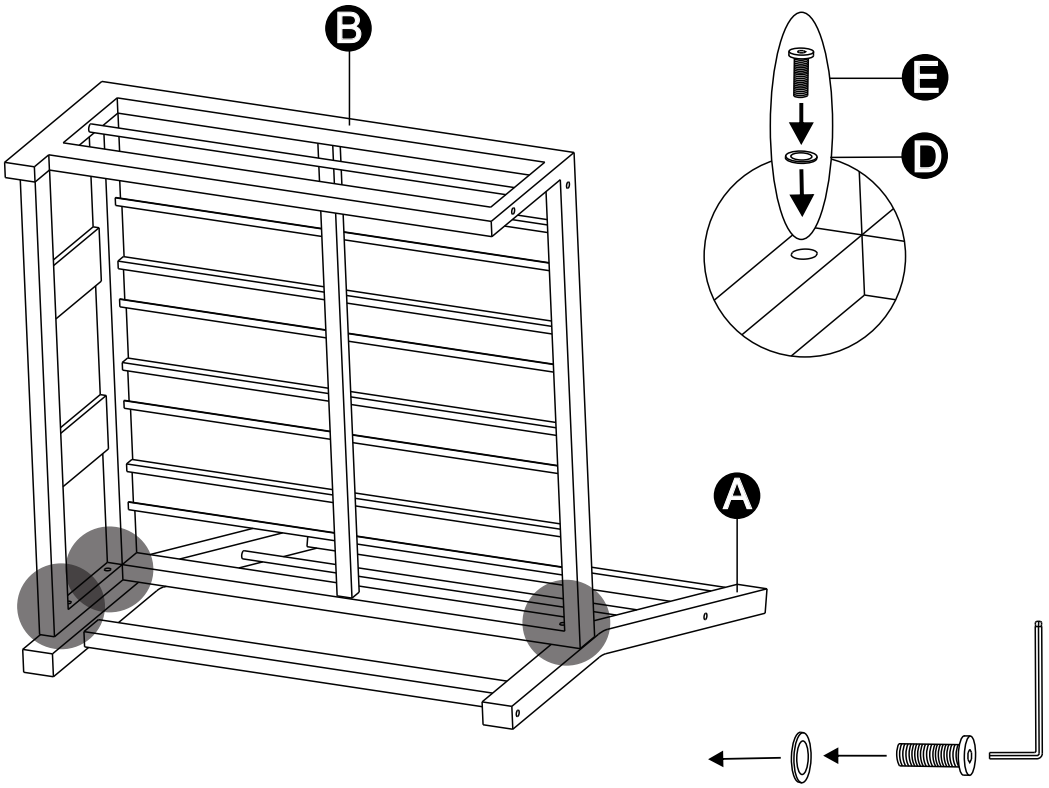

STEP 2




C: X1



E: X2



D: X2

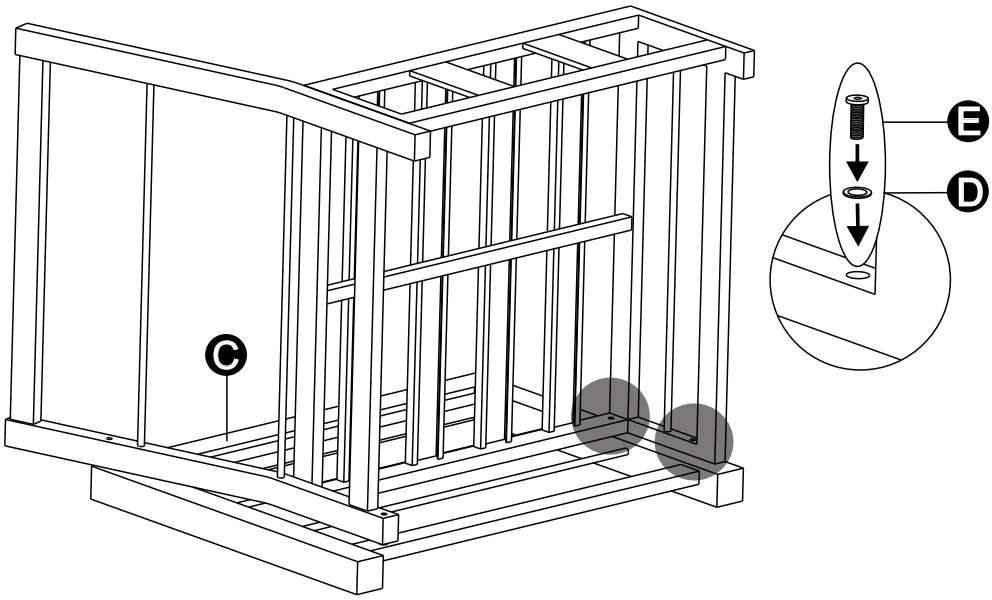

PRODUCT ASSEMBLY


STEP 3




F: X2




D: X2

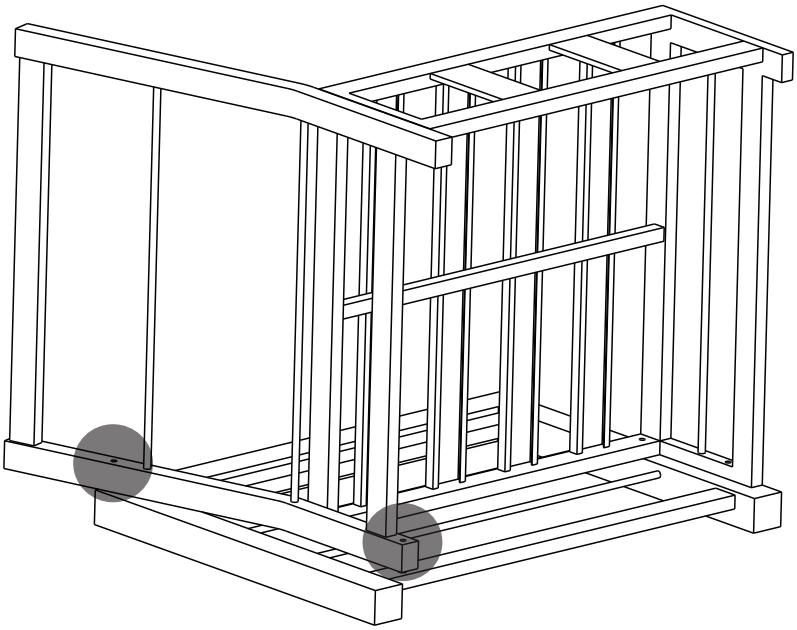


STEP 4



H: X1



I: X1

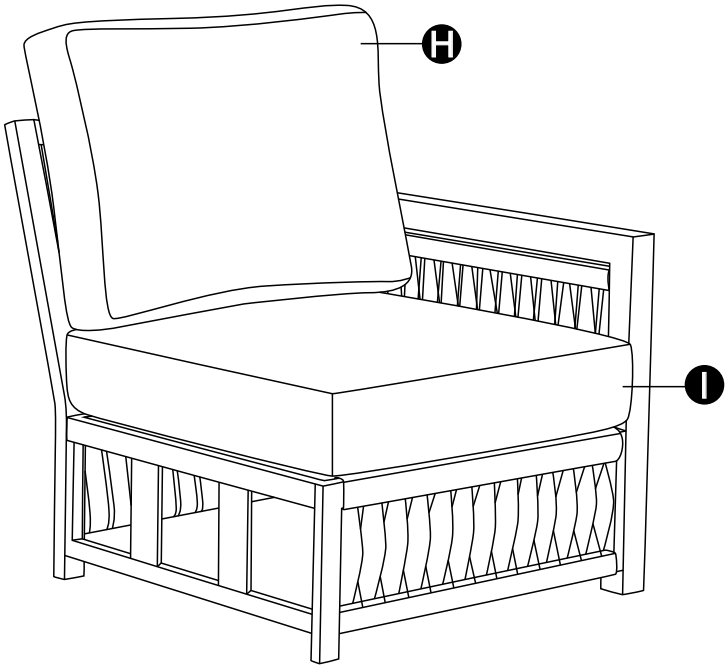

PRODUCT ASSEMBLY

Sofa adapting piece:Attach two pieces between two separated items to tight them together,please find step as below

