
OWNER'S MANUAL

Fire pit table

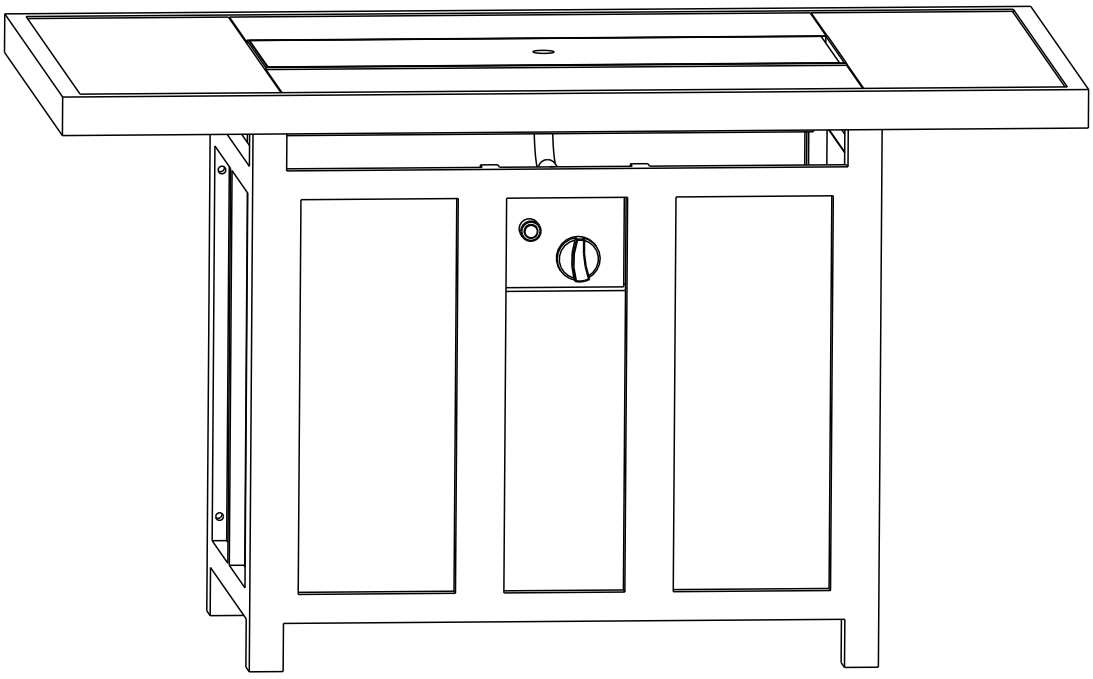

Contact Us

If you have any questions,
Please contact customer service.

Email: JW_outdoor@outlook.com

Customer Service: +1 (888) 541-7768

Hours: Mon–Fri, 9 AM–6 PM EST

SAFETY PRECAUTIONS

WARNING



Please read and understand this entire manual before attempting to assemble or install the product.



Some parts may have sharp edges. Please wear protective gloves when assemble or install the product.



Assemble the item on a soft, non-abrasive surface to avoid damage, such as carpeting.



Keep all the children and pets away from assembly area. Children and pets should be supervised when they are in the area of the dining set construction.

CAUTION

- Please do not exceed the weight limitations of this item.
- Firmly secure all bolts, screws and knobs before use. Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.

ATTENTION

- Check every part with the part list before assembly. If any part is missing or damaged, do not attempt to assemble the product and contact us immediately.
- We care about every customer's experience. Please feel free to contact us if you have any advice. We will offer you efficient solutions ASAP.
- We recommend you to use waterproof furniture cover for the entire patio dining set when out of use to keep them longer performance.
- You could adjust the foot leveler to keep table or chair in balance.

WARRANTY COVERAGE REQUIREMENTS

- Pictures of the damaged parts. The order number of your product.
- Please gather all of this information BEFORE you contact us.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

Email :
JW_outdoor@outlook.com

PRODUCT WARRANTY INSTRUCTION

Free Warranty Period:

The free warranty period starts from the product receipt date and lasts one year.

Coverage during the Free Warranty Period:

1. If any components of the purchased product are damaged due to non-human-induced reasons natural wear and tear excluded , corresponding new parts will be replaced free of charge.

2. If the entire purchased product is damaged due to non-human -induced reasons natural wear and tear excluded and cannot be further used, corresponding parts or a brand-new product will be replaced free of charge.

Coverage after the Free Warranty Period:

After the warranty period expires, replacement components will be provided to customers at cost price for continued service.

Additional Services:

After purchasing the product, customers can consult our staff for any product-related inquiries.

Contact Email :

JW_outdoor@outlook.com

PRODUCT WARRANTY INSTRUCTION

DANGER

FIRE OR EXPLOSION HAZARD

If you smell gas:

- Shut off gas to the appliance.
- Extinguish any open flame.
- If odor continues, leave the area immediately.
- After leaving the area , call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

WARNING

Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance.

An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

WARNING: For Outdoor Use Only

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide, which has no odor.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.

WARNING

If the information in this manual is not followed exactly, a fire or explosion may result casuing property damage, personal injury, or loss of life.

Contact Email :

JW_outdoor@outlook.com

PRODUCT WARRANTY INSTRUCTION

Safety Precautions

⚠ DANGER

★ Failure to comply with the precautions and instructions provided with this fire pit can result in fire, explosions burns, asphyxiation, and/or carbon monoxide poisoning, which may in turn lead to property damage or loss, personal injury, or death. Only persons who have fully read, understand, and can follow the instructions should ever use or service this fire pit.

★ **DANGER** indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.

★ **FOR YOUR SAFETY**

If you smell gas:

1. Immediately shut off gas to the appliance.
2. Extinguish any open flames.
3. If an odor persists, keep away from the appliance and immediately call your gas supplier or fire department.

★ **EXPLOSION-FIRE HAZARD**

- Keep solid combustibles, such as building materials, paper, or cardboard, a safe distance away from the fire pit, as recommended by the instructions.
- Provide adequate clearance around places where air can vent into the combustion chamber.
- During operation, this product can be a source of ignition. Keep fire pit area clear and free from combustible materials, gasoline, paint thinner cleaning solvents, and other flammable vapors and liquids. Do not use the fire pit in areas with high dust content. Minimum fire pit clearances from combustible materials: 64"(162.5cm) from the top; 48"(121.9cm) from all sides and back.

★ **EXPLOSION-FIRE HAZARD**

- Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources, or locations where temperatures may exceed 120 degrees F (49˚C)
- Propane vapors are heavier than air and can accumulate in low places. If you smell gas, leave the area immediately.
- Never install or remove a propane cylinder while the fire pit is lit, or while near flames, pilot lights, or other ignition sources, or while the fire pit is hot to touch.
- This fire pit can become extremely hot during use and can ignite flammables that are too close to the burner. Keep gasoline and other flammable liquids and vapors well away from the fire pit.
- Store the propane cylinder outdoors in a well-ventilated space out of reach of children. Never store the propane cylinder in an enclosed area (house, garage, shed, etc.). If the fire pit is to be stored indoors, disconnect the propane cylinder so that it can be stored outdoors, separately.

PRODUCT WARRANTY INSTRUCTION

Safety Precautions

⚠ DANGER

★ CARBON MONOXIDE HAZARD

- This fire pit is a combustion appliance. All combustion appliances produce carbon monoxide (CO) during the combustion process. This product is designed to produce extremely minute, non-hazardous amounts of CO if used and maintained in accordance with all warnings and instructions. Do not block airflow into or out of the fire pit.
- Carbon Monoxide (CO) poisoning produces flu-like symptoms, watery eyes, headaches, dizziness, fatigue, and possibly death. You can't see it or smell it - it is an invisible killer. If you or anyone around you experiences these symptoms during the operation of this product, get fresh air immediately!
- This product is intended for outdoor use only.
- This fire pit consumes oxygen. Do not use it inside the home or in any unventilated or enclosed areas. Oxygen depletion within an enclosed space can be dangerous or fatal.

⚠ WARNING

★ Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. An LP-cylinder not connected for use should not be stored in the vicinity of this or any other appliance.

★ **WARNING** indicates an imminently hazardous situation that, if not avoided, may result in serious injury or death.

★ Improper installation, adjustment, alteration, service, or maintenance may lead to property damage, injury, or death. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.

★ Certain materials or items, when stored under the fire pit, will be subjected to radiant heat and could be seriously damaged.

★
- This product is fueled by propane gas. Propane gas is invisible, odorless, and flammable. An odorant, usually described as having a “rotten egg” smell, is normally added to help detect leaks. The odorant may fade over time, however, so leaking gas is not always detectable by smell alone.
- Propane gas is heavier than air and leaking propane will sink to the lowest available space. It may be ignited by ignition sources including matches, lighters, sparks, or open flames of any kind, and it may be ignited by sources many feet away from the original leak. Only use propane gas set up for vapor withdraw. Store or use propane gas in compliance with local ordinances and codes or with ANSI/NFPA 58. Turn off propane when not in use.

PRODUCT WARRANTY INSTRUCTION

Safety Precautions

⚠ WARNING

★ **For Outdoor Use Only:**
CARBON MONOXIDE HAZARD
This appliance can produce carbon monoxide, which has no odor. Using this appliance within an enclosed space may result in serious injury or death. Never use this appliance in an enclosed space such as a camper, tent, or home.

★ **California Proposition 65**
Combustion by-products produced when using this product contain chemicals known to the state of California to cause cancer, birth defects, and other reproductive harm.

★ **BURN HAZARD**
- Never leave fire pit unattended while in use.
- Keep out of reach of children.

★ The installation of this appliance must conform with local codes, or with the National Fuel Gas Code, ANSI Z223.1 NFPA 54, in the case of a lack of local codes; Use National Fuel Gas Code; Natural Gas and Propane Installation Code, CSA B149.1; or Propane Storage and Handling Code, CSA B149. 2, as applicable

★ Solid fuels (plastic and artificial wood decks, etc.) should not be burned in this appliance.

★ Max. gas supply: 250 PSI; Min gas supply for input adj.: 25 PSI.

★ Keep the area around the appliance clear and free from combustible materials, gasoline, and other flammable vapors and liquids;

★ Please clean the combustion tube before use.

★ The hose must be inspected before each use of the appliance.
If there is evidence of excessive abrasion or wear, or if the hose is damaged, please contact the manufacturer for a replacement hose.

★ The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged; a suitable replacement burner shall be specified by the manufacturer;

★ Please install the battery base as per the installation instructions. If the battery base is not installed, you will not be able to ignite the flame and use the burner.

★ The propane gas supply cylinder to be used must be:
- constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for LP-Gas Cylinders, or the Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339, as applicable;
- equipped with a listed overfilling prevention device;
- equipped with a cylinder connection device compatible with the connection for the appliance.

PRODUCT WARRANTY INSTRUCTION

Safety Precautions

⚠ WARNING

★ Alert children and adults to the hazards of high surface temperatures. Stay away from these surfaces to avoid burning skin or igniting clothing.
- Carefully supervise young children when they are in the vicinity of the fire pit.
- Do not hang clothing or any other flammable materials from the fire pit. Do not place them on or near the fire pit either.
- Replace any guard or protective device that was removed for servicing the appliance before you put the appliance back in service.
- Installation and repair should be done by a qualified service person. The fire pit should be inspected before use, and annually thereafter, by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners, and circulating air passageway of the appliance be kept clean.

★ Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and/or any gas control that has been underwater;

★ WARNING: Failure to position the parts in accordance with these diagrams or failure to use exclusively parts specifically approved for this appliance may result in property damage or personal injury.

★ SERVICE SAFETY
- Keep all connections and fittings clean. Make sure the propane cylinder valve outlet is clean.
- During set up, check all connections and fittings for leaks using soapy water. Never use a flame to check leaks. Use as a heating appliance only. Never alter the device or use the device in any way not intended by the manufacturer.

CAUTION indicates an imminently hazardous situation that, if not avoided, may result in minor or moderate personal injury, or property damage.

Warranty Coverage Requirements:

- Photos of the damaged parts.
- The order number of your product.
- Please gather all of this information BEFORE you contact us.
- Do not use this item in a way inconsistent with the manufacturer's instructions, as this could void the product warranty.

NOTE

Before assembly, please check all the product parts by referencing the package contents list and hardware contents list. If any part is missing or damaged, do not begin the assembly of this product. Instead, contact customer service.

ACCESSORIES DISPLAY


Part List

A Cover Plate




1PC

B Table Top

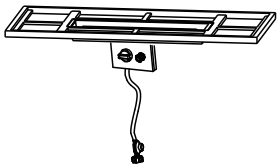


1PC

C Panel

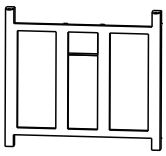


1PC

D Panel

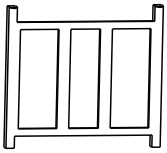


1PC

E Panel

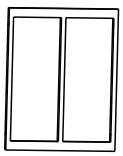


1PC

F Door

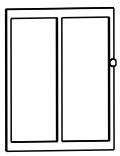


1PC

G Gas Cylinder Bracket



1PC

H Table Top Tile




2PC

I Table Top Tile




2PC

J Bolt M6*15

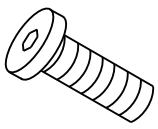


8PC

K Bolt M6*30

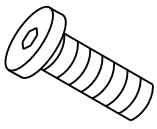

8PC

L Bolt M6*15

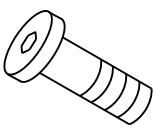


2PC

ACCESSORIES DISPLAY

Part List

M

Washer



16PC

N


Plastic Washer



2PC

O

Battery (AAA)



1PC

P


Lava Rocks



1Box

Q


Metal Plate



1PC

R

Bolt M5*8

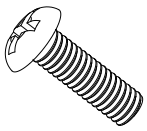

2PC

S


Allen Key



1PC

T

Allen Key

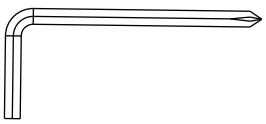


1PC


PRODUCT ASSEMBLY

STEP 1

(Tip: Please Do Not Tighten Screws Until Assembly Is Complete.)




D: X1




E: X1




M: X2




K: X2

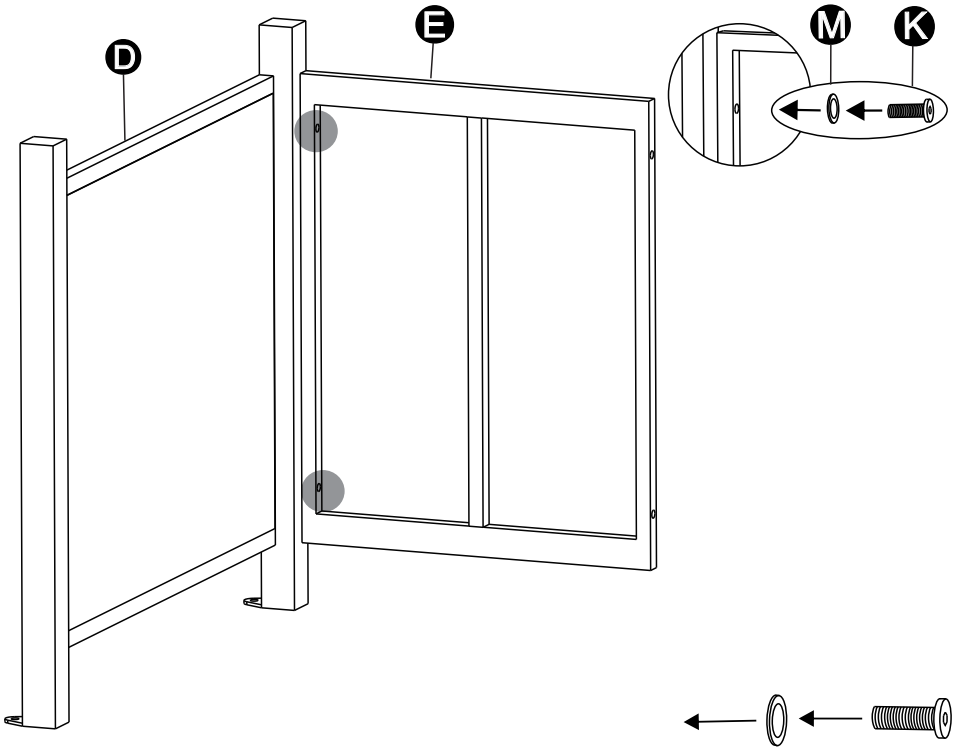

STEP 2




C: X1



K: X2




N: X2

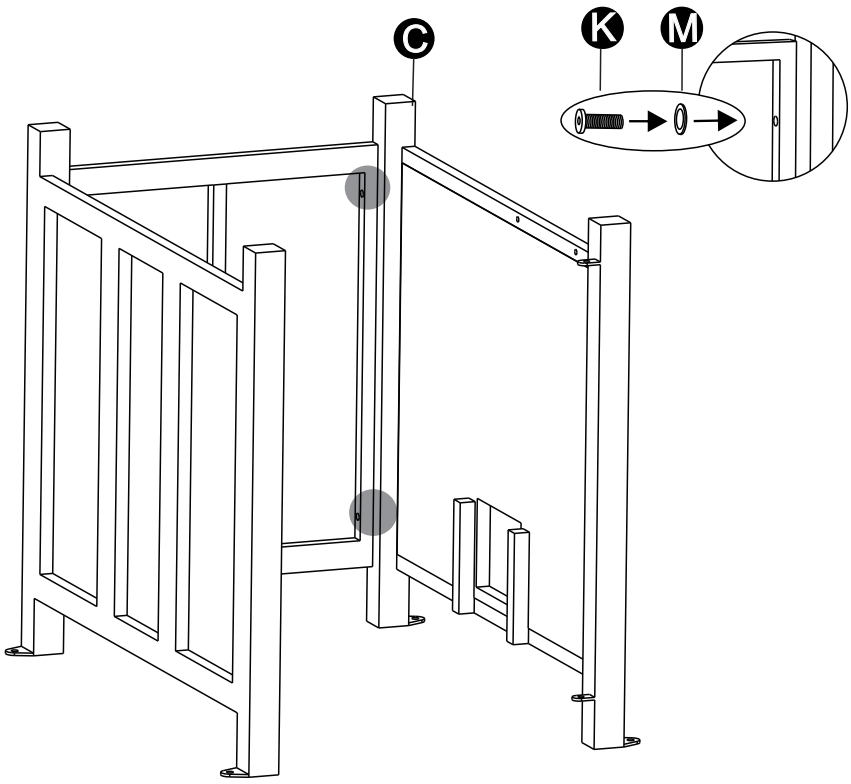


PRODUCT ASSEMBLY

STEP 3




G: X1




K: X4




M: X4

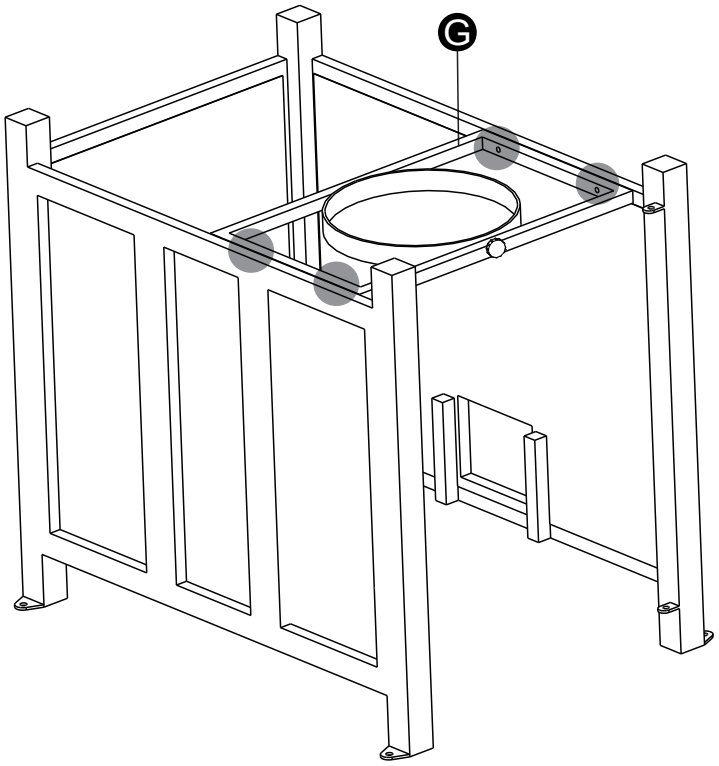


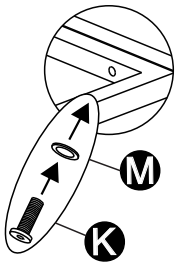

STEP 4




F: X1




L: X2




N: X2

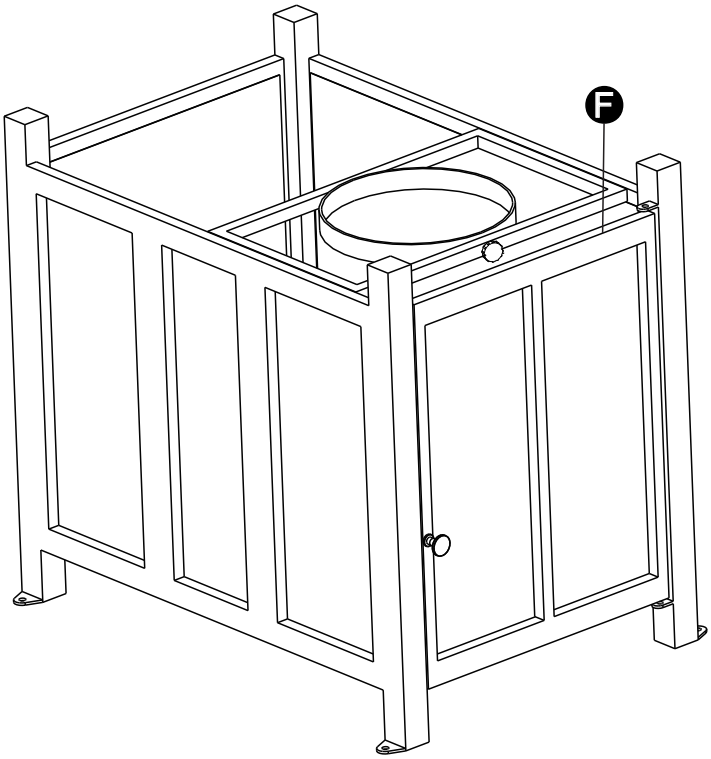


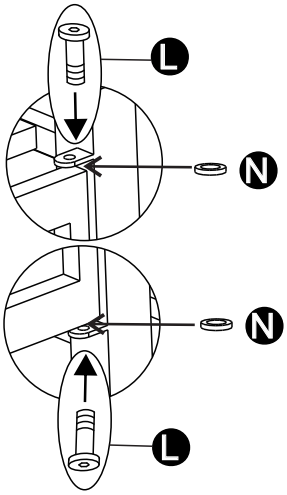

STEP 5




B: X1




J: X2



M: X2

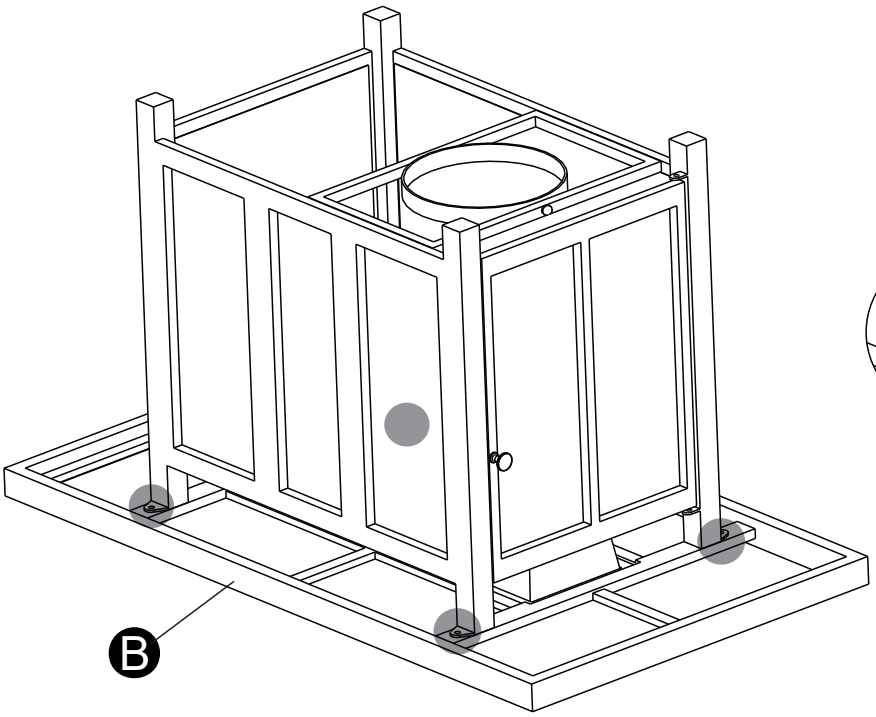

STEP 6



Q: X1




R: X2




J: X4




M: X4

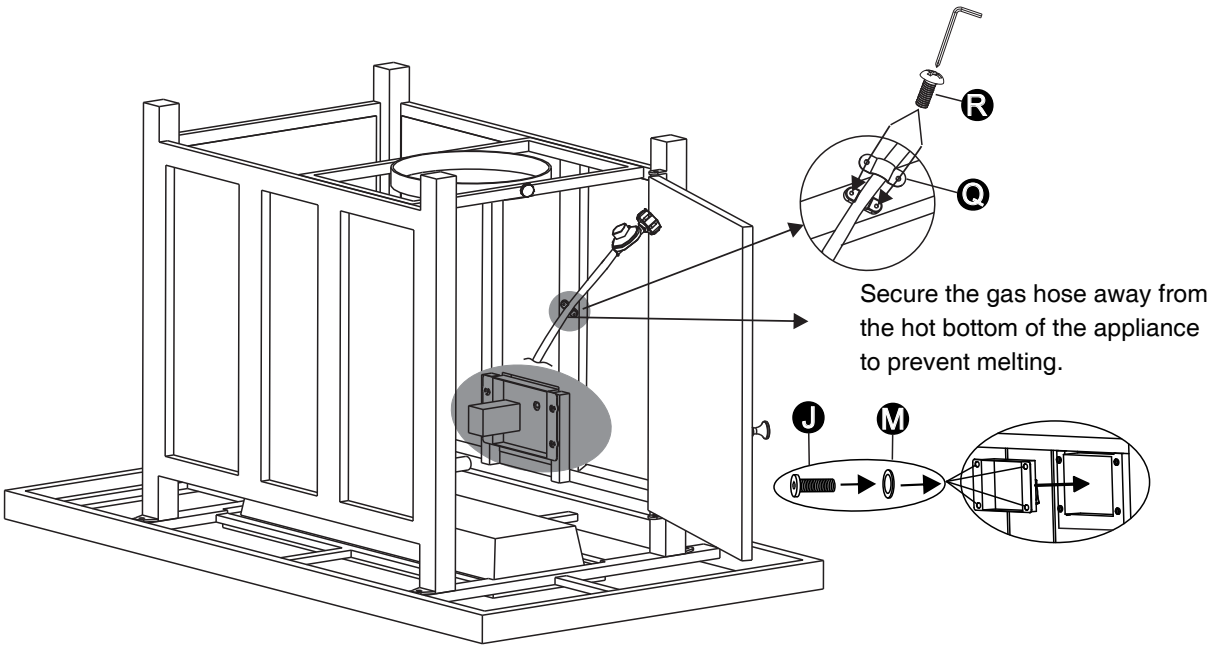



STEP 7

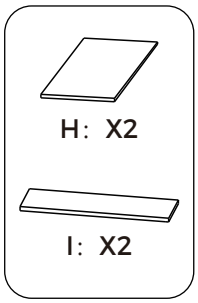

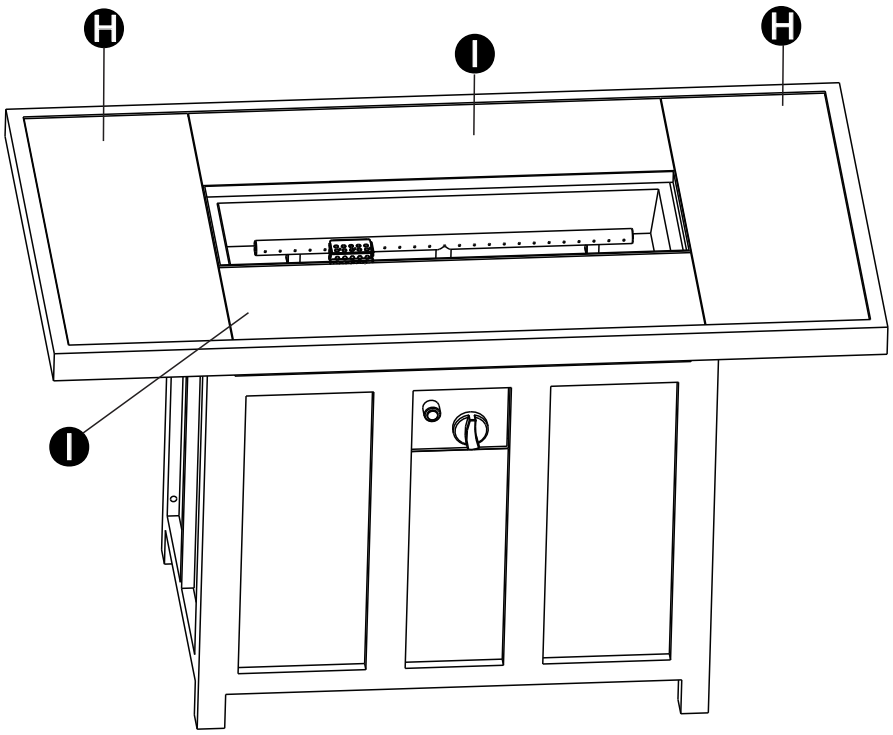


STEP 8

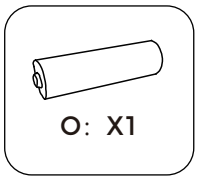

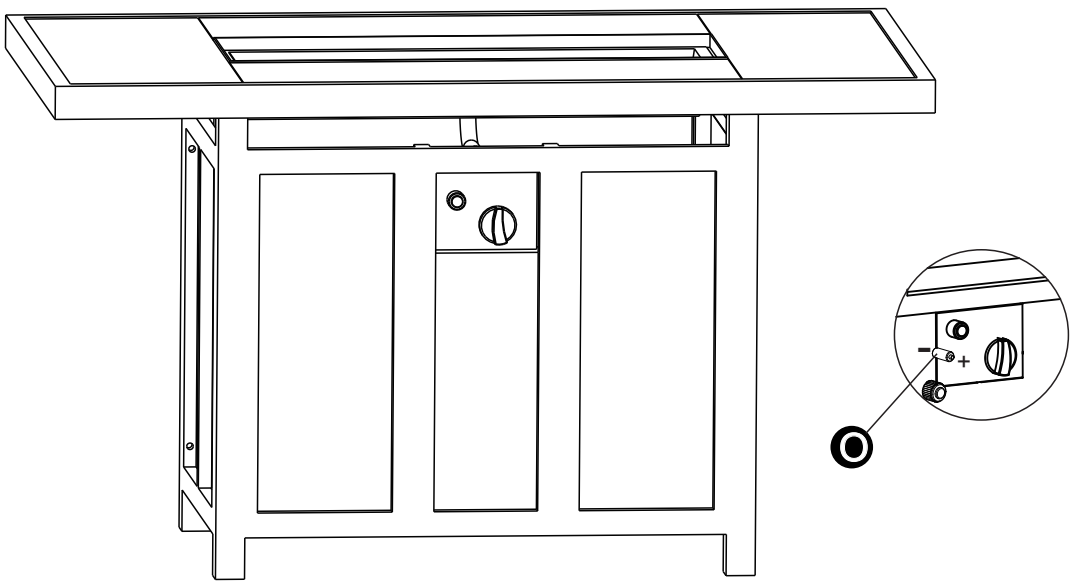

STEP 9


CAUTION:
After use, the burner bowl is extremely hot.
Do not touch it when replacing the
propane tank to avoid burns.

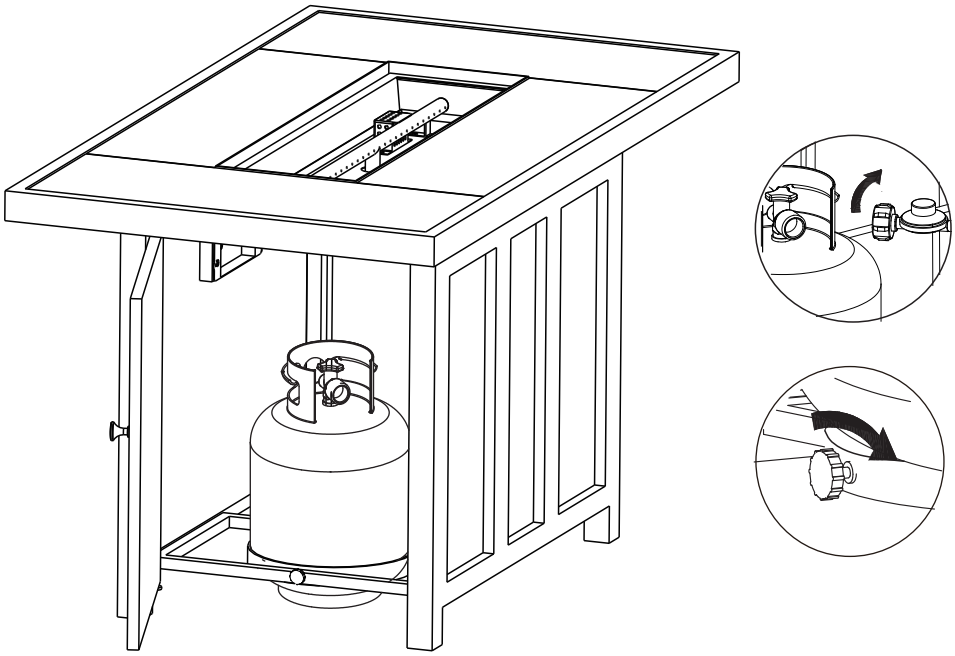


STEP 10




P: X1

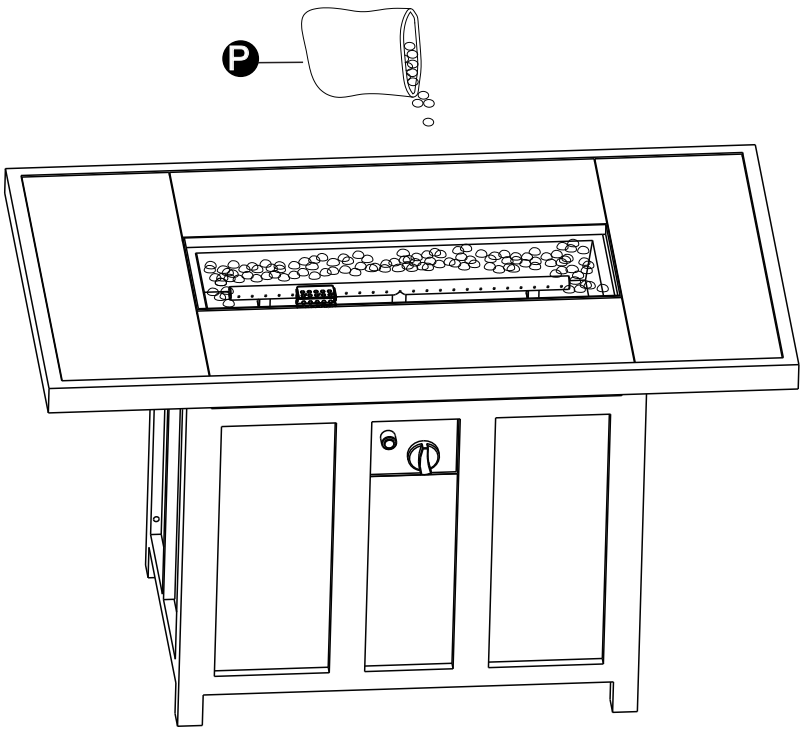


STEP 11

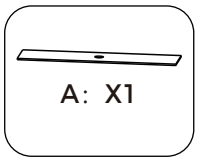

A: X1

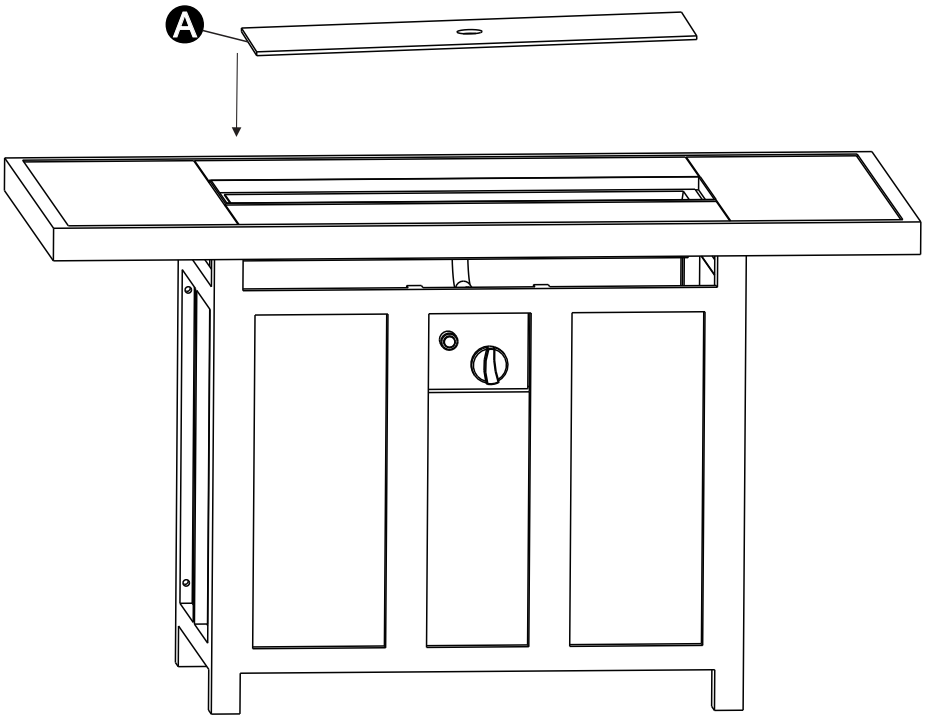

STEP 12

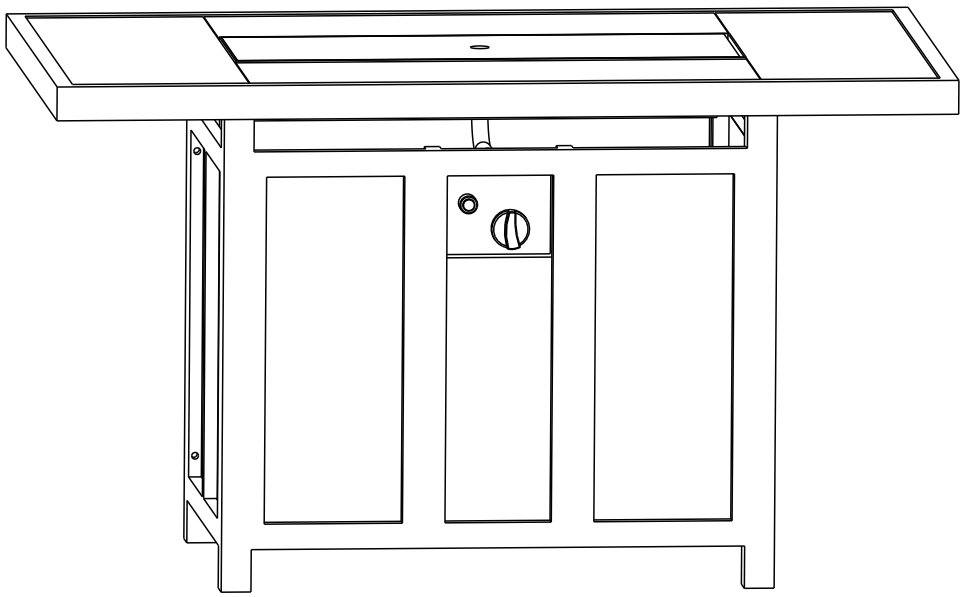

Operation

★ Before performing a leak test, be sure that no sparks can occur in your vicinity and set yourself in a spacious outdoor area. Connect the propane gas tank to the regulator and turn the valve on the unit to the "OFF" position.


★ Brush a soap and water mixture on all connections. Turn the gas supply on; if bubbles occur on any connection there may be a leak. If you smell gas or a leak is discovered, turn the gas valve off, disconnect the propane gas tank, and do not use the appliance until the leak is repaired.


★ Do not use the heating unit without inspecting the gas hose.

★ If there are signs of wear or abrasion you must replace the hose (if applicable). Lava Glass could pop up and strike somebody's face during the process of lighting this unit; stand away from the unit for the first 20 minutes after igniting. Flames should be yellow/blue in color and between 2-10 inches in height.
Wait five minutes after extinguishing the flame prior to placing a lid (if applicable) or protective cover on the heating item.

★ **To Light (Please follow the ignition procedure, otherwise it may cause some danger):**

1. Make sure the control knob is in the "OFF" position.
2. Open the door (F). Slowly open the valve on the propane gas tank by turning the knob counterclockwise.
3. Close the door (F).
4. Push and hold in the electronic igniter (C) to create sparks within the electrode, continue to hold.
5. Push in the control knob (a) and turn to the " " position. Keep holding down the control knob (a) to allow gas to flow for 15 seconds.
6. If ignition doesn't occur within a few seconds, release the control knob (a) and rotate to the "OFF" position. Wait for five minutes for gas to clear and then repeat the above lighting instructions.
7. Once the fire is lit, the flame intensity may be controlled by turning the control (a) knob between the " " and " " positions.

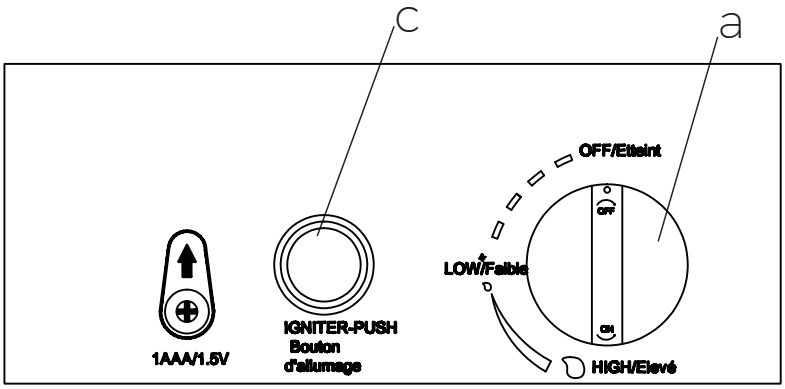

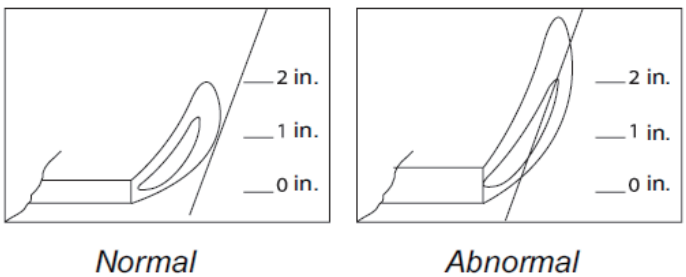


Normal *Abnormal*

PRODUCT ASSEMBLY

Operation

★ **To Extinguish**

1. Push in the gas control knob slightly and turn to the "OFF" position.
2. Turn the knob counterclockwise to detach the pressure regulator from the cylinder.
3. If needed, you can use soapy water to check if there is gas leakage at the outlet.

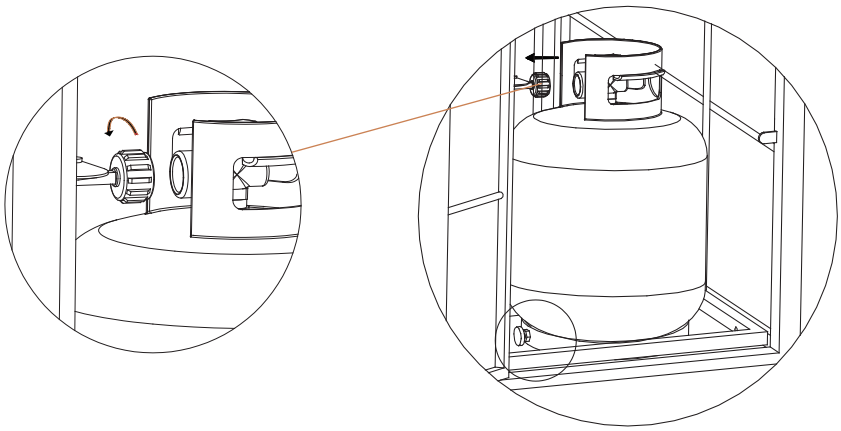

Maintenance

★ Before performing any maintenance always disconnect the propane gas tank.

★ Keep the heating item free and clear from combustible materials.

★ Visually inspect the burner for obstructions and keep the tank enclosure free and clear from debris.

★ Use a soft brush to get rid of the mild stains, loose dirt, and soil after the burner and pumice stones/lava rocks/Lava Glass are completely cooled down. Then, wipe down with a soft cloth.

★ Harsh weather conditions may cause stubborn stains, discoloration, and possibly rust pitting.

★ Permanent damage may occur if powder or solvent comes in contact with painted or plastic components on this heating unit

★ Keep the heating unit stored away from direct sunlight.

★ If storing this unit inside, disconnect the propane gas tank from the gas valve and store it separately, outdoors.

★ Not using manufacturer-approved or supplied parts and/or accessories may result in a defective product and may void the warranty of this heating unit.

★ If you have a lid or protective cover, always place it on the heating item when the heating item is not in use.