VIKKI'S WARDROBE (WRP08)

Assembly Instruction













*Please follow this instruction to avoid assembly errors.
*For customer service, please contact ***E-mail: shop@robud.com***

robud
Designed By ROBOTIME
www.robud.com


98.1WRP08.100

⚠ WARNING:

CHOKING HAZARD-Small parts. Not suitable for children under 3 years.
Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
After opening the package,please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
Please keep the product away from fire, substances flammable and humid environments to prevent damage.


1 	2 	3 	4 	5 
x1	x1	x1	x1	x1
6 	7 	8 	9 	10 
x1	x1	x1	x4	x2
11 	12 	13 	14 	15 
x2	x1	x1	x1	x2
16  M4x25	17  M4x20			
x17	x5	x5		

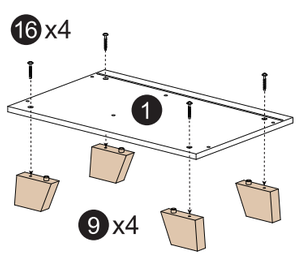1




2

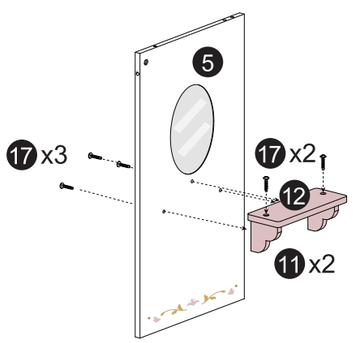
! Notice:
Secure Board 11 onto Boad Slist and secure Board 12




3

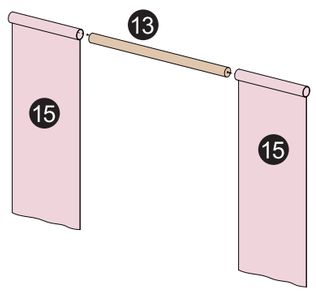


4

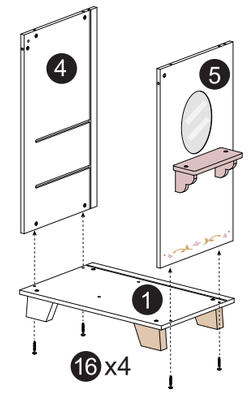


5

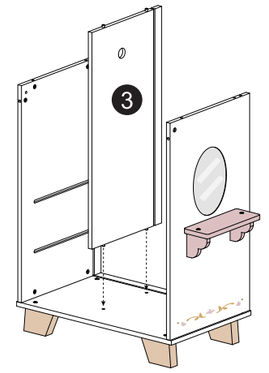


6

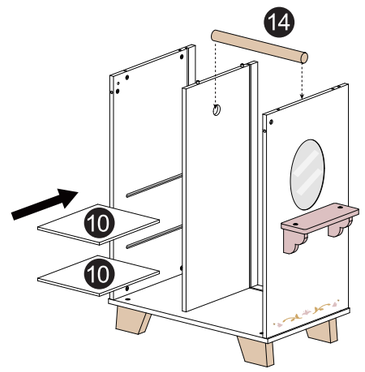


7

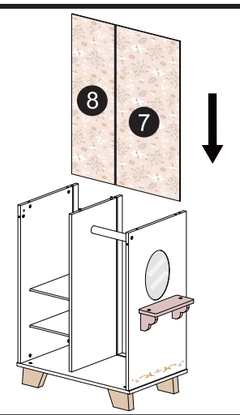


8

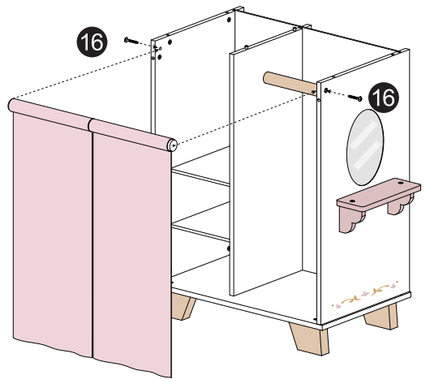


9

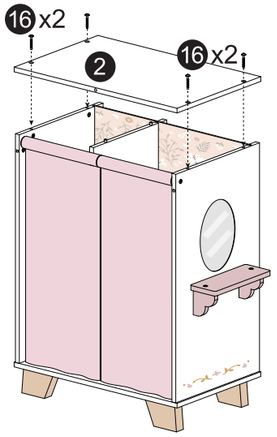

10

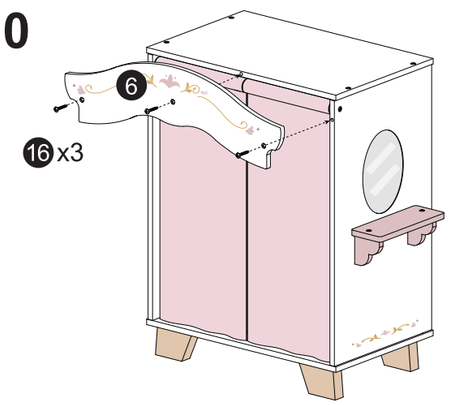

11

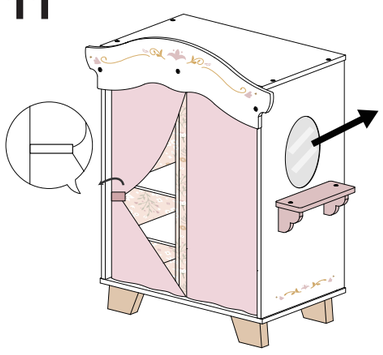

! Notice:
Remove the film on the surface.