Green and Gold Refrigerator (WCF29)

Assembly Instruction

Please follow this instruction to avoid assembly errors.
For customer service, please contact ***E-mail: shop@robud.com***

98.1WCF29.150

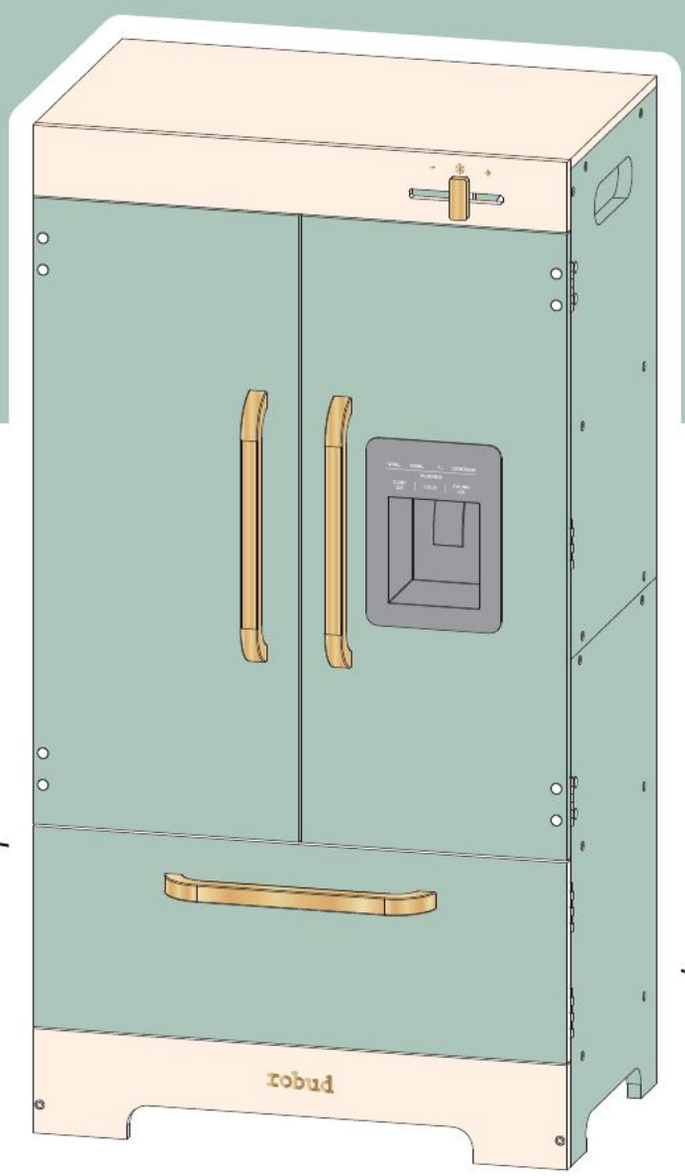

⚠ WARNING:

- CHOKING HAZARD-Small parts. Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package,please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- 37 tool is not a toy! Please keep the tool for future use and store it where children cannot access it.
- The instruction must be retained since it contains important information.

MAINTENANCE:

- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please keep the product away from water, and don't put liquid in the pot sets.
- Please clean the product with dry soft cloth, don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.

Assembly Tips

Assembly time: 2-2.5 hours

Recommended Tools:

(Please prepare them by yourself.))

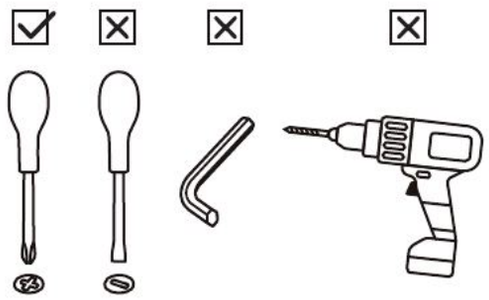

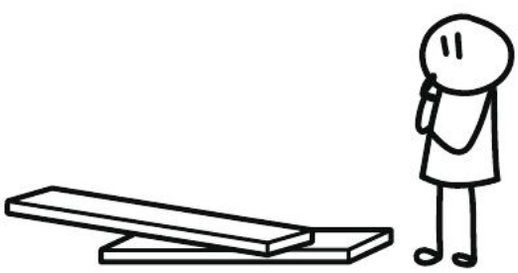

· Avoid overtightening screws during assembly.
· Screws should be fully tightened once.
· Arrange all accessories on a hard, flatsurface for assembly.
· Follow the instructions step by step.

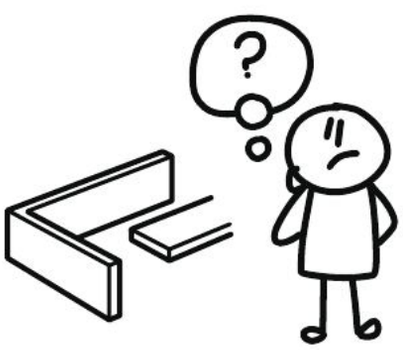

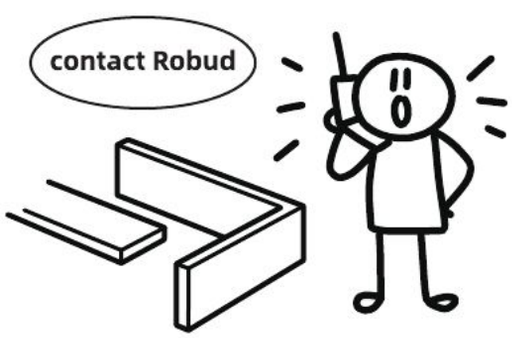

If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us ***shop@robud.com.***
We are glad to do our best to solve your problem and provide a solution to your satisfaction.

Helpful Hints and Tips

Icon Illustration:

! Special attention in assembly

Remove the plastic film on surface

Perspective conversion

1 Step 1

2 Step 2

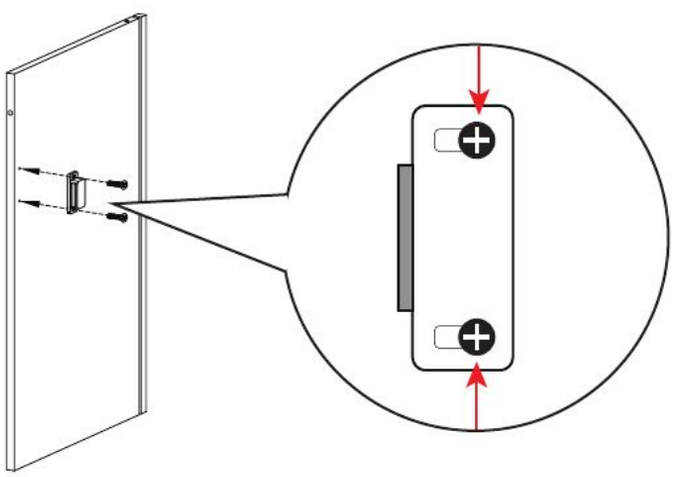

! Notice:

When assembling the door stop,
hold the screw with the screwdriver first and then adjust the screw to the position shown on the left.

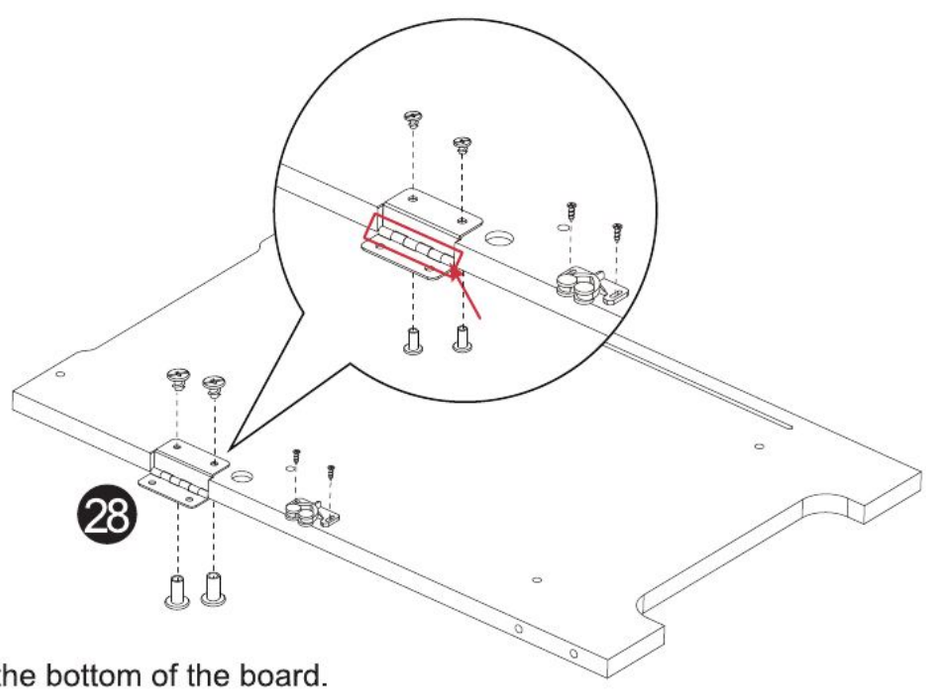

! Notice:

Align the axle of 28 with the bottom of the board.

Product Parts

1 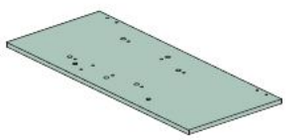	2 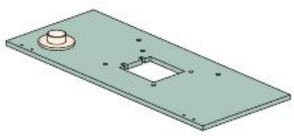	3 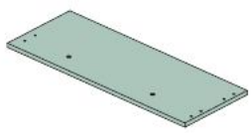	4 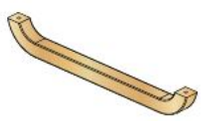
x1	x1	x1	x3
5 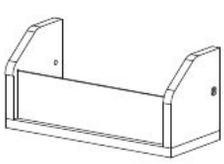	6	7	8
x1	x1	x1	x1
9 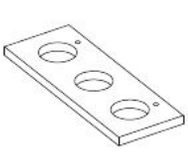	10 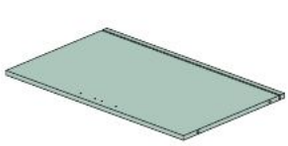	11 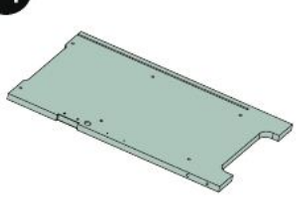	12 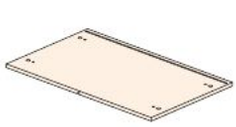
x1	x1	x1	x1
13 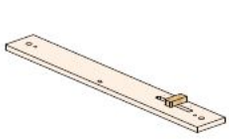	14	15	16 
x1	x1	x1	x1
17 	18 	19 	20 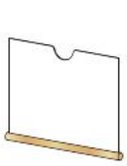
x1	x1	x1	x2

Hardware and Accessories

21 	22 	23 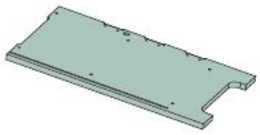	24 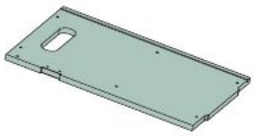
x3	x1	x1	x1
25 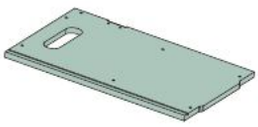	26	27 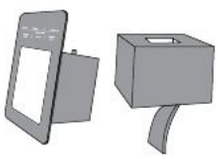	28
x1	x1	x1	x6
29 a b M3X8mm			30
x1		x4	x12
31  M5X30mm	32	33  M3X10mm	34  M4X20mm
x22	x2	x4	x26
35 M4X6mm	36  M3X12mm	37	38  M4X8mm
x8	x6	x1	x13
39 M4X6mm	40  M4X8mm	41 	42  M4X40mm
x8	x8	x16	x1

Hardware and Accessories

43 	44	45	46
x1	x1	x2	x1
47 		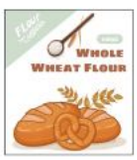	
x1	x1	x1	

Assembly Instruction

1

34 2PCS

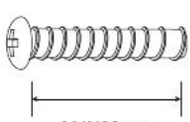

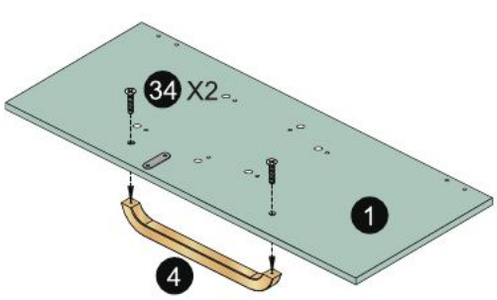

2

30 6PCS 38 6PCS



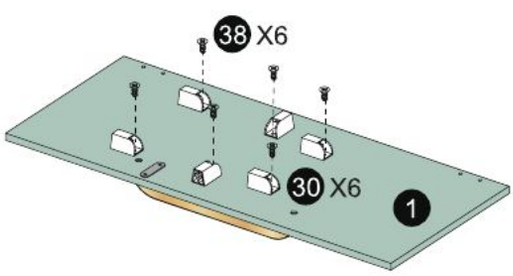

Assembly Instruction

3

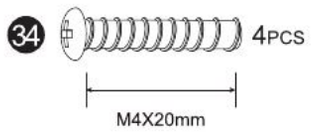

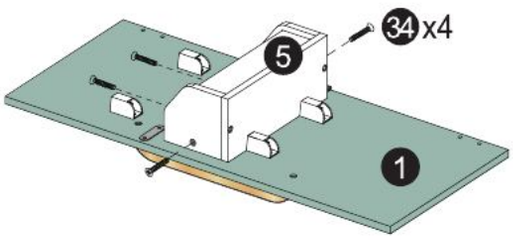

4

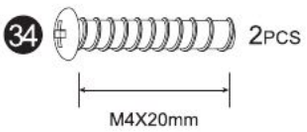

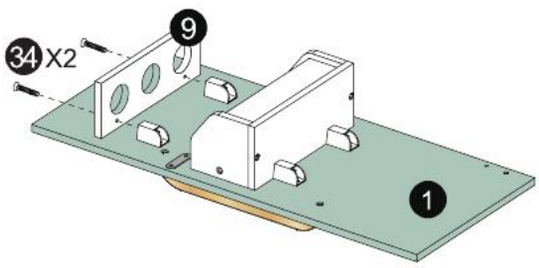

5

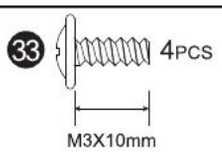

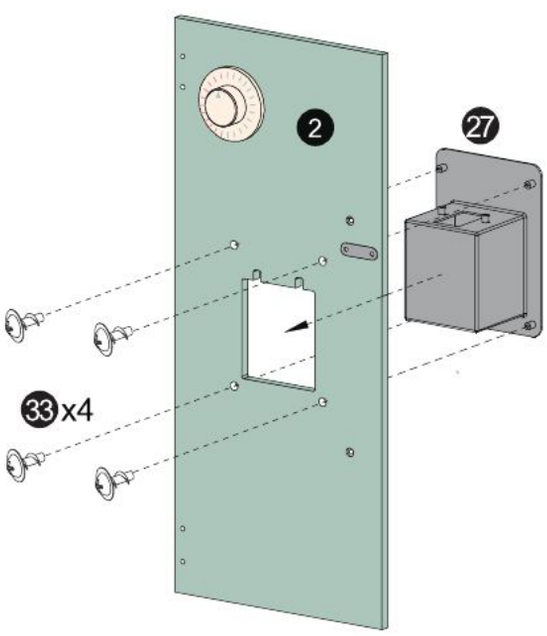

6

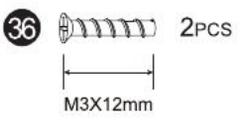

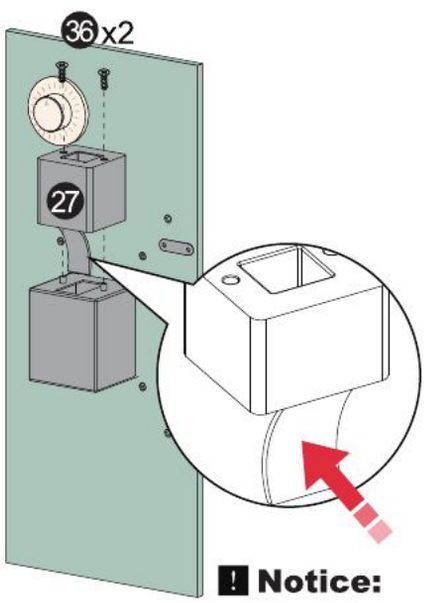

! Notice:
Pay attention to radian

7

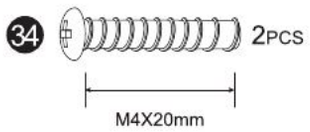

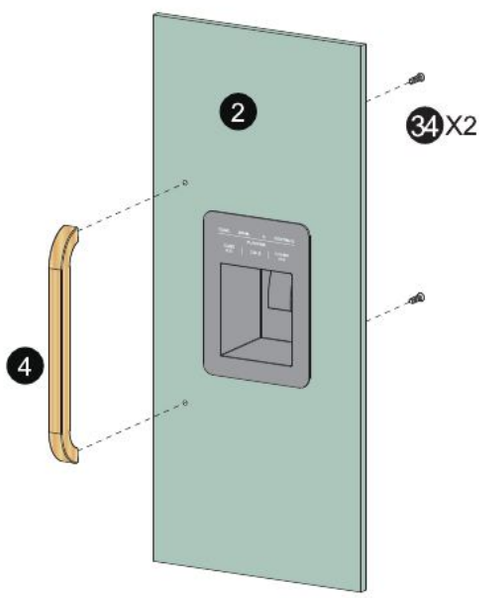

8

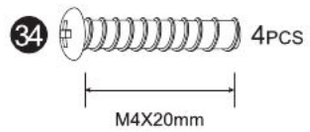

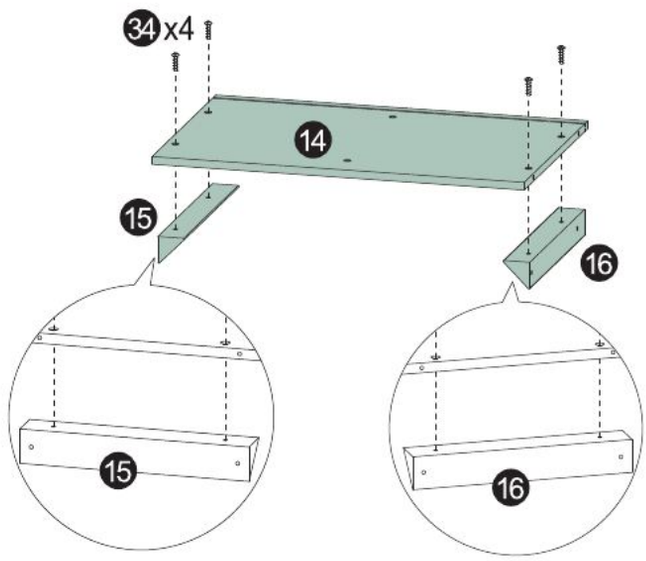

! Notice:
Distinguish Part 15 from 16.

9

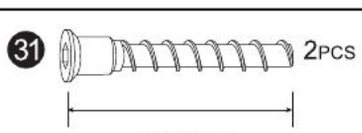

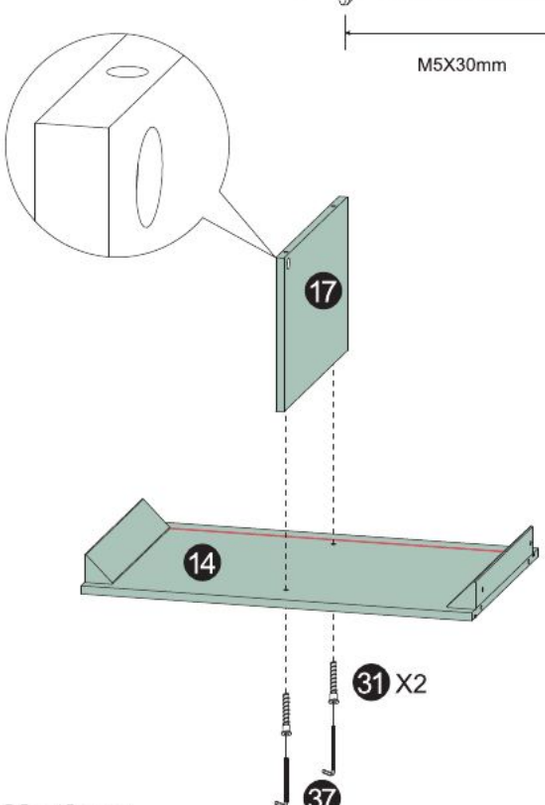

! Notice:
Pay attention to the direction of the holes.

10

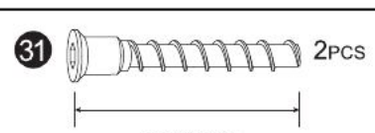

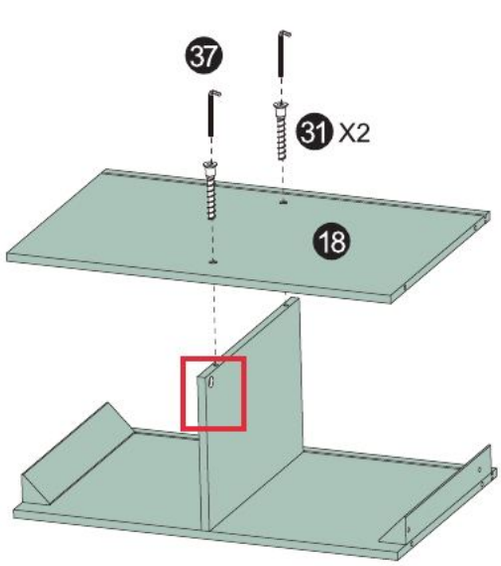

11

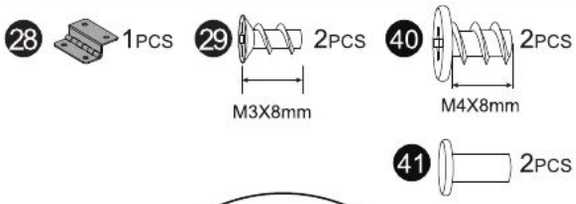

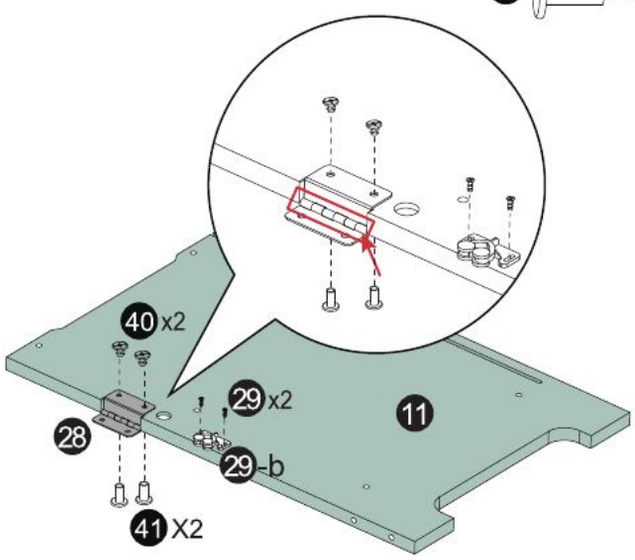

! Notice:

Align the axle of 28 with the bottom of the board.

12

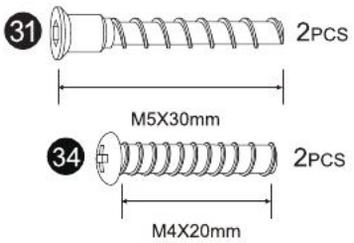

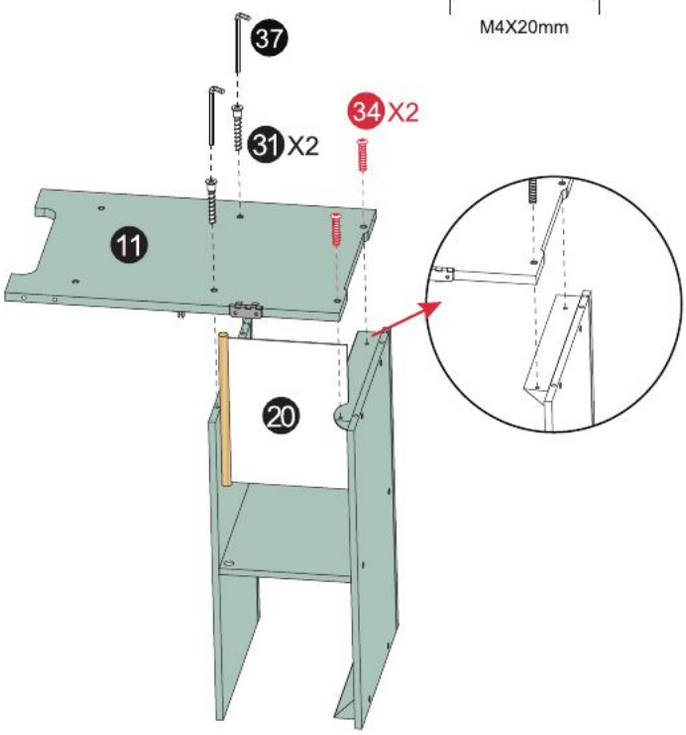

13

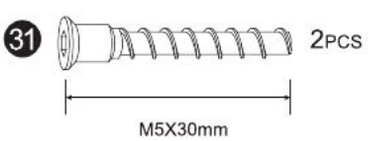

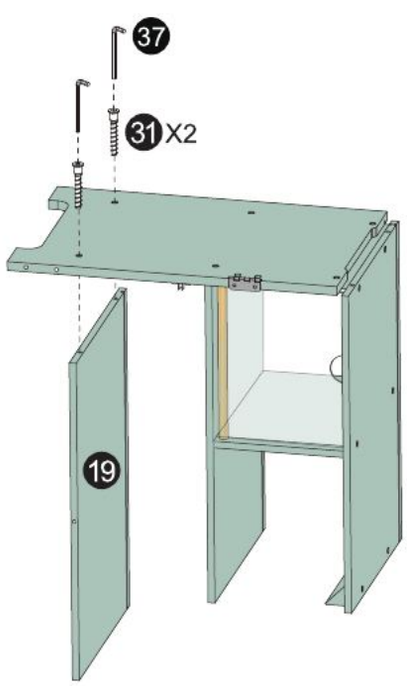

14

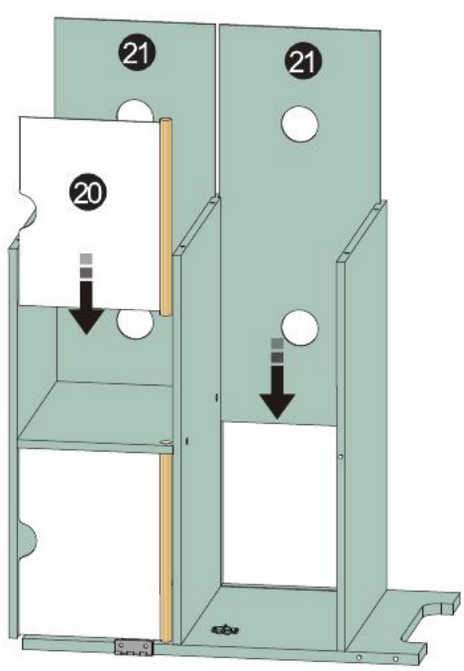

Assembly Instruction

15

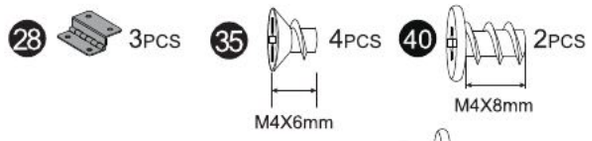

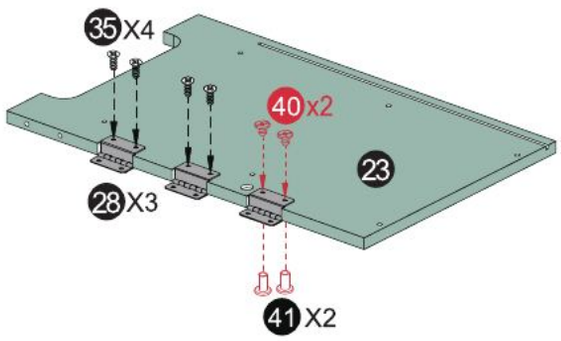

16

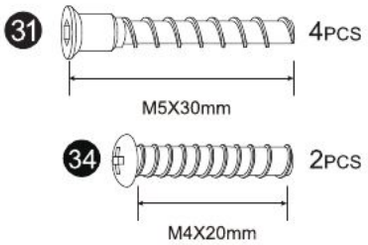

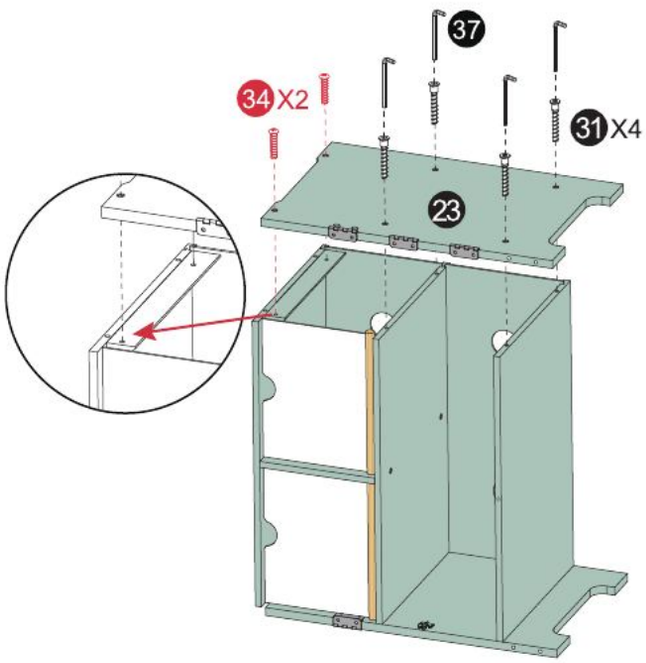

17

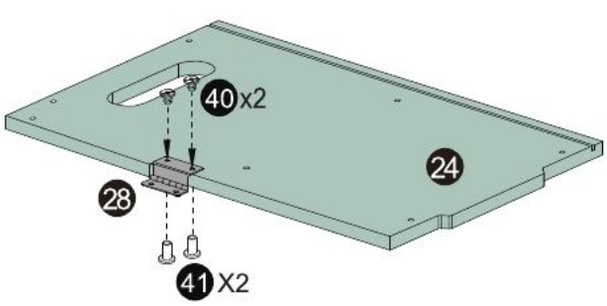

18

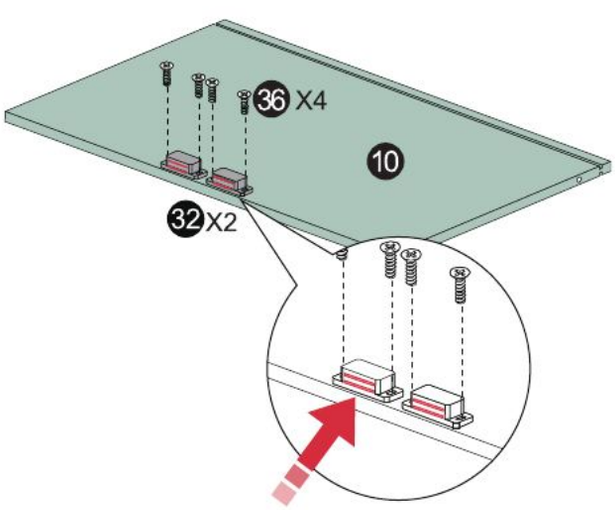

! Notice:

Pay attention to the direction of the magnet.

19

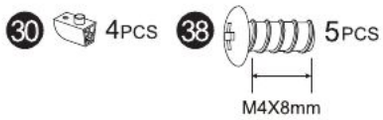

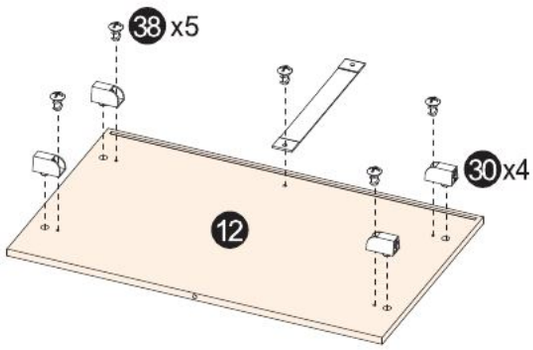

! Notice:

First firmly press Part 30 against the desktop, then securely tighten the screw.

20

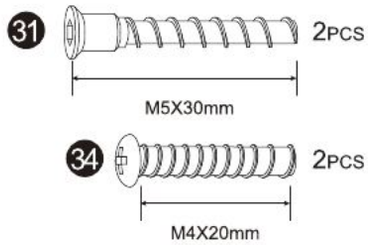

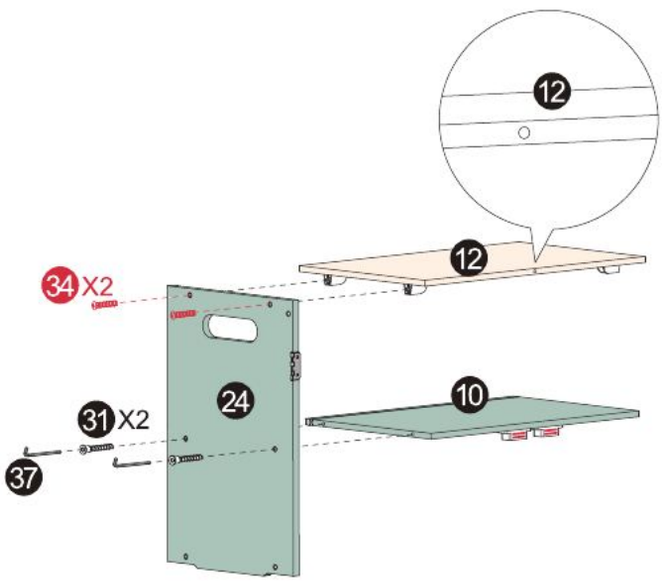

21

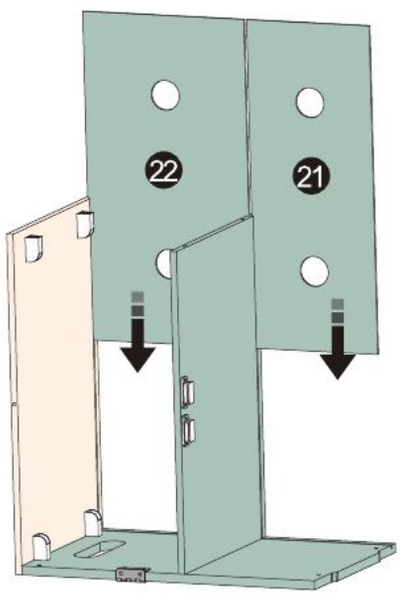

22

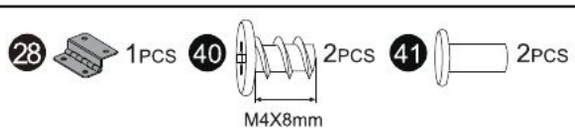

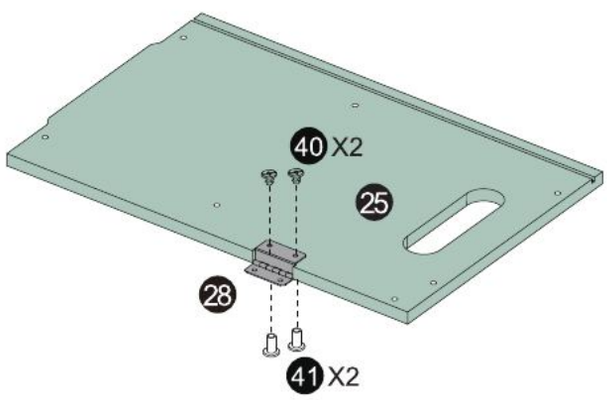

23

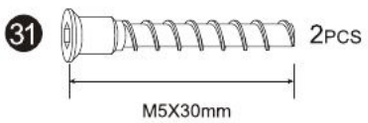

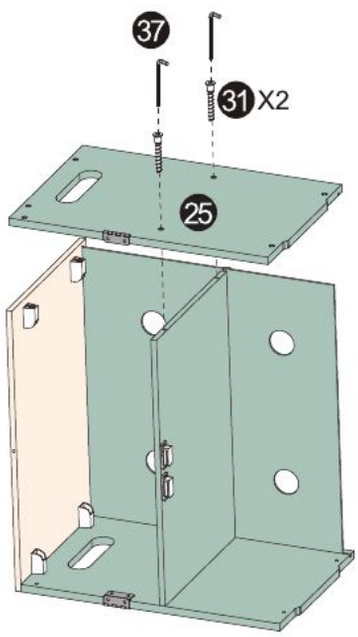

24

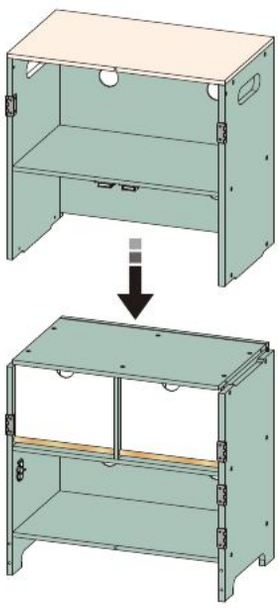

25

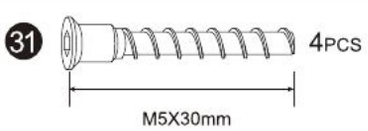

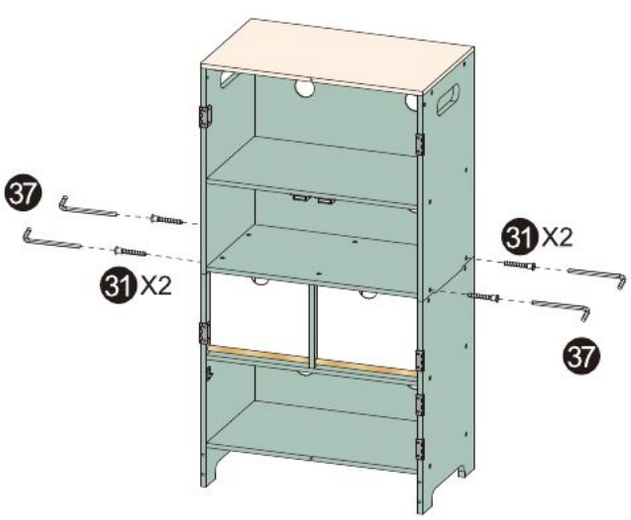

26

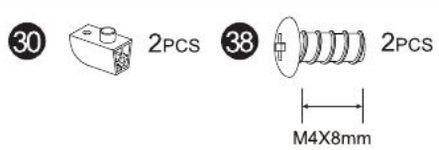

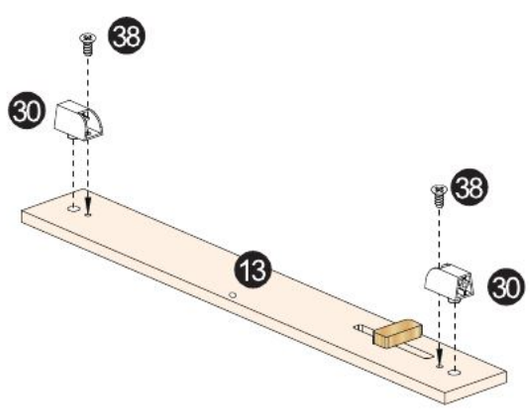

! Notice:

First firmly press Part 30 against the desktop, then securely tighten the screw.

27

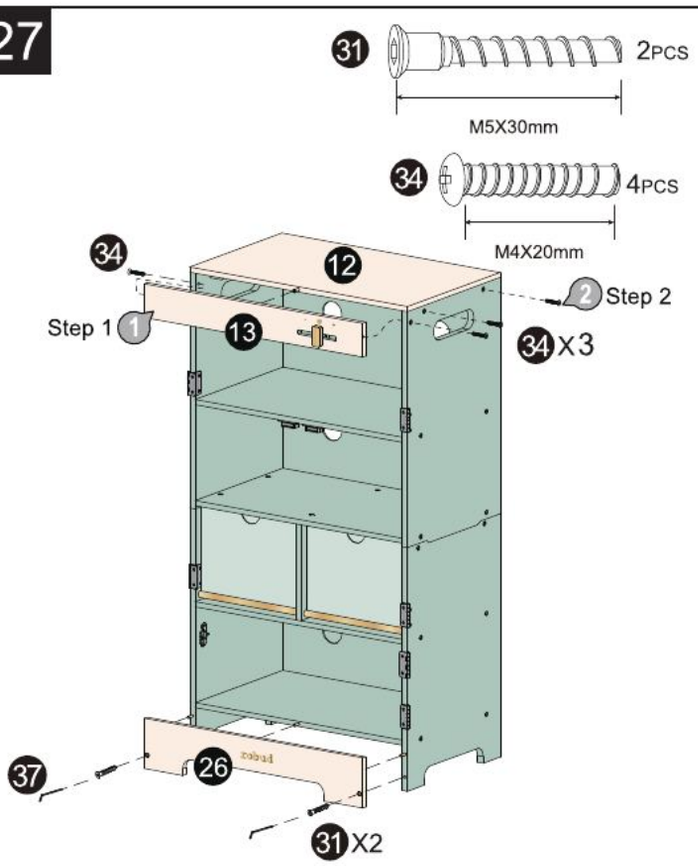

28



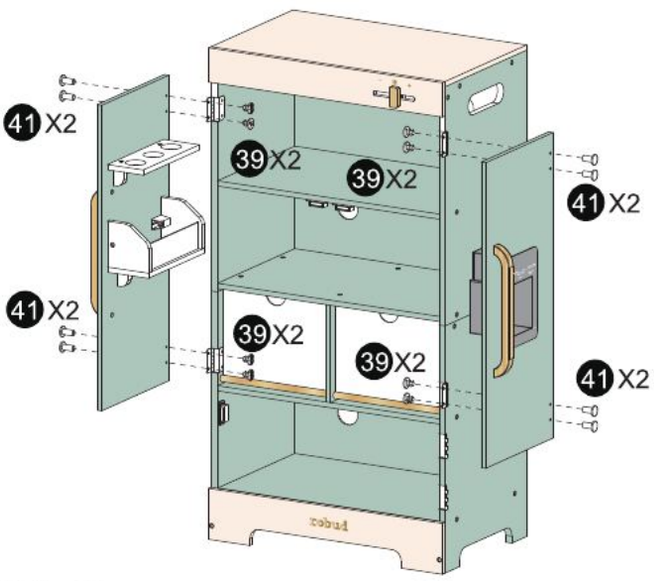

! Notice:
It is recommended that two people work together to complete this step.

29

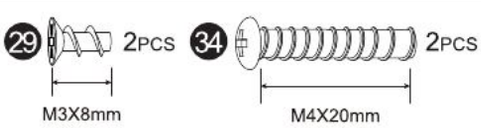

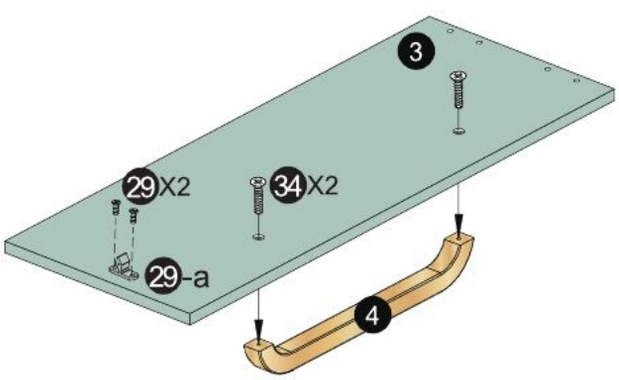

30

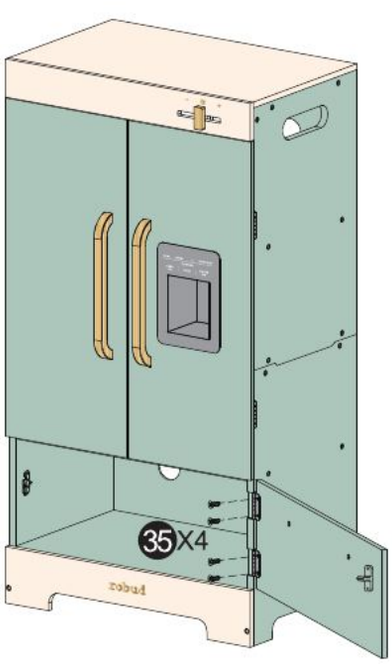

31

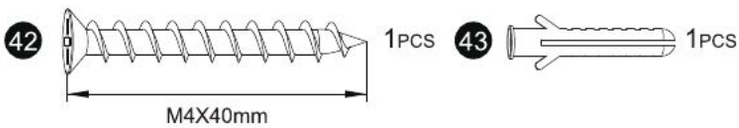

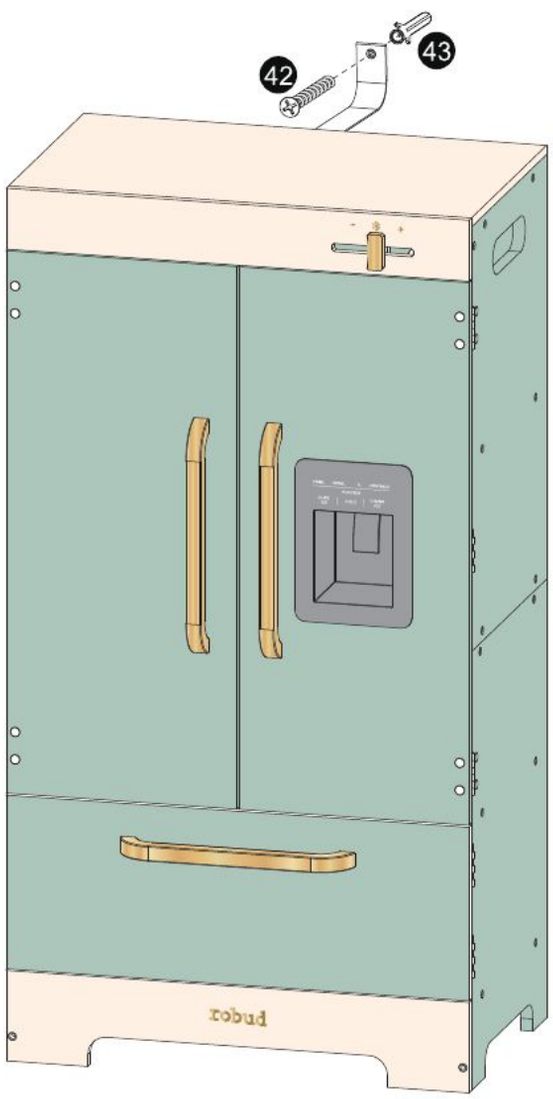

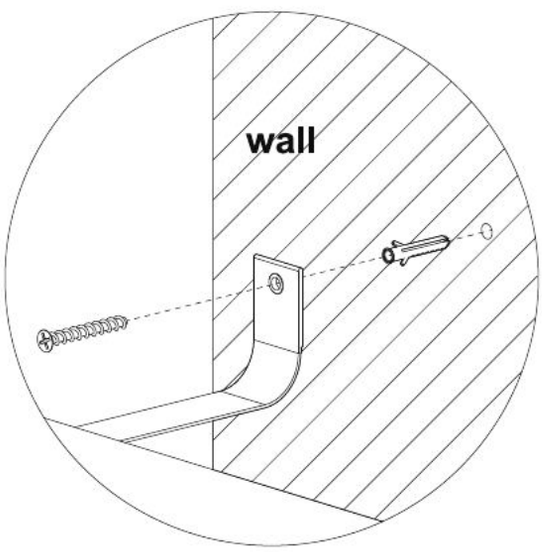

! Notice:

The anti-tip assembly can be secured on the wall to prevent the refrigerator from tipping during play.
It is recommended to place the refrigerator against the wall during use.
Avoid placing the refrigerator in open spaces and prevent your child from climbing on it.
The hardware accessories are primarily suitable for being assembled on walls shown in the instruction.
For other situations, consult your local hardware store to choose more suitable accessories.

Instruction of anti-tip assembly

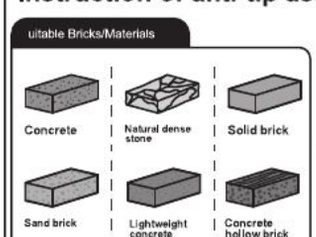

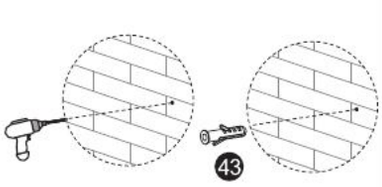

Use the electric drill to drill holes on marks.
The punching depth should be longer than the part to be inserted (the expandable tube 43)
Place the expandable tubes 43 into the drilled holes.
Finally,screw 42 into the hole for the expandable tubes.

Modular Kitchen *NEW&HOT*

SKU: WCF14
Name: Dream Kitchen
29.7*13.8*38.6(inch)
75.4*35*98(cm)

SKU: WCF29
Name: Green and gold refrigerator
18.1*11*40.5(inch)
46*28*103(cm)

SKU: WCF28
Name: Green and gold oven
16.1*11.8*22.4(inch)
41*30*57(cm)

SKU: WCF30
Name: Green and gold washing machine
22*11.8*20(inch)
56*30*51(cm)

SKU: WCF04
Name: Vintage Green Kitchen
21.7*11.6*31.5(inch)
55*29.5*80(cm)

SKU: WCF22
Name: Vintage green refrigerator
23.6*11.8*24(inch)
37.5*30*81(cm)

SKU: WCF20
Name: Vintage green oven
16.1*11.8*22.4(inch)
41*30*57(cm)

SKU: WCF21
Name: Vintage green washing machine
16.1*11.8*22.4(inch)
60*30*61(cm)

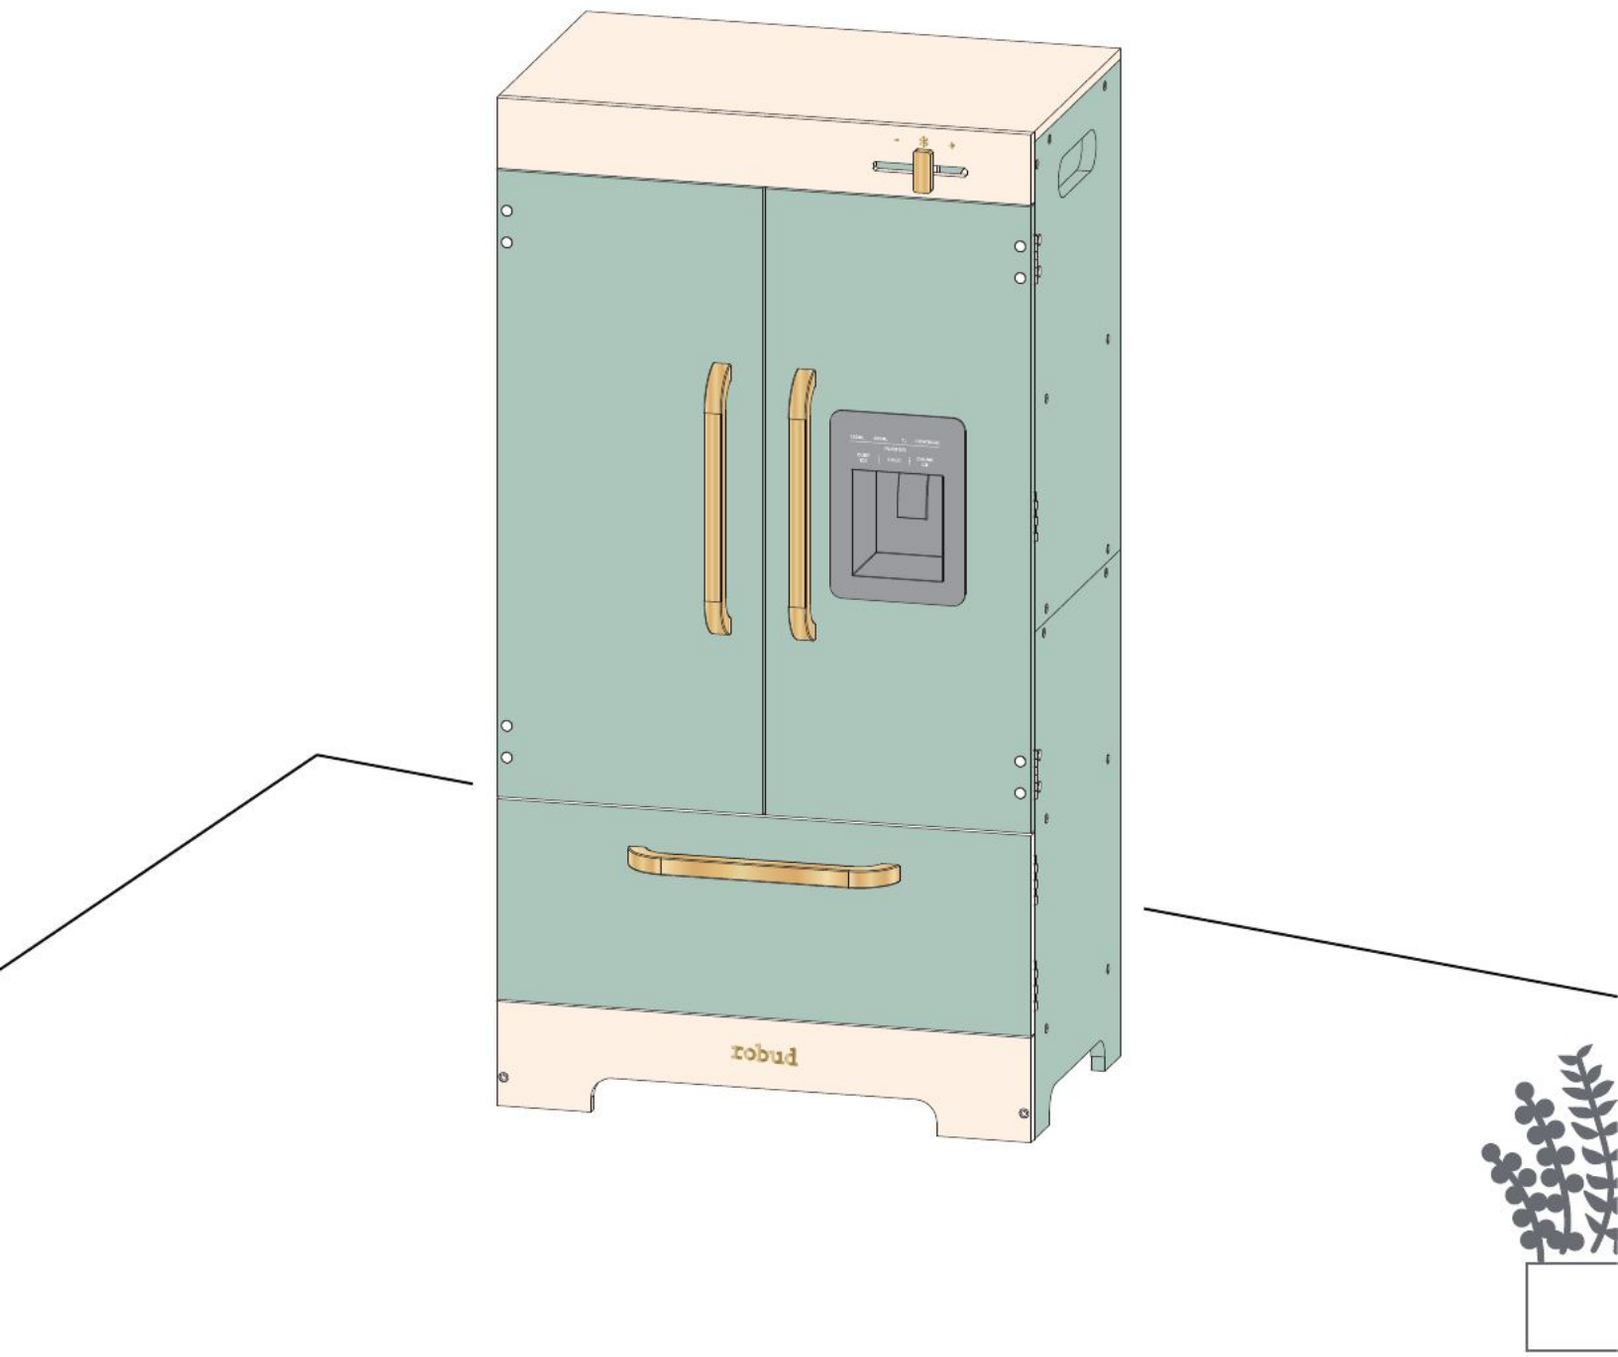

robud

www.robud.com