Affordable Luxury Kitchen (WCF53)

Assembly Instruction

Please follow this instruction to avoid assembly errors.
For customer service, please contact ***E-mail: shop@robud.com***

98.1WCF53.150

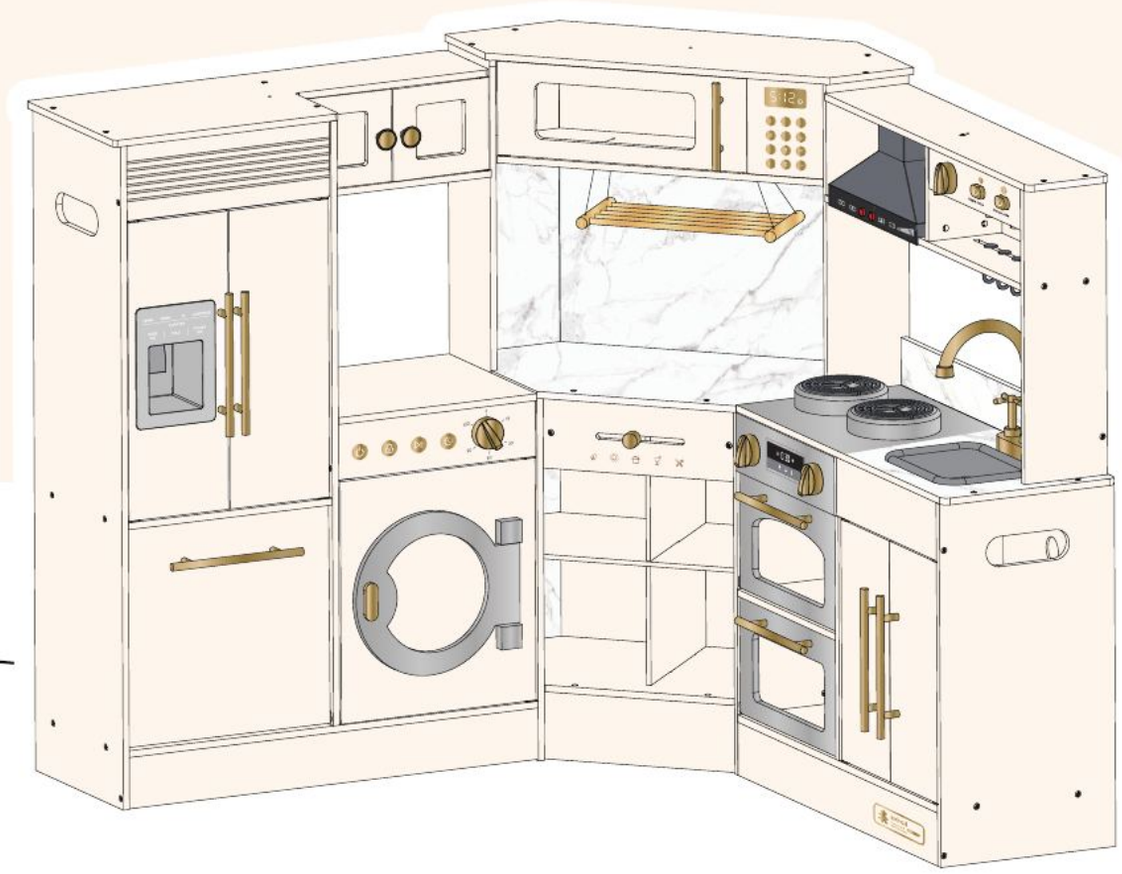

⚠ WARNING:

- CHOKING HAZARD-Small parts.Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package,please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.
- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- The product requires 2“AAA/LR03/AM4 1.5V” batteries. (Batteries for self-preparation).
- Before loading or removing batteries, please loosen screws on the cover of the battery box with the screwdriver first.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity(+ and -).
- Remove the exhausted battery in time.
- The power supply terminal cannot be short circuited.
- Do not connect the wire to a mains outlet.
- The product is not to be connected to more than the recommended number of power supplies.
- Check each part before assembly.If the part is damaged,fix it well before assembly.
- The instruction must be retained since it contains important information.

MAINTENANCE:

- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please keep the product away from water, and don't put liquid in the pot sets.
- Please clean the product with dry soft cloth, don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- The instruction must be retained since it contains important information.

Assembly Tips

Assembly time: 2.5-3 hours

Recommended Tools:

(Please prepare them by yourself.)

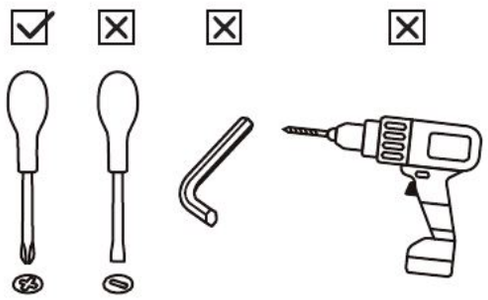

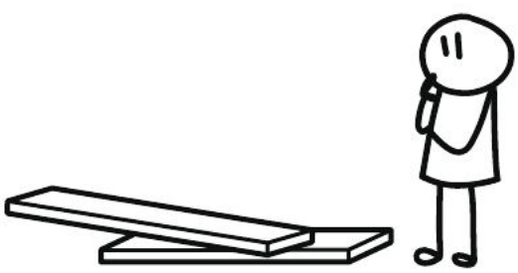

· Avoid overtightening screws during assembly.
· Screws should be fully tightened once.
· Arrange all accessories on a hard, flatsurface for assembly.
· Follow the instructions step by step.

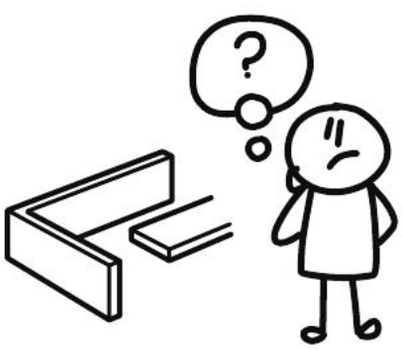

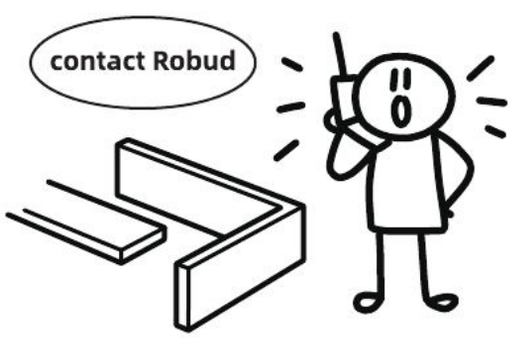

If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us ***shop@robud.com.***
We are glad to do our best to solve your problem and provide a solution to your satisfaction.

Scan the QR code above to view the detailed instruction video

Helpful Hints and Tips

Icon Illustration:

! Special attention in assembly

Remove the plastic film on surface

Perspective conversion

1 Step 1

2 Step 2

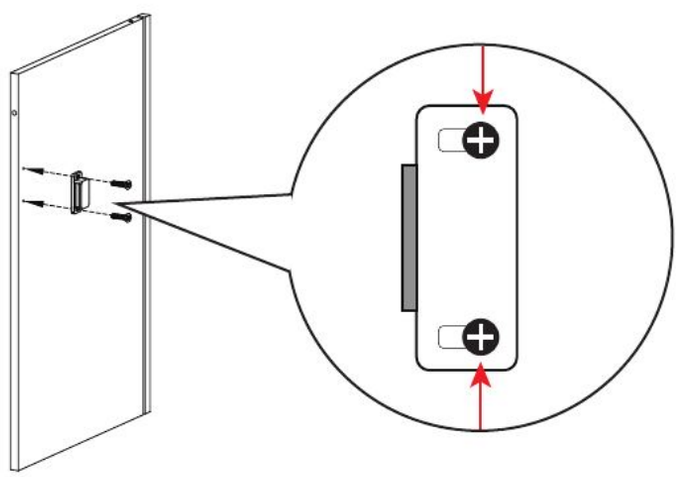

! Notice:

When assembling the door stop,
hold the screw with the screwdriver first and then adjust the screw to the position shown on the left.

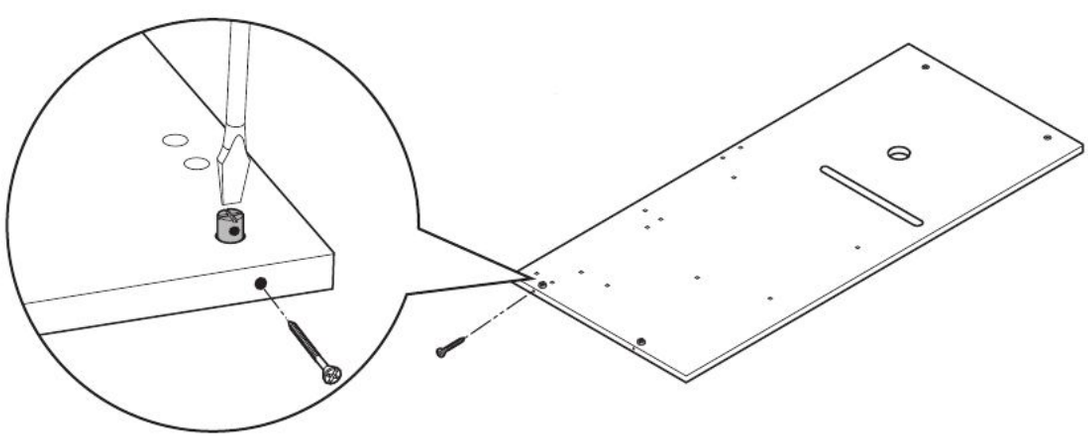

! Notice:

The white plastic part is correctly assembled during production.
If the screws are not in position due to transportation, use a slotted screwdriver to adjust.

Product Parts

1 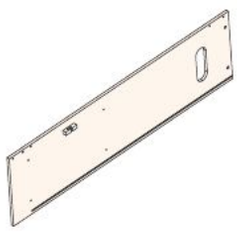	2 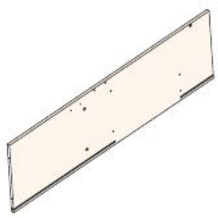	3 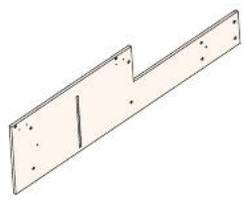	4 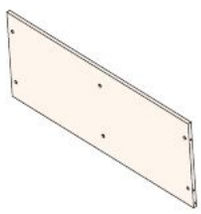
x1	x1	x1	x1
5 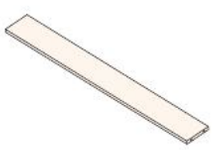	6	7 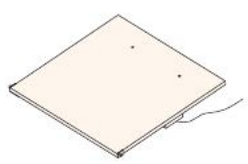	8 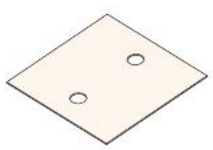
x1	x1	x1	x1
9	10 	11 	12 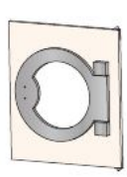
x1	x1	x1	x1
13	14	15	16 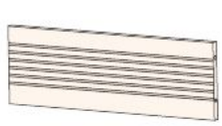
x1	x1	x1	x1
17 	18 	19	20
x1	x1	x1	x1

Product Parts

21	22 	23	24
x1	x1	x1	x1
25	26	27	28 
x1	x1	x1	x1
29 	30	31	32
x1	x1	x1	x1
33 	34 	35	36 
x1	x1	x1	x1
37 	38	39	40 
x2	x1	x1	x1

Product Parts

41	42	43	44
x1	x1	x1	x1
45	46	47 	48
x1	x1	x1	x1
49	50	51	52
x1	x1	x1	x1
53	54	55 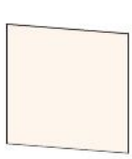	56
x1	x1	x1	x1
57	58	59	60
x1	x1	x1	x7

Product Parts and Hardware

61	62	63	64
x1	x2	x1	x1
65	66 	67	68
x2	x2	x6	x4
69	70	71	72
x1	x3	x2	x2
73	74	75 	76 
x3	x25	x4	x7
77 	78 	79	80 
x14	x3	x4	x4

Hardware

81 	82 	83 	84 
x4	x2	x24	x8
85 	86 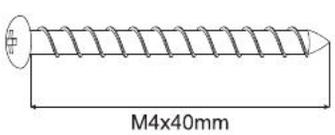	87 	88 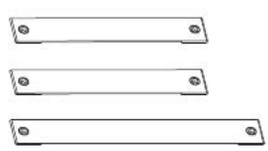
x77	x3	x3	x1

Accessories

x1	x2
	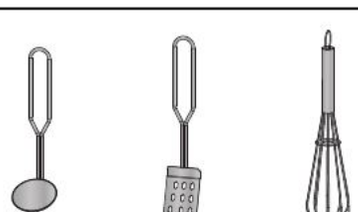
x1	x1
x1	x2

PART A

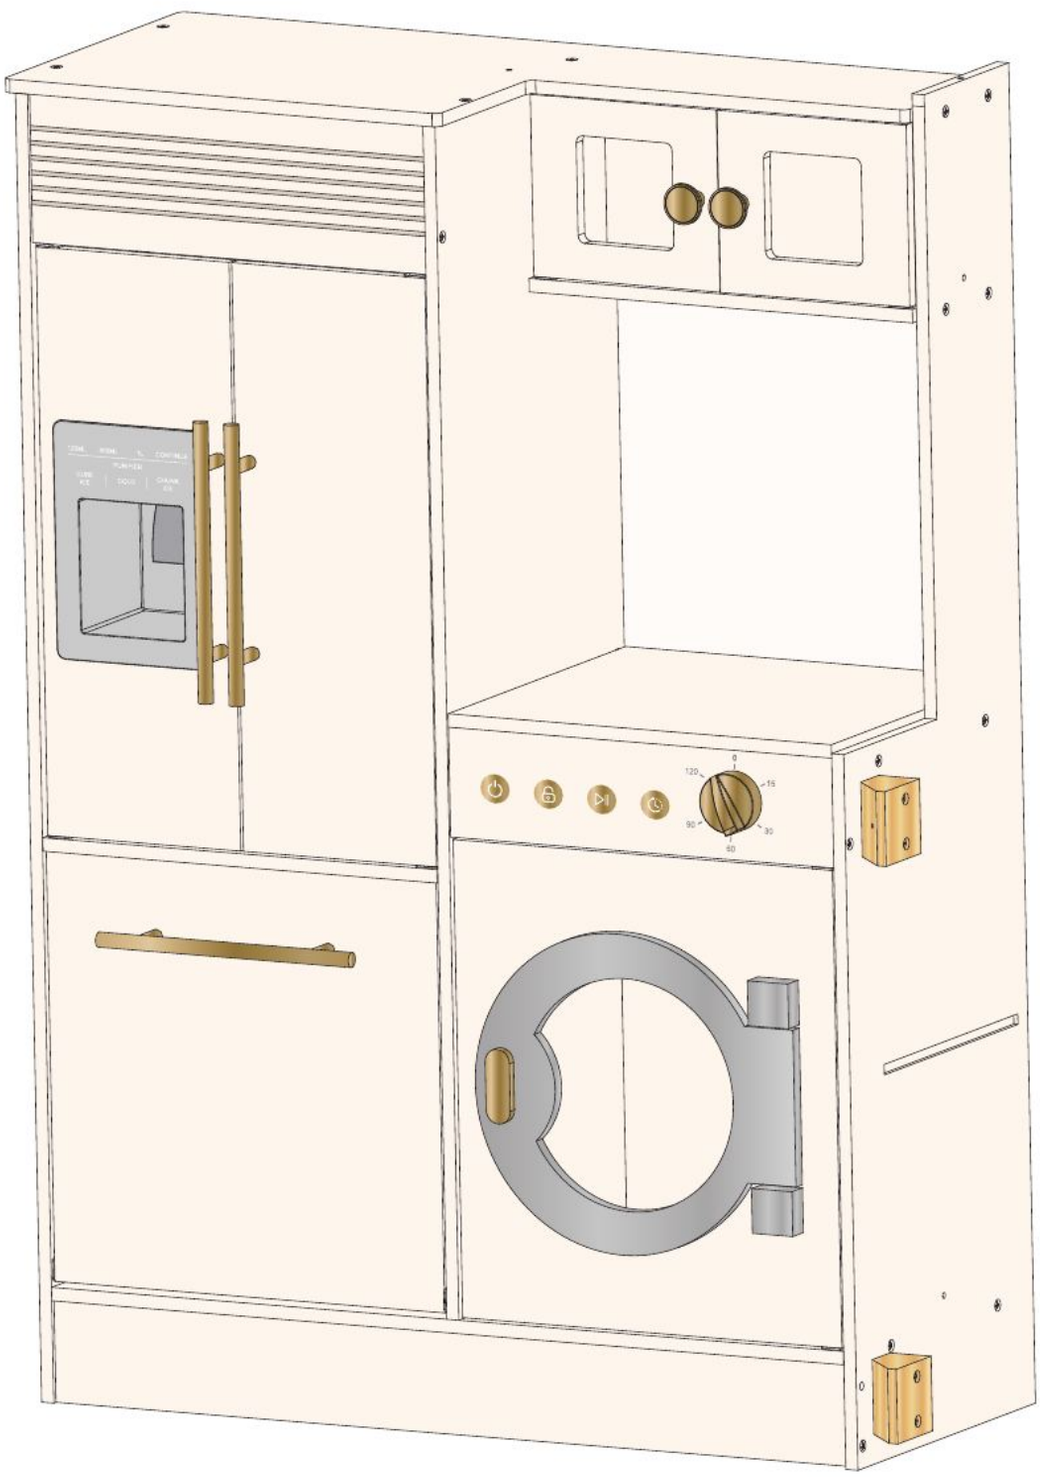

Assembly Instruction

1



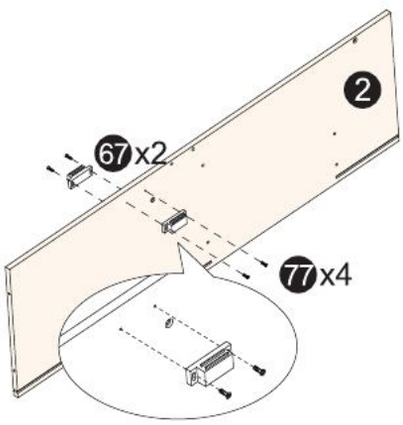

2



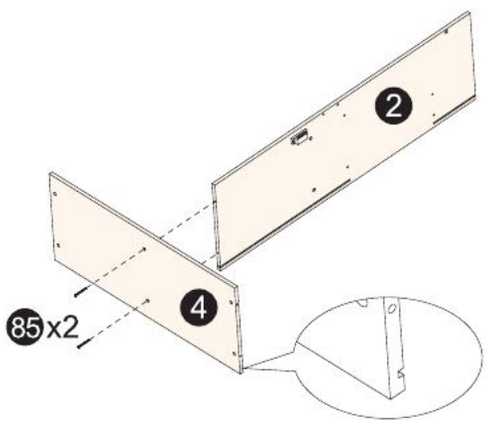

! Notice:

Pay attention to the direction of the groove.

3



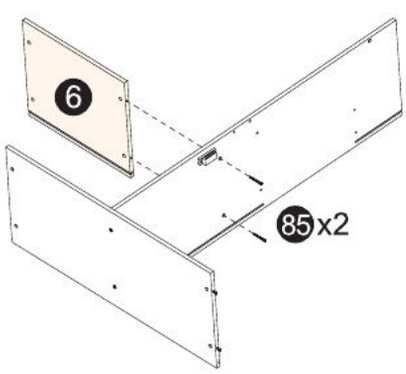

4

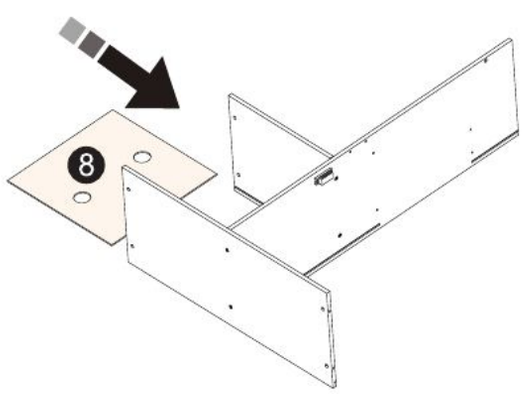

Assembly Instruction

5



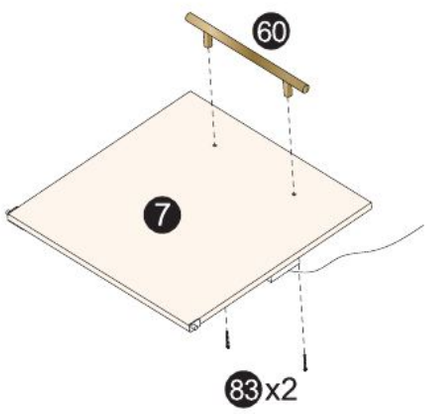

6



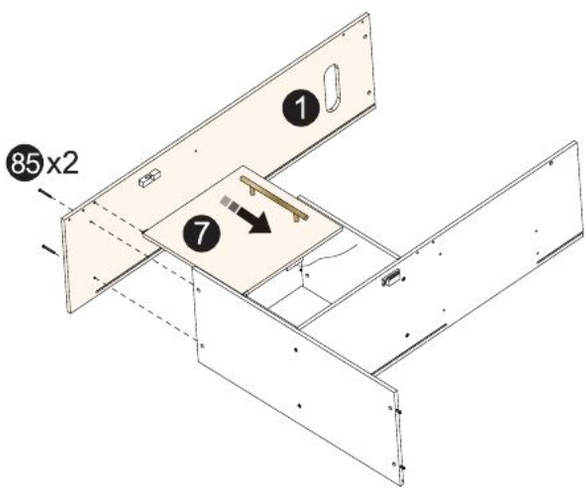

7

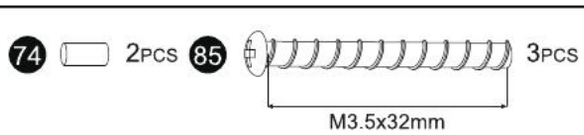

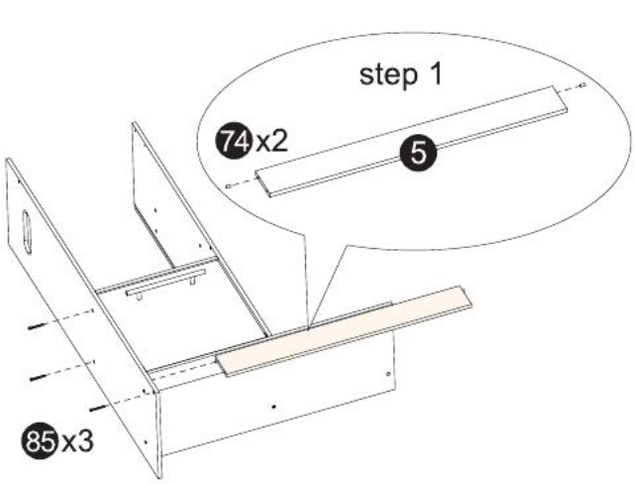

8

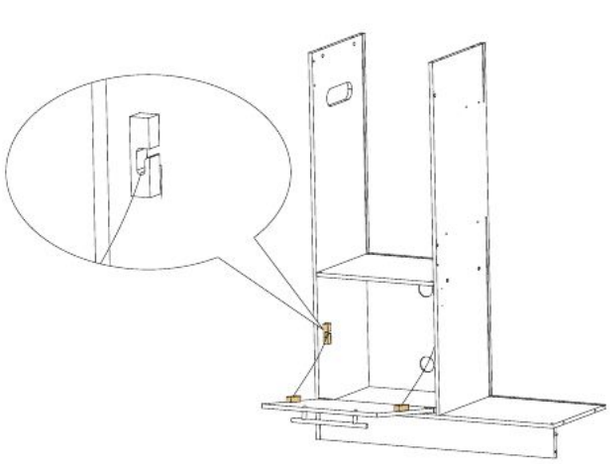

Assembly Instruction

9



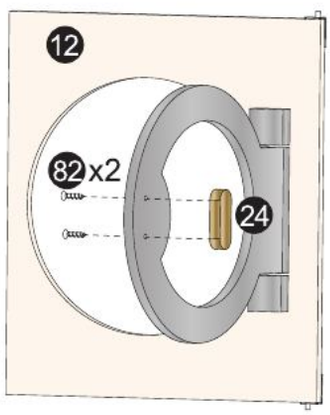

10

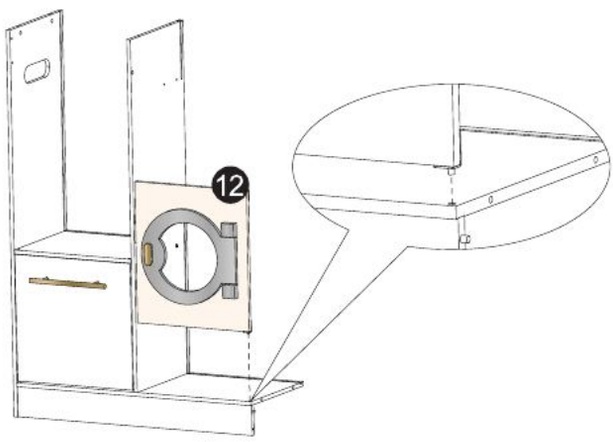

11

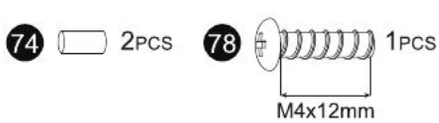

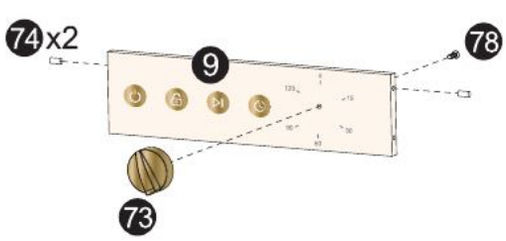

12

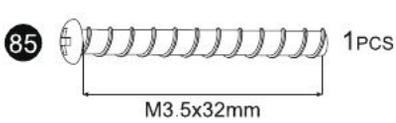

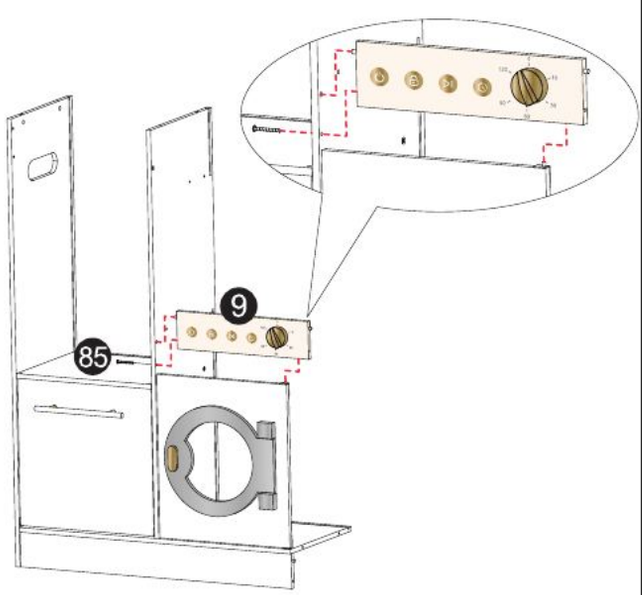

Assembly Instruction

13

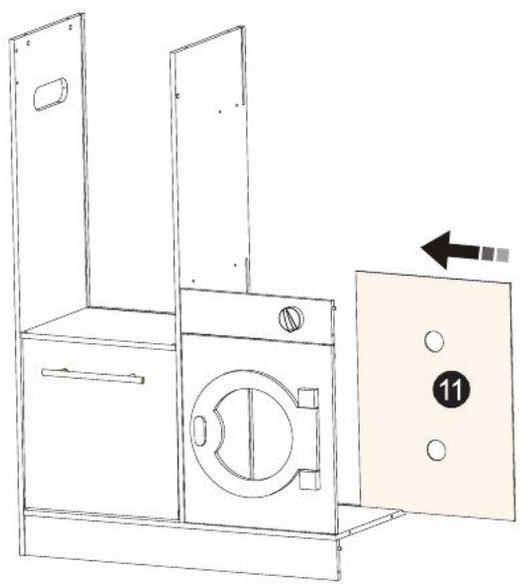

14

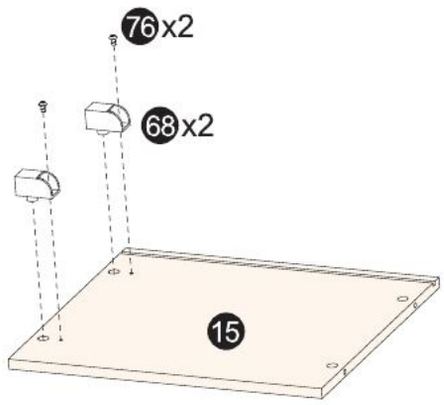

15

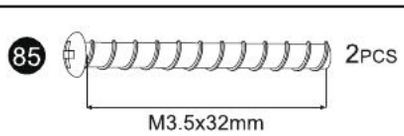

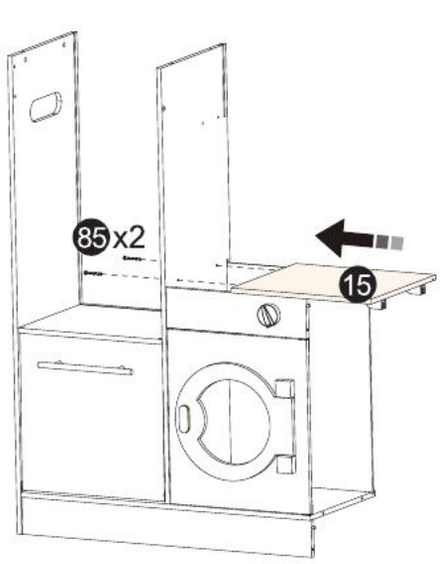

16

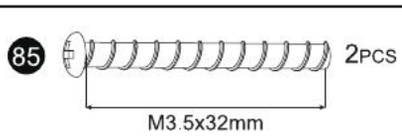

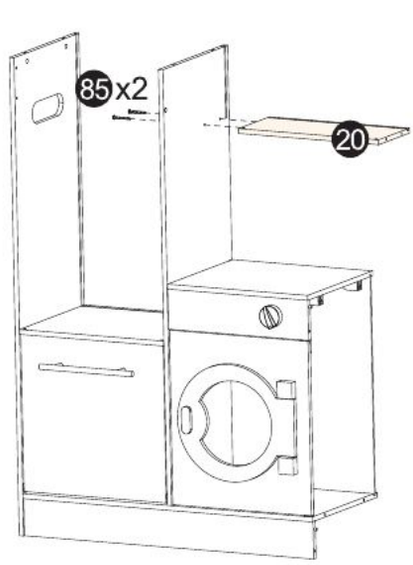

Assembly Instruction

17

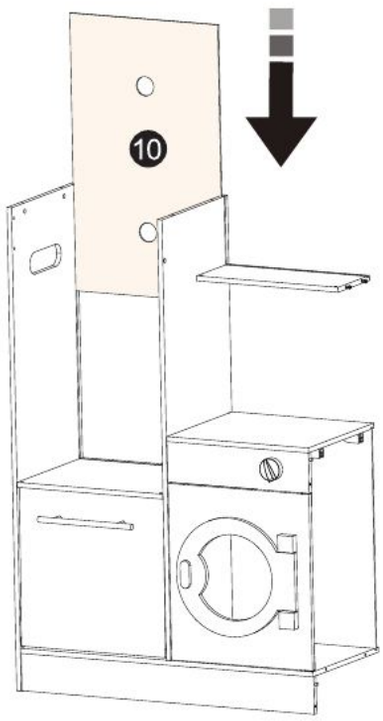

18

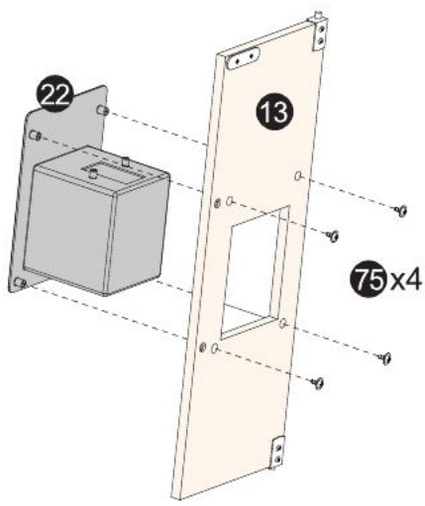

19



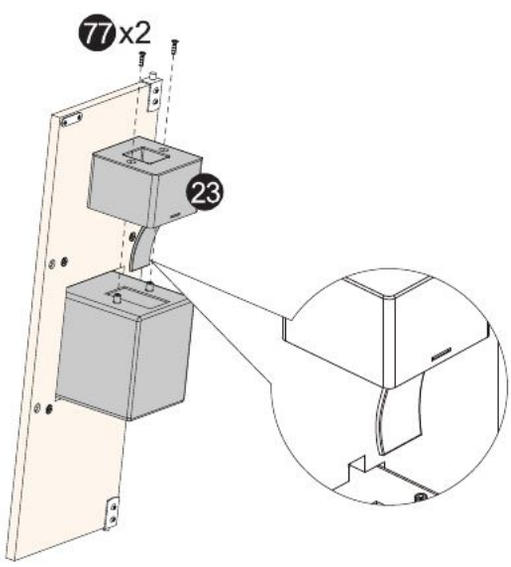

20

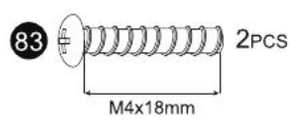

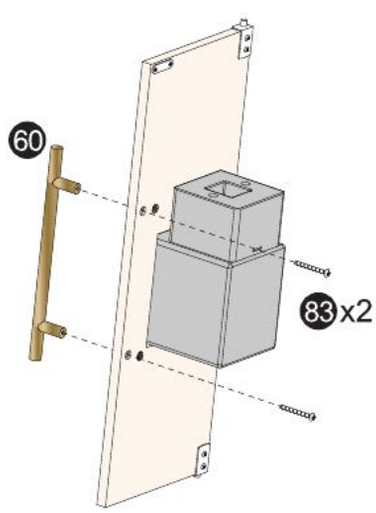

Assembly Instruction

21

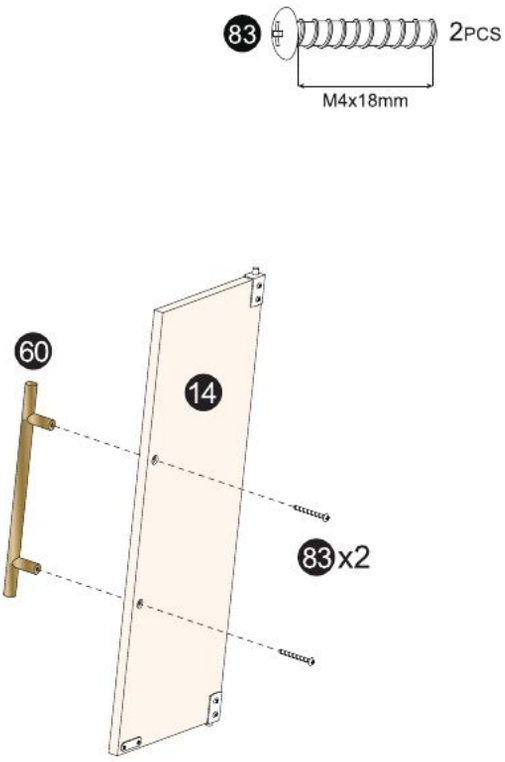

22

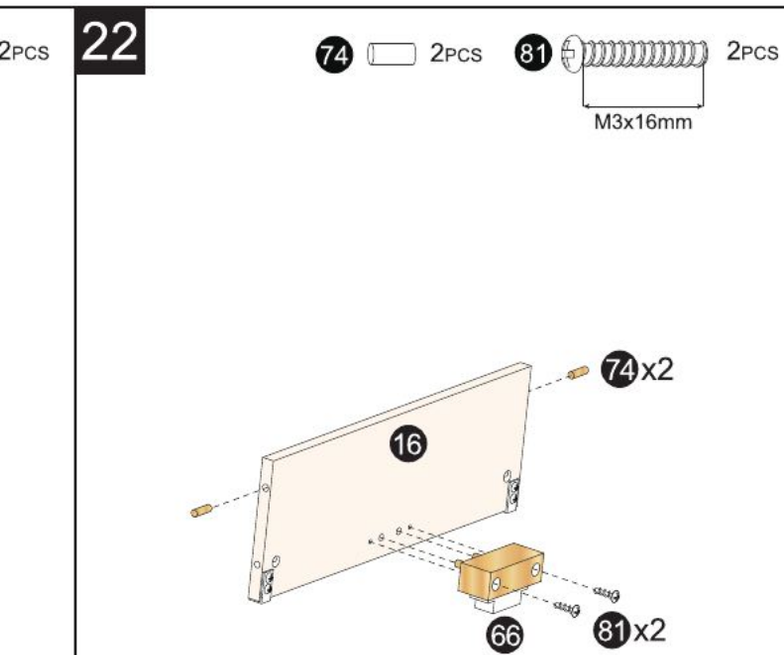

23

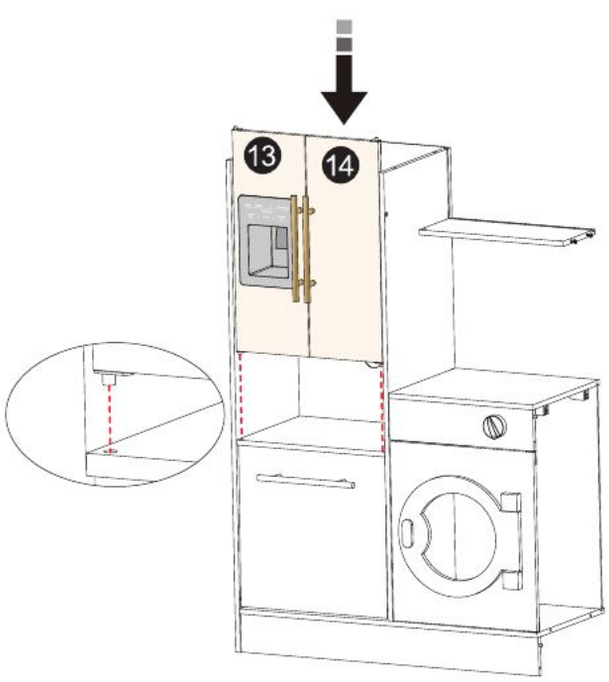

24

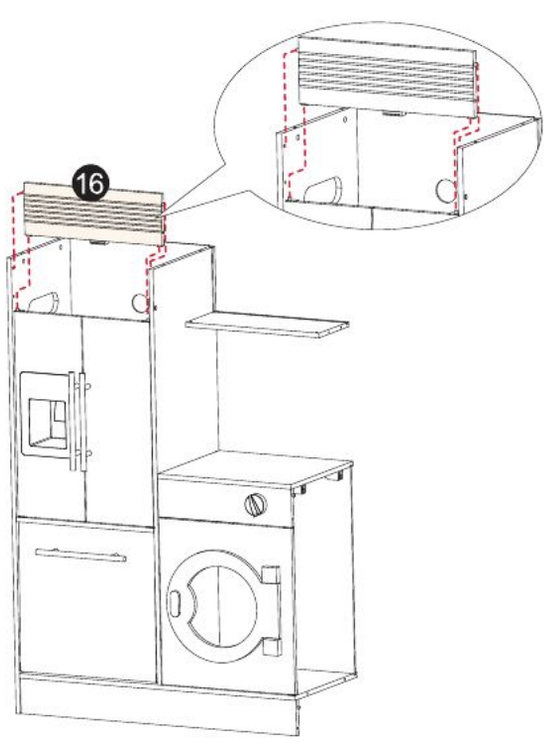

Assembly Instruction

25



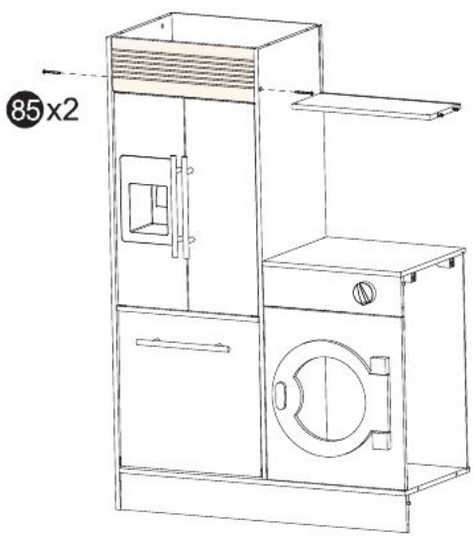

26

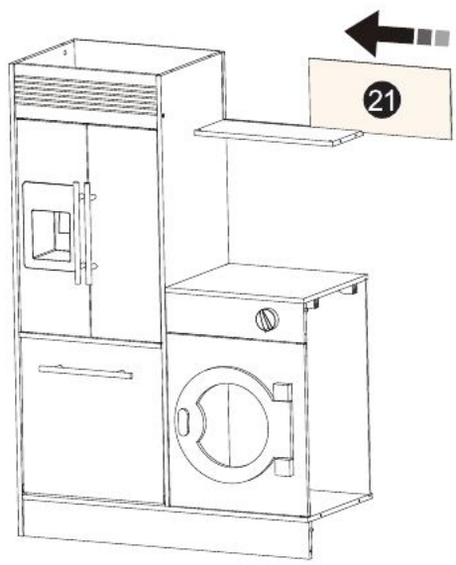

27

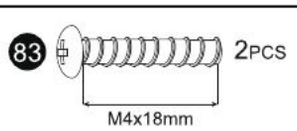

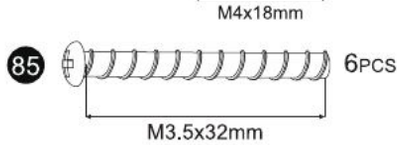

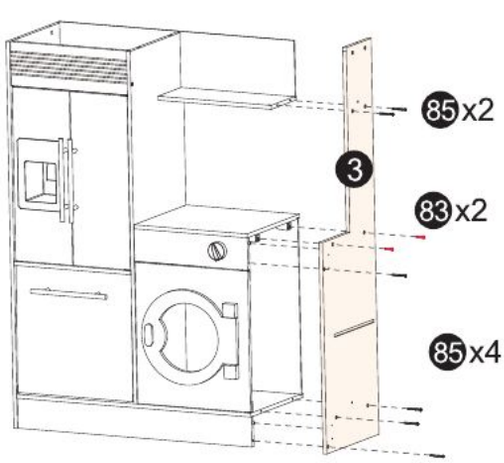

28

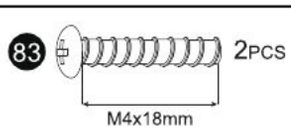

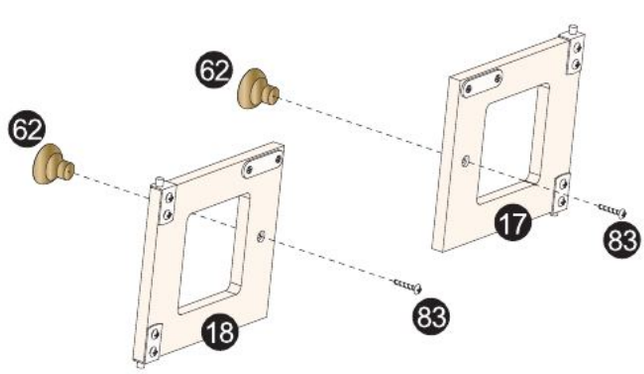

Assembly Instruction

29

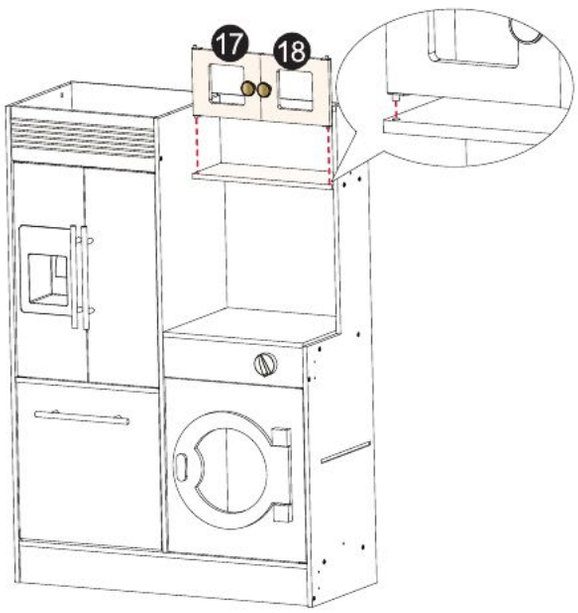

30



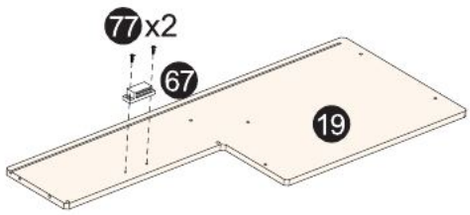

31



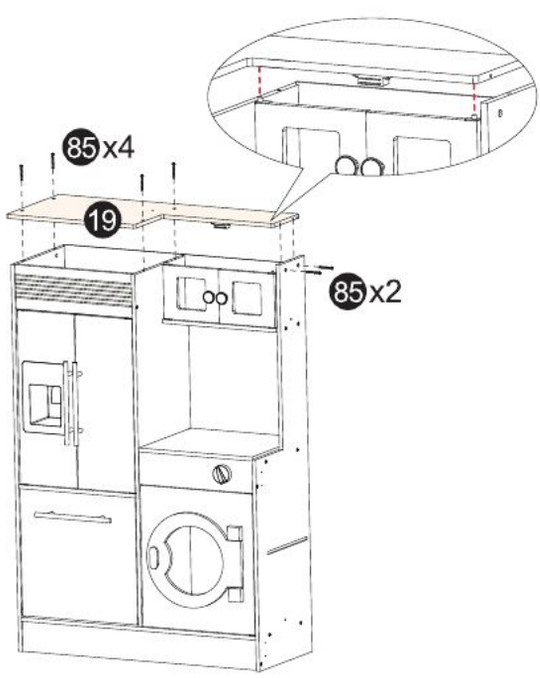

! Notice:

Align with holes of the door shaft.

32



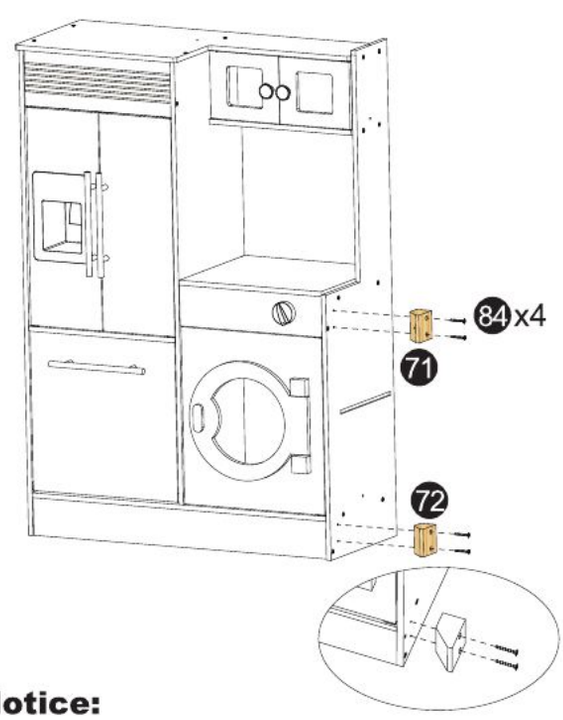

! Notice:

Pay attention to the direction of the part.

PART B

Assembly Instruction

1

77 4PCS

M3x12mm

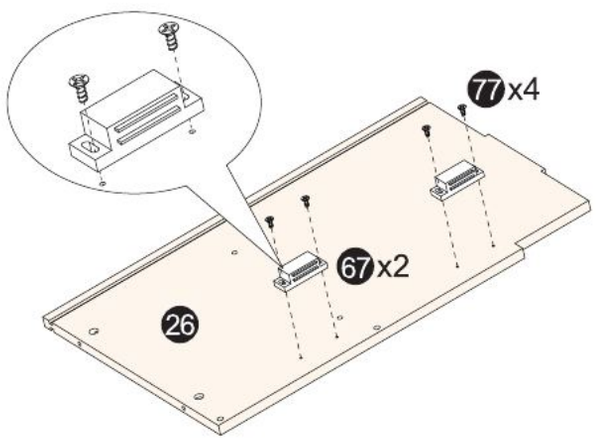

2

85 2PCS

M3.5x32mm

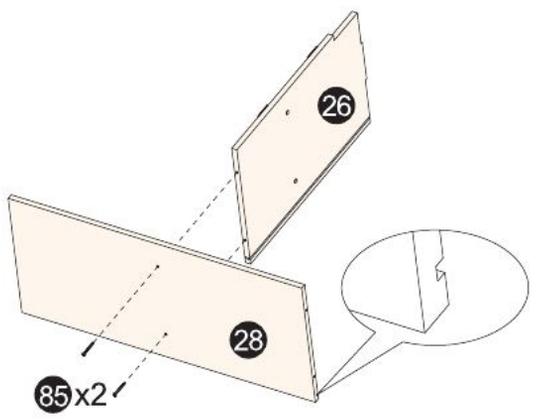

! Notice:

Pay attention to the direction of the groove.

3

85 2PCS

M3.5x32mm

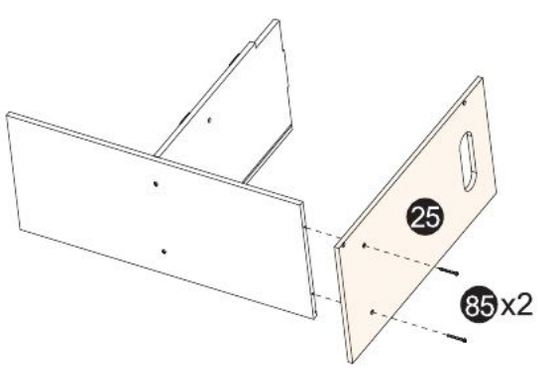

4

74 2PCS

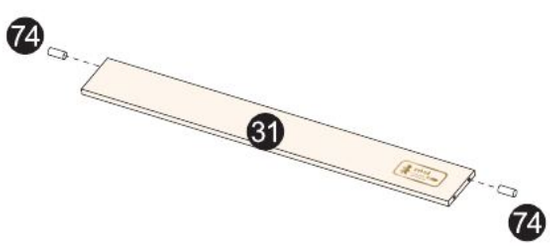

Assembly Instruction

5



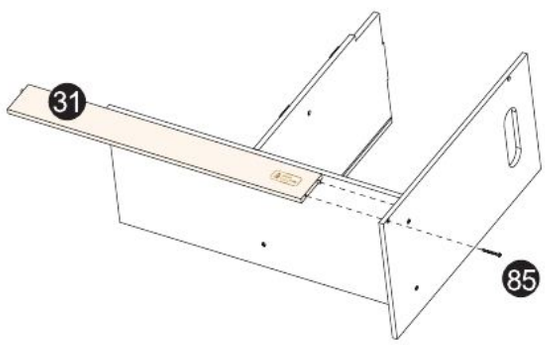

6



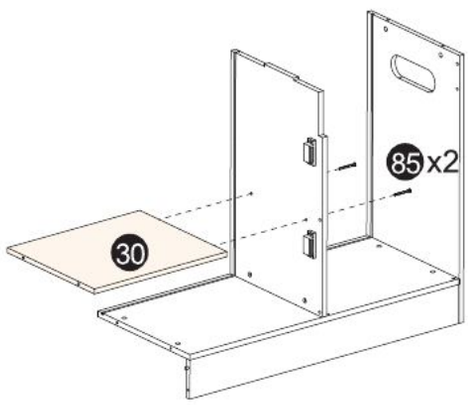

7

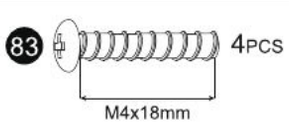

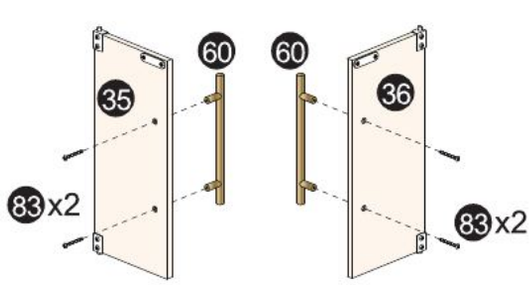

8

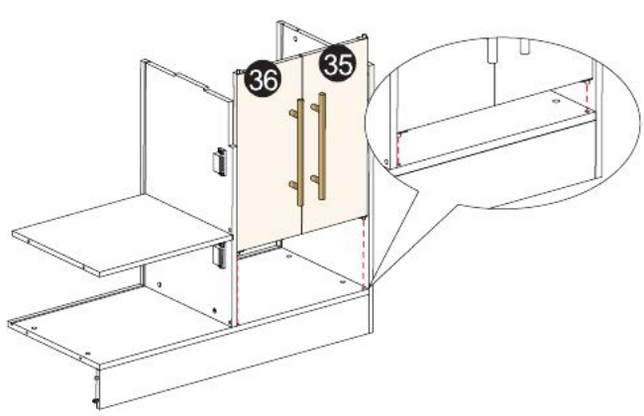

Assembly Instruction

9



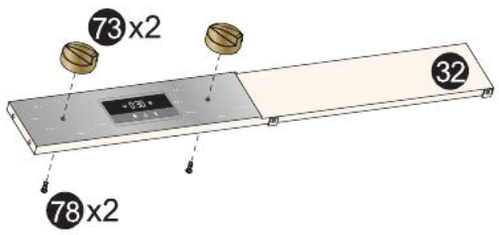

10



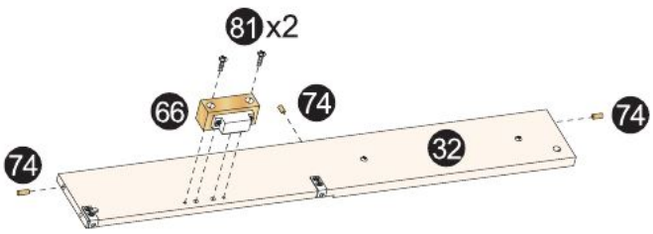

11

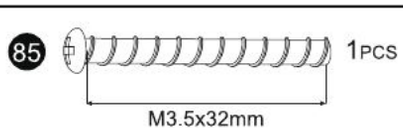

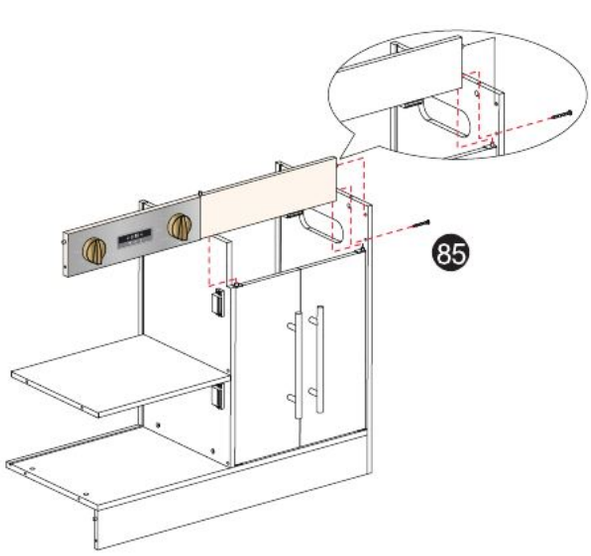

12



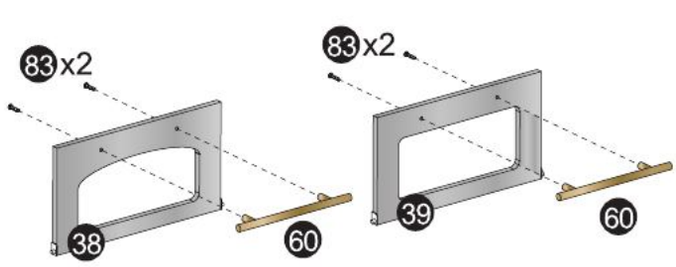

Assembly Instruction

13

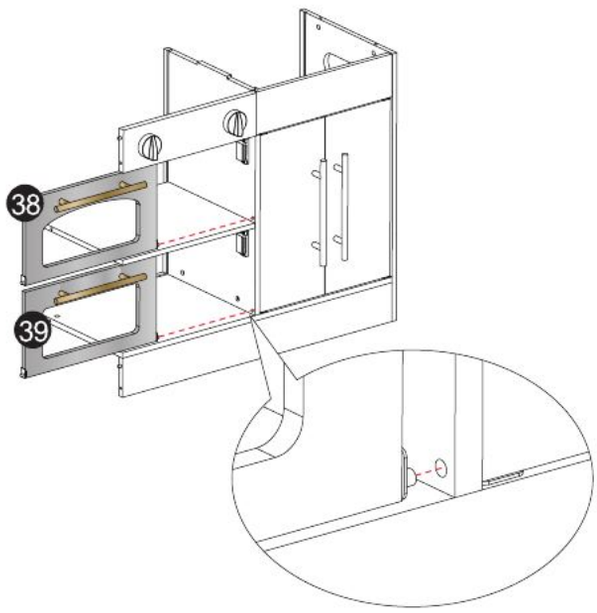

14

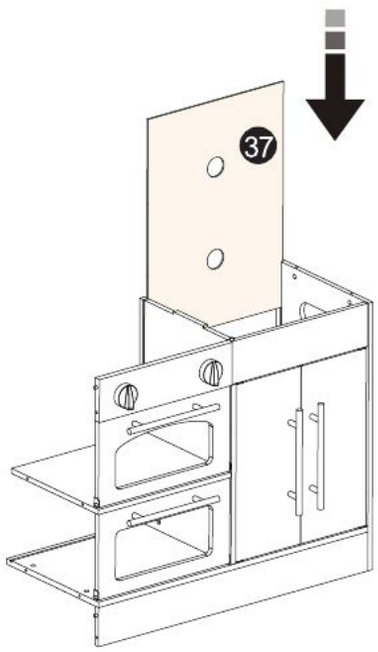

15

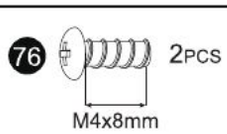

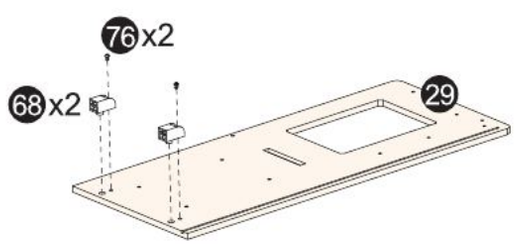

16

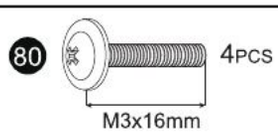

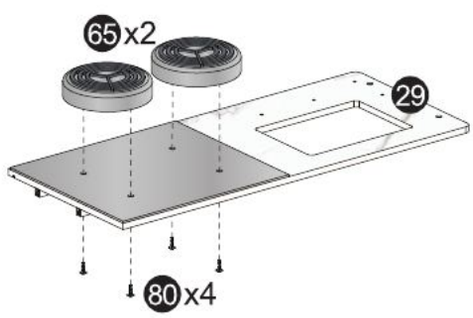

Assembly Instruction

17



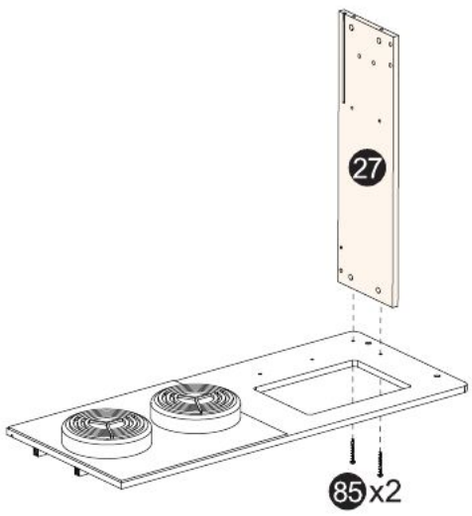

18



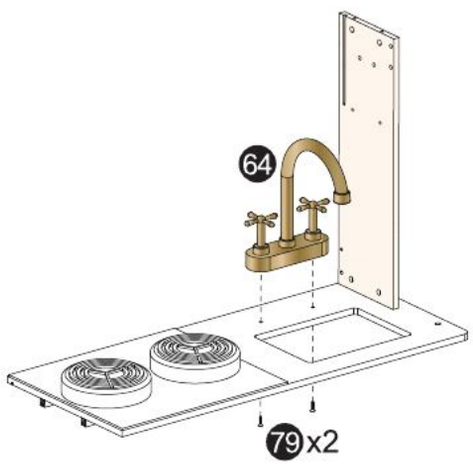

19

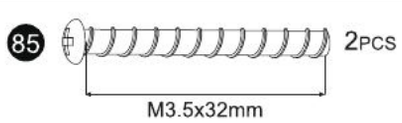

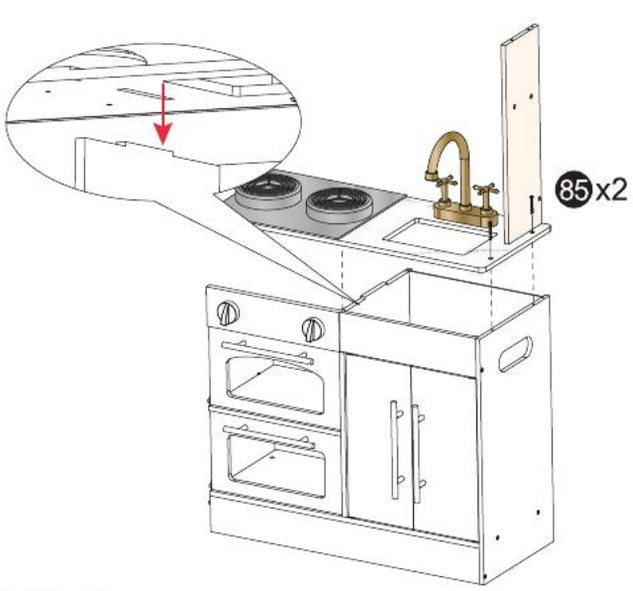

! Notice:

Align with the groove.

20

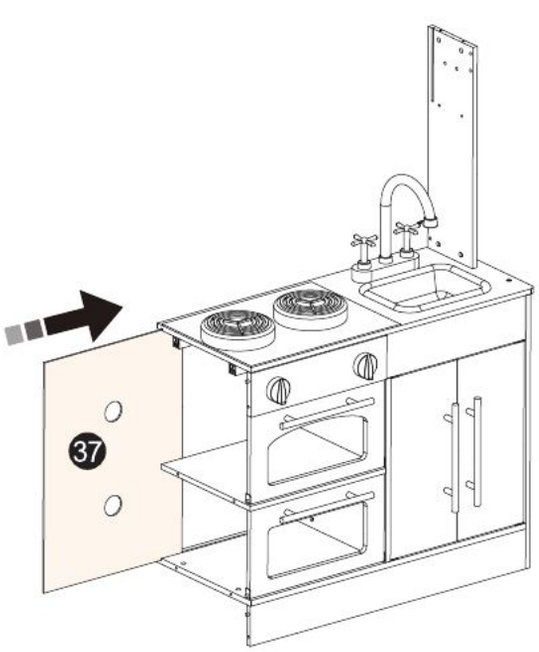

Assembly Instruction

21

74 2PCS

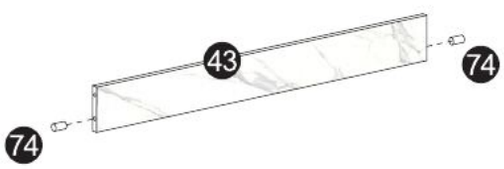

22

85 1PCS



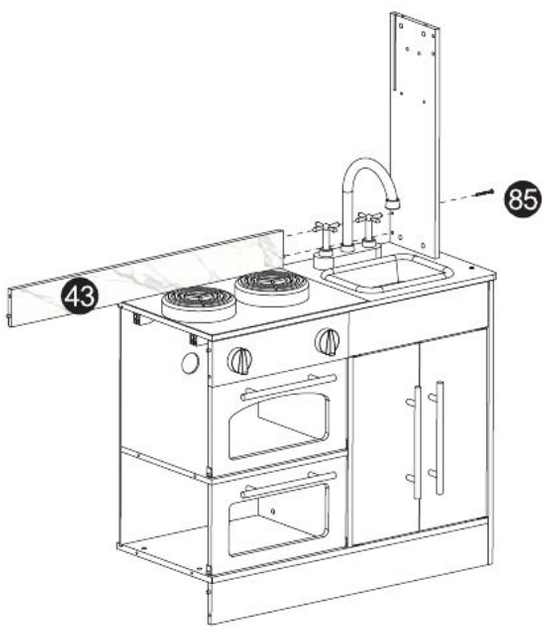

23

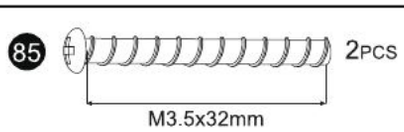

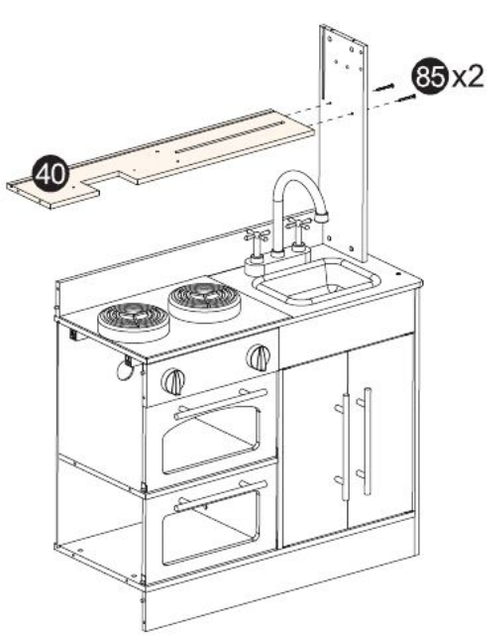

24

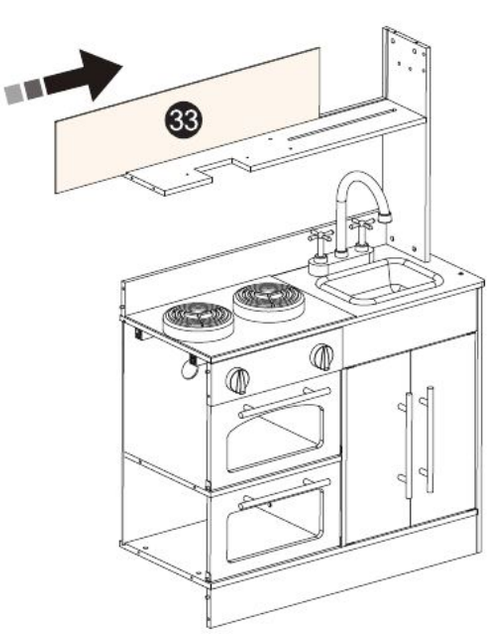

Assembly Instruction

25

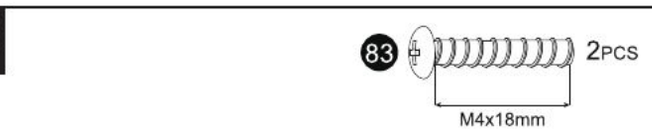

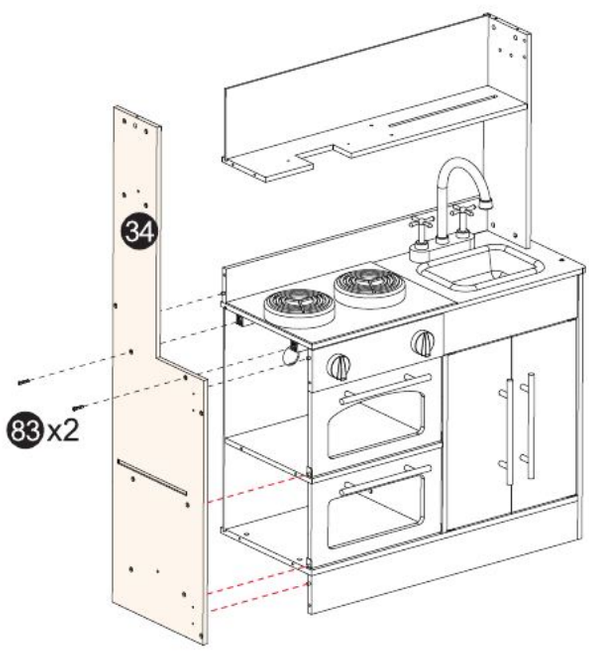

26



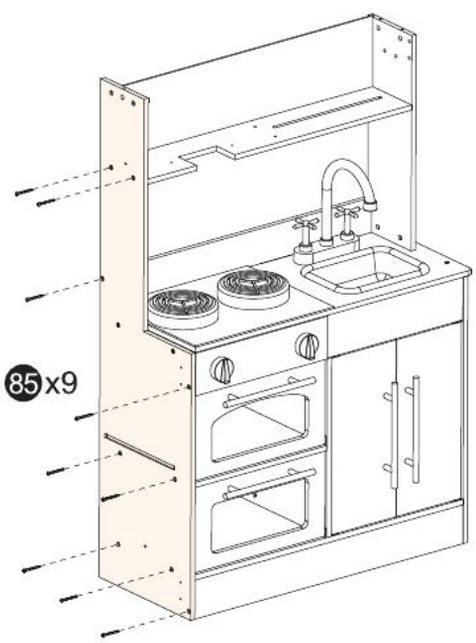

27

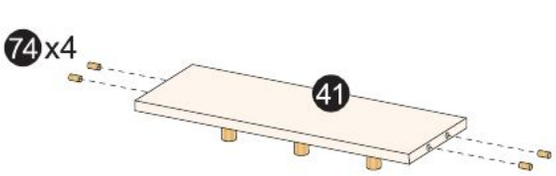

28

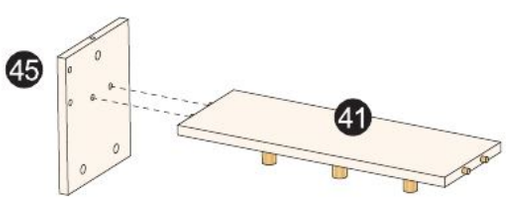

Assembly Instruction

29

74 4PCS

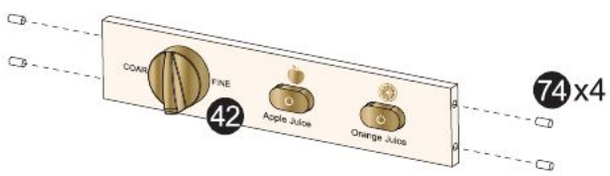

30

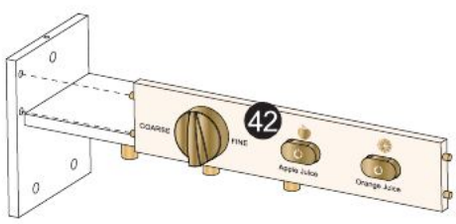

31

85 2PCS

M3.5x32mm

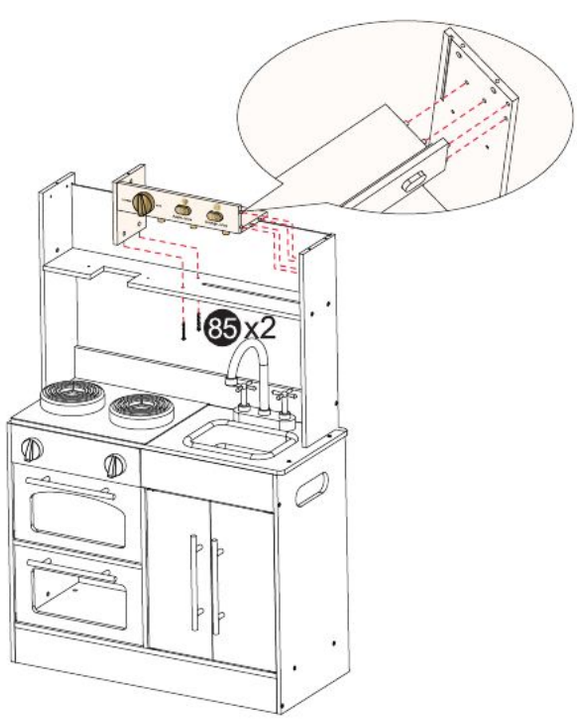

32

85 5PCS

M3.5x32mm

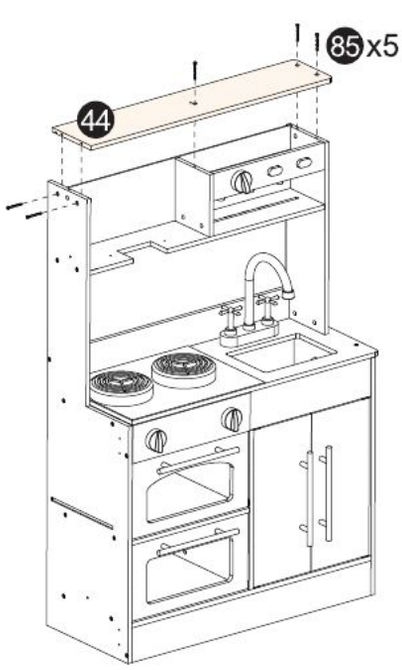

Assembly Instruction

33

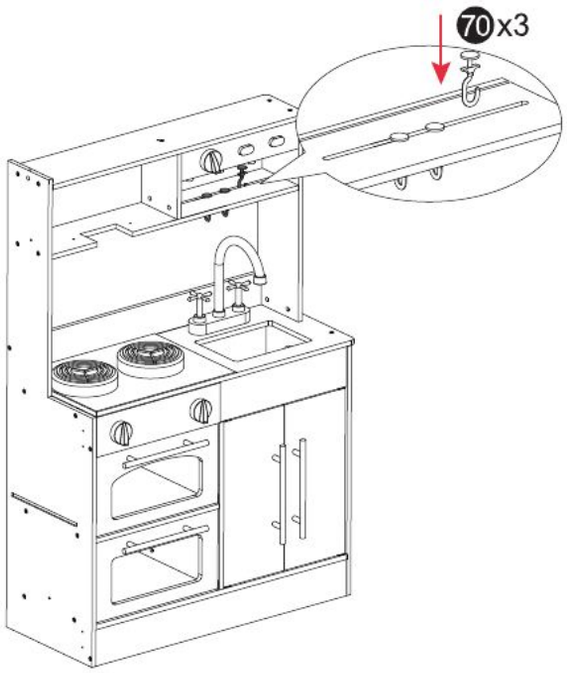

34

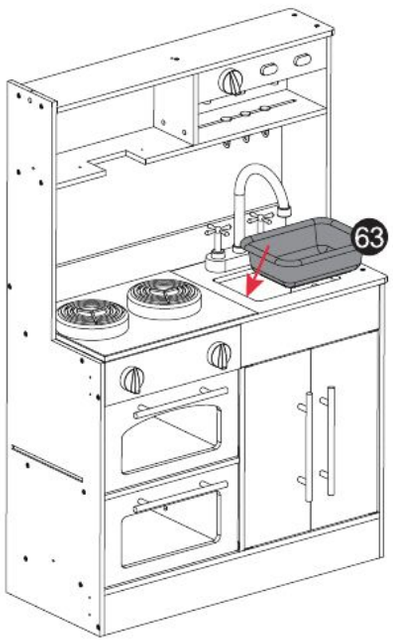

35

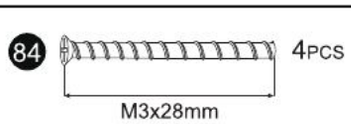

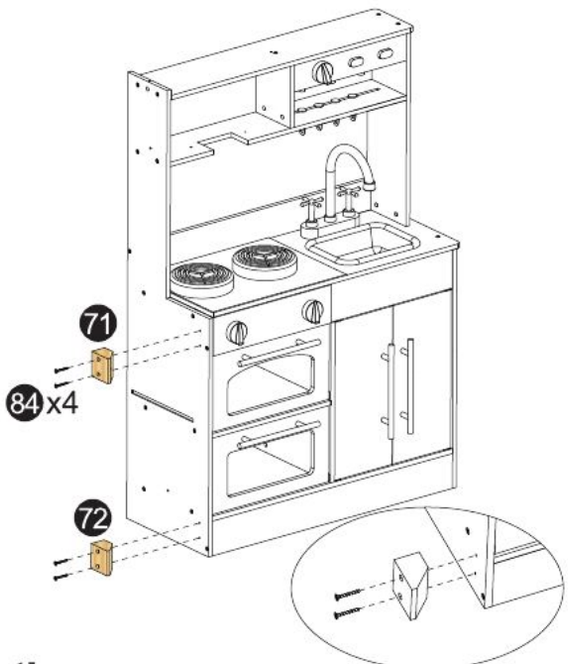

! Notice:

Pay attention to the direction of the part.

36

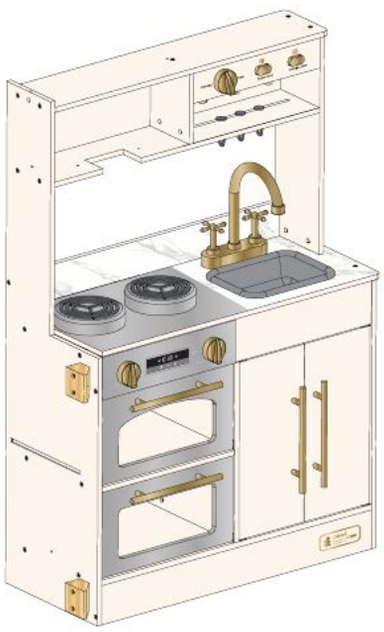

PART C

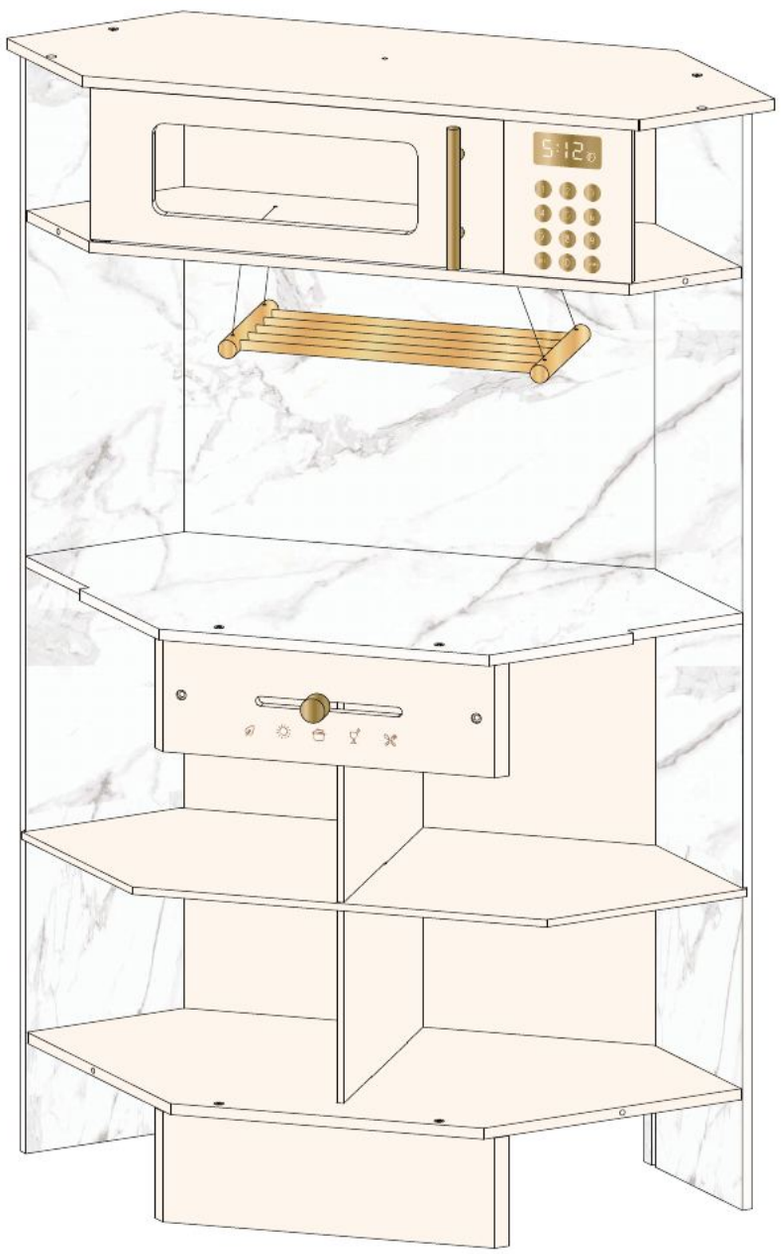

Assembly Instruction

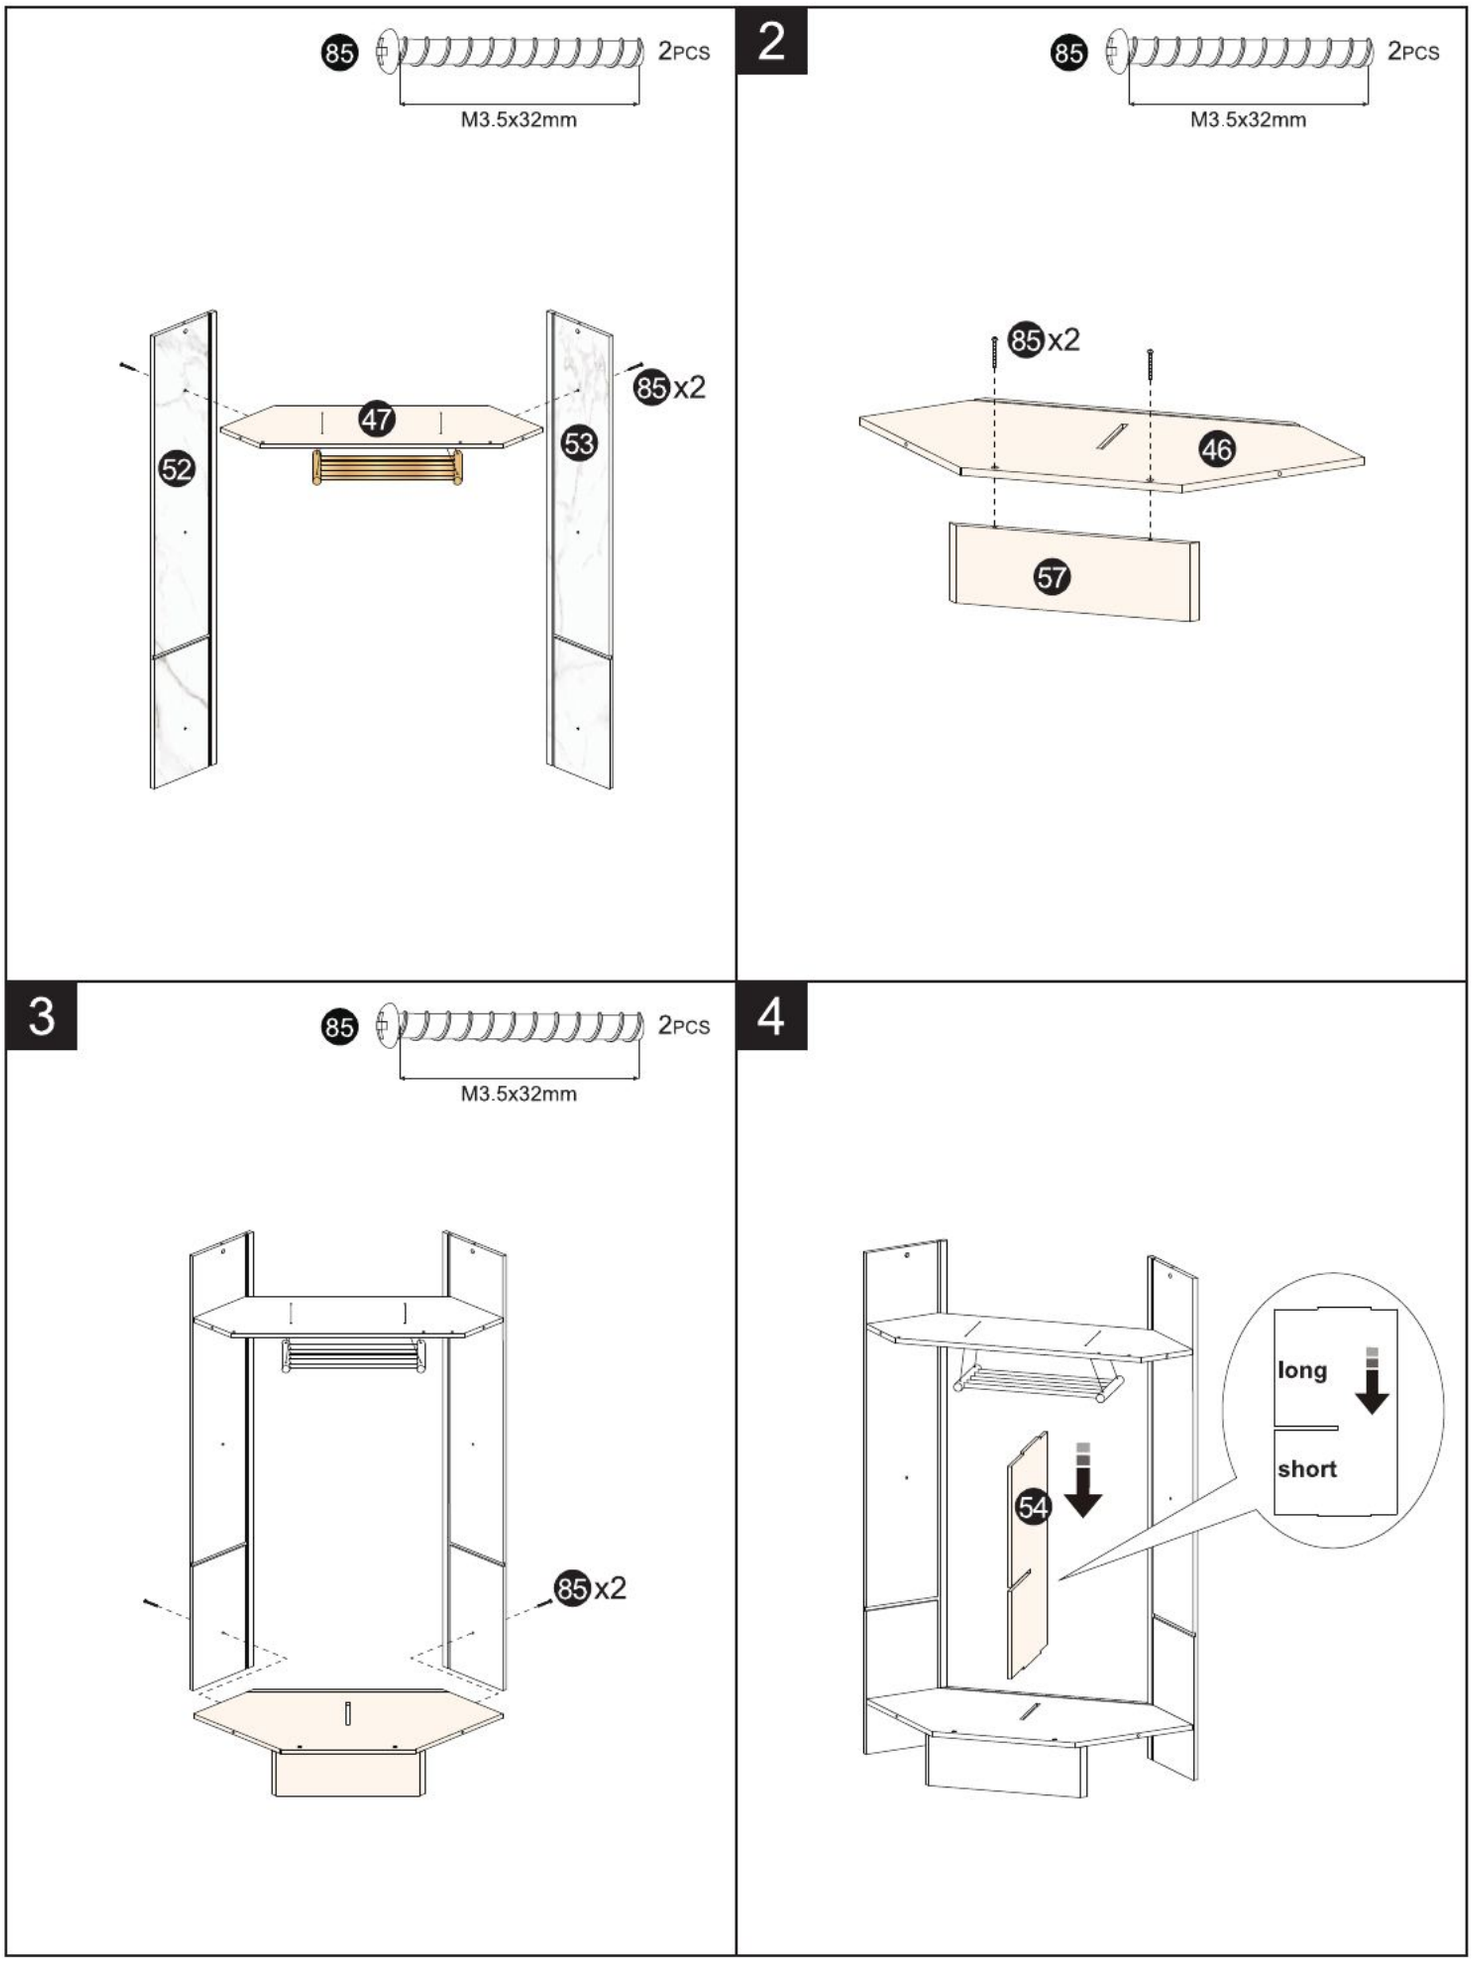

Assembly Instruction

5

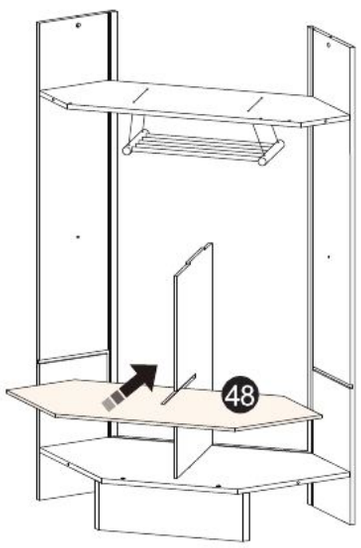

6

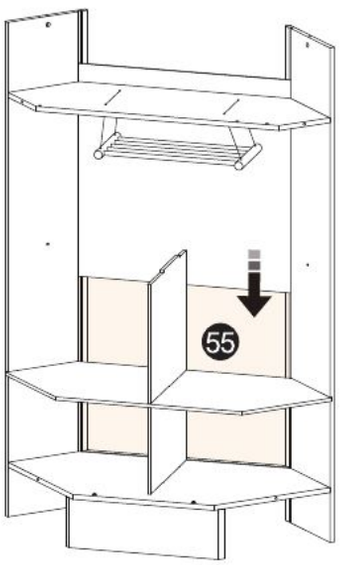

! Notice:

Ensure board 55 is assembled to the bottom.

7

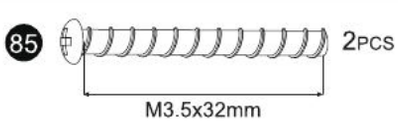

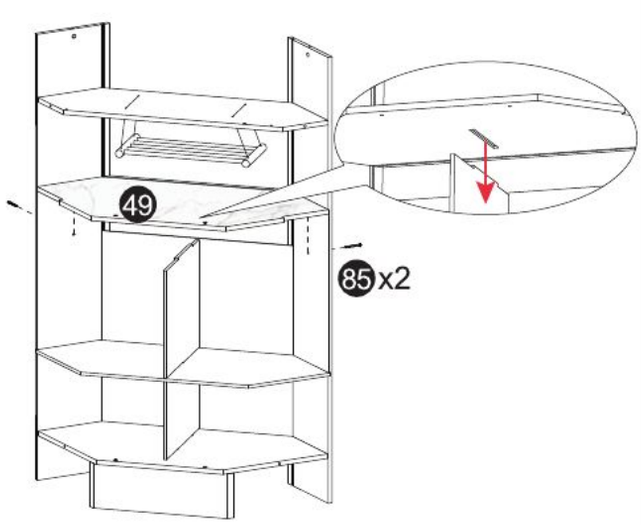

8

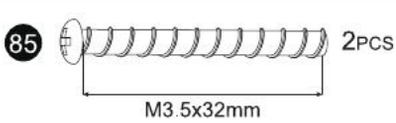

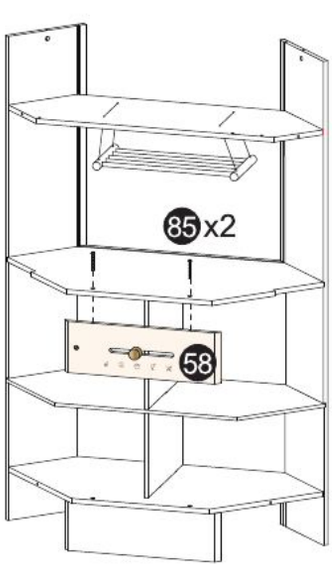

Assembly Instruction

9

11

74 4PCS

10

83 2PCS

M4x18mm

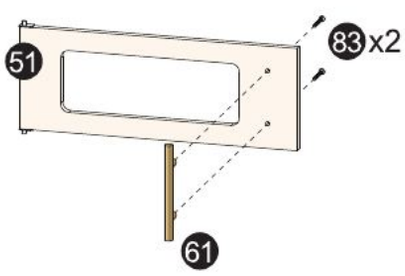

12

77 2PCS

M3x12mm

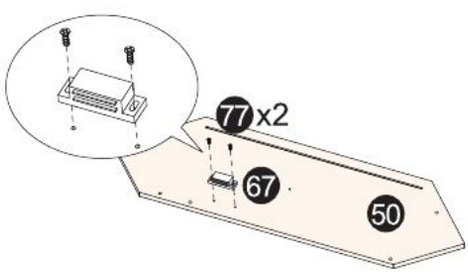

12

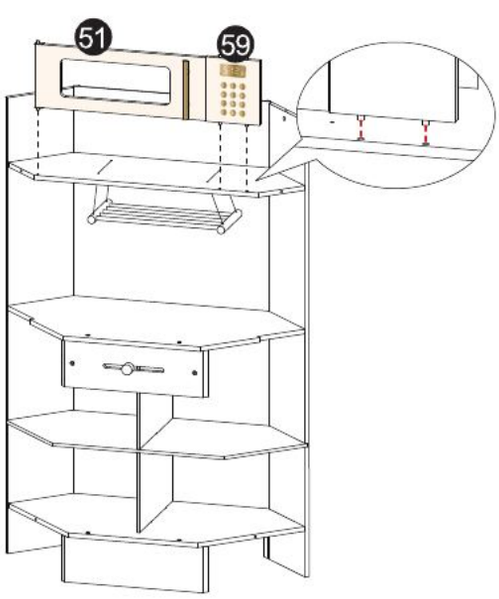

12

85 2PCS

M3.5x32mm

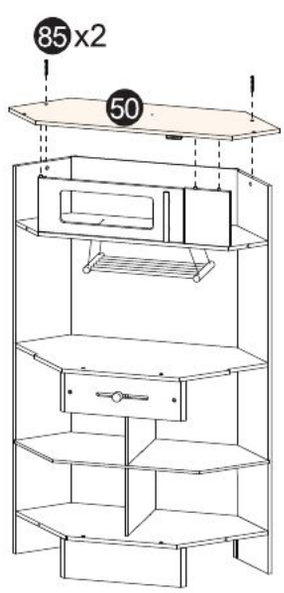

PART D

1



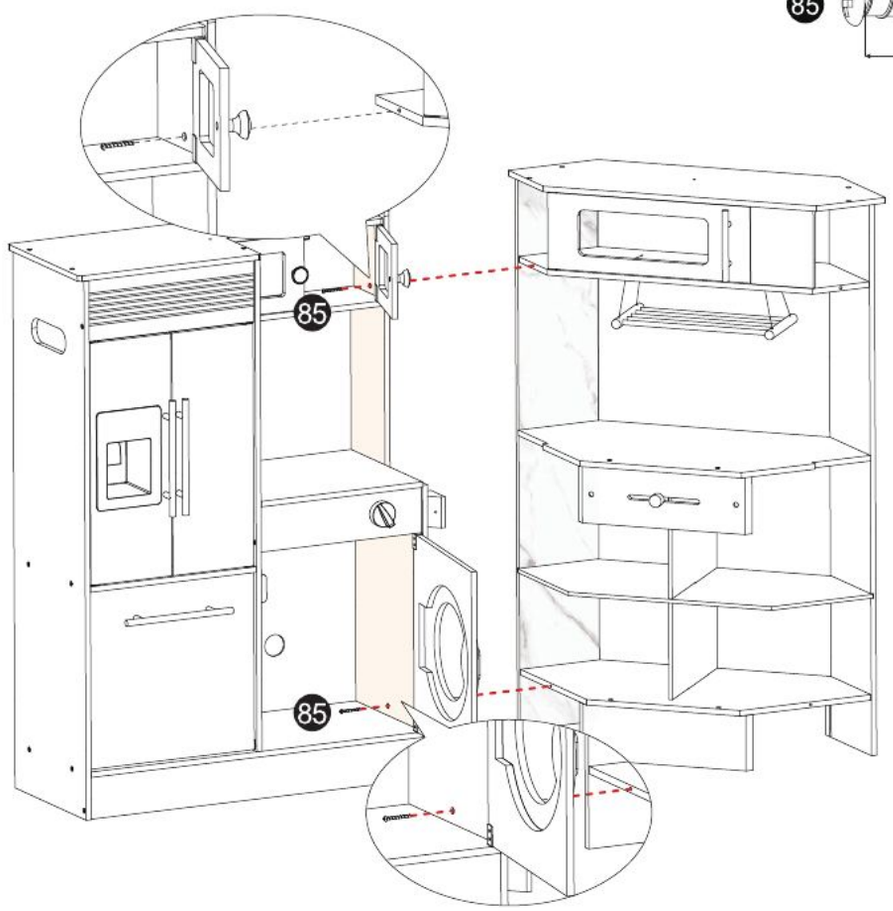

2

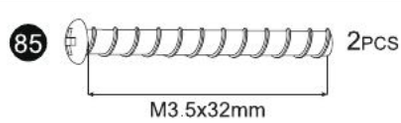

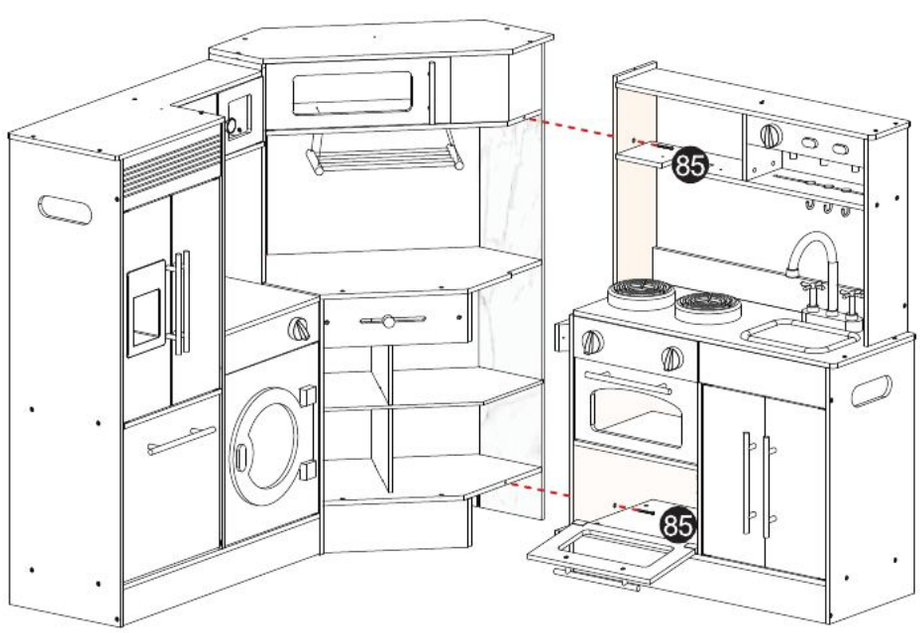

Assembly Instruction

3



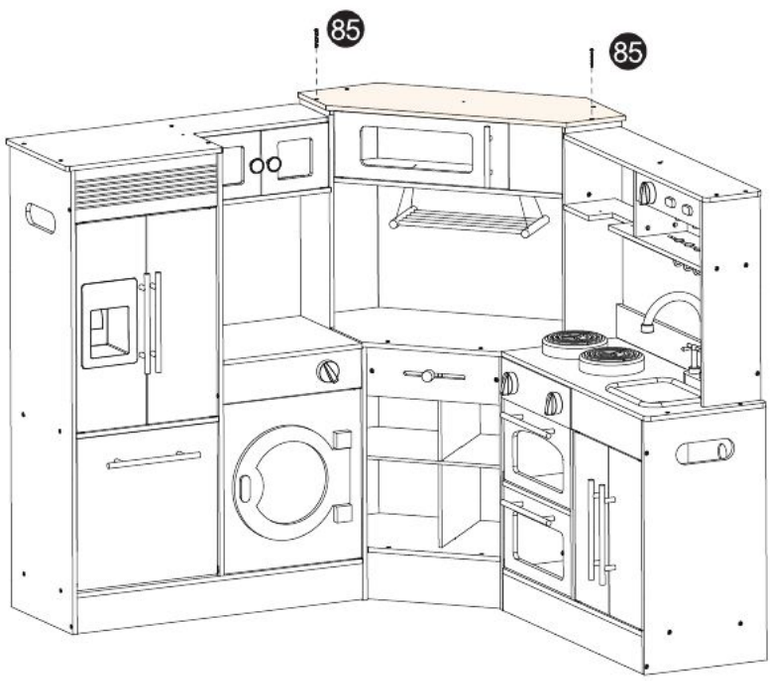

4

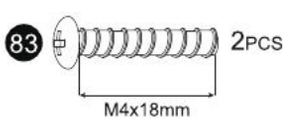

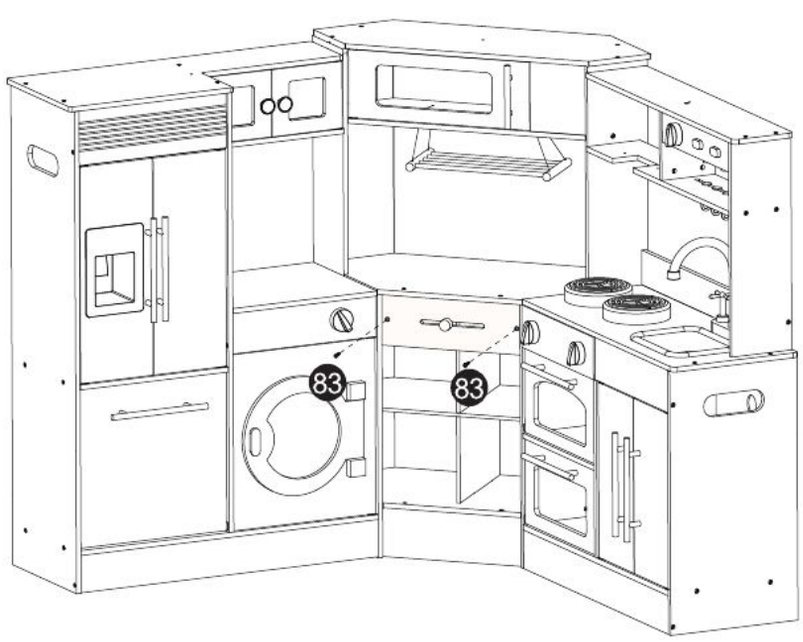

Assembly Instruction

5

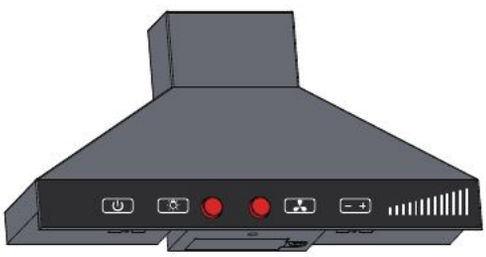

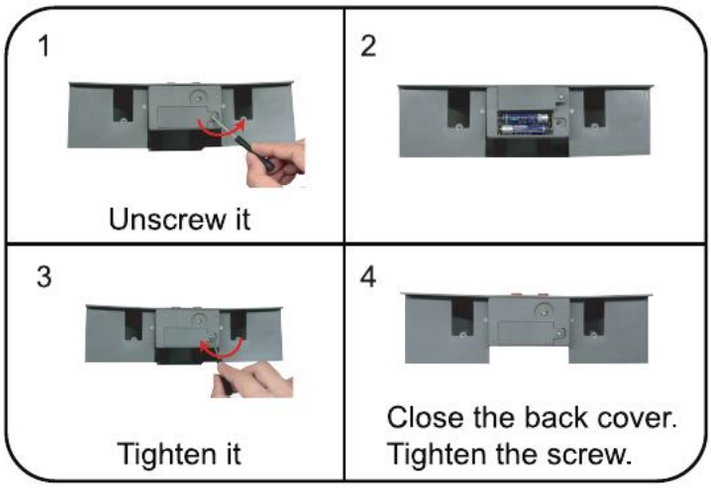

! Notice:

Use the screwdriver to loosen the screw.
(Do not remove the screw).Open the back cover.
Install 2"AA/LR6/AM3 1.5V" batteries provided by yourself.

6



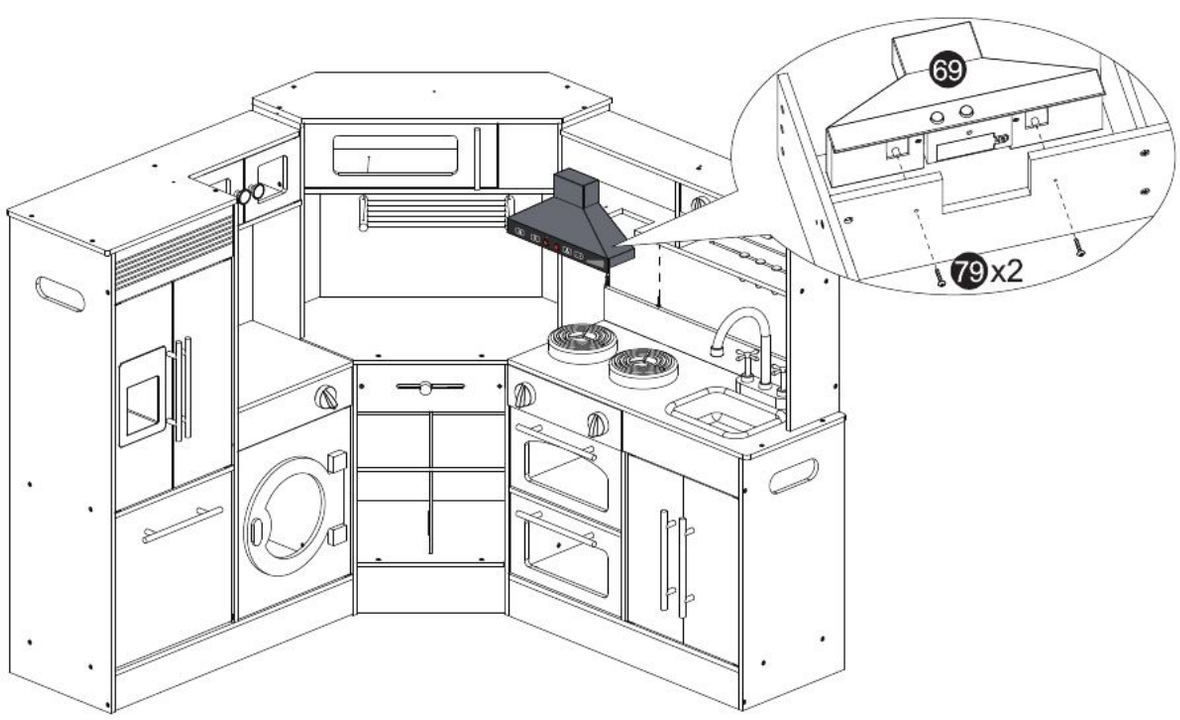

Assembly Instruction

7

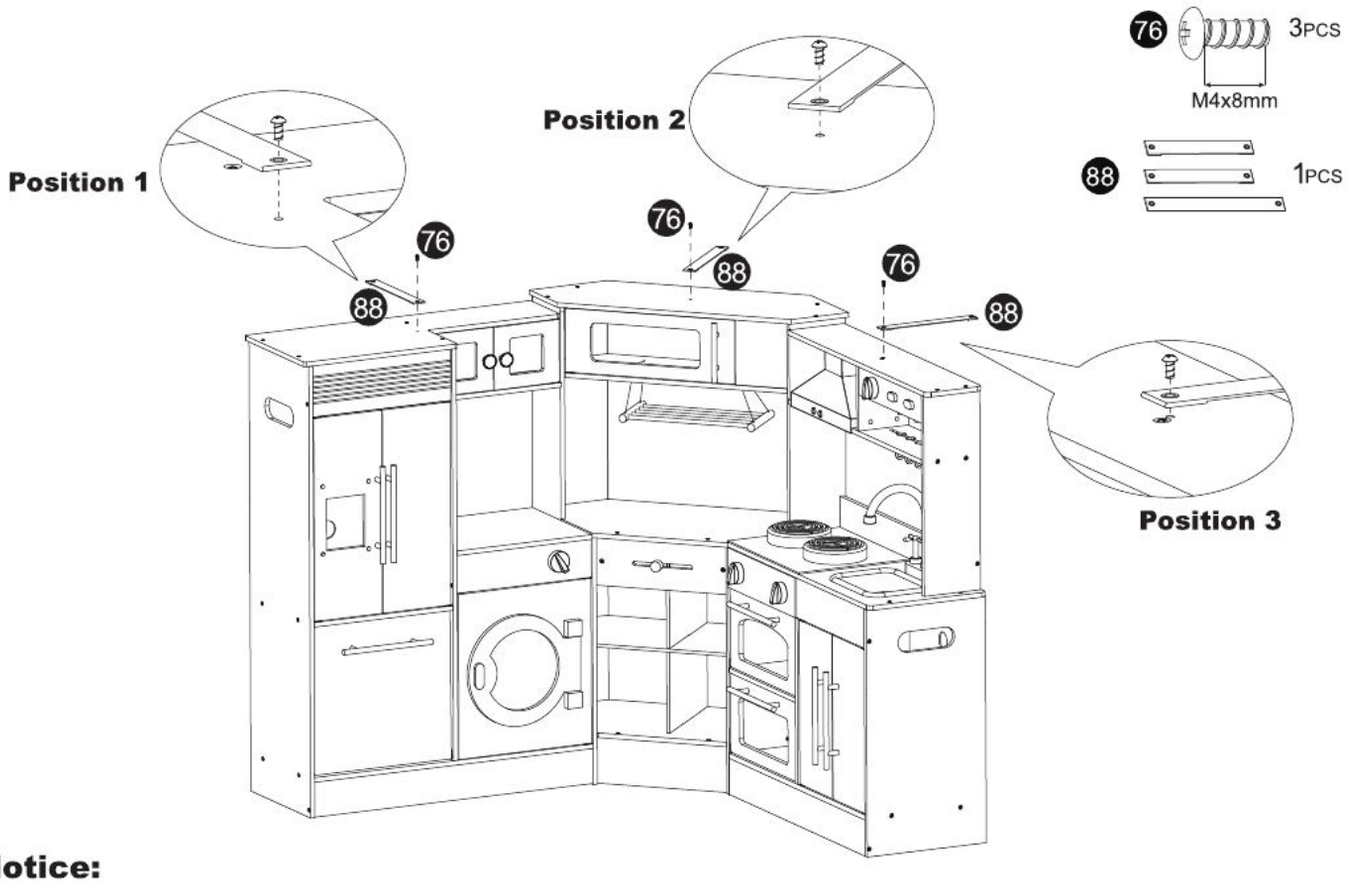

! Notice:

The anti-tipping size device is installed according to personal needs.

8

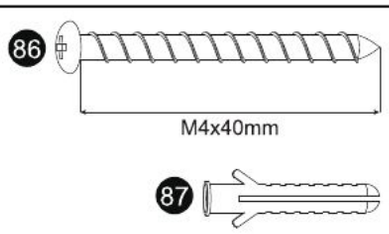

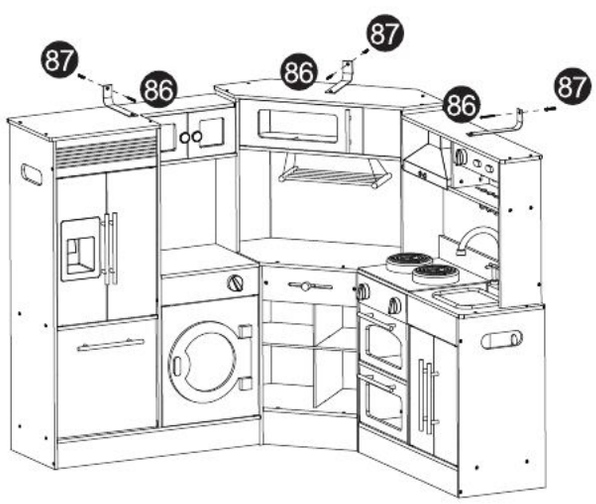

! Notice:

Assemble one or two anti-toppling devices if necessary.

! Notice:

The anti-tip assembly can be secured on the wall to prevent the kitchen from tipping during play.
It is recommended to place the kitchen against the wall during use.
Avoid placing the kitchen in open spaces and prevent your child from climbing on it.
The hardware accessories are primarily suitable for being assembled on walls shown in the instruction.
For other situations, consult your local hardware store to choose more suitable accessories.

Instruction of anti-tip assembly

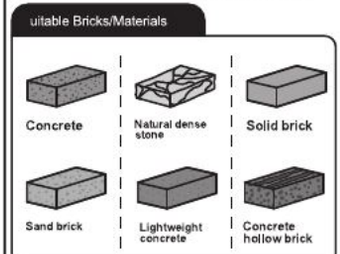

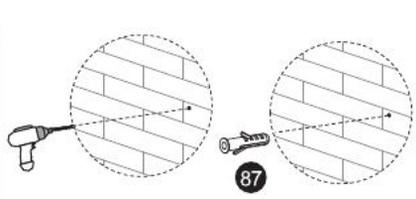

Use the electric drill to drill holes on marks.
The punching depth should be longer than the part to be inserted (the expandable tube 87)
Place the expandable tubes 97 into the drilled holes.
Finally,screw 86 into the hole for the expandable tubes.

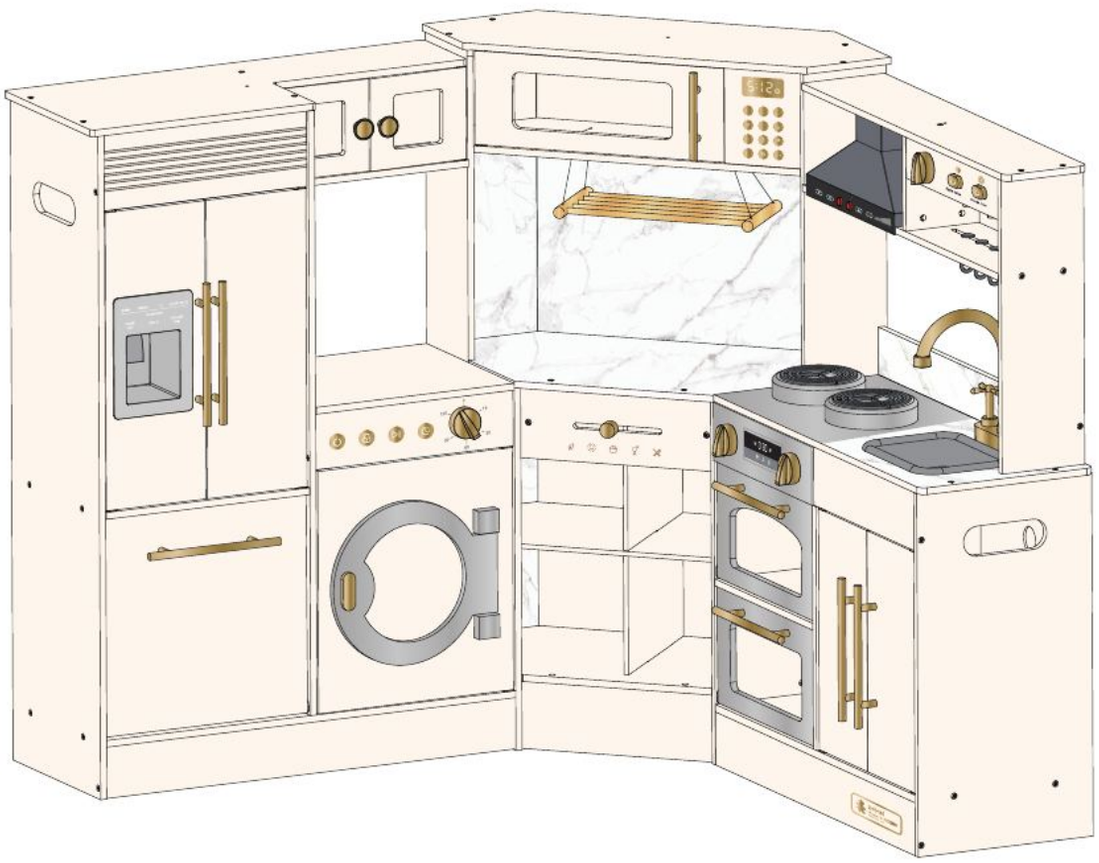

robud

www.robud.com