Farm Walker (WRP34)

Assembly Instruction

*Please follow this instruction to avoid assembly errors.
*For customer service, please contact ***E-mail: shop@robud.com***

robud Designed By ROBOTIME www.robud.com

98.1WRP34.150





⚠ WARNING:

·Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
·After opening the package, please keep the packaging items such as plastic film away from babies and children to prevent choking hazard.

MAINTENANCE:


·Please clean the product with dry soft cloth,don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
·Please keep the product away from fire, substances flammable and humid environments to prevent damage.
·Please keep the product away from water,and don't put liquid in the toy sets.

Product Parts and Hardwares


① 	② 	③ 	④ 	⑤ 
x1	x1	x1	x1	x1
⑥	⑦	⑧	⑨	⑩
x1	x1	x1	x1	x1
⑪ 	⑫ 	⑬ 	⑭ 	⑮ 
x2	x2	x1	x1	x2
⑯ 	⑰  M3x20mm	⑱  M3.5x35mm	⑲  M6x40mm	
x1	x1	x17	x2	

⑳ 	㉑ 	㉒ 	㉓	㉔ 	㉕ 	㉖ 
x2	x2	x6	x4	x2	x1	x1


Accessories

				
x1	x1	x1	x1	x1
				
x1	x1	x1	x1	x1

1

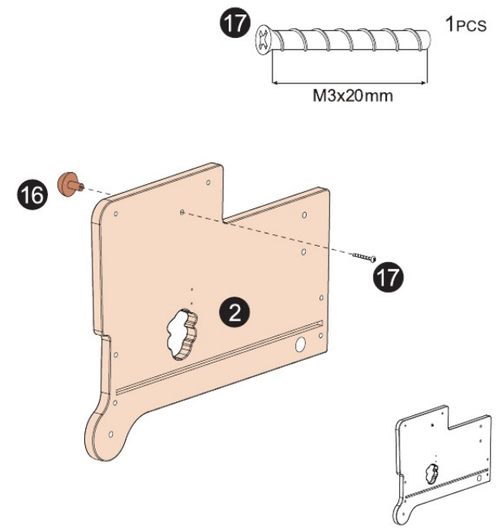


2

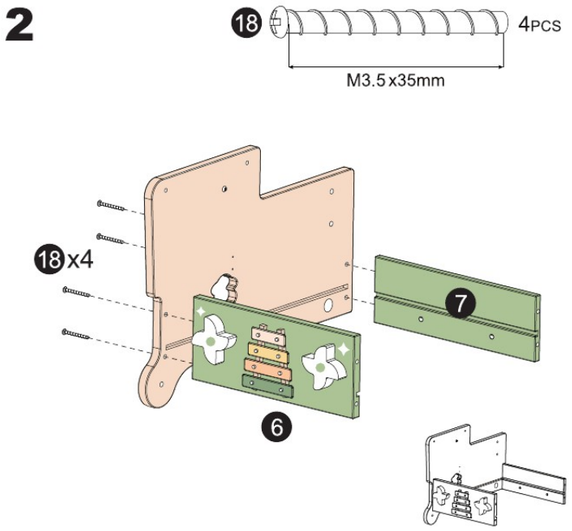


3

4

5

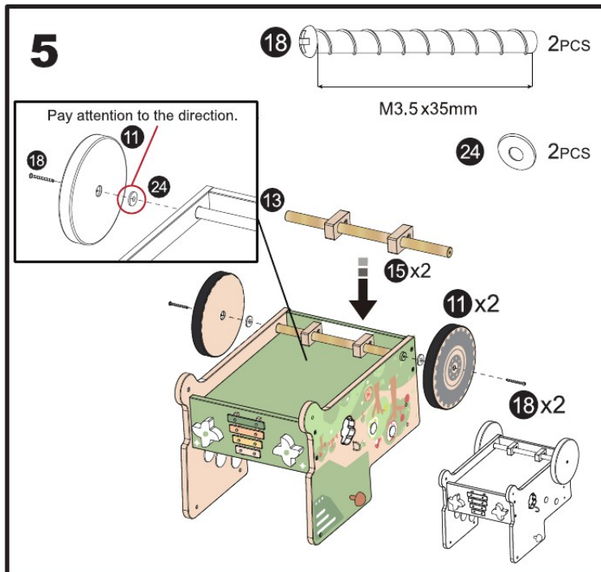



6

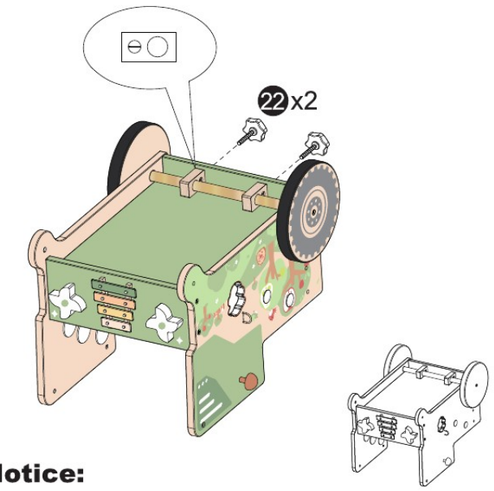


! Notice:
Adjust the knob to control the speed.

7

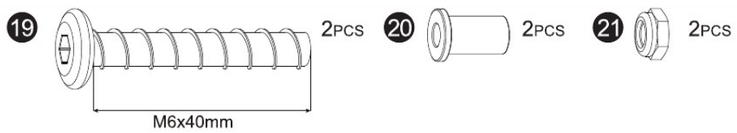


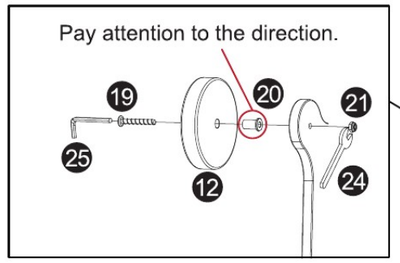

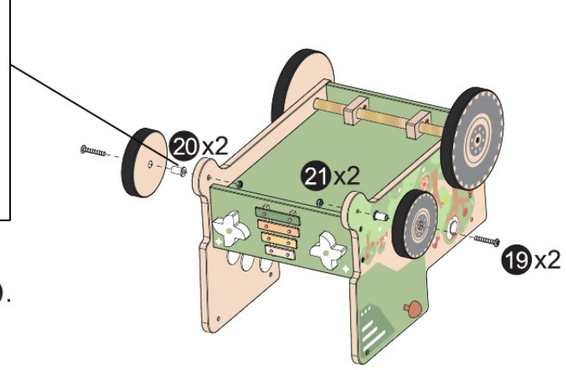


! Note:
Assemble screws with 24 and 25.


8

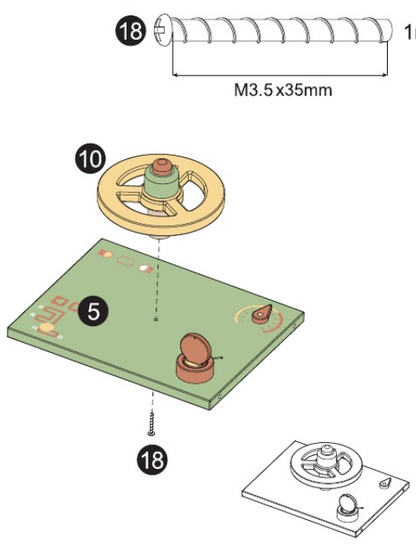


9

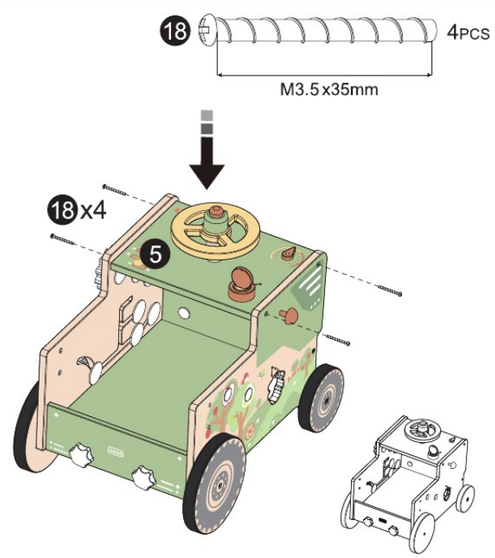


10

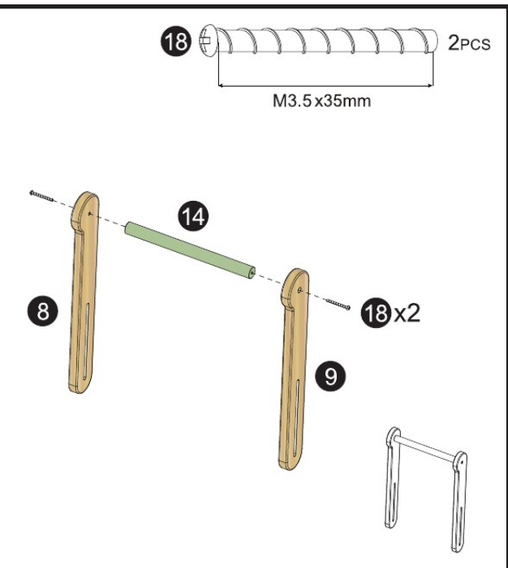


11

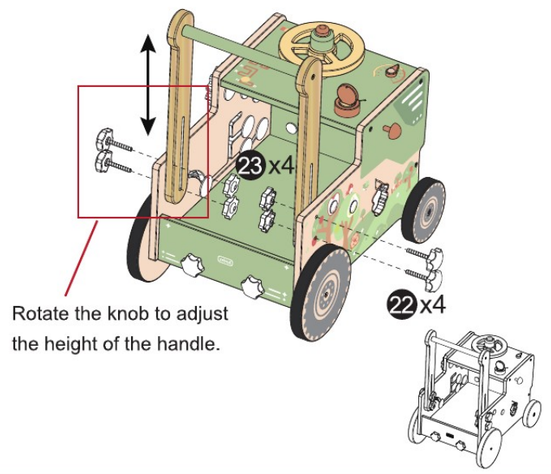


12

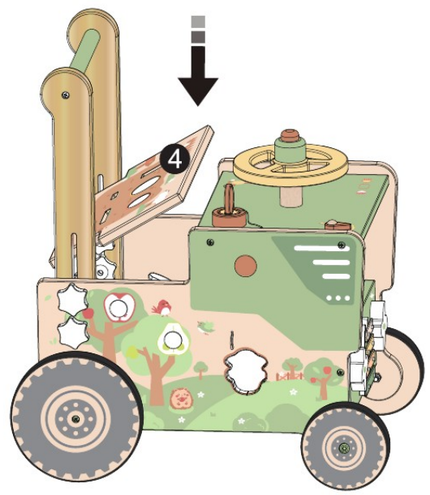


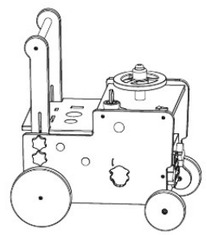

13

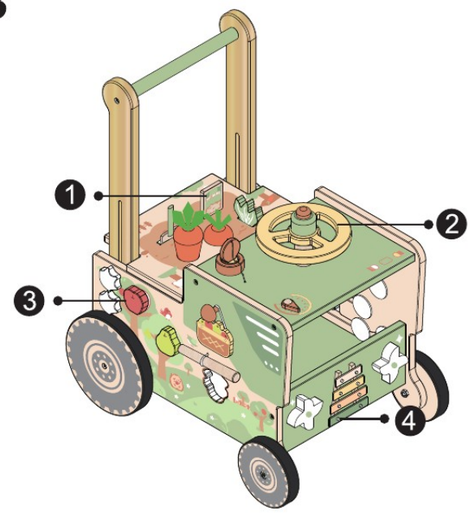

✦ Play Instructions

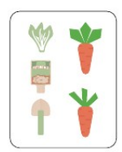1.  Insert the corresponding planting accessories into the hole.
2.  Press to activate the horn sound.
3.  Pick the vegetables and fruits from the board.
4.  Tap to play musical notes.