材质： 157g铜版纸
尺寸：140X140MM
装订方式:扇形折
颜色:四色印刷

User Manual

Automatic Pet Feeder

PF01

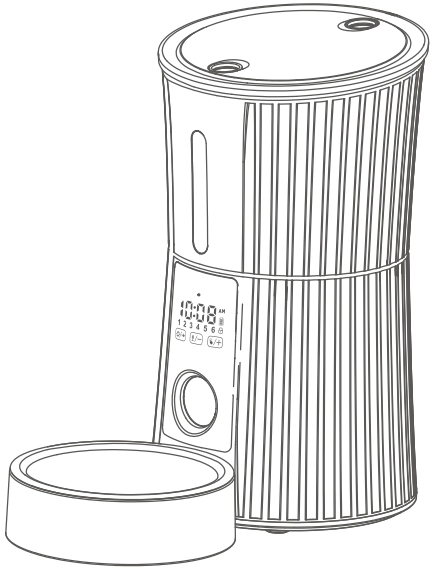

Please read this manual careful before using.

0.3.0.02.PF0100-ZX-01

IMPORTANT SAFETY INFORMATION

Thank you for choosing Petory PF01 Pet Feeder. We dedicated to using technology to create a better life for you and your pets.

WARNING

- Dispose of all packaging materials properly. Some items may be packed in plastic bags; these bags could cause suffocation; keep away from children and pets.
- Do NOT allow small children to play with, in or around the pet feeder.
- To reduce the risk of injury, please keep close supervision when an appliance is used near children.
- Do NOT use the feeder with pets not able to reach the food tray or with any physical disability.
- Do NOT immerse the base part in water at any time as it may damage electronic components like the control panel.
- Do NOT place any foreign object in the pet feeder
- Do NOT use outdoors. Check operation frequently to be sure the unit is dispensing properly.
- Do NOT use wet, canned or moist food.
- Do NOT disassemble the unit other than as instructed in this User Guide.
- Do NOT use the feeder for anything other than its intended use.
- Only use attachments recommended or sold by the manufacturer. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the pet feeder.
- Do not operate any appliance if the unit is malfunctioning or has been damaged. Do not attempt repairs on the pet feeder yourself. Contact our customer service immediately for further instructions.
- Examine the feeder after installation. Do not plug in if there is water on the power cord or plug.
- To avoid tripping, always position power cord out of the way of foot traffic.

CAUTION

- Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard-plastic protector) at any hardware store to protect the power cord.
- If an extension cord is necessary, one unit with a proper rating should be used.
- Do NOT install or store the pet feeder where it will be exposed to weather or temperatures below 4°C/40°F.
- Use alkaline D batteries to power. Do NOT use rechargeable batteries.
- Check the batteries regularly. Before Leaving for extended time, always replace batteries with new ones.
- Do NOT lift the pet feeder by lid, food tank, or food tray. Lift and carry it using both hands and the base, while keeping the unit in an upright position.
- Suitable for dry food ONLY, with kibble size ranging from 5-18mm/0.2-0.7in in diameter. Larger kibble may get stuck at the food outlet.
- Do not put your fingers into the food outlet or let your fingers touch the rotor.
- Read and observe all important notices listed on the pet feeder and in the packaging.

PRODUCT DESCRIPTION

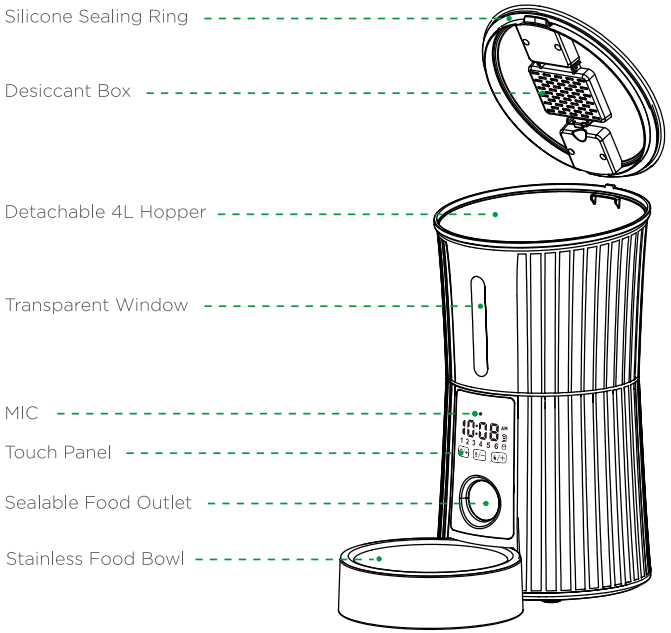

PRODUCT SPECIFICATIONS

Product Model	PF01
Input	DC5V
Dimensions	L330*W190*H344mm; 1.6kg
Dual Power	Type-C/3 cell D batteries
Capacity	4L(only dry food)
Programmable	1-50 portions; 10g per portion; 6 meals per day

HOW TO INSTALL

1. Assemble the bowl. Plug in power adaptor, turn on the power switch.

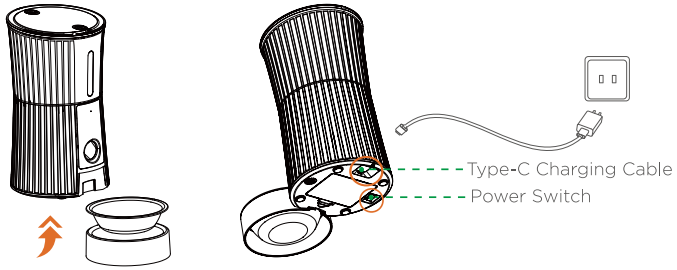

2. Recommended to install battery to ensure that the feeder works properly when the power is off.

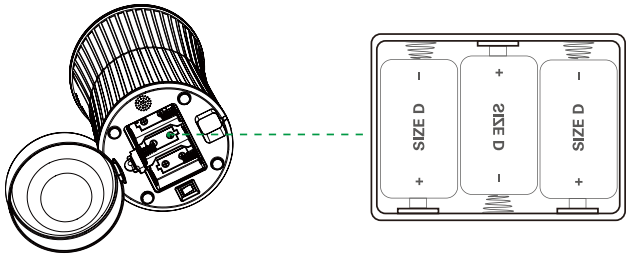

3. Press inward at the same time to open the lid.

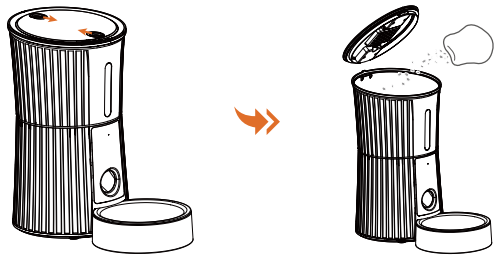

Recommended kibble size:5-18mm/0.2-0.7 inch in diameter.

OPERATION INTERFACE

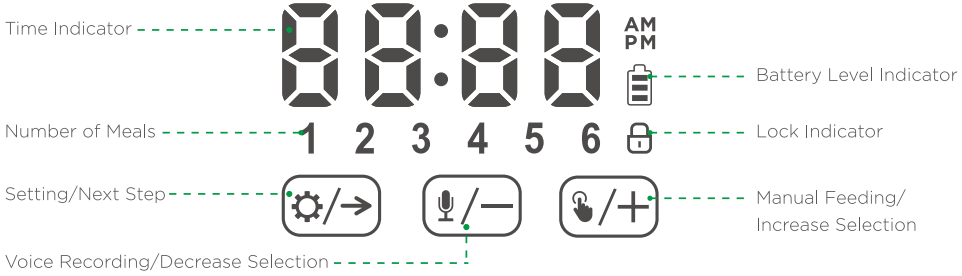

ICON QUICK GUIDE

Icon	Meaning
10:08	Current Time/Feeding Time. Initial setting time is 10:08
SF 00	Slow feeding mode. The interval time per portion can be set from 0-10mins
F - 00	Set the portion of each meal. Up to 50 portions
1 2 3 4 5 6	Number of meals Setting mode: The digit flashing Feeding: The digit is always on Not feeding: The digit is not displayed
AM PM	Set to 12 hour format
🔋	Solid: Batteries installed / Flashing: No batteries Red Light: Low battery
🔒	Light up when all buttons are locked

If the power supplies by the adaptor only, the display will always be lit. If it's supported by batteries only without operation for 2 mins, the screen will turn off automatically. Press an button can awake it.

BUTTON QUICK GUIDE

Button	Description	Operating Mode Function
⚙/→	Setting	Long press 2s to set current time, short press to set feeding parameters, long press exit setting mode
	Next Step	**Setting mode:** short press to next step
🎤/—	Recording	**Standby:** Short press--Play recording Long press--Record voice or cancel recording
	Down	**Setting mode:** Short press -- Decrease value Long press -- Decrease the value quickly
👆/+	Manual Feeding	**Standby:** Short press -- Manual feeding
	Up	**Setting mode:** Short press -- Increase value Long press -- Increase the value quickly
⚙/→ 🎤/—	Reset	In unlocked state, press and hold for 6s at the same time to restore the factory settings.
👆/+ 🎤/—	Lock/Unlock	Press and hold for 2s at the same time to lock/unlock

The screen will be locked automatically without operation for 90 sec.

3*D
y

QUICK PROGRAMMING GUIDE

1. Ensure the panel is unlocked -- press and hold 👆/+ 🎤/– until you hear two beeps.

2. Voice recording and playback:

Start recording
In standby, press and hold 🎤/– until you hear a "beep" and continue to hold while recording up to 10 seconds. Release the button when you hear a beep to finish recording.

Play the recording
In standby, press 🎤/– to hear the recorded message.

Cancel recording
In standby, long press 🎤/– until you hear a "beep" sound and release immediately to cancel the recording.



3. Manual Feeding

Short Press the 👆/+ , the feeder instantly release one portion. Repeat this step for 3 times to make sure the feeder work normally.

NOTE : If you refill the food, the food of the first 2 portions is less than the actual amount, and the 3rd portion is accurate.



4. Set Current time

Long press ⚙/→ until the digits start flashing. Press 👆/+ or 🎤/– to set the correct hour and then ⚙/→ to save. Repeat to set the minute. Long press ⚙/→ to exit setting.

Example: set current time to 08:10 AM





5. Slow Feed Setting

Short press ⚙/→ enter feeding parameters setting. Press 👆/+ or 🎤/– to set the interval time per can be set from 0 min to 10 mins.



6. Meal Time Setting

Short press ⚙/→ enter first meal setting. When "1" starts flashing. Press 👆/+ or 🎤/– to adjust to you want to set. (If you just want to change 3rd meal, press 👆/+ until "3" flashing, you can press to set 3rd meal parameters).



short press

portion,

the meal
⚙/→

Short press ⚙/→ to the next step. Short press 👆/+ or 🎙/− to set feeding time.



Setting feeding time (hour)



Setting feeding time (minute)

7. Feeding Portion Setting

Once feeding time is set and saved, the feeder will switch to portion mode. The screen will display “F-XX” (XX for the number of 10g increments).

(For a 50g portion, choose F-5. Then press 👆/+ and 🎙/− to set the portions and then press ⚙/→ again to save. F-00 means no feeding.)



No feeding, choose F-00



For a 50g portion, choose F-05

8. **Repeat for meals 2 through 6.Long press ⚙/→ to save once you set all meals.**

Intelligent Detection Function



As shown, “E-01” appears on the screen to indicate that the food outlet is blocked. Please clean the food outlet in time. Otherwise, the feeder will no longer dispenser food. You can adjust the speed and feeding portions according to your pet's habits.



As shown, E-02 appears on the screen to indicate abnormal feeding of the feeder. Please check whether there are foreign objects in the hopper or the food is too large.

ABOUT CLEANING

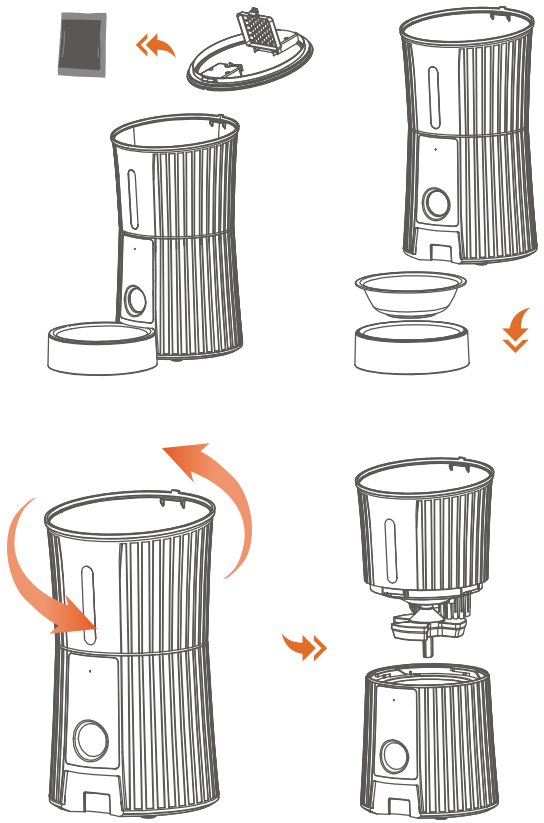

(1) Open the lid and take out the desiccant.
(2) Remove the feeding bowl and empty the grain in the hopper.
(3) Rotate the hopper to separate the hopper from the base.

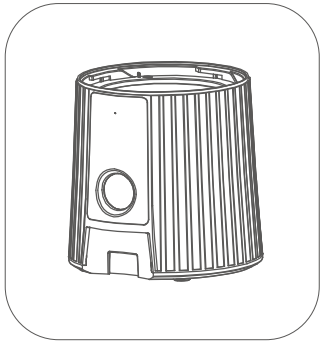

The base unit cannot be submerged in water.

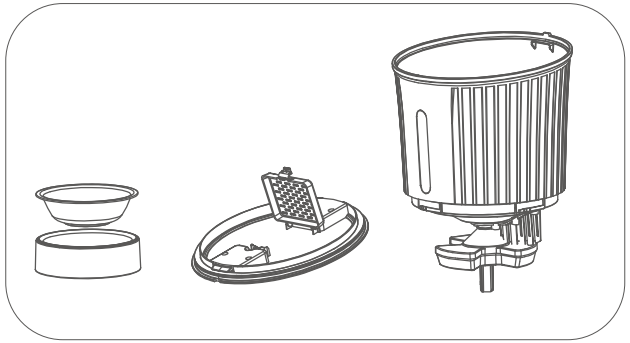

Food bowl, stainless steel bowl, hopper and lid can be washed in the sink.

WARRANTY

We provide a **1-year warranty** for this appliance. Please email our support team at support@patpet.com if you have any questions, and attach your order ID in your email. We will get back to you within 24 hours.

Made in China