




**PRORECK**

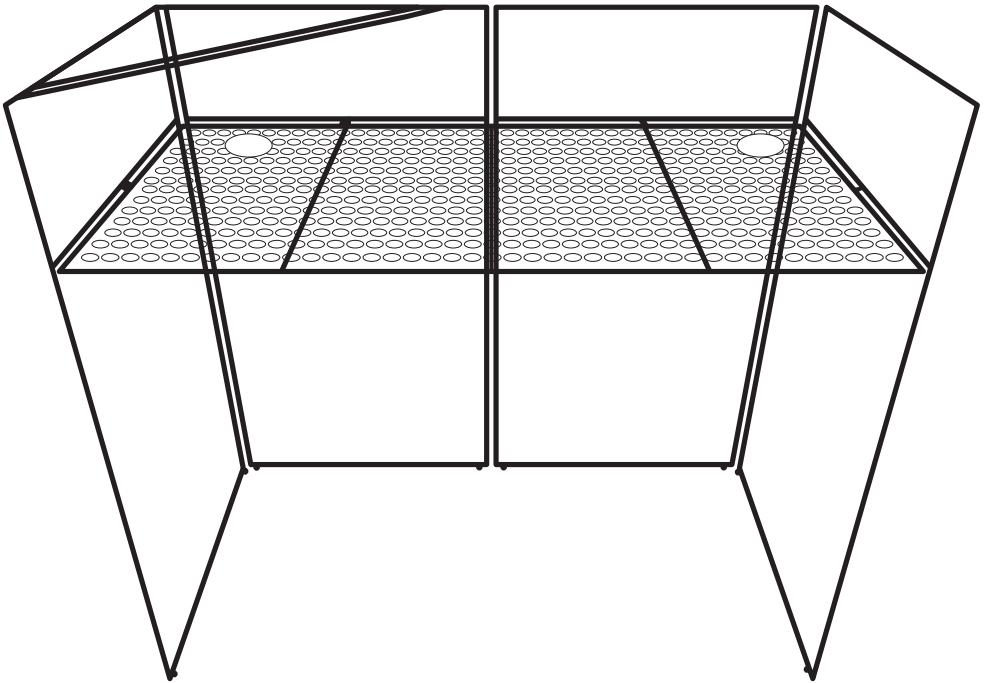


**PF-66**


PRORECK AUDIO, INC  
brand@proreck.com  
www.audioproreck.com



Black scrim: 4 PCS  
White scrim: 4 PCS

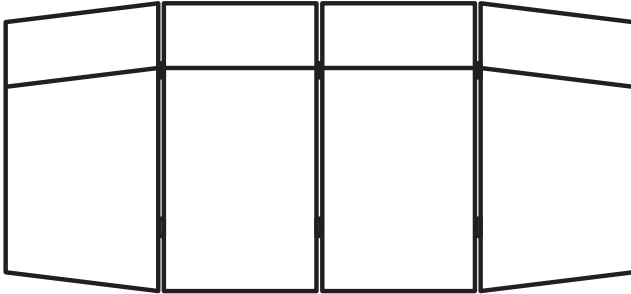

1 PCS

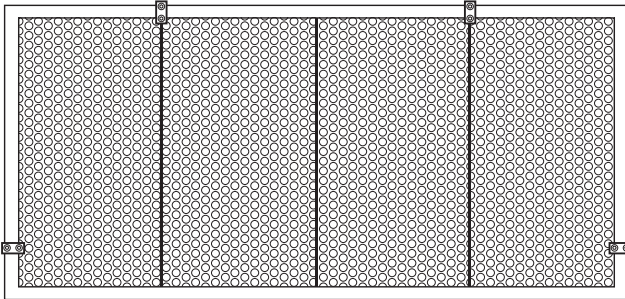

1 PCS



1 PCS

Oversized carry bag

1 PCS






X8



X4





X1

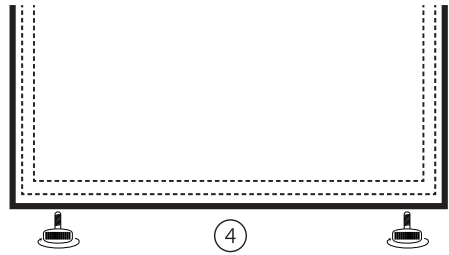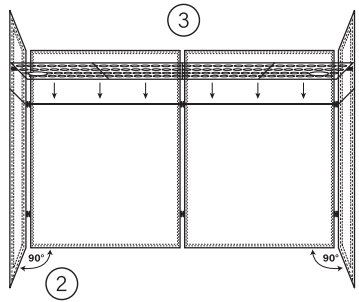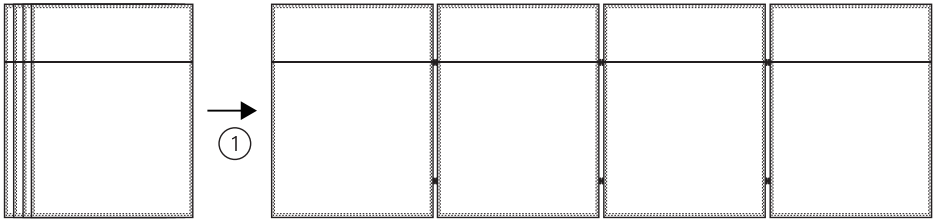

Install the knob at the bottom of each frame

Spread the bracket as shown in the picture, and then place the table panel on the bracket and using the attached knob to secure the table panel.

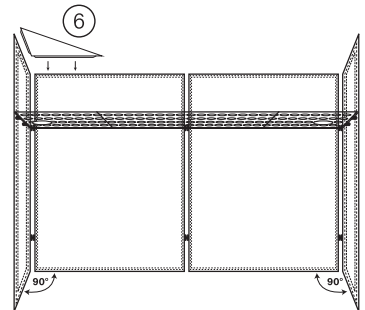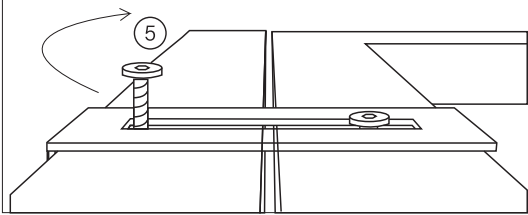

Attach 4 pieces of white or black scrims to the frame. When attaching, be sure to stick the Velcro tightly.



**PRORECK**