Parts list

Parts diagram

①	Taillight transfer harness (L)	⑤	Trunk light（R)
②	Taillight transfer harness (R)	⑥	Taillight（L)
③	Taillight connector plug	⑦	Light bar
④	Trunk light（L)	⑧	Tailight（R)

1. Tools required for installation

8mm Socket, clips removal, Plastic trim removal, Threading wire

2.Installation Notes

Caution: Please ensure power off operation to prevent failure

Tip: Be sure to read the instructions carefully for faster installation.

Instrucations for removing the original taillight

1. Use a trim removal to remove the trunk trim panel

2. Remove the trim plate in the trunk

3. Remove the clip

4. Remove another clip

Instrucations for removing the original taillight

5. Remove the side trim plate

6. Unplug original taillight connector

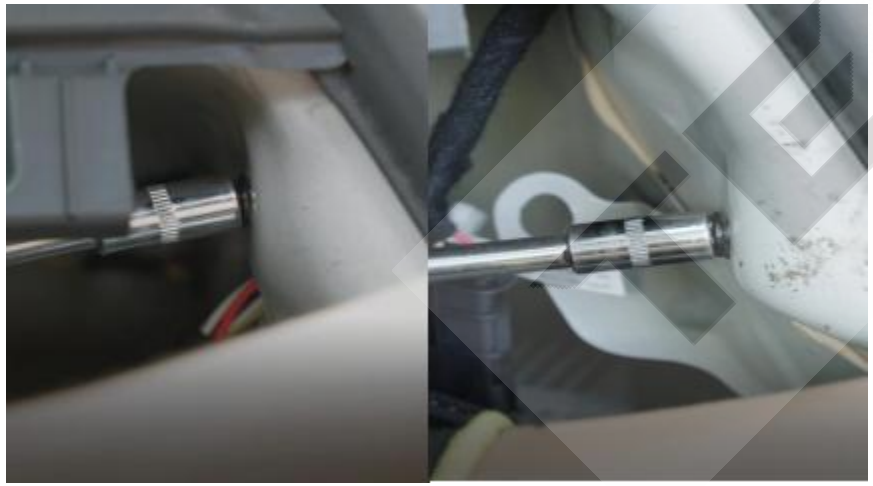

7.Use 8 mm socket unscrewing 2 bolts (up and down)

8. Remove the top hat on the taillight

Instrucations for removing the original taillight

9. Take out original taillight

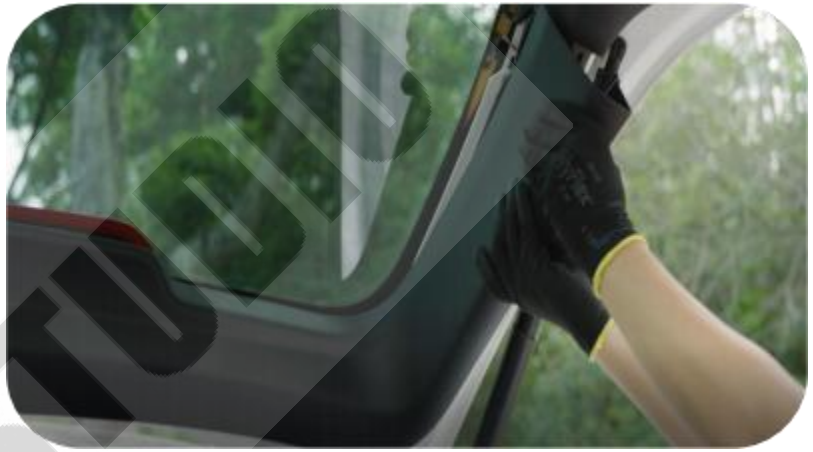

10. Remove the rear cover on the trunk door

11. Remove two clips on the trunk door (Left and Right)

12. Take out the rear cover (be careful there is a plug inside)

Instrucations for removing the original taillight

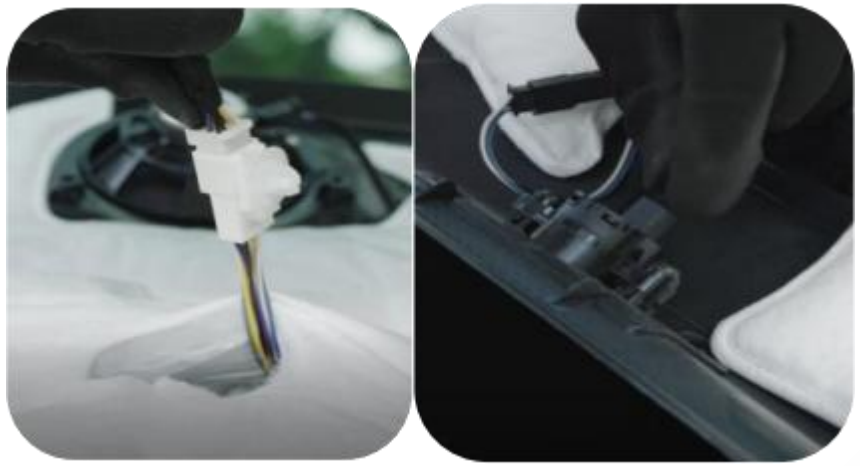

13. Unplug the connector of the rear cover

14. Unplug the trunk light connector

15. Unscrew the taillight bolts with an 8mm socket

16. Take out the taillight (Disassembly on both side is the same)

Instrucations for Starlink full-width strip taillight

1. First, place the wiring harness and connector of our tail light into the hole, then insert the tail light into the hole (same for both left and right sides)

2. Use 8mm socket to tighten the bolts(same for both sides)

3. Put back the top hat and press it tightly (same as both sides)

4. Plug in the connector correctly (Same as both sides)

Instrucations for Starlink full-width strip taillight

5.Remove the rubber seal

6. Remove the upper side trim panel

7. Wiring diagram of the harness

8. Wiring routing diagram (You can route the left and right wires together to this point, and then thread them through the rubber hose together)

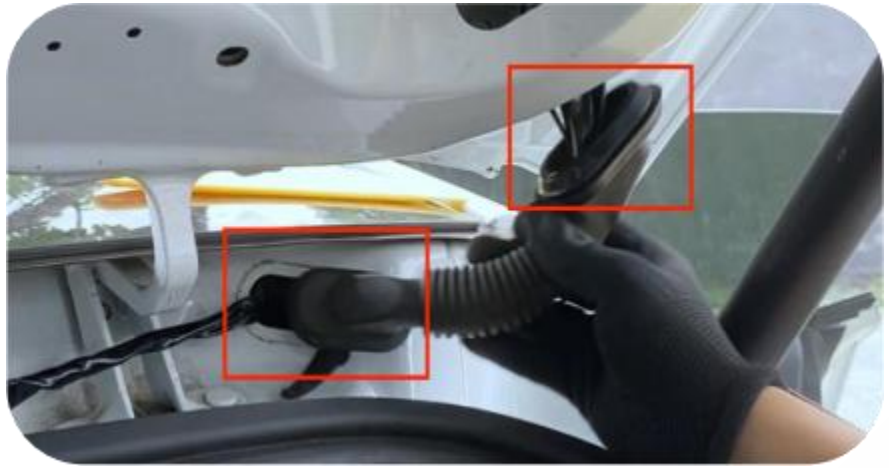

9. Pull off the original rubber hose

10. Thread the threading wire into the hose first

11. Tie the cable to one end of the threading wire with electric tape

12. Pull it through the hose

13. Through the hole in the picture

14. Put the hose back on the original car (press it in place, otherwise it will water)

15. Follow the wiring harness of the original car

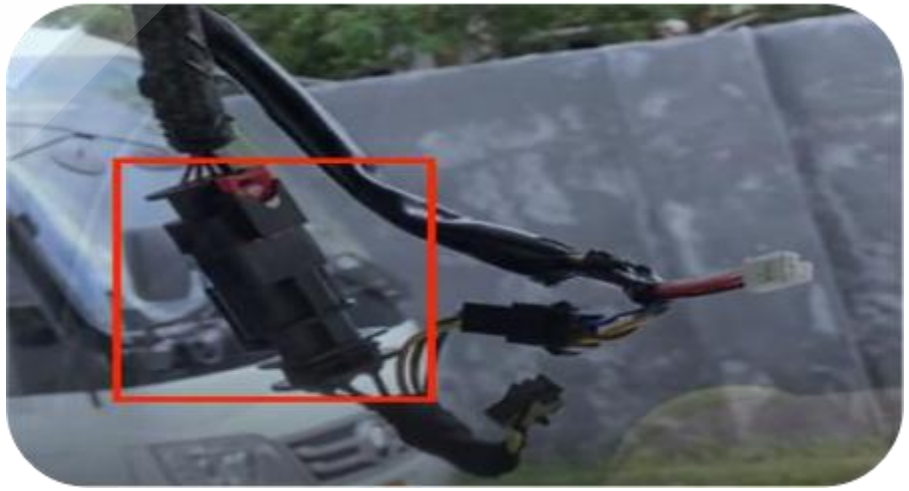

16. Connect our company's plug with the original vehicle's tail light plug (same for both left and right sides)

Instrucations for Starlink full-width strip taillight

17. Place the lightbar to right position (then can be marked)

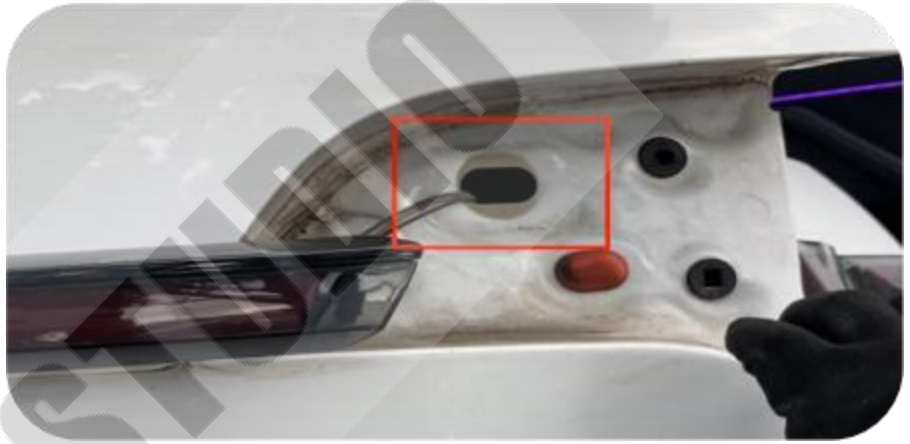

18. Place the lightbar wiring harness into the hole first (left and right the same)

19. Then, put the taillight harness into the hole position and push the taillight and light bar (same as left and right)

20. Diagram of installed taillights

21. Plug in the corresponding connector (left and right are the same)

22. Tighten the taillight bolts (Same for both sides)

Diagram of Starlink full-width strip taillight wiring harness

Figure of wiring harness

Display of Starlink full-width strip taillight

Product Display

Starlink full-width strip taillight-FAQ guide

Problem	Reason	Solution
The taillight doesn't work	Plug is loose or empty	Reconnect each plug
Only half lit on the light bar	The adapter plug is not connected correctly	Identify the corresponding wire and reconnect properly
The turn signal on the trunk does not work	The harness is not connected correctly	Reconnect the plug. Left to left, right to right
Only one light doesn't work	The connector is connected virtually or disconnected	Check the connector