




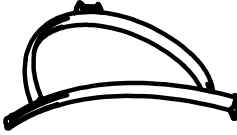





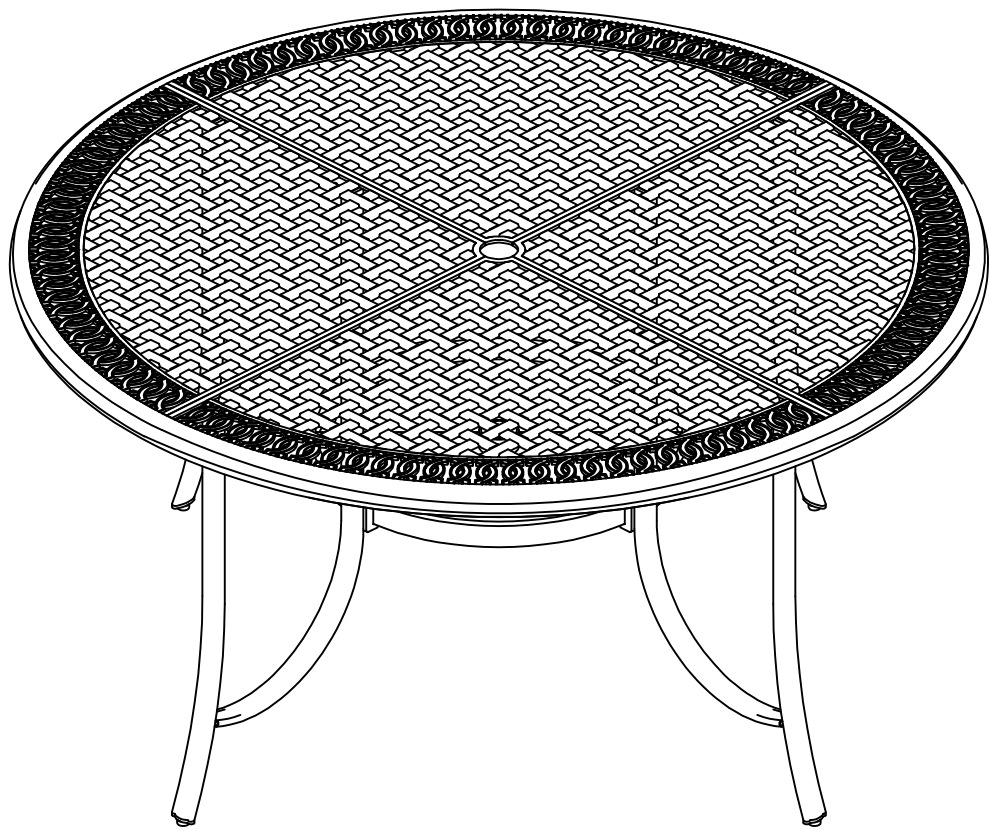


21OD072215FF

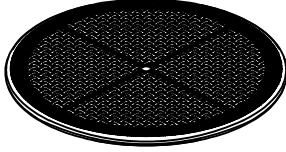


<b>A</b>  x1	<b>F</b>  $\phi 6.5 \times 1.0$ x16
<b>B</b>  x1	<b>G</b>  SZ043 x8
<b>C</b>  x4	<b>H</b>  SZ092 x8
<b>D</b>  1/4x18 x8	<b>I</b>  F1994 x1
<b>E</b>  1/4" x8	<b>J</b>  F1997 x1

1

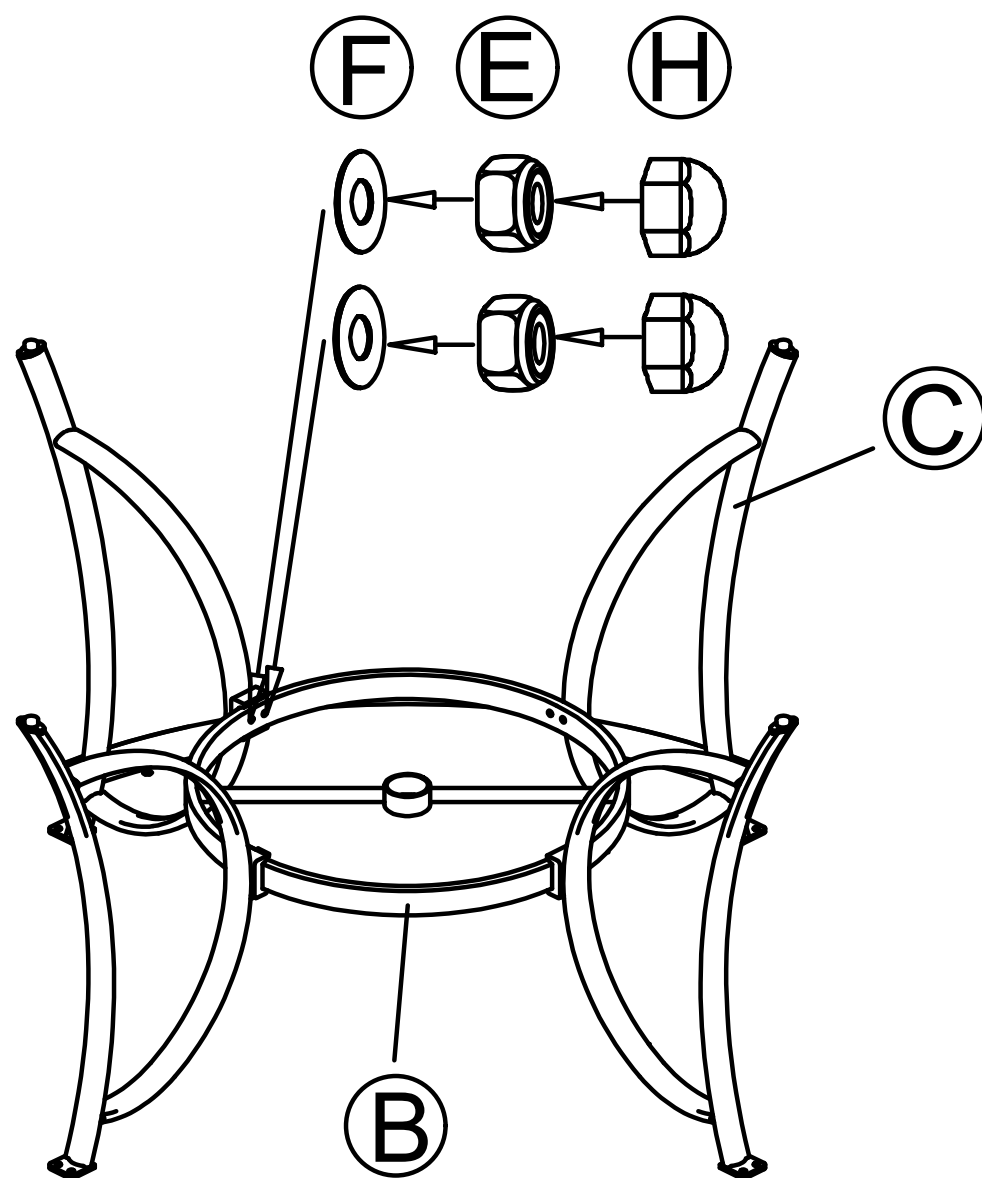

2

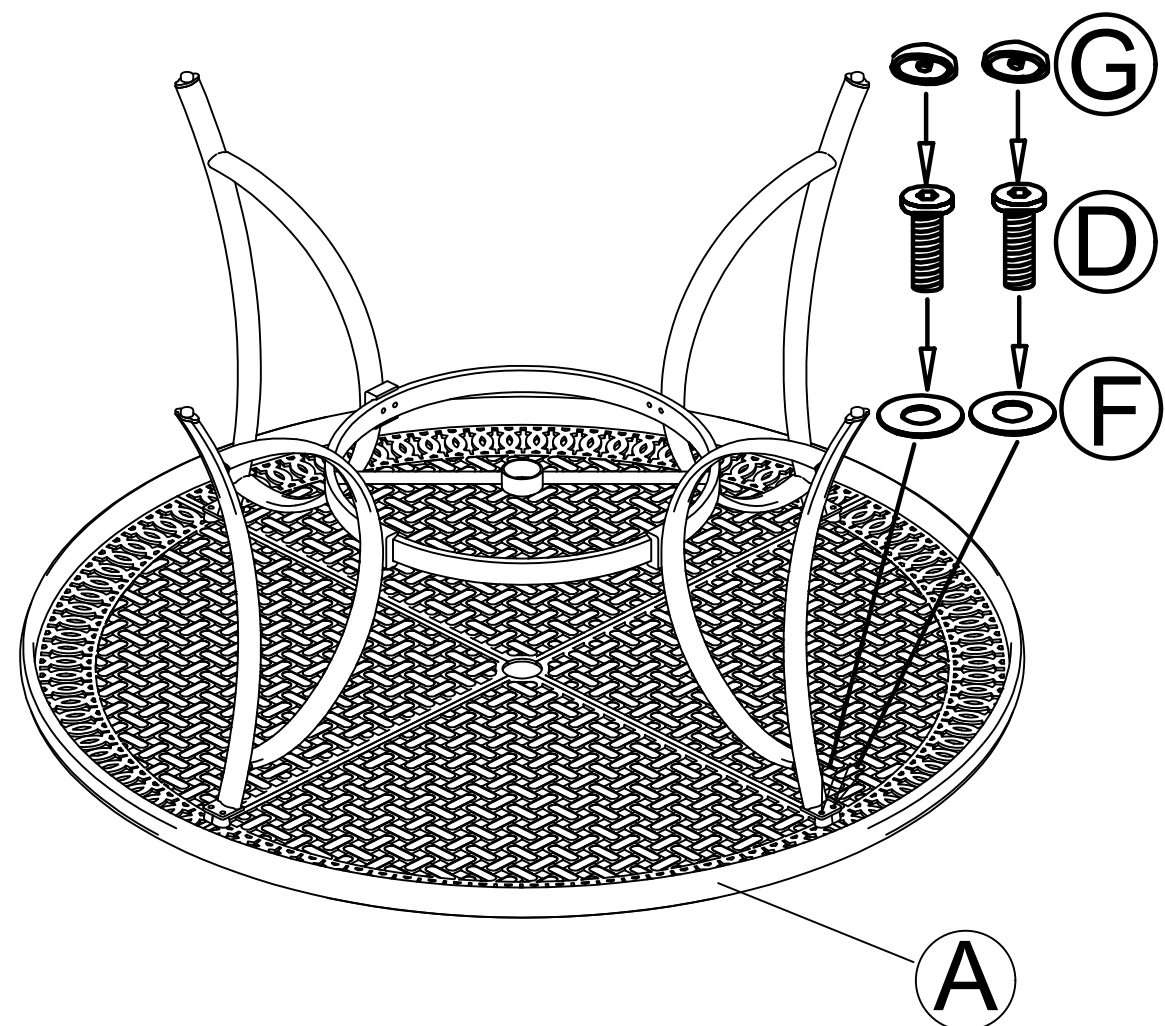

NOTE: Fix all the bolts in place, without tightening them first. After confirming the position of all the bolts, tighten the bolts and nuts. Each bolt must be tightened 3~4 revolutions only at a time and then move to another bolt until completely tightened, **DO NOT TIGHTEN COMPLETELY** one bolt first and then try to fix another bolt, as this operation will lead the other bolt hole to misalign.

NOTE : Fixez tous les boulons en place, sans les serrer au préalable. Après en confirmant la position de tous les boulons, serrez les boulons et les écrous. Chaque boulon doit être serré de 3~4 tours à la fois, puis passer à un autre boulon jusqu'à ce qu'il soit complètement serré, **NE PAS SERRER COMPLÈTEMENT** d'abord un boulon et ensuite essayer de fixer un autre boulon, car cette opération conduira l'autre trou de boulon de se désaligner.