

KBDCRAFT


ASSEMBLY GUIDE

Quick- Release Build

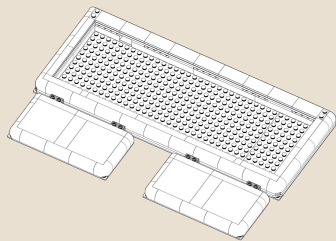


08001 WRIST REST

1

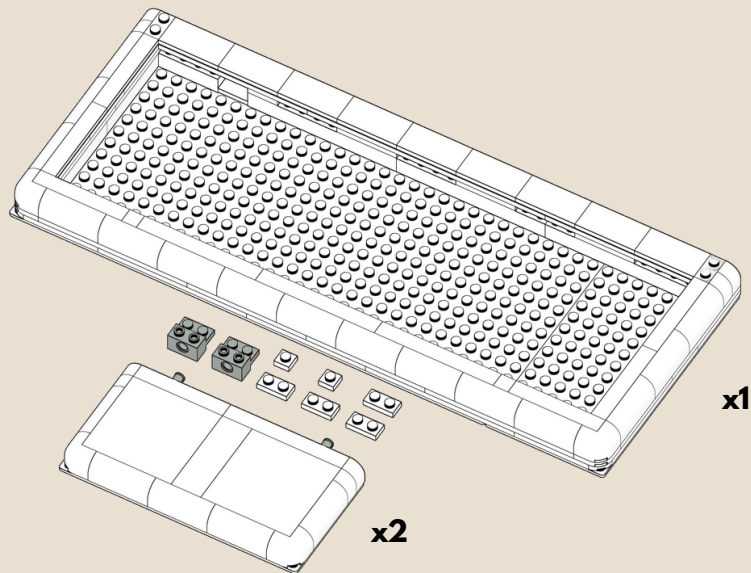


We need Case*1 and Wrist Rest*2 to begin with.
The adaptive parts are offered within the kit.

2

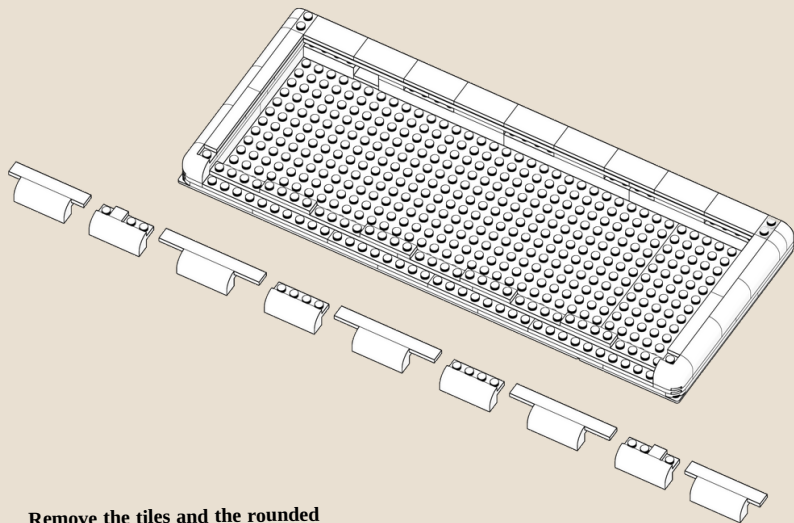


Remove the tiles and the rounded bricks from the case frame.

3

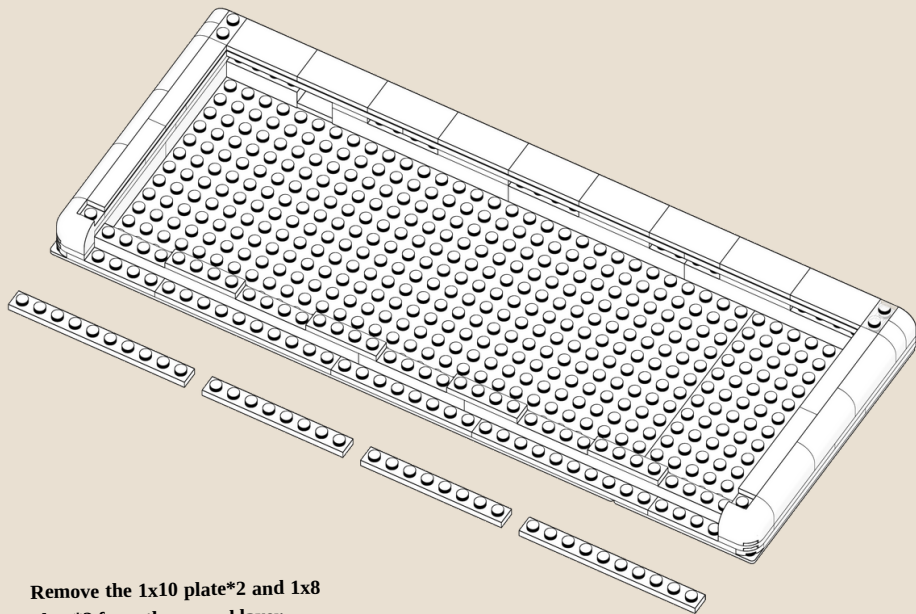


**Remove the 1x10 plate*2 and 1x8
plate*2 from the second layer.**

4

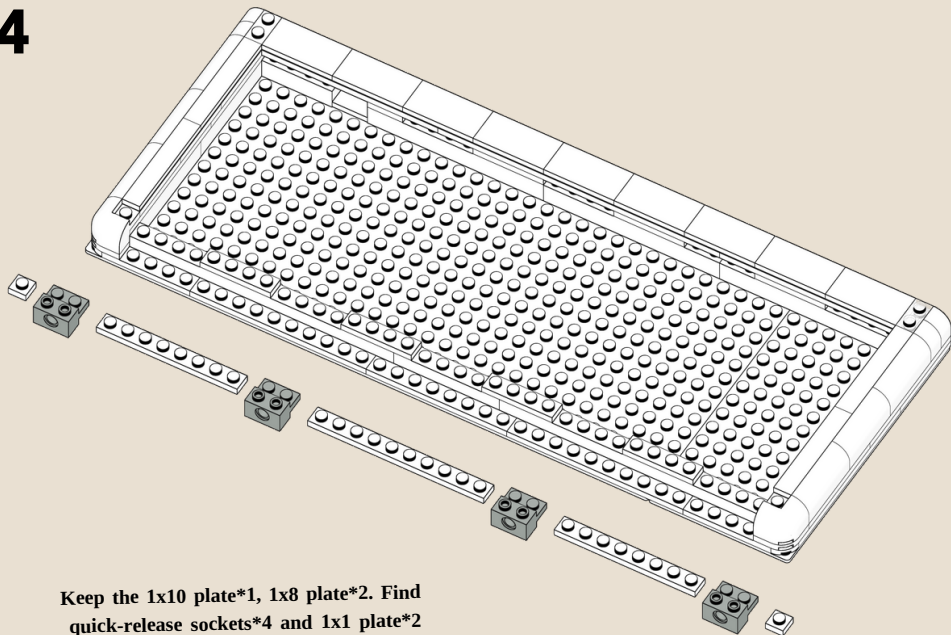


Keep the 1x10 plate*1, 1x8 plate*2. Find quick-release sockets*4 and 1x1 plate*2 that come with the Wrist Rest Kit.

5

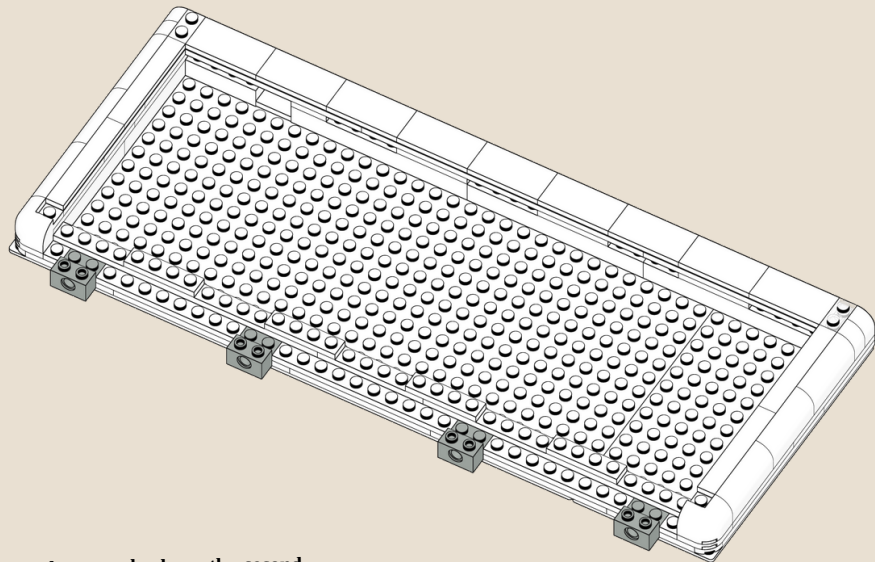


Put the parts back on the second layer just like we do!

6

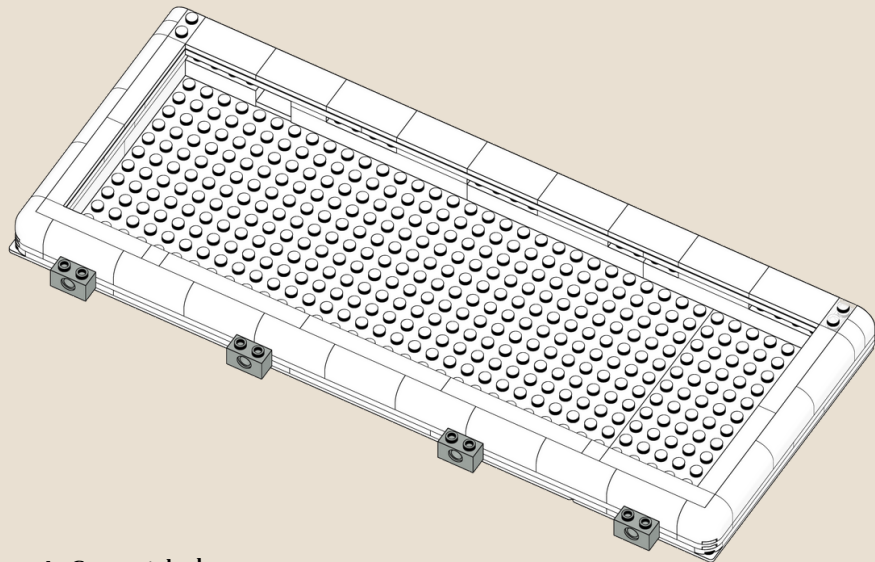

Put the Case parts back.

7

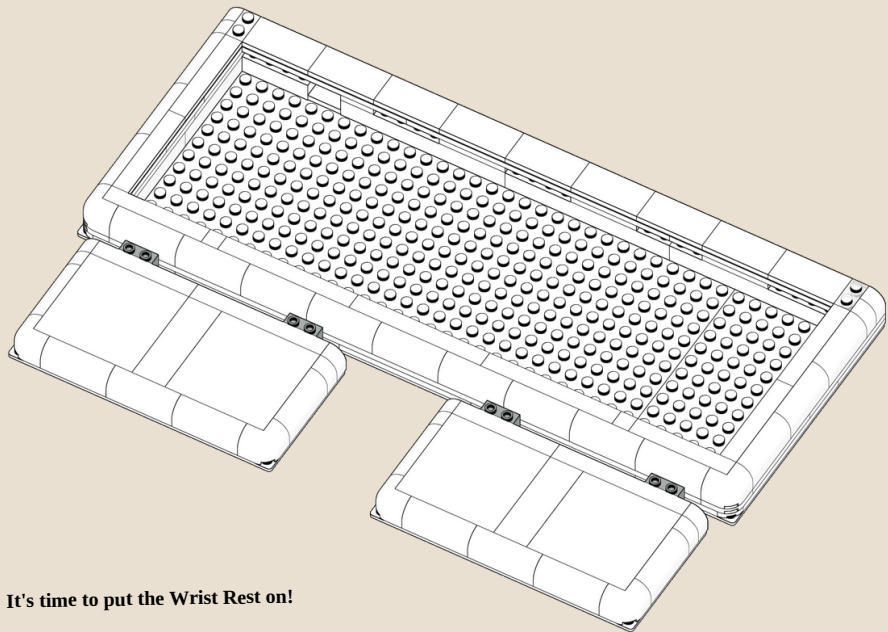

It's time to put the Wrist Rest on!