
FeeKaa

USER MANUAL

Ultrasonic Humidifier

MH-2604M

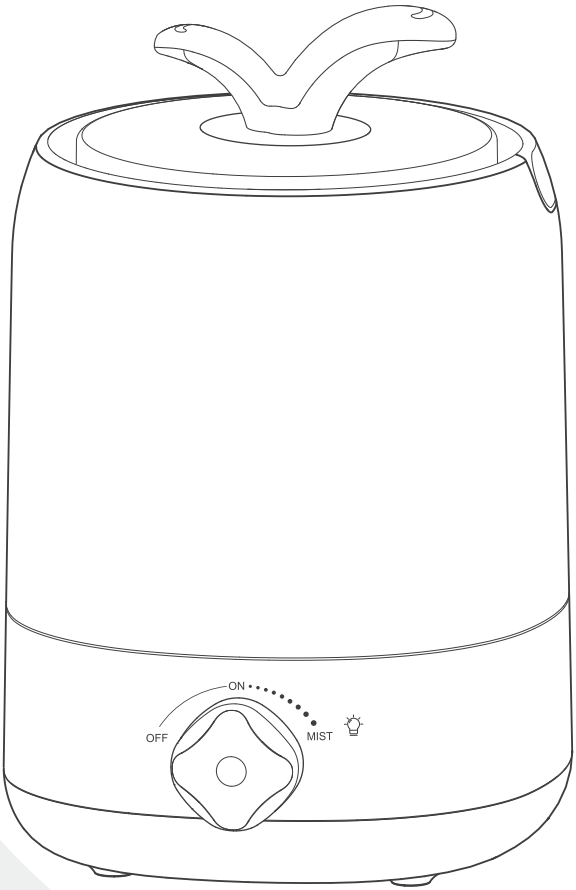

Need Assistance?

We're here to help!

info@feekaa.com

+1 833-737-1338

Phone Hours: Mon-Fri, 9 AM–1 PM, 2 PM–5 PM (ET)

FeeKaa

Your support means the world to us.
We hope you enjoy our product as much as
we enjoyed creating it.

Please read this manual carefully before use
and keep it for future reference.
All images shown are for illustration purposes only.
The actual product may vary due to enhancements.

For more installation details,
visit our website or scan the QR code:

https://www.feekaa.com/pages/user-guide

Contents

Important Safety Instructions ---- 1-2

Knowing Your Humidifier

- Package Contents ---- 3-4
- Specifications ---- 5
- Features ---- 5
- Controls ---- 6

Using Your Humidifier

- Before Use ---- 7
- Filling Water ---- 8-9
- White Dust (Mineral Residue) ---- 10
- Adding Essential Oil ---- 11-12

Cleaning & Maintenance

- Cleaning Precautions ---- 13-14
- Regular Cleaning ---- 14-15
- Descaling Instructions ---- 16-17
- Reassembly ---- 18
- Seasonal Storage ---- 18

Troubleshooting ---- 19-22

Warranty Policy ---- 23-24

Important Safety Instructions

Please read and retain the following safety instructions before using this humidifier. Always follow these basic precautions to reduce the risk of fire, electric shock, and personal injury.

1. General Safety

Placement

- Place the humidifier on a firm, flat, and waterproof surface to ensure stability and prevent tipping.
- If using on a wooden floor, a waterproof mat is recommended to prevent excessive moisture buildup.
- Keep the humidifier at least **12 inches** (30 cm) away from walls or wooden furniture.
- Place the humidifier where children and pets cannot access it. Children should not operate or clean the humidifier without supervision.
- **Do not** place the humidifier near heat sources such as stoves, ovens, radiators, or direct sunlight.
- **Do not** use outdoors. Intended for indoor household use only.

Temperature

- Before first use, let the humidifier sit at room temperature for **30 mins** to prevent potential damage to the water tank caused by sudden temperature changes.
- Operate the humidifier within a room temperature range of **41°F - 104°F** (5°C - 40°C).
- If the temperature drops below **32°F** (0°C), empty the water tank to prevent freezing and potential damage.

Operation

- Avoid running it in a closed room for extended periods without supervision.

Important Safety Instructions

2. Power and Cord Safety

- **Do not** handle the power cord or plug with wet hands.
- **Do not** damage, bend, pull, twist, bundle, or attempt to modify the power cord.
- **Do not** let power cord hang over the edge of a table or counter or touch hot surfaces.
- **Do not** immerse the base, power cord, or plug in water.
- Ensure the plug fits securely into the outlet to prevent overheating.
- Always unplug the humidifier before refilling, moving, cleaning, or when not in use for an extended period.

3. Special Precautions

Avoid Over-Humidification

- If condensation appears on walls, windows, or around the device, turn off the humidifier or lower the mist output.

Do Not Inhale Mist Directly

- Avoid inhaling mist directly or directing mist toward people or objects.

Do Not Add Substances

- **Do not** add essential oils, medications, or other additives to the nozzle, mist tube, or water tank, as this may damage the unit or affect health.

4. Maintenance and Repairs


No Self-Repair


- **Do not** disassemble, modify, or repair the humidifier yourself. Repairs should only be performed by the manufacturer or a qualified professional.

Routine Inspections


- Regularly check the power cord, plug, and water tank for any signs of damage. If any issues are detected, stop using the humidifier and contact customer service.


Package Contents

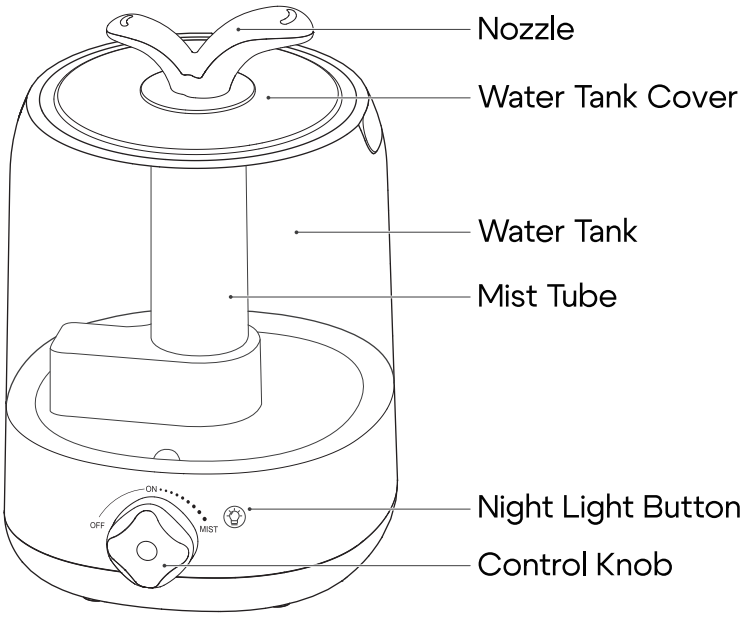


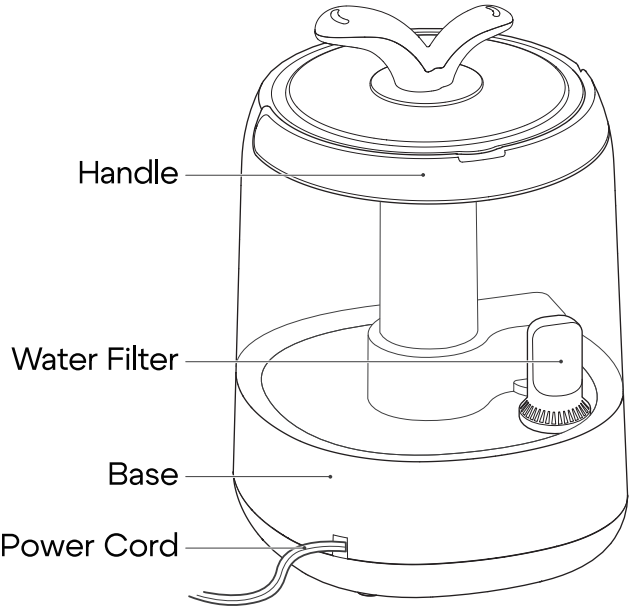

Package Contents

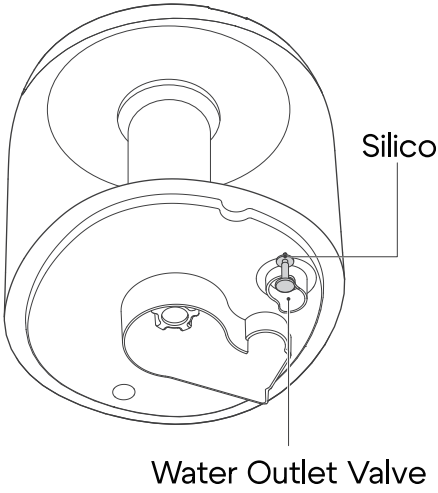

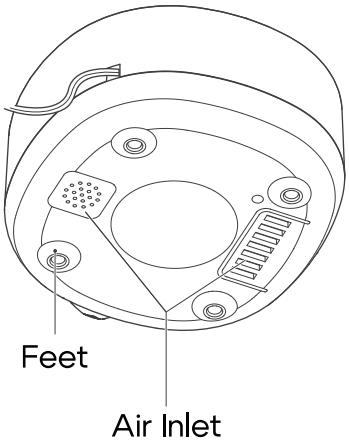

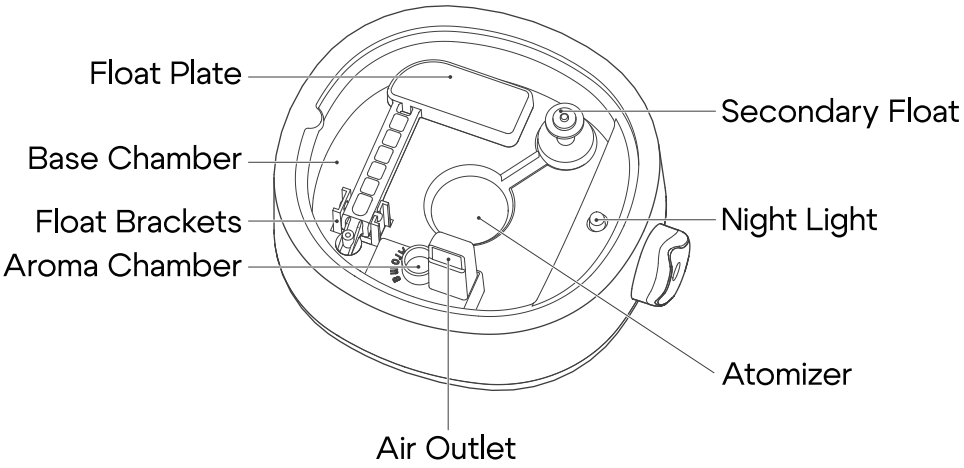

Specifications

Product Name	Ultrasonic Humidifier
Model Number	MH-2604M
Rated Power	25W
Rated Voltage	120V~
Rated Frequency	60Hz

Features



Top-Fill
Design



Soft
Night Light



Essential
Oil Diffuser



Adjustable
Mist Level




Quiet
Operation



Easy
to Clean

Controls

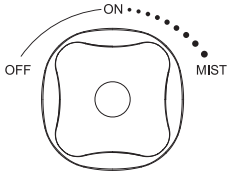

Control Knob

- **Turn on**
  Rotate clockwise to the "ON" position until you hear a click.
  Note: Please allow approximately 30 seconds to 1 minute for the humidifier to begin producing mist.
- **Adjust Mist Level**
  Rotate clockwise to increase the mist output. Rotate counterclockwise to decrease the mist output.
- **Turn Off**
  Rotate counterclockwise to the "OFF" position until you hear a click.



Night Light Button

- **Default**
  The night light is off when the unit is turned on.
- **1st Tap**
  Turn the night light on at 100% brightness.
- **2nd Tap**
  Set the night light to 50% brightness.
- **3rd Tap**
  Turn the night light off.
- **Note**
  The night light can be used independently. Even if the water tank is empty, rotate the control knob to the "ON" position until you hear a click to turn on the unit, then press the night light button to turn on the light.


Low Water

When the water tank is empty, the humidifier will stop producing mist. Please refill the water tank.

Before Use


When using your humidifier for the first time, remove all packaging and tape, and follow the steps below.

1

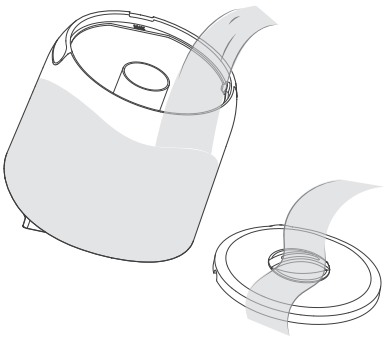


Clean the cover and water tank before first use.

2

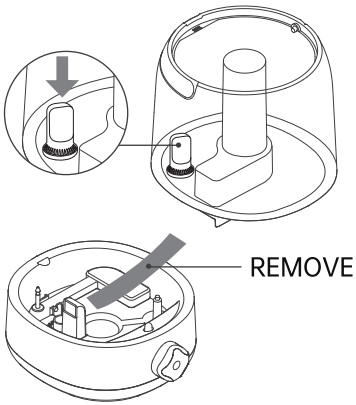


Make sure the water filter is correctly in place and the tape has been removed.

3

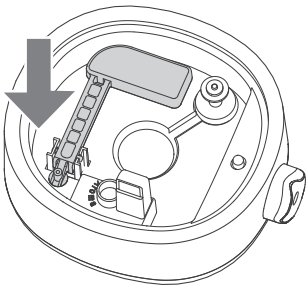

Make sure the float plate is securely in place.


4

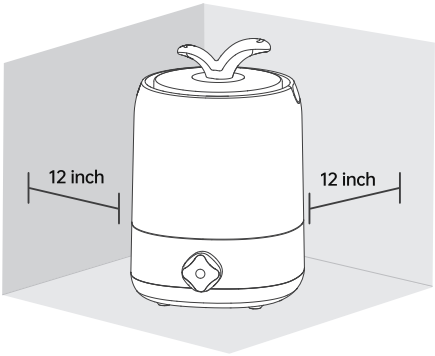

Place on a flat surface at least **12 inches (30 cm)** from walls.


Filling Water

1

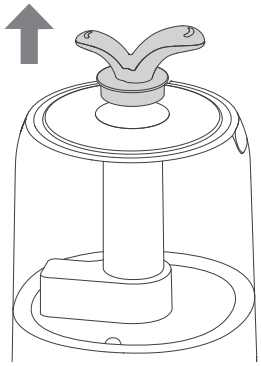


Remove the mist nozzle.

2

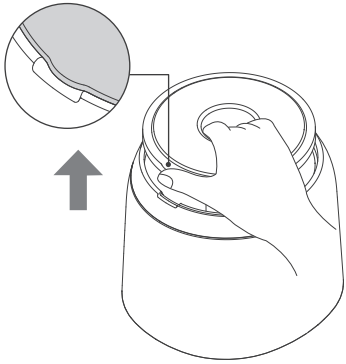


Grip the protruding tab and mist outlet on the water tank cover, then pull upward.

3

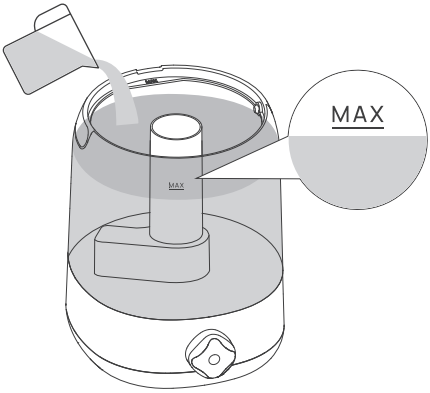

Fill the water tank without exceeding the MAX line.


4

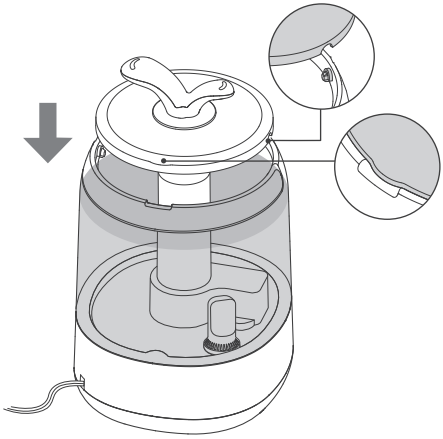


Align the protruding tab and small semicircular opening on the cover with the corresponding features on the water tank. Press down to secure the cover in place.

Filling Water


Do not add water through the **mist outlet**.

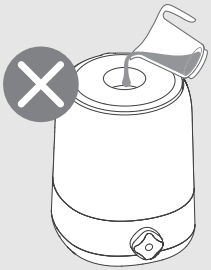

Do not add water through the **mist tube**.

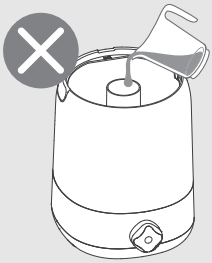


Do not add water directly into the **base chamber**.

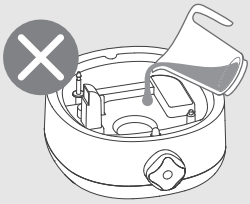

Note

- **Only add water to the water tank**. The humidifier will automatically release the correct amount of water into the base chamber.
- It is recommended to use **purified or distilled water** to minimize white dust accumulation.
- It is recommended to place **a waterproof mat** beneath the humidifier to contain spills and condensation.
- Fill with **room-temperature water** only - never use hot water, boiling water, or other liquids.

White Dust (Mineral Residue)

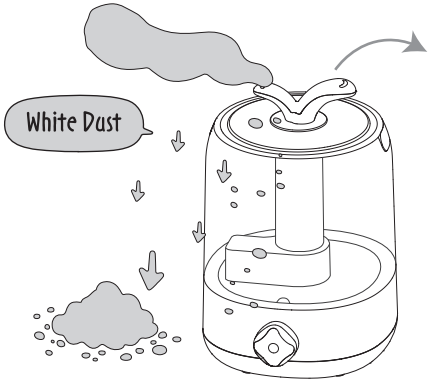


What Is White Dust?

White dust, also called mineral residue, is a powdery buildup that can appear near your humidifier.
It's caused by minerals (like calcium and magnesium) in your water—a common issue in areas with "hard water."
The harder your water, the more likely you'll see this dust.

Why Does It Happen?


- The humidifier doesn't create this dust—it simply releases minerals that are already in your water.
- If you live in a hard water area, switching to distilled water can greatly reduce or even eliminate white dust.
- It's a natural process, not a problem with your humidifier.

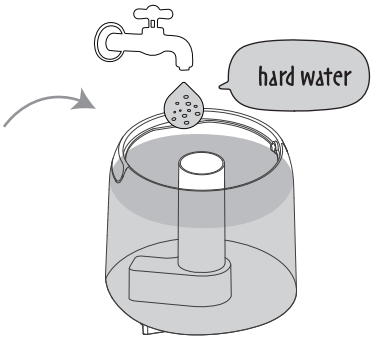

How To Reduce It?

A demineralization cartridge (sold separately) may help reduce white dust buildup.

- Replace the cartridge **every 30-40** water refills
- Replace more often if you have very hard water
- Switch to distilled water if dust persists after replacement
- To purchase cartridges, contact our customer support team.

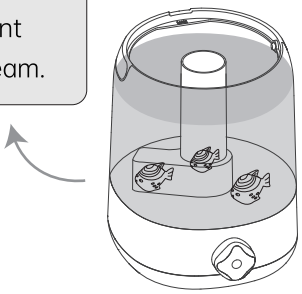


Still Experiencing Issues?

Contact our customer support team.


Adding Essential Oil

❶

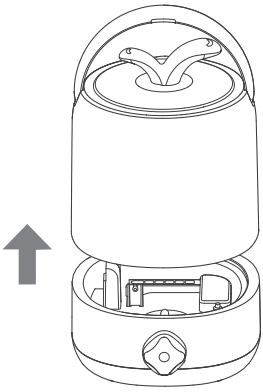


Use the handle to remove the water tank from the base.

❷

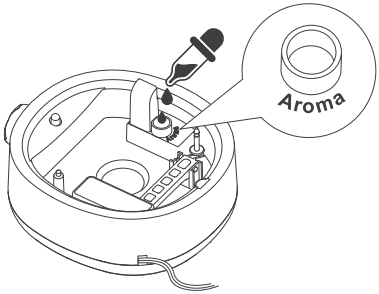


Locate the round aroma chamber inside the base chamber.
Add **3–5 drops** of essential oil to the aroma chamber.

❸

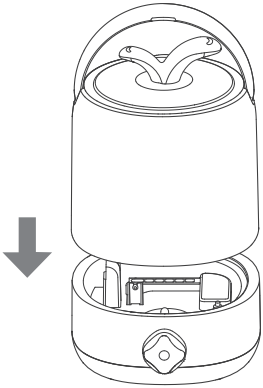

Reinstall the water tank onto the base.


❹

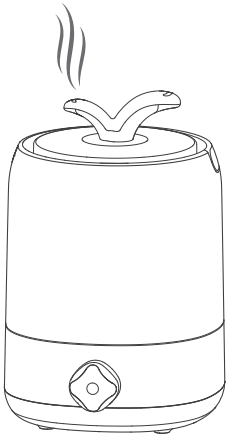


Turn on the humidifier. The aroma will be released automatically while humidifying.

Adding Essential Oil


Do not add essential oils directly to the **mist outlet**.

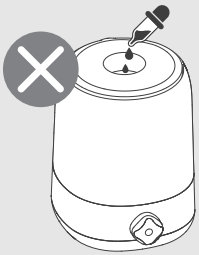


Do not add essential oils directly to the **mist tube**.

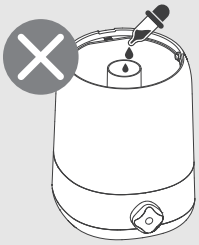

Do not add essential oils directly to the **water tank**.

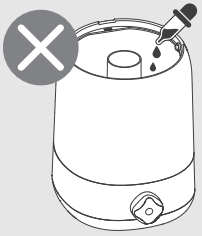

Do not add essential oils directly to the **base chamber**.

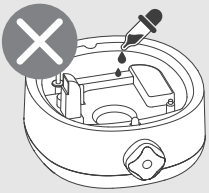

This humidifier is not a dedicated diffuser. Fragrance will be subtle.

Cleaning & Maintenance

1. Cleaning Precautions

Before You Begin

- Always unplug the unit before maintenance.
- Work on a waterproof surface.

Cleaning Do's

- Wipe surfaces with a damp cloth.
- Clean the mist nozzle regularly with a soft tissue.
- Change water regularly to prevent bacteria.
- For storage: Empty all water and dry completely.

Cleaning Don'ts

- **Never** immerse the base and base chamber in water.
- **Do not** allow water to enter the air outlet.
- **Do not** place the base in the dishwasher.
- Avoid using detergents, gasoline, thinners, solvents, or other chemicals for cleaning.

Mold Buildup

Mold spores naturally exist in air and water.
When water sits in tanks for **>48 hours**, spores multiply rapidly.




Cleaning & Maintenance

Regular cleaning is one of the most important steps you can take. According to the Environmental Protection Agency (**EPA**), homeowners should clean their humidifiers at least every **3 days** to prevent mold buildup.

- Use distilled or demineralized water (reduces mineral deposits that mold thrives on).
- Dry the tank completely between uses.
- Deep clean weekly with white vinegar or citric acid.


2. Regular Cleaning

1

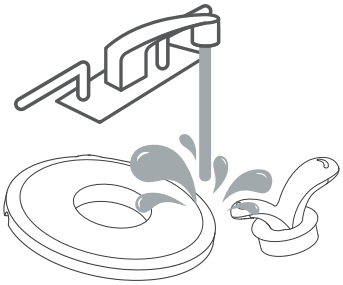


Remove the nozzle and water tank cover, then rinse them thoroughly.

2

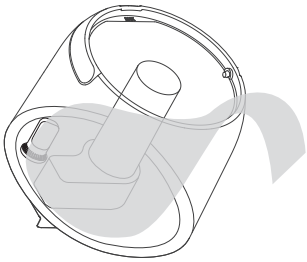


Remove the water tank and empty any remaining water.

3

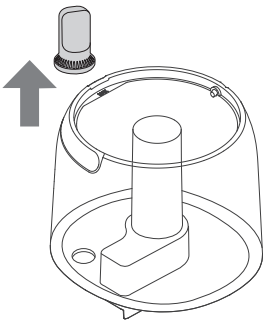

Remove the water filter from the water tank.


4

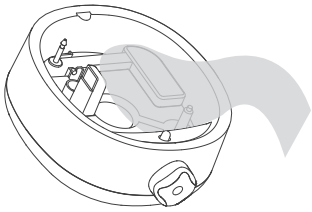

Empty any remaining water from the base chamber.

Cleaning & Maintenance


❺

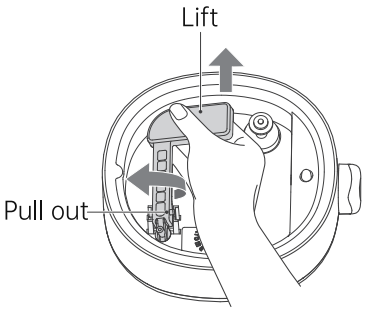

Remove the float plate from the base chamber:


- Lift the larger side of the float plate.
- Pull the shaft out through the open side of the float brackets.

❻

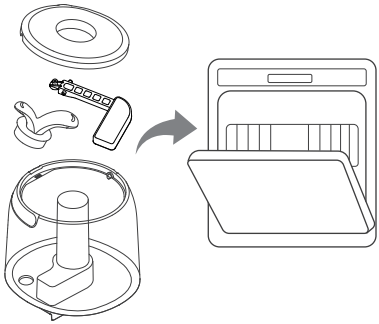


Place the nozzle, water tank cover, water tank, water filter, and float plate in the dishwasher or wash them by hand.

❼

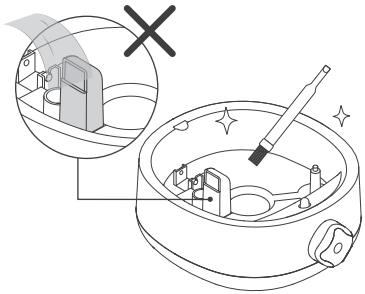

Gently clean the base chamber with a soft cleaning brush or cloth.


❽

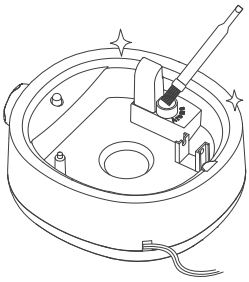

Clean the aroma chamber with a cotton swab or a small brush.

Note

- **Do not** allow water to enter the air outlet.
- **Do not** place the base chamber in the dishwasher.

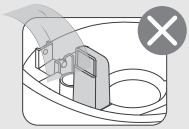


Note: Ensure all parts are completely dry before reassembling or storing.

Cleaning & Maintenance


3. Descaling Instructions

❶

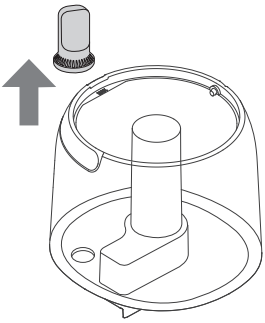

Remove the water filter from the water tank.

❷

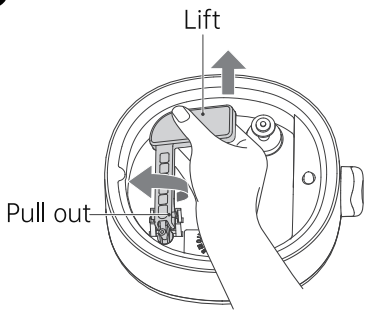


Remove the float plate from the base chamber.

❸



Place the water filter and float plate in a container. Pour enough diluted white vinegar solution into the container to fully submerge both parts.

❹

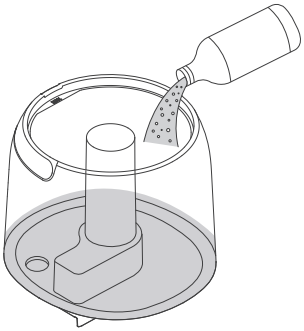


Pour the diluted white vinegar solution into the water tank.

How to Prepare the Vinegar Solution:

- **For light mineral buildup:** Mix 1 part white vinegar with 3 parts water (1:3 ratio).
- **For heavy mineral buildup:** Mix 1 part white vinegar with 1 part water (1:1 ratio).


Cleaning & Maintenance

❺

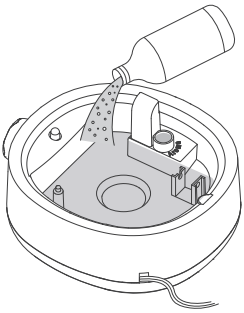

Pour the diluted white vinegar solution into the base chamber and aroma chamber.

❻

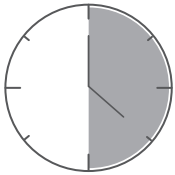


Allow the vinegar solution to soak for **20–30 minutes** to loosen mineral buildup.

❼



Gently scrub away any mineral buildup with a soft cloth or brush.

❽

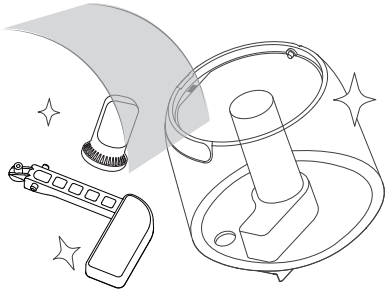

Rinse thoroughly with clean water until no vinegar odor remains.


Note


- **Do not** allow water to enter the air outlet during cleaning.
- Avoid harsh scrubbing of the atomizer to prevent damage.
- White vinegar may leave a slight odor—ensure proper ventilation and let all parts air-dry completely before reuse.
- Citric acid can be used as an alternative descaler; follow the product instructions for proper usage.

Cleaning & Maintenance


4. Reassembly

❶ Reinstall the float plate in the base chamber:

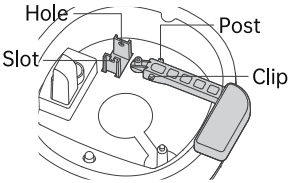

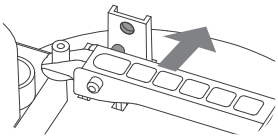


ALIGN
Hold the float plate.
Match **Post** into **Hole**.
Follow the arrow direction.

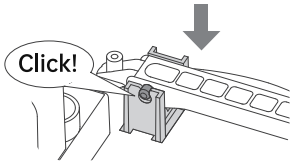


PRESS & LOCK
Push down on the edge until **Clip** snaps into **Slot**.
Tip: No click = not locked. Re-align and press firmly until you hear it.

❷

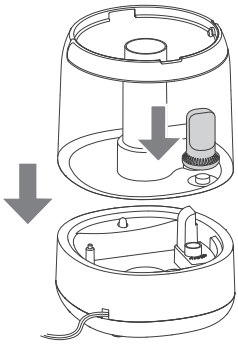

Reinstall the water filter in the water tank. Place the water tank properly onto the base.

❸

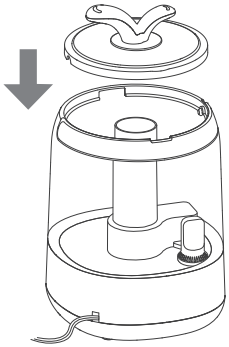

Place the tank cover securely on the water tank.

5. Seasonal Storage

- Before storing the humidifier at the end of the season, follow the above cleaning steps.
- Ensure all parts are completely dry before storing.
- Pack the unit securely and store it in a cool, dry place.

Troubleshooting

Humidifier Will Not Turn On

- Check the Power Supply
  a. Make sure the humidifier is plugged into a working electrical outlet.
  b. Make sure the outlet voltage matches the voltage indicated on the humidifier.
- If the Humidifier Was Recently Cleaned
  Water may have entered the unit during cleaning and may prevent it from turning on. Unplug the humidifier and allow it to dry in a well-ventilated area for at least **24 hours** before trying again.
- Still Will Not Turn On?
  Please contact customer support.

Little or No Mist

- Increase the mist level.
- Make sure the water tank contains enough water.
- Make sure the float plate is installed correctly. If it is not installed properly, water cannot flow from the tank into the base chamber, which may prevent the humidifier from producing mist.
- Make sure the secondary float moves freely up and down. If it is stuck, gently clean it with a cotton swab.
- Gently clean the atomizer to remove any mineral buildup that may affect mist output.
- There may be too much water in the base chamber. Empty the base chamber, then refill the water tank (not the base chamber), and place it securely on the base.
- Clean the water filter or replace it if necessary.
- Make sure the air inlet on the bottom of the base is not blocked. Do not place the humidifier on carpet or other surfaces that may block the air inlet.
- Make sure the mist nozzle is not blocked or clogged.
- Make sure the humidifier is placed on a flat, level surface.
- The water may be too cold. Set the mist level to the highest setting and allow the humidifier to run for a while. Then adjust the mist level as needed.

Troubleshooting

Mist Escaping from the Water Tank

- Check the Water Tank
  Make sure the water tank is properly installed and securely seated on the base.
- Check the Tank Cover
  Make sure the tank cover is properly installed and securely in place.

Insufficient Humidification

- Adjust the Mist Level
  Increase the mist level as needed.
- Check the Room Size
  If the room is larger than the humidifier's recommended coverage area, the humidifier may not effectively increase the humidity level. Consider using a humidifier designed for a larger space.
- Check the Environmental Humidity
  If the surrounding air is very dry, it may take longer for the humidity level to increase.

Scale Buildup / Unpleasant Odor

- Clean Regularly
  Clean the water tank, base chamber, and aroma chamber regularly to help prevent mineral buildup and unpleasant odors.
- Descale Regularly
  Soak parts with mineral deposits in distilled white vinegar for **20–30 minutes**, then rinse them thoroughly with clean water.
- Check the Water Quality
  We recommend using purified or distilled water to fill the humidifier. Avoid using water with high mineral content.

Troubleshooting

Water Leakage / Water Accumulation Around Unit

- Inspect the Water Tank
  a. Check the water tank for cracks or other damage.
  b. Make sure the silicone sealing ring around the water outlet valve is secure.
  c. Do not fill the water tank above the MAX line.
  d. Do not add water through the mist outlet or mist tube.

- Inspect the Base Chamber
  a. Make sure the float plate is installed correctly.
  b. Do not add water directly into the base chamber. If there is too much water in the base chamber, empty it first. Then refill the water tank (not the base chamber) and place it securely onto the base.

- Check the Humidifier's Placement
  a. Place the humidifier on a flat, level surface.
  b. Keep the humidifier at least **12 inches (30 cm)** away from walls and furniture to allow proper airflow.
  c. Do not move, tilt, or shake the humidifier while it is operating.

- Check the Mist Level
  a. Reduce the mist level if it is set too high. Excessive mist output may cause moisture to accumulate on nearby surfaces.
  b. For smallest settings: Move the humidifier to a larger room or place a waterproof mat underneath it.

White Mist or White Dust

- Check Water Quality
  We recommend using purified or distilled water to fill the humidifier. Avoid using water with high mineral content.

- Clean the Humidifier
  a. Clean and descale the water tank and base chamber regularly to remove mineral deposits.
  b. See the "**White Dust**" (**Page 10**) section for details.

Troubleshooting

Furnace Malfunctions

- Minerals in tap water may be released into the air as white dust. Over time, this residue may cause furnace air filters to become clogged more quickly or accumulate on sensitive sensors and electronic components.
- How To Prevent
  - ✔ Use distilled or demineralized water.
    Avoid using water with high mineral content.
  - ✔ Replace furnace filter monthly during humidifier use.
  - ✔ Wipe dust from the exterior of the furnace weekly.

Unusual Noise

- A slight sound during water intake is normal.
- Make sure the water tank is properly installed and securely seated on the base.
- Reduce the mist level.
- Empty the base chamber. Refill the water tank (not the base chamber) and replace it properly onto the base.
- If the noise is unusually loud or continues after completing the steps above, contact Customer Support.

Warranty Policy

Warranty Coverage

- We warrant to the original purchaser that this product shall be free from defects in material and workmanship under normal use and conditions for a period of **1 year** from the date of purchase.
- During the warranty period, we will, at its sole discretion, repair or replace the product if such defects occur.

Warranty Exclusions

This warranty does not cover the following:

- Unauthorized repairs/modifications: Any repair, modification, or disassembly not authorized by the manufacturer voids the warranty.
- Misuse or abuse: Damage caused by accidents, misuse, improper maintenance, or failure to follow instructions in the user manual.
- Commercial use: Products used for commercial, rental, or non-household purposes.
- Normal wear & tear: Deterioration due to regular use or consumable parts (e.g., filters, bulbs).
- External factors: Damage from natural disasters, shipping, power surges, or other external causes.
- Unauthorized sellers: Products purchased from unauthorized dealers or distributors.

Warranty Claim Process

If your product exhibits a defect during the warranty period:

- Contact Customer Support
  Provide the product model, proof of purchase (invoice/order number), and photos/videos of the issue.
- Repair or Replacement
  We will evaluate the claim and provide a repair or replacement if eligible.

Product Registration

- To streamline warranty services, register your product promptly on the manufacturer's official website.
- Registration is quick, optional, and does not affect warranty rights.

Warranty Policy

Customer Support

For warranty claims or inquiries

info@feekaa.com

+1 833-737-1338



Important Notes

- **Voiding conditions**
  Unauthorized repairs, use of chemicals/oils, or improper cleaning void the warranty.
- **Safety alert**
  Discontinue use and contact support if the product exhibits abnormal noise, odors, or malfunction.
- **Your Rights**
  This warranty provides specific legal protections. Additional rights may apply under your state's consumer laws.

Model	MH-2604M	
Warranty Period	Within 1 year from the date of purchase	
Order Placed	Month	Date Year
Sold by		
Order Number		
Customer	Name	
	Address	
	Phone Number	

FeeKaa