





# EBO X

## User Tips - EN



# 1. Before Getting Started


- Please download and register the latest EBO HOME App from the App Store or Google Play. When setting up Wi-Fi, please make sure the Wi-Fi name and password are correctly entered without any spaces.
- Use EBO X where there's a strong Wi-Fi signal. Unstable connections might cause delays or disconnections.
- Keep EBO X firmware updated to enjoy the latest features. Keep EBO X on its charging dock during firmware updates.
-  EBO X is not drop-resistant. Please leave EBO X on the floor and avoid high surfaces (like tables or chairs) to prevent damage from falling.
-  EBO X is not waterproof. Please keep EBO away from water sources.
- When not in use, please manually dock EBO X or let it return to its charging dock automatically. If EBO X is moving on its own, please check if it has a scheduled task or if it's trying to return to the dock due to low battery.

# 2. Using the Charging Dock

- Peel off the anti-slip adhesive from the dock's base. Place the dock flat against a wall, ensuring it sits securely on the floor.



- Please leave ample space around the dock for optimal auto-charging.

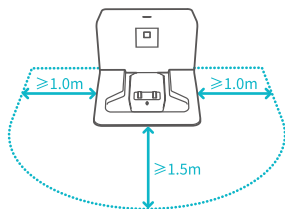


# 3. Mapping and Map Editing


To set up, please complete a full-house mapping to ensure proper security and auto-charging functions. Note: mapping works best in well-lit conditions.

## Before mapping:

- Please ensure EBO X begins on its dock, which should be on the floor.
- To ensure smooth navigation and complete mapping, please clear pathways and entrances by removing objects, such as wires on the floor. Properly arrange items like tables and chairs.
- If there are door thresholds or steps with a height exceeding **7mm**, it is recommended to close doors or manually add barriers to prevent falls.

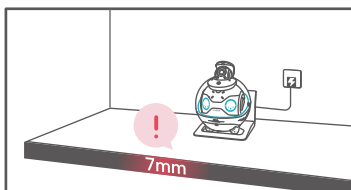


- Mapping on soft carpets thicker than **5mm** is not currently supported. Please place artificial barriers around the edges of carpets to guide EBO X around carpeted areas.

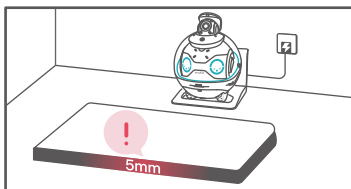

## During mapping:


- Areas with black walls, transparent glass, or mirror-like surfaces may cause EBO X to experience slight collisions while mapping. EBO X will continue to complete the mapping process. To reduce the collisions, you can cover or add barrier in front of these specific surfaces during mapping.
- Minimize movement of people, pets, or other objects in EBO X' s line of sight.

- Please avoid lifting or interfering with EBO X's movements. Do not move the charging dock.

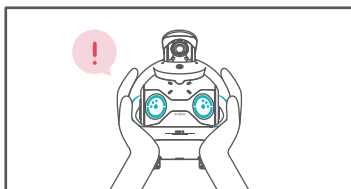

## After mapping:

- Please remap if significant environmental changes occur, like moving furniture.
- Update the charging dock's position in the App if it's moved.
- When dividing room areas on the map, you can simply outline the central area of each room.

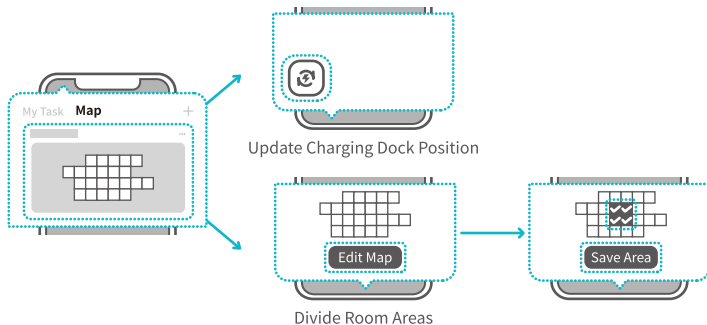


## 4. Auto-Charging


- When battery level drops below 20%, EBO X will automatically return to the dock for charging, and you will receive a notification through the App.
- To avoid interference, please place the charging dock away from other devices with infrared navigation.
- If EBO X is far from the dock during auto-charge, it will use its map to reposition and plan its route back to the dock.

# 5. Night-time Use


- If the lights on EBO X or the charging dock are too bright during nighttime, you can adjust the brightness of EBO X's lights and turn off the atmosphere light on the dock using the App.

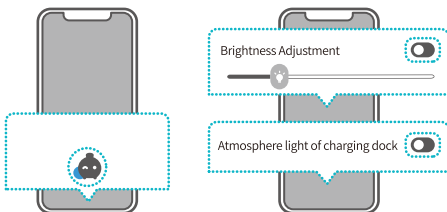

- If EBO X's volume is too loud, you can adjust volume in the App.

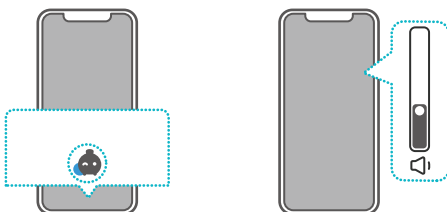

- For optimal visibility during nighttime, please navigate to the control page in the App and switch to Night Mode.

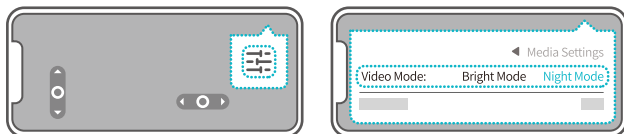

# Product Q&A and Technical Support

- For any product inquiries or feedback, please contact [support@enabot.com](mailto:support@enabot.com) and join Enabot EBO X Global User Group on Facebook.



Global User Group



[www.enabot.com](http://www.enabot.com)