


# INSTRUCTION MANUAL

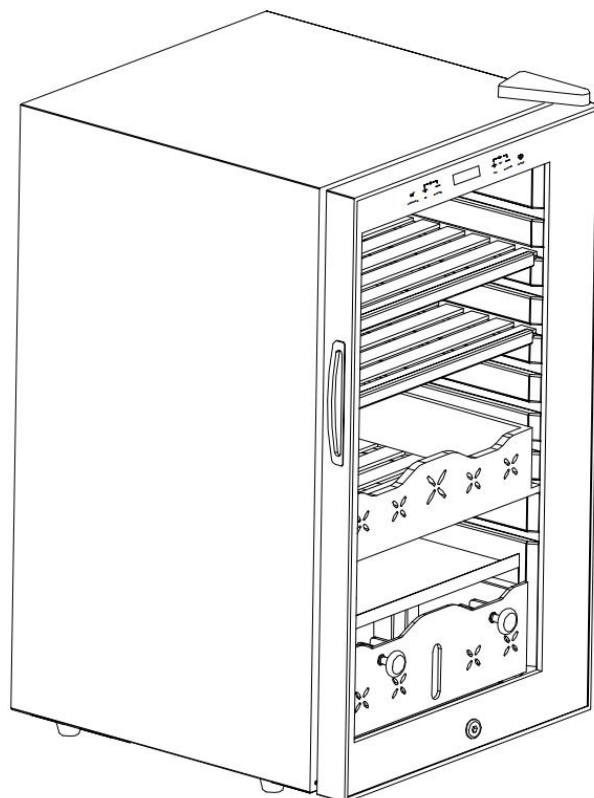

## MODEL:5624846

If you have any questions, please contact our professional after-sales team first, we will provide you with satisfactory solutions.

### NEED HELP? CONTACT US!



Have product questions? Need Technical Support?  
Please feel free to contact us.

✉ After-sales e-mail: [service@callsupports.com](mailto:service@callsupports.com)

🌐 After-sales website: [Callsupports.com](http://Callsupports.com)

☎ +1 888-968-7197 (US) 9AM - 6PM EST

## **TABLE OF CONTENTS**

IMPORTANT SAFETY INSTRUCTIONS	3
PRODUCT DIAGRAM	6
INSTALLATION INSTRUCTIONS	7
Before Using Your Cigar humidor	7
To Install Your Cigar humidor	7
OPERATION INSTRUCTIONS	9
Controls	9
Storage	10
Door Lock	10
CARE & MAINTENANCE	11
Cleaning Your Cigar humidor	11
Power Failure	11
Vacation Time	11
Moving Your Cigar humidor	12
Energy Saving Tips	12
TROUBLESHOOTING GUIDE	13

## **IMPORTANT SAFETY INSTRUCTIONS**

Your safety and the safety of others are very important.

This Cigar humidor complies with the applicable safety requirements and is safe for daily use. However, basic safety precautions should always be followed when using an electrical appliance, to reduce the risk of fire, electric shock, and personal injury.



**DANGER**



- Plug into its own individual electrical outlet with a voltage rating that matches the rating label on the humidor (**115/120V AC only, 60Hz, 10A**). Use receptacles that cannot be turned off by a switch or pull chain. Be sure that the plug is fully inserted into the receptacle.
- Plug into a grounded 3-prong outlet. Do not under any circumstances cut or remove the third ground prong from the power cord supplied.
- To protect against electric shock, do not immerse the Cigar humidor, plug or cord in water or other liquids.
- Never unplug the humidor by pulling the power cord. To disconnect the Cigar humidor, always grip the plug firmly and pull straight out from the wall outlet.
- Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- Do not connect or disconnect the electric plug when your hands are wet. Do not operate the humidor with wet hands, while standing on a wet surface or while standing in water.
- Unplug the Cigar humidor or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- When moving the Cigar humidor, be careful not to roll over or damage the power cord.
- Never clean Cigar humidor parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapor and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Do not attempt to repair or replace any part of your Cigar humidor unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- An empty Cigar humidor can be dangerous to children. Remove any latches, lids, locks, and/or doors from unused or discarded Cigar humidors to prevent child entrapment and suffocation. Never allow children to operate, play with or crawl inside this Cigar humidor.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

1. Children should be supervised to ensure that they do not play with the appliance.
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
5. When positioning the appliance, ensure the supply cord is not trapped or damaged.
6. Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
7. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
8. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
9. Do not damage the refrigerant circuit.
10. Do not use electrical appliances inside the drink storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
11. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
12. This appliance is intended to be used in household and similar applications such as
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses and by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - catering and similar non-retail applications.
13. To avoid contamination of drink, please respect the following instructions:
  - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
  - Clean regularly surfaces that can come in contact with drink and accessible drainage systems.
  - Clean water tanks if they have not been used for 48 h, flush the water system connected to a water supply if water has not been drawn for 5 days.
  - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.



**WARNING: Risk of fire / flammable materials**

The coolant circuit of this unit contains the refrigerant Isobutane (R600a), a natural gas that is flammable and of high environmental compatibility. Make sure no parts of the coolant circuit get damaged during transport and installation of the appliance.



## WARNING



- Do not use this Cigar humidor for other than its intended purpose. For indoor, household use only.
- Move this Cigar humidor by 2 people. Failure to do so can result in injury.
- Place this Cigar humidor in a well-ventilated area with temperatures above 15°C (60°F) and below 32°C (90°F).
- To ensure proper ventilation for your Cigar humidor, the front of the humidor must be completely unobstructed.
- This Cigar humidor must be installed in an area away from wind, rain, water spray or drips.
- The Cigar humidor should not be located next to ovens, grills or other sources of high heat.
- Do not kink or pinch the power supply cord of Cigar humidor.
- It is important for the Cigar humidor to be leveled in order to work properly. You may need to make several adjustments to level it.
- This Cigar humidor is designed for storing and cooling Cigars. Do not store perishable food or medical products inside the humidor.
- When disposing of refrigeration Cigar humidors, special handling is often required. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
- **WARNING:** Risk of child entrapment and suffocation. Before you throw away this or an old humidor, remove the door. Leave the shelves in place, so that children may not easily climb inside.



### FLAMMABLE REFRIGERANT GAS



**DANGER** - Risk of fire or explosion. Flammable refrigerant used.

**DO NOT use mechanical devices to defrost refrigerator. DO NOT puncture refrigerant tubing.**

**DANGER** - Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. DO NOT puncture refrigerant tubing.


**CAUTION** - Risk of fire or explosion. Flammable refrigerant used. Consult repair manual / owner's guide before attempting to service this product. All safety precautions must be followed.

**CAUTION** - Risk of fire or explosion. Dispose of property in accordance with federal or local regulations. Flammable refrigerant used.

**CAUTION** - Risk of fire or explosion due to puncture of refrigerant tubing. Follow handling instructions carefully. Flammable refrigerant used.

**CAUTION** - To prevent a child from being entrapped, keep out of reach of children and not in the vicinity of the Cigar humidor.

## PRODUCT DIAGRAM

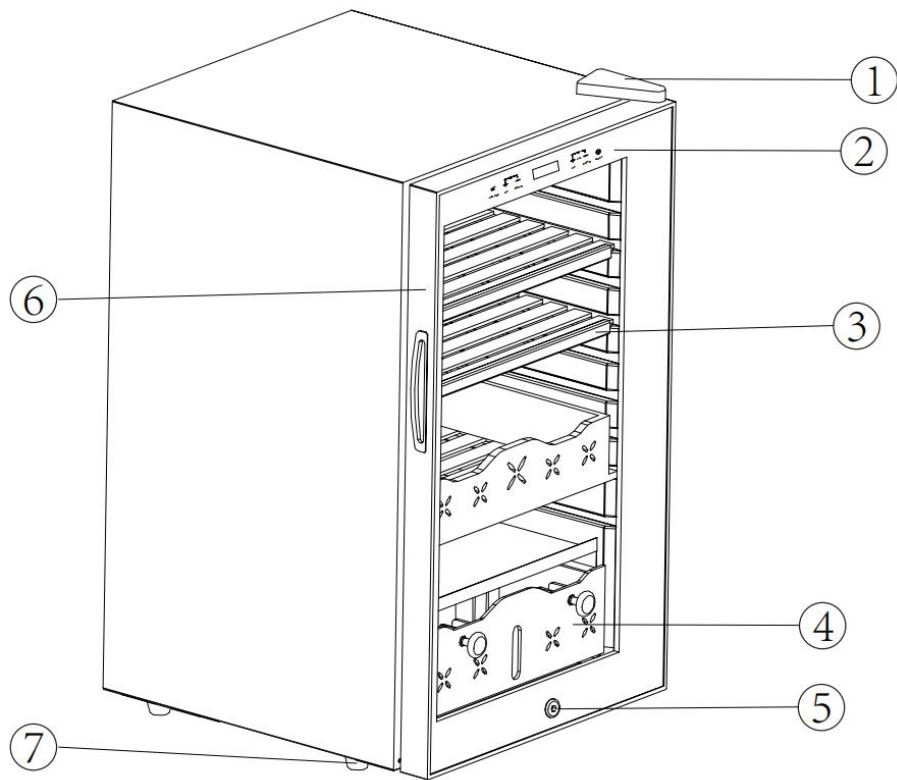

- |   |               |   |               |
|---|---------------|---|---------------|
| 1 | Top Hinge     | 4 | Water Tray    |
| 2 | Control Panel | 5 | Lock          |
| 3 | Shelves       | 6 | Door          |
|   |               | 7 | Leveling Legs |

## **INSTALLATION INSTRUCTIONS**

### **Before Using Your Cigar humidor**

- Remove the exterior and interior packaging.
- Check to be sure you have all of the following parts:
  - 3 Shelves
  - 1 Water Tray
  - 2 Keys
  - Instruction Manual
  - 2 Extra Screws for Installing Handle
- **IMPORTANT:** Before connecting this Cigar humidor to a power source, let it stand upright for approximately **24 hours**. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Install the handle on the left side of the door.

### **To Install Your Cigar humidor**

- This Cigar humidor is designed for free standing or built-in (fully recessed) installation.
- Place your Cigar humidor on a solid and level floor that is strong enough to support it when it is fully loaded. This will ensure a vibration-free and noise-free operation. Adjust the leveling legs in and out to stabilize the humidor horizontally. If the legs are not properly adjusted, the humidor may be unstable and result in excess noise or vibration.
- Locate the Cigar humidor away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extremely cold ambient temperatures may also cause the humidor not to perform properly.

- It is not advisable to install this humidor in moist areas or directly adjacent to a kitchen sink, as moisture could cause premature corrosion to the components of your new humidor.

It is recommended you install the Cigar humidor in a place with temperatures **above 60°F (15°C) and below 90°F (32°C)**, and humidity is under 60%. If the ambient temperature is above or below recommended temperatures, the performance of the humidor may be affected. Placing your humidor in extremely cold or hot conditions may cause interior temperatures to fluctuate, and the temperature range of 16°C-22°C (61°F-72°F) may not be reached.

- Connect the Cigar humidor to an exclusive, properly grounded, standard electrical supply (**115 V AC only, 60 Hz**), in accordance with the National Electrical Code and local codes and ordinances. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized products service center.

**⚡Warning⚡**: Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized service center.

- The Cigar humidor should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the Cigar humidor. This provides the best performance and also prevents overloading house wiring circuits that could cause a fire hazard from overheated.
- Do not under any circumstances cut or remove the third ground prong from the power cord supplied.
- Do not use an extension cord or adapter plug. However, if you must use an extension cord, it is absolutely necessary that it be a UL-listed, 3-wire grounding type Cigar humidor extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 10 amperes (minimum) and 120 volts.
- Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- If the Cigar humidor is going to be used in an area that is prone to power surges/outages, it is suggested that you use a power surge protector. The surge protector that you select must have a surge block high enough to protect the Cigar humidor it is connected to. Damages due to power surges are not considered a manufacturer covered defect and will void your product warranty.




## OPERATION INSTRUCTIONS

### Controls

After plugging the Cigar humidor into a wall outlet, the humidor would turn on automatically and the LCD screen would show the temperature inside of the humidor.

After setting your desired serving temperature, allow the humidor to cool down for **3 to 4 hours** before placing Cigar bottles in the Cigar humidor.

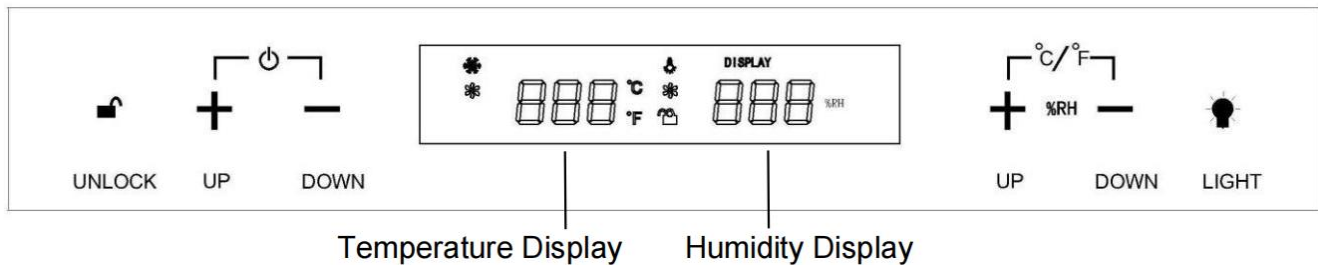

**Temperature Range : 16-22°C ( 61-72°F )**

**Humidity Range : 65-75%RH**

**The best storage environment for cigars : Temperature:18-20°C , Humidity:65-70%RH**

#### **1. Lock Key**

- Operate this key to unlock/lock the control panel.
- Long press this button for 3 seconds to unlock the control panel and hear a prompt tone; after 15 seconds, the panel will automatically lock.
- All operations can only be carried out under the premise of unlocking.

#### **2. Temperature Up Key** Left

- This key can increase the temperature, press this key and the temperature will flash to display the original set temperature, after each press, the temperature will increase by 1 unit.
- After the key operation is completed, 5 seconds resumes displaying the actual temperature.

#### **3. Temperature Down Key** Left

- This key can decrease the temperature, press this key and the temperature will flash to display the original set temperature, after each press, the temperature will decrease by 1 unit.
- After the key operation is completed, 5 seconds resumes displaying the actual temperature.

#### 4. Humidity Up Key Right

- This key can increase the humidity. Press this key to display the original set humidity. After each press, the humidity will increase by 1 unit.
- After the key operation is completed, the 5 seconds resumes displaying the actual humidity.



#### 5. Humidity Down Key Right

- This key can decrease the humidity. Press this key to display the original humidity setting, and each time it is pressed, the humidity will decrease by 1 unit.
- After the key operation is completed, the 5 seconds resumes displaying the actual humidity.



#### 6. Light Control Key

- Operate this key to control the light switch.

#### 7. Combination Key: Power On/Off Key

- Press the left  and  two keys at the same time to control the Cigar humidor on/off.

#### 8. Combination Key: Temperature Conversion Key

Press the right  and  two keys at the same time to toggles temperature display.

### Storage

Many cans and bottles may differ in size and dimensions. As such the actual number of bottles you may be able to store may vary.

### Door Lock

This humidor can be secured with a lock and key. The keys are located inside the plastic bag that contains the Instruction Manual. Insert the key into the lock and turn it clockwise to lock the door, making sure the metal pin is engaged completely. To unlock the door, do the reverse. Remove the key and put it in a secure location.

## **CARE & MAINTENANCE**

### **Cleaning Your Cigar humidor**

**IMPORTANT:** Always unplug the humidor before cleaning or performing maintenance. Never use harsh cleansers or scouring pads to clean any part of the humidor.

- Turn off the power, unplug the Cigar humidor, and remove all items including shelves.
- Wash the inside surfaces with warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning the area near the controls, or any electrical parts.
- Wash the outside cabinet with warm water and a mild liquid detergent. Rinse well and wipe dry with a clean soft cloth. Do not use steel wool or steel brush to rub the stainless steel, which will contaminate the stainless steel with steel particles and rusting may occur.

### **Power failure**

Most power failures are corrected within a few hours and should not affect the temperature of your Cigar humidor. If the power is off for an extended period of time, proper steps should be taken to protect your contents.

### **Vacation Time**

Leave the Cigar humidor operating during vacations of less than three weeks. For periods longer than this, turn the Cigar humidor off and leave the door slightly ajar to prevent odor from building inside the Cigar humidor.

### **Moving Your Cigar humidor**

- Remove all items (bottles) from the humidor;
- Securely tape down any loose items, such as shelves, inside the humidor.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Ensure that the Cigar humidor stays securely in the upright position during transportation.


Protect the outside of the Cigar humidor with a blanket or a similar item.


### **Energy saving tips**

- The humidor should be located in the coolest area of the room away from heat sources or direct sunlight.
- Ensure that the humidor is adequately ventilated. Never cover air vents.
- Only open the humidor door for as long as necessary. Frequent opening of the door will affect internal temperature.

## **TROUBLESHOOTING GUIDE**

Before you reach out to customer service, please check if you can resolve the problems according to the following hints.

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION</b>
The Cigar humidor does not run.	The Cigar humidor may not be plugged in, or plug may be loose.	Ensure the Cigar humidor has been plugged in properly.
	The Cigar humidor is turned off.	Press  to turn on the humidor.
	House fuse blown or tripped circuit breaker.	Check/replace fuse. Reset circuit breaker.
The Cigar humidor is not cold enough.	External environment may require a higher setting.	Set a colder setting. Allow several hours for the temperature to stabilize.
	The Cigar humidor has recently been disconnected for a period of time.	It takes 3-4 hours for the Cigar humidor to cool down completely.
	Prolonged or frequent door openings.	Open the door less often.
	The door is not closed completely.	Close the door properly.
	The door gasket does not seal properly.	Check the door gasket. Clean or change gasket if necessary.
The compressor turns on and off frequently.	The room temperature is hotter than normal.	It's normal for the Cigar humidor to work harder under these conditions.
	A large amount of contents has been added to the humidor.	A large amount of contents cause the Cigar humidor to run more until the desired temperature is reached.
	Prolonged or frequent door openings.	Open the door less often.
	The temperature has not been set correctly.	Press either <b>+</b> or <b>-</b> to check the set temperature, and set the temperature properly.
	The door is not closed completely.	Close the door properly.
	The door gasket does not seal properly.	Check the door gasket. Clean or change gasket if necessary.

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION</b>
The light does not work.	Not plugged in.	Plug the humidor in.
	The circuit breaker tripped or a blown fuse.	Check the breaker and/or fuses.
	The light button is "OFF".	Press  to turn the light ON.
Vibrations.	The humidor is not leveled.	Check to assure that the humidor is level.
	The bottles are vibrating.	Make sure the bottles don't touch each others.
	There is an object under the humidor.	Remove the object under the humidor.
The humidor seems to make too much noise.	The humidor is not level.	Level the humidor.
	Normal noise from the flow of the refrigerant	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your humidor. Contraction and expansion of the inside walls may cause popping and crackling noises.
The door will not close properly.	The humidor is not level.	Level the humidor.
	The door was reversed and not properly installed.	Re-install the door properly.
	The gasket is dirty.	Clean the door gasket.
	The shelves are out of position.	Place the shelves properly.
Moisture build up on interior or exterior of the Cigar humidor.	This is normal during high humidity periods.	Lower the room humidity.
	This is normal in high temperature environment.	Move the humidor to a humidor place, and avoid heat and sunlight.
	Prolonged or frequent door openings.	Open the door less often.
	The door does not seal completely.	Check door gaskets for proper seal.