


Adaptive Design, Effortless Living.

HULALA[®]

HOME

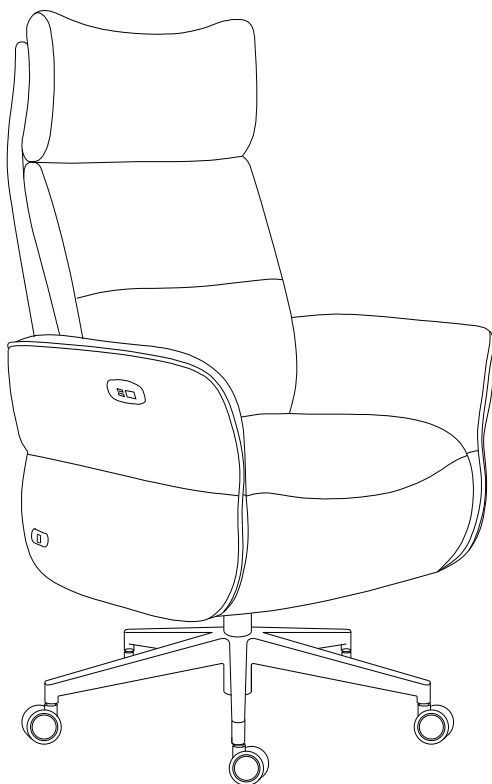

ITEM NO. OFTF1996

Scan for manual,
video & advice.



Adaptive Design, Effortless Living.



If you have any questions or concerns,
don't hesitate to reach out to us.

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)
Email: customerservice@hulalahome.com

MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.

Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :

This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
300 LBS



Installation:
15 minutes.



Two Person



Before You Start

Please follow the steps below:



Unbox the package and check if all parts and accessories are complete.



If you find something missing, stop assembly and contact your supplier immediately.



Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.



NOTE: Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty


-  We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.
-  Are you having difficulty with assembly? Missing parts? Please send email with your order number to **customerservice@hulalahome.com**
-  For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.


Exploded Diagram

Please confirm that you have received all 1 box (Each carton contains one complete single module.), then begin the assembly!

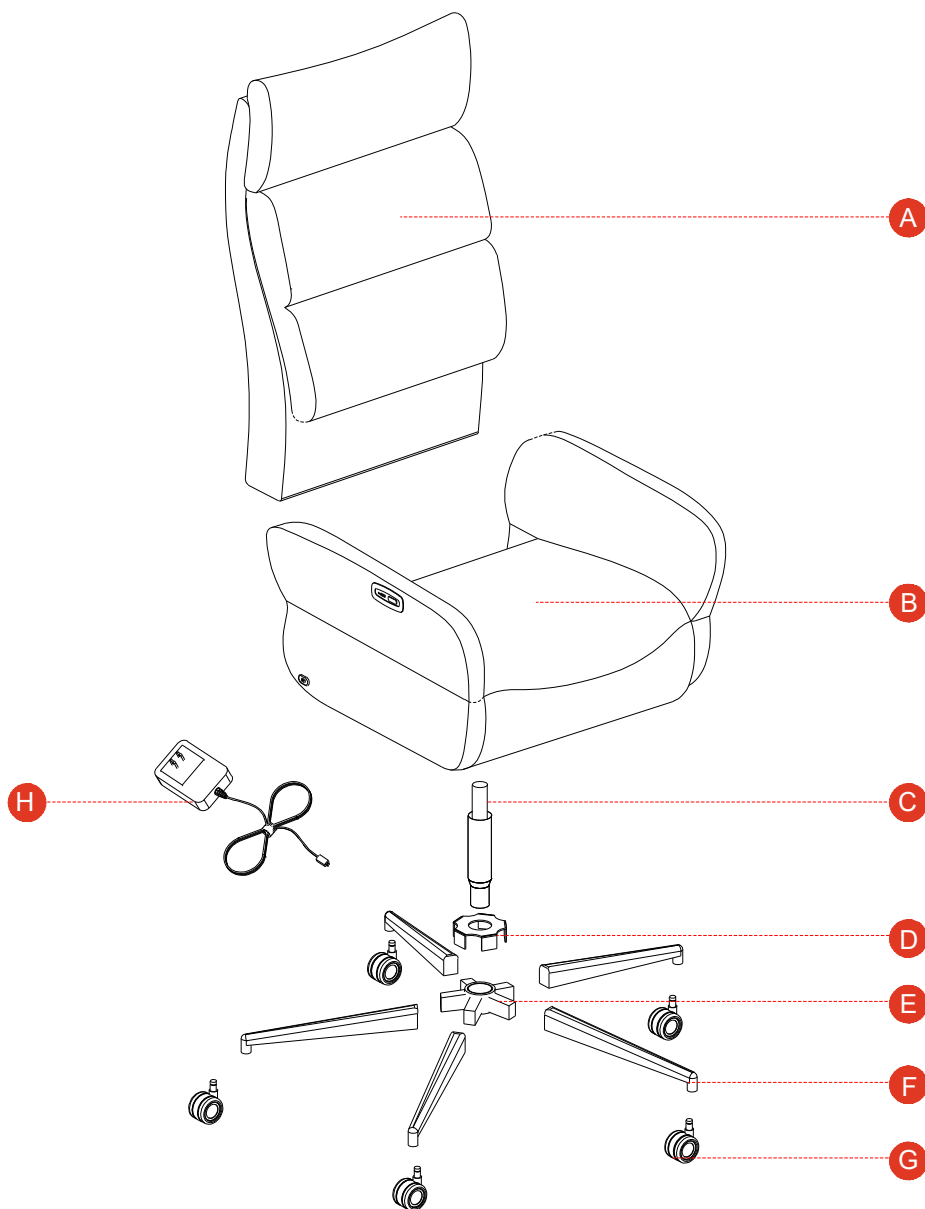


Parts List

A ×1



Backrest

B ×1

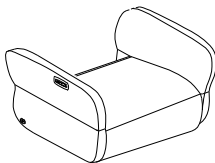

Seat Frame

C ×1




Gas lift

D ×1



Decorative Cover

E ×1



Base Hub

F ×5



Base Leg

G ×5



Caster

H ×1



Power plug

Hardware List

1 ×10+2



Bolt M6 X12mm

2 ×1





Allen Key

Assembly Instructions

Step 1

Insert the Base leg F into Base hub E, and secure it with Bolt 1.



1	 x10	Bolt M6 X12mm
2	 x 1	Allen Key

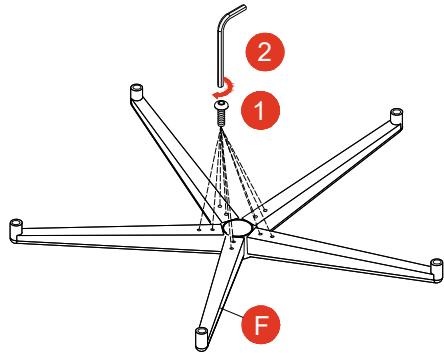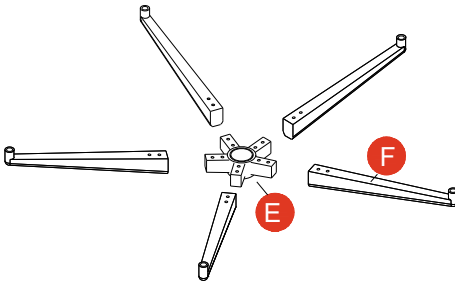

Step 2


Press theCaster G into the hole on Base leg F with a little force by hand.

Insert the Gas lift C into the hole on the base hub, and cover it with the Decorative Cover D.

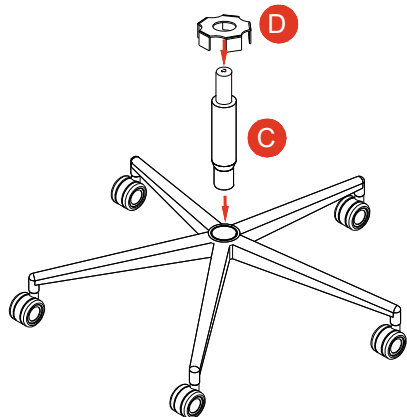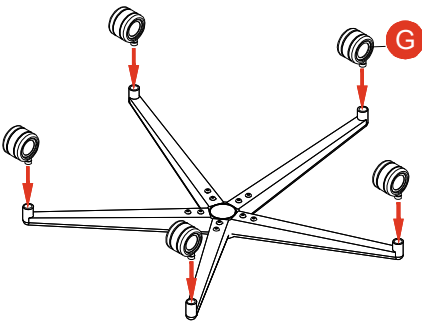


Step 3

First use: **Connect the wiring harness connectors, then press to power on!**

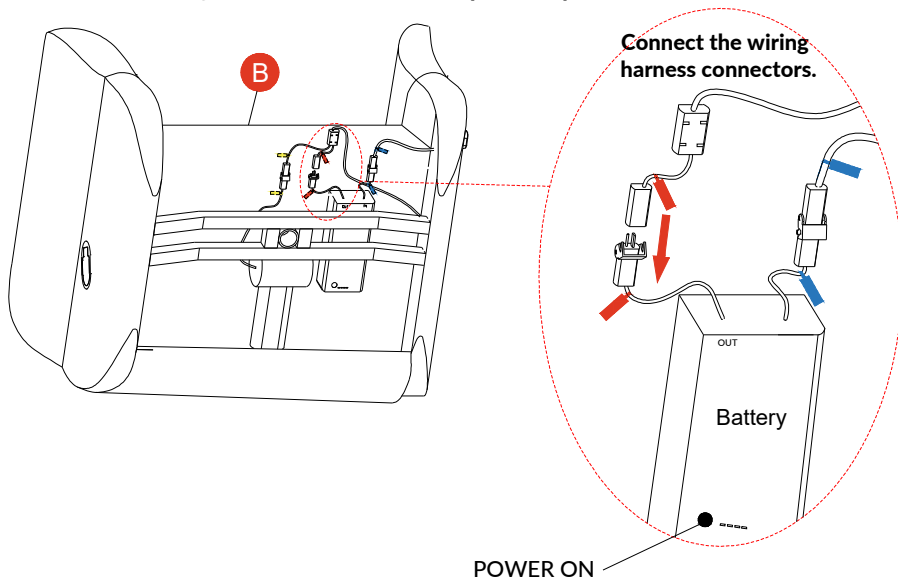


Step 4

Place Seat Frame B on base. Align holes with Gas lift C as shown.

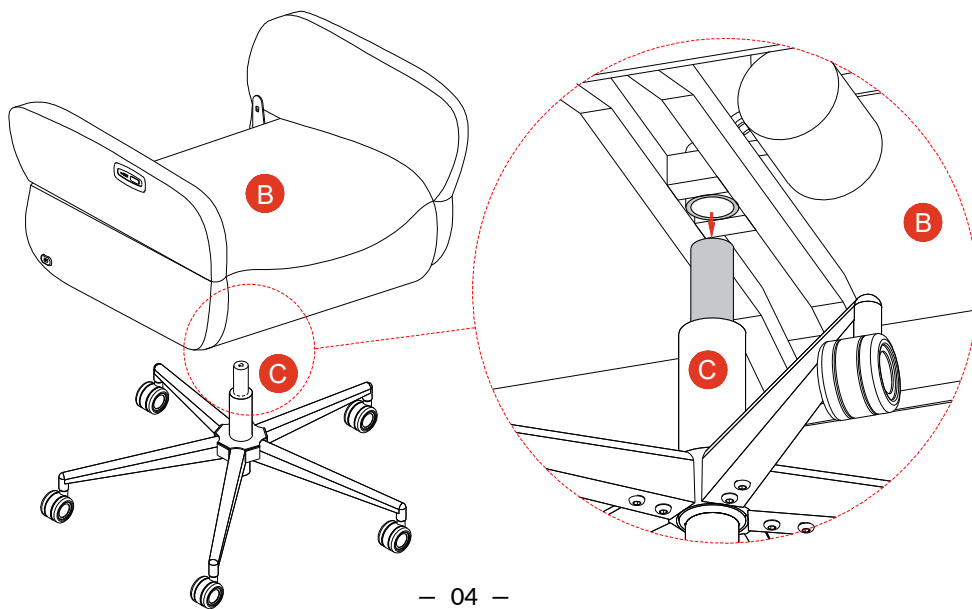


Step 5

Insert backrest into Seat Frame using the tabs as shown.

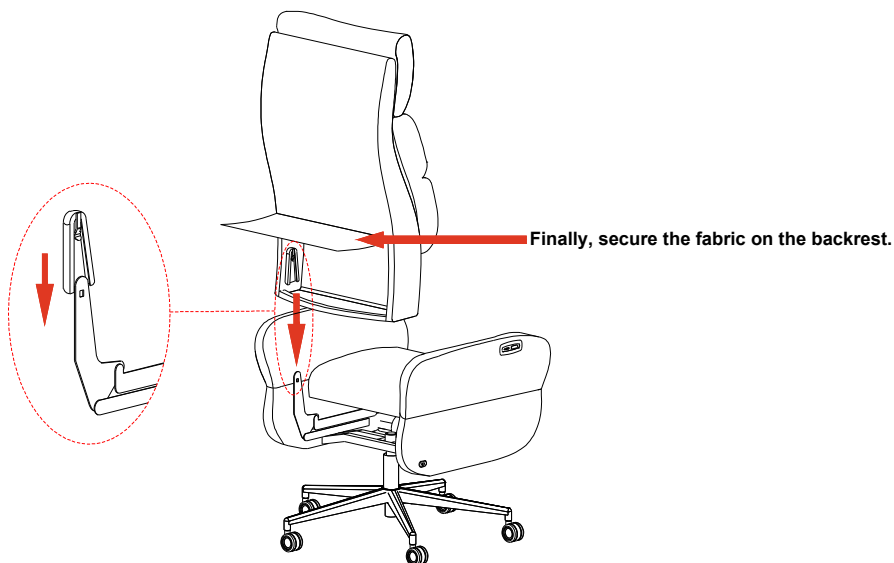

Functions


1. Open and Close

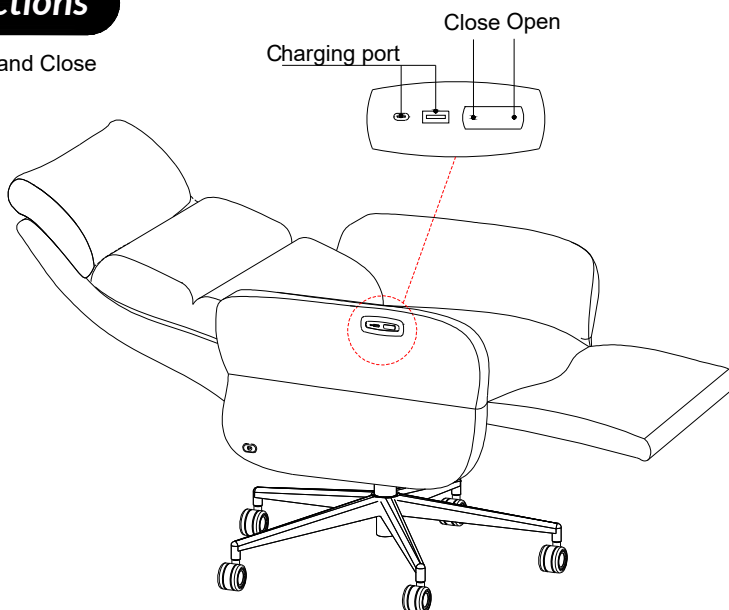

2.Armrest Operation Guide


Repeat the cycle by following the steps.

Step 1 **Unlock**

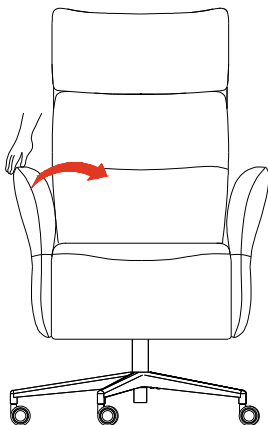


Push the armrest to the highest position, then push inward to unlock.

Step 2 **Reset to flat**

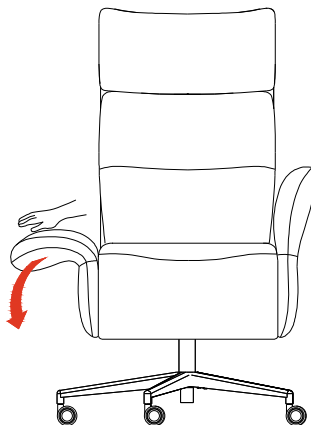


Lower the armrest to the fully flat position. The armrest must be reset to flat before proceeding to Step 3.

Step 3 **Adjust**

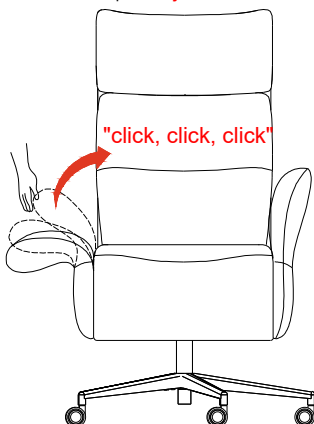

Lift the armrest to adjust the gear to your desired angle.

Step 4 **Repeat Operation**

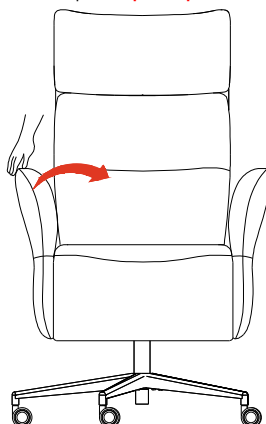

Repeat Steps 1 and 2 to re-adjust.

Note:

If the armrest gets stuck, lift and push inward to unlock, then reset it to the flat position. A slight "click, click, click" sound is normal.


If no sound is heard, repeat the unlocking process.

Adjust the left and right armrests separately as they operate independently.

3.Headrest Adjust


To adjust the headrest height, depress and hold the black buttons located beneath the two support rods, then manually raise or lower the headrest to the desired position.

Headrest angle adjustment: refer to armrest function.

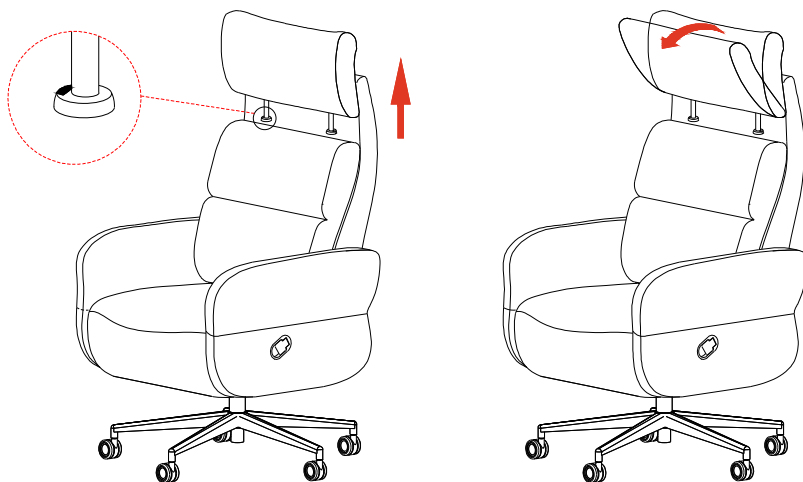

4.Seat Height Adjust


The seat height can be adjusted up or down by pulling the handle.

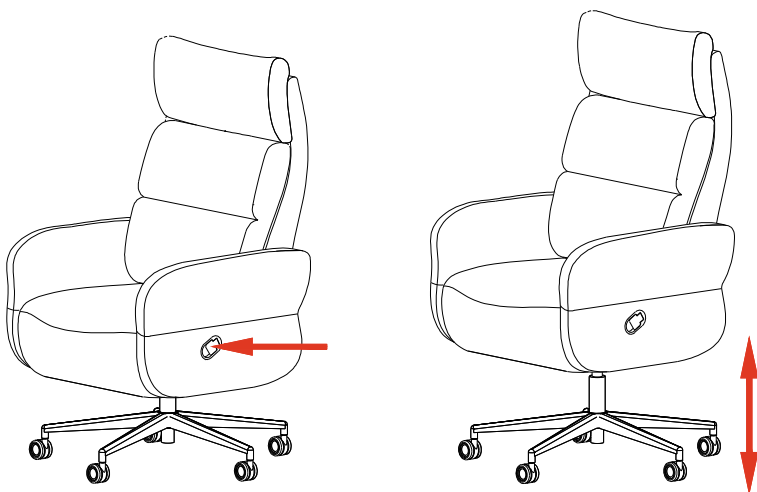


5.Charging for Built in Rechargeable Battery

Charge the built-in battery via the power adapter when its power is exhausted.

Plug the power adapter into
the power outlet.

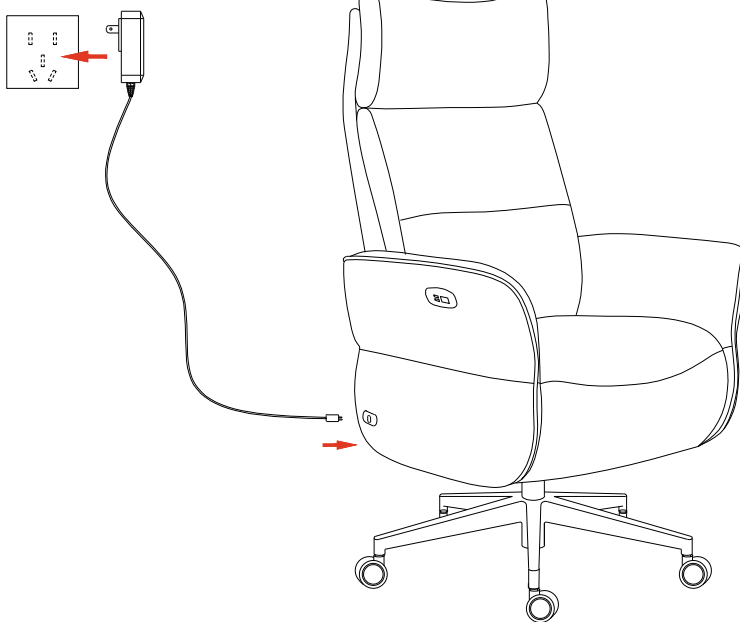

Wiring diagram

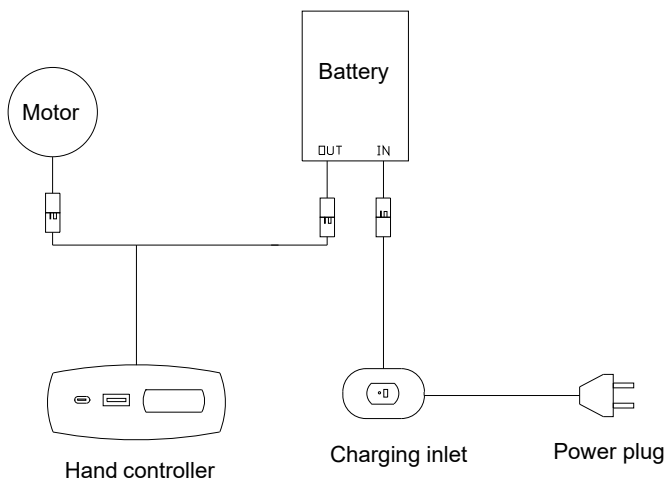

Troubleshooting Guide

Issue	Possible Cause	Solution
Chair cannot extend/retract (electric)	Battery depleted	Charge the battery using the power cord
	Loose connection between battery and hand controller	Check and secure all connections
	Loose connection between hand controller and motor	Check and secure all connections
	Motor failure	Contact customer service for motor inspection/replacement
Hand controller does not respond	Battery depleted	Charge the battery and try again
	Loose or damaged cable	Inspect and secure/replace the cable if necessary
	Hand controller defective	Contact customer service for replacement
Battery does not charge	Power cord not fully inserted	Ensure the power cord is securely connected to both battery and outlet
	Outlet has no power	Try a different outlet
	Battery defective	Contact customer service for battery replacement

Adaptive Design, Effortless Living.



WWW.HULALAHOME.COM

Email: customerservice@hulalahome.com

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)