

# **MILESEEY**®

Shenzhen Mileseey Technology Co., Ltd.

Add: No.3601 Block A, Tanglang Town Plaza West, Fuguang Community, Taoyuan Street, Nanshan District, Shenzhen, China Web: www.mileseeytools.com E-mail: service@mileseey.com

Made in China



# **MILESEEY**®

TR120 Handheld Infrared Thermal Imager









#### **Preface**

Thank you for purchasing the new TR120 thermal imager. In order to use this product safely and correctly, please read this manual thoroughly, especially the Safety Instructions part.

After reading this manual, it is recommended to keep the manual at an easily accessible place, preferably close to the device, for future reference.

# **Limited Warranty and Liability**

MILESEEY guarantees that the product is free from any defect in material and workmanship within one year from the purchase date. This warranty does not apply to damages caused by accident, negligence, misuse, modification, contamination or improper handling. The dealer shall not be entitled to give any other warranty on behalf of MILESEEY. If you need warranty service within the warranty period, please contact your seller directly.

MILESEEY will not be responsible for any special, indirect, incidental or subsequent damage or loss caused by using this device.

# **Table of Contents**


1. Specifications	- 4
2. Structure	
3. LCD Indicators/Icons	7
4. Power on/off	7
5. Menu	8
6. Image View	8
7. Temperature Mark	9
8. HI/LO Alert	
9. LED light	10
	10
11. Language	11
12.Temperature Unit	11
13. Emissivity	12
14. Laser	
15. Time & Date	
16. Brightness	13
17. Auto Power Off	14
18. Auto Save	14
19. Format SD	15
20. Device Info	
21. Factory Reset	
22. USB Communication and PC Analysis Software	16
23. Maintenance	
24. Safety Instructions	17
25. Appendix	17

# 1. Specifications

Sensor	Uncooled infrared focal plane thermal imaging sensor		
Pixel size	17μm		
Infrared spectrum bandwidth	8~14µm		
Thermal imaging pixels	10800 (120*90)		
Thermal imaging sensitivity	<60mK		
Field of view (FOV)	50°(H) x 38°(V)		
Spatial resolution (IFOV)	7.6 mrad		
Rate	25Hz		
Minimum imaging distance	0.1m		
Focus	Focus-free		
Temperature range	-20°C ~ 400°C		
Accuracy	±2°C or ±2%, whichever is greater (-10°C ~ 400°C room temperature 25°C)		
Measurement units	°C/°F		
Resolution	0.1°C		
Emissivity	0.95 (default) 0.01 ~ 0.99		
Temperature display	Center point temperature, high/low temperature tracking		
Palettes	lava,rainbow HC,black hot, white hot, iron,Rainbow		
Display type	2.4" TFT LCD		
Display resolution	320 x 240		

Buttons	4 buttons (power, up, down, OK) 1 trigger		
Laser	√(Class 2)		
LED Light	√		
Temperature alarms	LCD, LED, buzzer		
Image storage	Micro SD Card		
Image format	BMP		
PC analysis software	√		
USB communication	Type-C USB		
Battery	Li-ion 3.7V/2600mAh 18650		
Operating time	Continuous operating time >9h		
Charging time	≤2.5h		
Charging voltage/current	5V / 2A		
Power on speed	0s (wake up) / 5s (power on)		
Auto power off	5min/10min/30min(default)/off		
Operating temperature	0~50°C (32~140°F)		
Storage temperature	-20 ~ 60°C ( -4 ~ 140°F )		
Operating humidity	< 85%RH ( Operating humidity )		
IP rating	IP54		
Drop proof	2m		
Product size (L×W×H)	197 x 72 x 60 mm		
Product weight	310g		
Certificates	CE 、UKCA、RoHS		
Accessories	User manual, Type-C USB cable, 32GB Micro SD card		

# 2. Structure

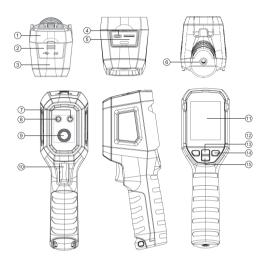


Item	Description	Item	Description
1	Upper housing	9	Infrared camera lens
2	Interface protection cover	10	Image capture/trigger
3	Lower housing	11	LCD
4	USB Type-C interface	12	OK
5	SD card slot	13	Up
6	Bracket screw hole	14	Power / Back
7	Laser emission aperture	15	Down
8	LED light		

5

#### 3. LCD Indicators/Icons

Display size: 2.4" (495mm×377mm)

Display resolution: 320 (vertical) × 240 (horizontal)

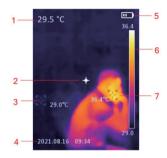

Item	Description
1	Center point temperature
2	Center point
3	Lowest temperature spot
4	Date and time
5	Battery status
6	Temperature Bar
7	Highest temperature spot

#### 4. Power On/Off

When the thermal imager is not turned on, long press the power button for 3s to power on. When the thermal imager is in the suspend state, short press the power button for 1s to power on.

When the thermal imager is turned on, short press the power button for 1s to enter the suspend state. Long press the power button for 8s, "power off" will show on the screen, and the thermal imager will be turned off.

#### 5. Menu

Short press the OK button to enter the menu interface. Short press the Back button to return to the upper menu. Short press the trigger to directly return to the main interface of the thermal imager.




## 6. Image View

In the menu, select Image View, and then short press the OK button to enter the image viewing interface. Press the Up/Down button to select an image. Press the OK button twice to view the Picture Info or Delete images.










#### 7. Temperature Mark

In the menu, short press the Up/Down button to select Temper Mark, and then short press the OK button to enter the temperature mark interface. Center Point/Hi/Lo Point/Palette/Date&Time can be set in this interface. For example, select Center Point, and then press the OK button to turn on/off this function.




#### 8. HI/LO Alert

In the menu, short press the Up/Down button to select HI/LO Alert, and then short press the OK button to enter the alert setting interface. Temper Alert, Buzzer, HI Alert and LO Alert can be set in this interface.

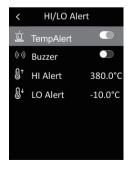

#### 9. LED light

In the menu, short press the Up/Down button to select Hand Light, and then short press the OK button to turn on/off the flashlight.

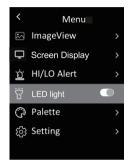

#### 10. Palette

In the menu, short press the Up/Down button to select Palette, and then short press the OK button to enter the palette selection interface. Short press the Up/Down button to step through six palettes: Rainbow, Iron, White Hot, Black Hot, Rainbow HC, Lava, and short press the OK button to confirm the selected palette.



#### 11. Language

In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. Select Language, and short press the OK button to switch between English/Chinese.




# 12. Temperature Unit




#### 13. Emissivity

In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. In the submenu, short press the Up/Down button to select Emissivity, and short press the OK button to set the emissivity.

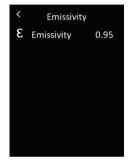


#### 14. Laser


In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. In the submenu, short press the Up/Down button to select Laser, and short press the OK button to turn on/off the laser.

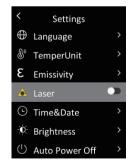

11 12


In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. In the submenu, short press the Up/Down button to select Time&Date, and short press the OK button to enter the setting interface. The Time Format can switch between 12H and 24H. Press the Up/Down button to adjust the value of time and date, and short press the OK button to confirm.

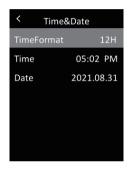

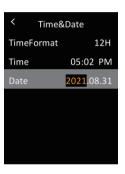

# 16. Brightness

In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. In the submenu, short press the Up/Down button to select Brightness, and short press the OK button to enter the setting interface. The brightness can be Low, Middle or High.



#### 17. Auto Power Off

In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. In the submenu, short press the Up/Down button to select Auto Power Off, and short press the OK button to enter the setting interface. In this interface, users can set the auto power off time (5/10/30min) or turn off the auto power off function.



#### 18. Auto Save

In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. In the submenu, short press the Up/Down button to select Auto Save. Short press the OK button to turn on/off the auto save function.



13

#### 19. Format SD

In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. In the submenu, short press the Up/Down button to select Format SD and short press the OK button to enter the setting interface. Press the OK button select Yes or No.



#### 20. Device Info

In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. In the submenu, short press the Up/Down button to select Device Info and short press the OK button to enter the information viewing interface. The device information including Code, Firmware, Capacity and Available can be viewed.



## 21. Factory Reset

In the menu, short press the Up/Down button to select Setting, and then short press the OK button to enter the submenu. In the submenu, short press the Up/Down button to select Factory Reset and short press the OK button to enter the setting interface. Press the OK button select Yes or No.



## 22. USB Communication and PC Analysis Software

- Connect the USB data cable to the computer. Users can view images and analyze data via the PC software.
- 2. To use the PC software correctly, please read the Software User Manual.
- During USB communication, do not directly unplug the USB cable. If users
  want to disconnect the device when it has been successfully connected to the
  computer, they can select Remove Device in the lower right corner of the
  computer.

#### 23. Maintenance

Use a wet cloth or weak soap solution to clean the outer shell of the device. Do not use abrasives, isopropyl alcohol or solvents to clean the outer shell, lens or window.

# 24. Safety Instructions

In order to ensure the measurement accuracy, please read the instructions carefully. Please use this product in accordance with the user manual. Otherwise the free warranty will not be carried out if the product is damaged. Please do not use this product in flammable, explosive, steamy, humid or corrosive environments. Please do not continue to use the product when it is damaged, dropped or corrected, so as to avoid erroneous measurement results. Please refer to the emissivity to get the actual temperature. Otherwise the measured temperature will be inaccurate. Charging will cause the internal temperature of the machine to rise, thereby affecting the measurement accuracy. Therefore, it is recommended not to take measurements when charging the product.

# 25. Appendix

Material	Emissivity	Material	Emissivity
Wood	0.85	Black paper	0.86
Water	0.96	Polycarbonate	0.8
Brick	0.75	Concrete	0.97
Stainless steel	0.14	Copper oxide	0.78
Adhesive tape	0.96	Cast iron	0.81
Aluminum plate	0.09	Rust	0.8
Copper plate	0.06	Gypsum	0.75
Black aluminum	0.95	Paint	0.9
Human skin	0.98	Rubber	0.95
Asphalt	0.96	Soil	0.93
PVC plastic	0.93		

# **Copyrights**

The product specifications are subject to change without notice, all final interpretation rights were reserved by Mileseey Technology Co., Ltd. All trademarks, product images, technical parameters are properties of Mileseey Technology Co., Ltd. All rights reserved.

#### Contact us

# Shenzhen Mileseey Technology Co., Ltd.

Add: No.3601 Block A, Tanglang Town Plaza West, Fuguang Community, Taoyuan Street, Nanshan District, Shenzhen, China Web: www.mileseeytools.com

E-mail: service@mileseev.com

MILESEEY has started researching and development manufacturer of quality optical products including laser level, laser measure device, Golf rangefinder, and binoculars since 2009.

Focus on the development, researching, and manufacturing for over 12 years. We strive to provide you with premium qualified products and atisfying customer service to make your life easier and smarter.

## **Warranty**

30-Day return and refund guarantee, 12-Month warranty, lifetime technique support by MILESEEY.

Please feel free to reach us with any concerns.

Email: service@mileseey.com.

We strive to reply to you within 24hours.