





**Z40TIR 40x 4K EO + IR Dual-Sensor
Object Tracking Gimbal Camera
User Manual**

User Manual

使用说明

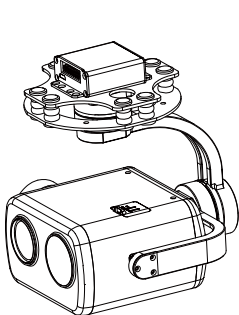

Standard Version
标准版

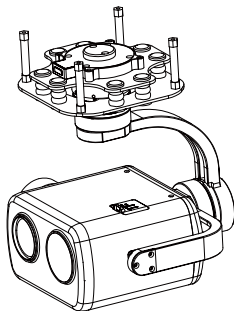

Viewport Version
快拆版



For more details please scan the QR code
or visit our website:
www.viewprotech.com

Disclaimer and Warning

Congratulations on purchasing your new Viewpro product. Please read this entire document carefully. Failure to read or follow instructions and warnings in this document may result in damage to your Viewpro product. Disassemble the gimbal camera by user is not permitted, as which may cause the camera does not work normally. Viewpro accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this project. The user shall observe safe and lawful practices including, but no limited to, those set forth in the manual.

Legends



Warning



Important Note

1.Product Introduction






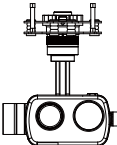
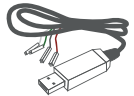




1.1 Introduction


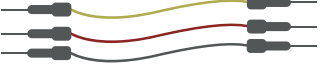

Z40TIR is a 3-axis high-precision gimbal with 4K EO/IR zoom camera. It integrated with 20x optical zoom EO sensor which provides not only 40x hybrid zoom and 4K video streaming but also 25.9MP resolution photo, and with a 25mm lens 640*480 IR thermal sensor. It supports IR thermal and visible PIP switch, IR color palette switch, photographing and video, target tracking, thermal digital zoom. When the external GPS and time input, the OSD can display angle, zoom times, photographing and video status and tracking frame, also can select to turn off the OSD. Z40TIR has geotagging function. GPS coordinate and shooting time can be saved in image file, OSD can display GPS and real-time as well. Z40TIR supports dual SD cards for storage, the video streaming and photos from the visual camera will be saved in one SD card, the resolution can be configured, the photos can up to 25.9MP and the highest resolution of videos can up to 3840*2160 (30fps), while the video streaming and photos from the thermal camera will be saved in the second card. The 3 axis gimbal can achieve stabilization in yaw, roll and pitch. The integrated design of damping system and gimbal can greatly reduce mechanical vibration.

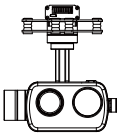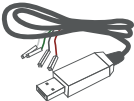1.

Z40TIR is widely used in inspection, surveillance, search and rescue, and other industrial applications.



1.2 In the Box

A. Standard Version			
Gimbal Camera x 1 pc		USB to TTL Cable x 1 pc	
Copper Cylinder x 4 pcs		M3 Screw x 8 pcs	
Power Cable x 1 pc			
B. Viewport Version			
Gimbal Camera x 1 pc		USB to TTL Cable x 1 pc	
Copper Cylinder x 4 pcs		M3 Screw x 8 pcs	
Power Cable x 1 pc			
PWM Control Cable x 1 pc			


TTL / S.BUS Control Cable x 1 pc	
TTL Connect Cable x 3 pcs	
Ethernet Cable x 1 pc	

2. Installation Instruction


2.1 Overview

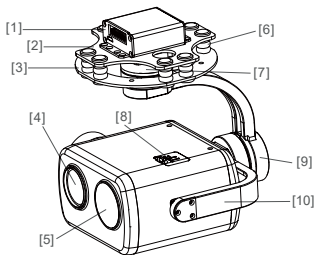

Viewport

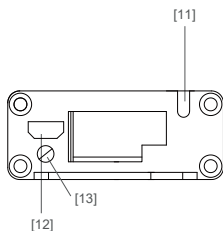

Control Box Back Side
(Standard Version)

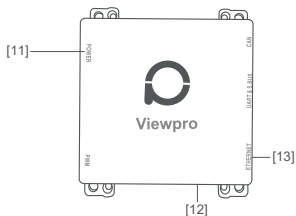

(Viewport Version)

- | | |
|-----------------------------|-----------------------------|
| [1] Control box | [8] TF card slot |
| [2] Upper damping board | [9] Roll axis motor |
| [3] Lower damping board | [10] Pitch axis motor |
| [4] FHD zoom camera | [11] 3-6S power interface |
| [5] Infrared thermal camera | [12] Micro HDMI interface |
| [6] Damping ball | [13] Ethernet interface |
| [7] Yaw axis motor | [14] Viewport unlock button |




- Please ensure that there isn't any obstacle while the motor rotating.
- Please remove the obstacle immediately if gimbal camera is blocked during rotation.



- Don't put the infrared thermal camera towards the sun in case any burn to the camera

2.2.1 Control Box Printing (Standard Version)

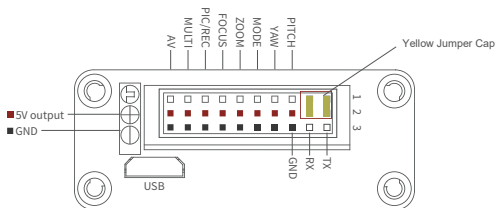


- The input voltage cannot be higher than 6S.
- The pin insertion interface cannot be connected with power supply.
- The yellow jumper cap cannot be removed


2.2.2 Control Box Printing (Viewport Version)



Front Side

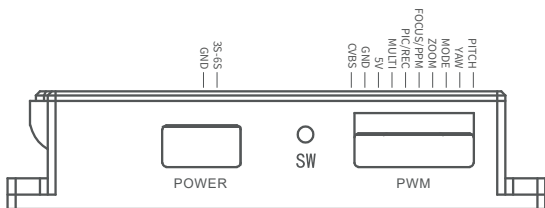


Left Side

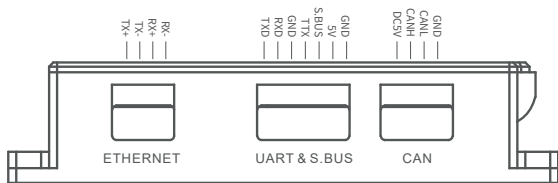

Right Side



2.3 Device Dimensions (Standard Version)

Unit: mm


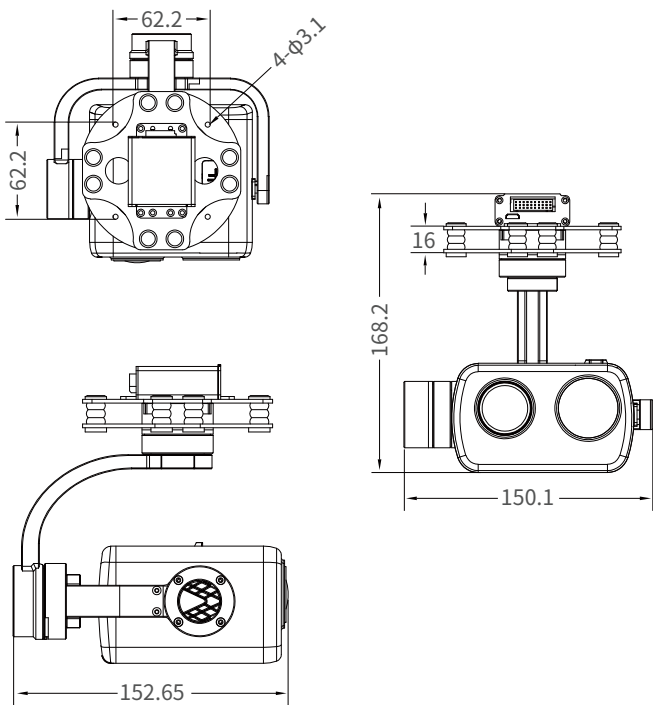


2.3 Device Dimensions (Viewport Version)

Unit: mm

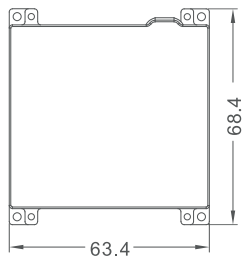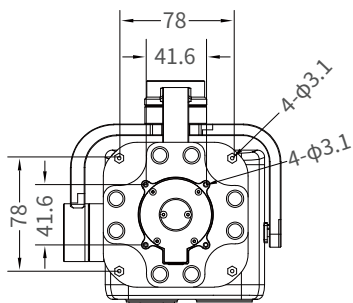


Control Box

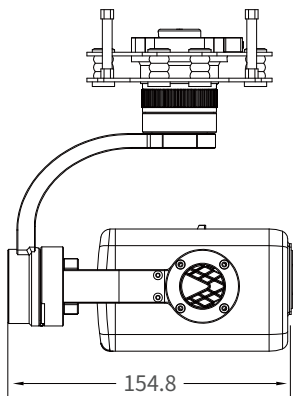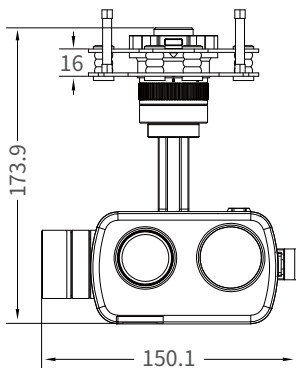



2.4 Install Mounting Part

- (1) Find out the arrow on the gimbal which indicating the yaw heading of the payload (i.e. the lens direction when the camera power on), and synchronize with the direction specified by the UAV.
- (2) Fix one end of the copper cylinder on the screw hole of lower damping board, and use M3 screw to fasten it.
- (3) According to the provided screw hole dimension you can make suitable mounting holes on the UAV mounting board, and fixes the other end of the copper cylinder on the mounting board of the UAV (Viewport version is the same).

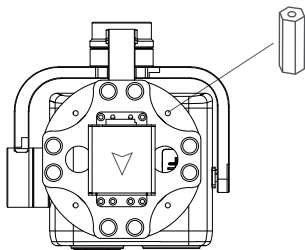


Front


2.5 Viewport Release Instruction

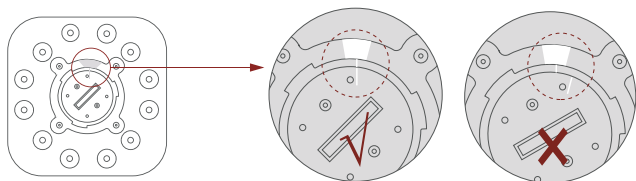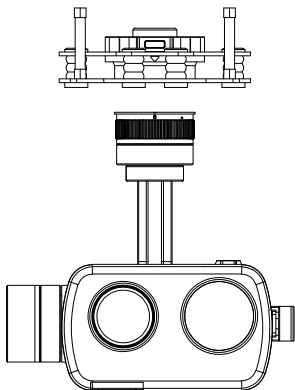


1. Make sure the two white stripes indicated in above picture are aligned with each other. (If the stripes are not aligned to each other, please pinch the connector part and turn it to left manually)

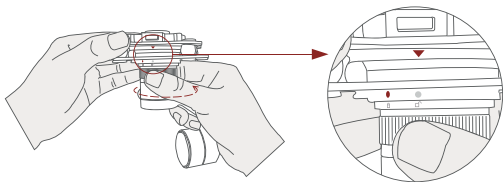

2. Align the white dot (unlock icon) to the red triangle (below unlock button), push the gimbal into the Viewport completely and then rotate the gimbal camera anticlockwise.

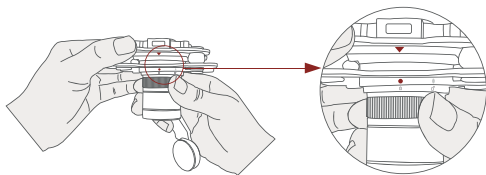

3. When you hear "click" sound (when red dot is aligned to the red triangle) means the gimbal camera and Viewport has been locked.

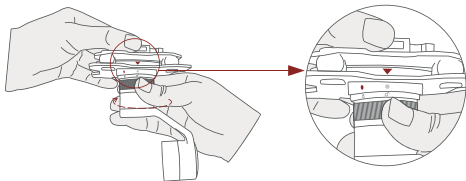

4. To unlock the Viewport, you need to press on unlock button and rotate the gimbal camera clockwise till the white dot align to the red triangle. Then pull the gimbal out from the Viewport.

2.6 Install TF Card

TF (Micro SD card): Install the TF card to the card slot (Re. 2.1 Overview). Support max 128GB. Request Class 10 (10m/s) transmission speed or higher and FAT32 or exFAT format.



- Make sure device is power off when inserting the TF card, hot plugging is not supported.
-

2.7 Image Output Interface

HDMI: Micro HDMI output, HD 1080P 60/50/30/25fps, 1080P 60fps as default. (Optional)

Ethernet: Ethernet/IP output interface, support RTSP/RTMP/UDP/ONVIF video streaming. Default: RTSP output, IP address: RTSP://192.168.2.119:554, output resolution: 720P (record in 1080p), frame rate: 25fps, bit rate: 2M. (Optional)

SDI: SMA outer screw inner hole interface, 1080P 30fps output. (Optional)

AV: no AV output

-
- Above output mode is optional, HDMI and SDI output cannot coexist at the same time. Please subject to your actual product.




- When using user interface software Viewlink for network connection, the network of external device (computer) should be the IP address: 192.168.2.2 (choose the last byte among 2~254, can not be 119 same as the gimbal), subnet mask: 255.255.255.0, Default gateway: 192.168.2.1, and all firewalls of the computer must be closed. Then enter the IP address of the gimbal camera, Open Video, the video stream can be outputted.
-

3. Signal Control


3.1 PWM Control

Control the gimbal camera functions by the multiplex pulse width modulation signal outputted by PWM channel of the remote control receiver. The camera needs up to 6 control channels of PWM (to expand tracking function use up to 7 PWM channels). You can choose needed functions according to actual usage to reduce the required number of PWM channels.

3.1.1 PWM Connection Diagram (Connect pitch channel as example)

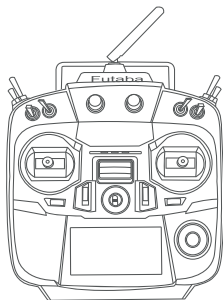

Remote Controller

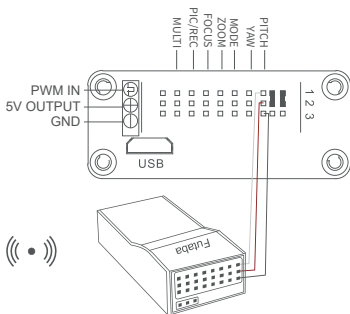


Receiver

Connection Diagram (Standard Version)



Remote Controller

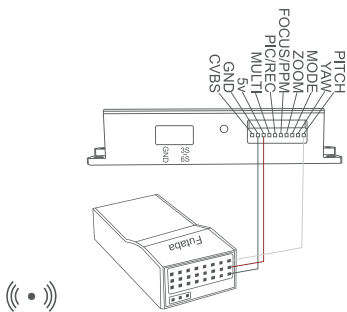

Receiver

Connection Diagram (Viewport Version)

3.1.2 PWM Control Operation Instruction

1) Pitch (PWM Pitch channel in to control Pitch. Joystick, rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



Position 1

Low Gear
Pitch Up



Position 2

Middle Gear
Pitch Stop



Position 3

High Gear
Pitch Down

2) Yaw (PWM Yaw channel in to control Yaw. Joystick, rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



Position 1

Low Gear
Yaw Left



Position 2

Middle Gear
Yaw Stop



Position 3

High Gear
Yaw Right

3) Mode (PWM Mode channel in to adjust speed control/one key to Home position etc functions. Rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



Position 1

Low Gear



Position 2

Middle Gear



Position 3

High Gear

Position 1: Low speed mode, control pitch / yaw with this mode at lowest speed

Position 2: Middle speed mode, control pitch / yaw with this mode at middle speed

Position 3: High speed mode, control pitch / yaw with this mode at highest speed

(If it is controlled by rotary knob, the speed will change according to switch position)

4) Function of continuous switching:

4.1) Operate 1 time continuously and quickly, from position 2 - 3, to Home position.

4.2) Operate 2 times continuously and quickly, from position 2 - 3 - 2 - 3, the camera lens looks vertically down.

4.3) Operate 3 times continuously and quickly, from position 2 - 3 - 2 - 3 - 2 - 3, to disable Follow Yaw Mode (gimbal yaw not follows by frame)

4.4) Operate 4 times continuously and quickly, from position 2 - 3 - 2 - 3 - 2 - 3 - 2 - 3, to enable Follow Yaw Mode (gimbal yaw follows by frame)

5) Zoom (PWM Zoom channel in to control Zoom. Joystick, rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



Position 1

Low Gear
Zoom Out



Position 2

Middle Gear
Stop Zoom



Position 3

High Gear
Zoom In

6) Focus (PWM Focus channel is to control PIP, IR color palette switch, 3-gear switch as example.)



Position 1

Low Gear
PIP switch



Position 2

Middle Gear
Gear



Position 3

High Gear
IR color palette switch

Switch from Position 2 to 1: Picture in Picture. EO+IR , IR+EO, EO only, IR only. Switch from Position 2 to 3: IR color switching: white hot, black hot, pseudo color.

7) Pic/Rec (PWM Pic/Rec channel in to control take picture and record. Joystick, rotary knob or 3-gear switch on remote control are optional. 3-gear switch as example.)



Position 1

Low Gear



Position 2

Middle Gear



Position 3

High Gear

Switch from Position 2 to 1: Take a picture

- OSD display 'REC IMG' a second.

Switch from Position 2 to 3: Start record / repeat operation to stop record

- Start record, the OSD display rec hh:mm:ss.
- Stop record, the OSD display STBY.

8) Multi: IR digital zoom / tracking control



Position 1

Low Gear



Position 2

Middle Gear



Position 3

High Gear

Switch from Position 2 to 1: IR digital zoom, 1x~4x

Switch from Position 2 to 3:

- Exit the tracking, display the cross cursor. Adjust the cross cursor to lock target object and start tracking

Switch from Position 3 to 2:


- Cancel tracking

3.2 Serial Port / TTL Control


TTL communication requirements: TTL signal is 3.3V, baud rate: 115200, data bit 8, stop bit 1, no parity, HEX send and receive.

Connection Diagram (PC - USB to TTL Cable- Gimbal Camera as example):

Gimbal Camera	Cable
TX	↔ RX (White)
RX	↔ TX (Green)
GND	↔ GND (Black)

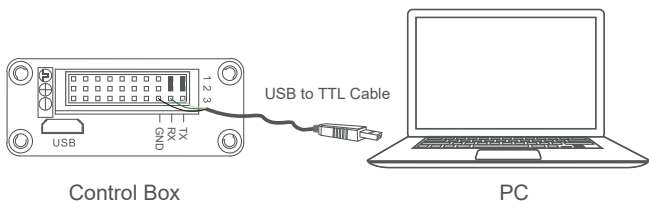

Connection Diagram Standard Version

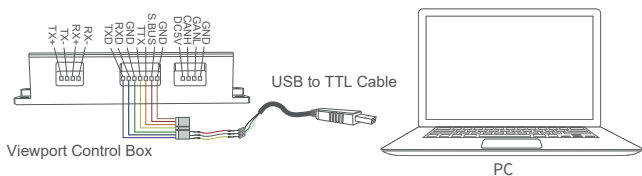

Connection Diagram Viewport Version

Diagram of USB to TTL Cable:

Connect the camera to the upper computer by USB to TTL cable (Adopt connection method of TX to RX, RX to TX, GNG to GND at Dupont ends of the provided USB to TTL cable, connect to the specified TTL of the gimbal, and the USB end of the cable connect to computer).

Install Viewlink control software to test the functions directly. Users may choose to develop their own software, please contact technical support for TTL control protocol file.

ViewLink is a user interface developed by Viewpro for Viewpro gimbal cameras, you can download it from Viewpro website (www.viewpro-tech.com) or ask distributors for installation package.



- Connect serial port of gimbal to pins, DO NOT connect with power supply.




- The default baud rate of serial port is 115200, which can be changed according to the docking equipment.
-


3.3 S.BUS Control

Control the gimbal camera functions by one combining signals. Connect the external S.Bus to S.Bus port on the control box, and the external S.bus signal GND connect to the GND interface of the control box.

Wiring Diagram (Take Futaba remote control for example):

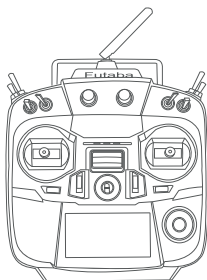


Remote Control

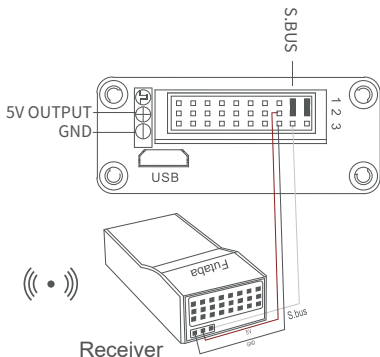


Receiver

Wiring Diagram Standard Version

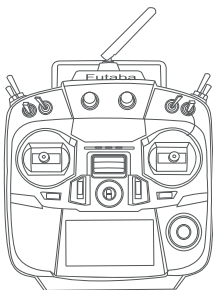

Remote Control

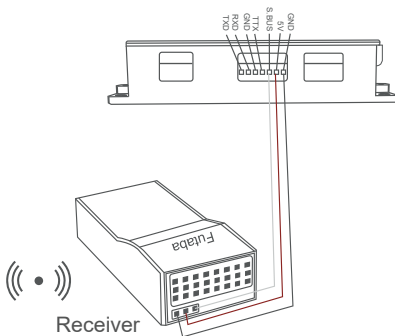

Receiver

Wiring Diagram Viewport Version

S.Bus control mode: default S.Bus signal channel 9-15 to control gimbal camera functions (the function of channel is consistent with corresponding channel in PWM function description)

Channel 9: Yaw Control

Channel 10: Pitch Control

Channel 11: Mode Control

Channel 12: Zoom Control

Channel 13: Focus Control

Channel 14: Pic/Rec Control

Channel 15: Multi Backup



- User can set the channels by setting serial command according to the actual requirement. The S.Bus channel position can be arranged in any sequence within channel 1-15 to connect with the flight controller or remote control.

- TTL control and S.bus control cannot coexist at the same time for standard version. The default control is TTL if no requirement. The user can set to S.bus control if needed (please contact with our technical support for the setting instruction.)

3.4 TCP control

For Viewpro gimbal cameras with Ethernet output, the default IP address is: 192.168.2.119, control port: 2000. You can send the corresponding protocol to realize TCP control after connecting.

The TCP control protocol is [Frame header: EB + command ID: 90 + data body (serial port protocol) + Checksum (CS = body checksum, checksum is calculated as a sum of all bytes of data body modulo 256)]. Or directly use UI Viewlink to control after TCP connection.

4. Specification

Hardware Parameter	
Working voltage	12V ~ 16V
Input voltage	3S ~ 6S
Output voltage	5V (connect with PWM)
Dynamic current	500mA @ 12V
Idle current	400mA @ 12V
Power consumption	≤ 6W
Working environment temp	-20℃ ~ +60℃
Output	micro HDMI(HD output 1080P 60fps) / IP
Local-storage	SD card (Up to 128G, class 10, FAT32 or ex FAT format)
Control method	PWM / TTL / SBUS
Gimbal Spec	
Pitch/Tilt	±90°
Roll	±85°
Yaw/Pan	±170° / ±360°*N (IP output)
Vibration angle	Pitch/Roll: ±0.01°, Yaw: ±0.01°
One-key to center	√

Camera spec

Imager Sensor	Panasonic 1/2.3inch CMOS
Lens	F1.8~F3.6(f=4.08~81.6mm)
Zoom	Optical zoom:20x, iA zoom:25x(4k) / 40x (FHD)
Total pixel	25.9MP
Record effective pixel	4k:8.29MP / FHD:6.10MP(16:9)
Picture effective pixel	25.9MP(4:3)
Optical Image Stabilization	5 axis Optical Image Stabilization
Record format	MPEG-4
Record pixel	4k:3840*2160/30p FHD:1080/60p (HD:720/30p)
Record shutter speed (Manual)	1/30 ~ 1/8000
Picture format	JPEG
Picture pixel	20.4M(4:3)
Picture shutter speed (Manual)	1/2 ~ 1/2000
Dynamic range	65dB
Min object distance	1.5M
Viewing angle	Horizontal: 53.2°(Wide end) ~ 5.65°(Tele end) Vertical: 39.8°(wide end) ~ 4.2°(tele end) Focus: 66.6°(wide end) ~ 7.2°(tele end)

Sync system	Progressive scanning
Local video	1080P 30fps local TF card
HD output	1080P/720/480P 60fps HDMI1.4
S/N ratio	38dB
Min illumination	Color 0.05lux@F1.6
Backlight compensation	Backlight compensation/strong light inhibition
Gain	Auto
White balance	Auto/Manual
Control system	UART/IR/PWM
Communication protocol	PELCO-D, Hitachi protocol or VISCA
Focus	Auto/Manual/One-time automatic focus
Focus speed	2s
Lens initialization	Built-in
User presetting bit	20 sets
Image rotation	180°, Horizontal/Vertical mirror image
Facial recognition	√
EO Object Tracking	
Update rate of deviation pixel	50Hz

Output delay of deviation pixel	<15ms
Minimum object contrast	5%
SNR	4
Minimum object size	32*32 pixel
Maximum object size	128*128 pixel
Tracking speed	±48 ~ ±192 pixel/frame
The mean square root values of pulse noise in the object position	< 0.5 pixel

Thermal Imager Spec

Lens size	25mm
Horizontal FOV(°)	24.6°
Vertical FOV(°)	18.5°
Diagonal FOV(°)	30.4°
Detective Distance (Man: 1.8x0.5m)	735 meters
Recognize Distance (Man: 1.8x0.5m)	184 meters
Verified Distance (Man: 1.8x0.5m)	92 meters

Detective Distance (Car: 4.2x1.8m)	2255 meters
Recognize Distance (Car: 4.2x1.8m)	564 meters
Verified Distance (Car: 4.2x1.8m)	282 meters
Working mode	Uncooled long wave (8 μ m~14 μ m) thermal imager
Detector pixel	640*480
Pixel size	17 μ m
Focusing method	Athermal prime lens
Emissivity correction	0.01~1
NETD	$\leq 50\text{mK}$ (@25 $^{\circ}\text{C}$)
MRTD	$\leq 650\text{mK}$ (@characteristic frequency)
Image enhancement	Auto adjust image brightness and contrast ratio
Color palette	White, iron red, pseudo color
Auto Non-uniform correction	Yes (no shutter)
Digital zoom	1x, 3x
Sync correct time	Yes
Thermometry type	Temperature bar (psudo color display) max temp, min temp, FOV center temp (Optional)
Temperature warning	0 $^{\circ}\text{C}$ ~100 $^{\circ}\text{C}$

Thermal Object Tracking

Update rate of deviation pixel	25Hz
Output delay of deviation pixel	<3ms
Minimum object size	32*32 pixel
Maximum object size	128*128 pixel
Tracking speed	$\pm 48 \sim \pm 192$ pixel/frame
Object memory time	100 frames (4s)

Packing Information

N.W.	945g
Product meas.	149*153.5*145mm
Accessories	1pc gimbal camera device, 16pcs screws, 4pcs copper cylinders, 12pcs damping balls, 4pcs damping boards, 1pc USB to TTL cable / box

5. FAQ

1. Does Z40TIR support taking photos during recording?

A: Yes.

2. How to set the video storage format of Z40TIR?

A: When video format is set to 1080p mode , the storage resolution is 1920*1080, 50fps or 60 fps for optional; When video format is set to 4K mode, the storage resolution is 3840*2160, 25fps or 30 fps for optional.

3. Does Z40TIR (IP output version) support TCP control?

A: Not supported currently.

4. Is 4K video output of Z40TIR?

A: Output is not 4K, Video storage supports 4K.

5. What tools can be used for the network configuration of Z40TIR?

A: It can use Viewlink app or Camera Configure Tool.

6. What tools can be used for the EO camera debugging of Z40TIR?

A: 4K_Camera_APP_V1.5